

CYLINDER HEAD(1RZ–E)

COMPONENTS

EM093–01

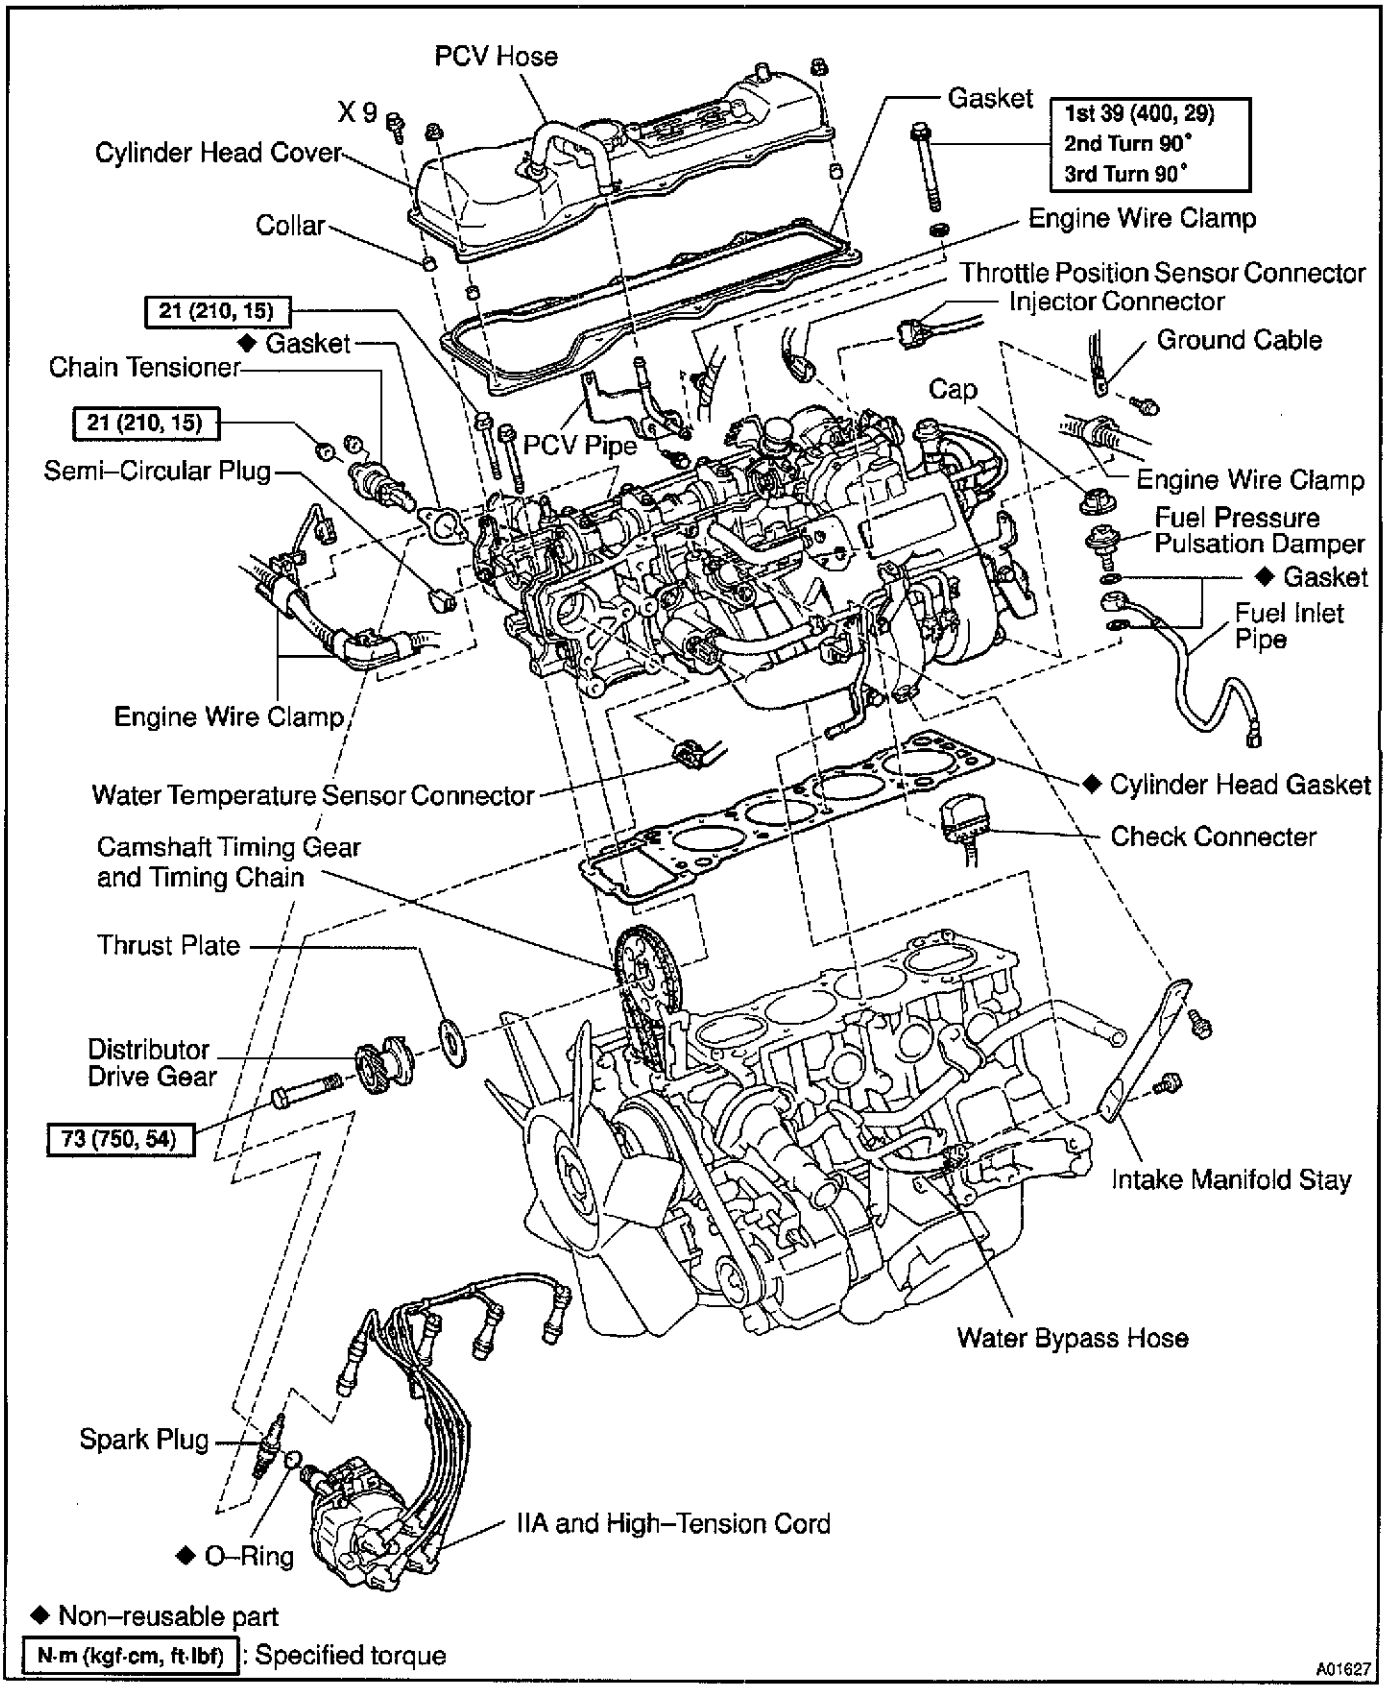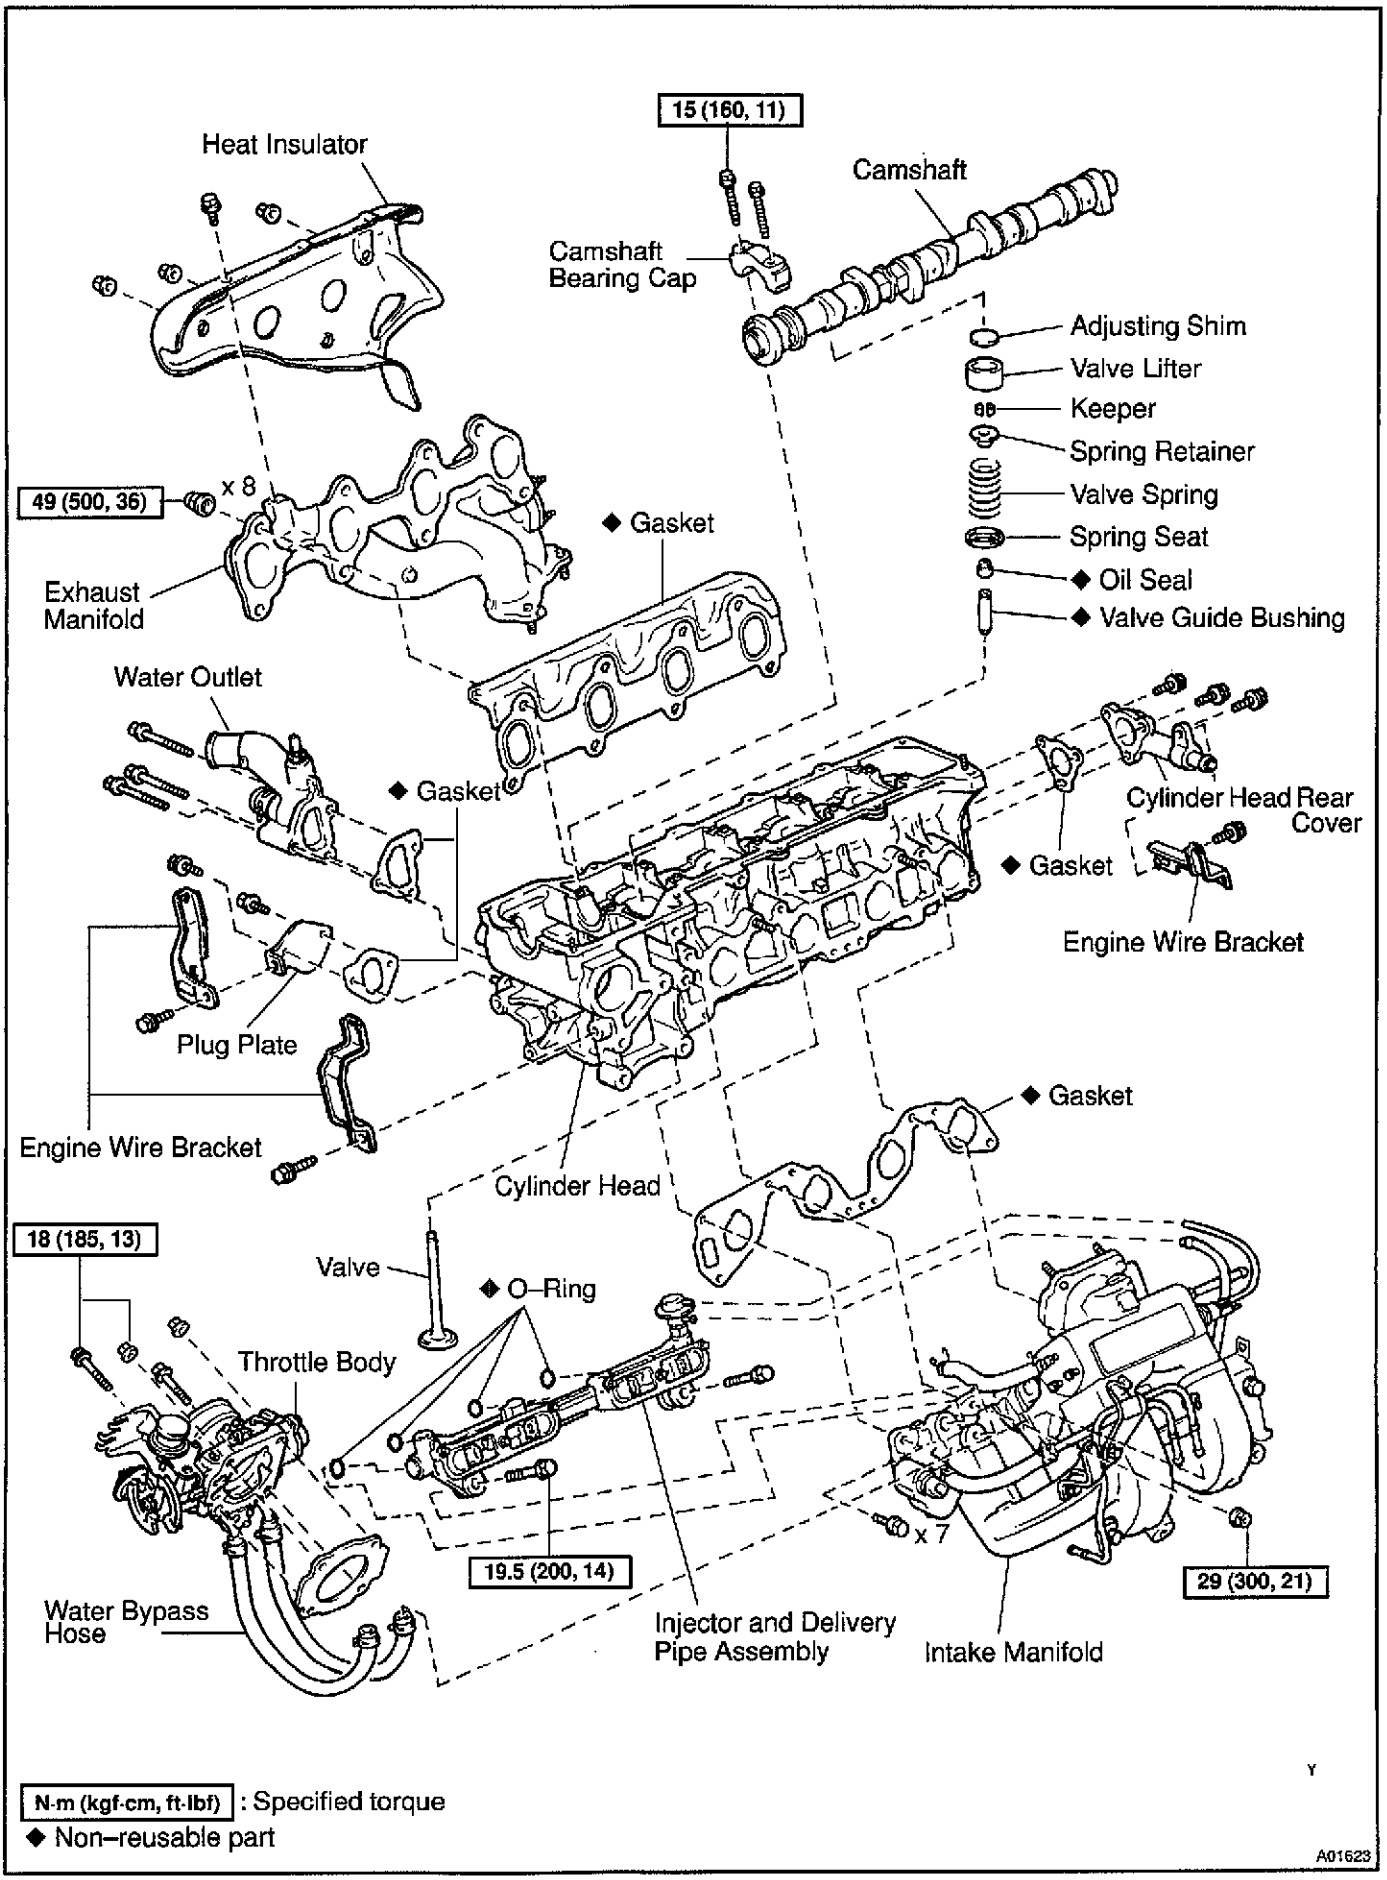


15 (160, 11)
Heat Insulator
Camshaft
Camshaft Bearing Cap
Adjusting Shim
Valve Lifter
Keeper
Spring Retainer
Valve Spring
Spring Seat
◆ Oil Seal
◆ Valve Guide Bushing
49 (500, 36)
x 8
◆ Gasket
Exhaust Manifold
Water Outlet
◆ Gasket
Cylinder Head Rear Cover
◆ Gasket
Engine Wire Bracket
Plug Plate
Engine Wire Bracket
◆ Gasket
Cylinder Head
18 (185, 13)
Valve
◆ O–Ring
Throttle Body
19.5 (200, 14)
x 7
29 (300, 21)
Water Bypass Hose
Injector and Delivery Pipe Assembly
Intake Manifold
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A01623