FUEL CUT RPM

F1023-01


INSPECTION

1. **WARM UP ENGINE**

Allow the engine to warm up to normal operating temperature.

2. **CONNECT HAND–HELD TESTER OR OBDII SCAN TOOL**

(See page FI–6)

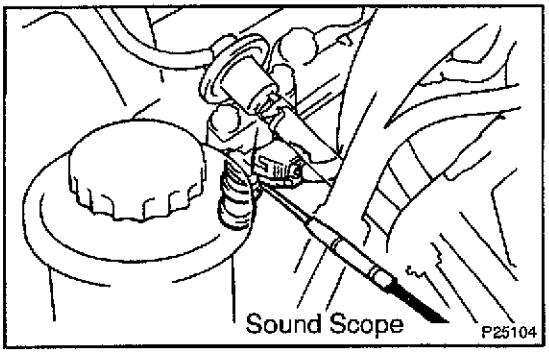

3. **INSPECT FUEL CUT OFF RPM**

(a) Increase the engine speed to at least 3,500 rpm.

(b) Using a sound scope, check for injector operating noise.

(c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

Measure with the A/C OFF.

Fuel return rpm:

1RZ–E:

1,200rpm

2RZ–FE:

1,400 rpm

3RZ–FE:

M/T: 1,400 rpm

A/T: 1,500 rpm

4. **DISCONNECT HAND–HELD TESTER OR OBDII SCAN TOOL**