


# INJECTION PUMP


## COMPONENTS


FU05W–02

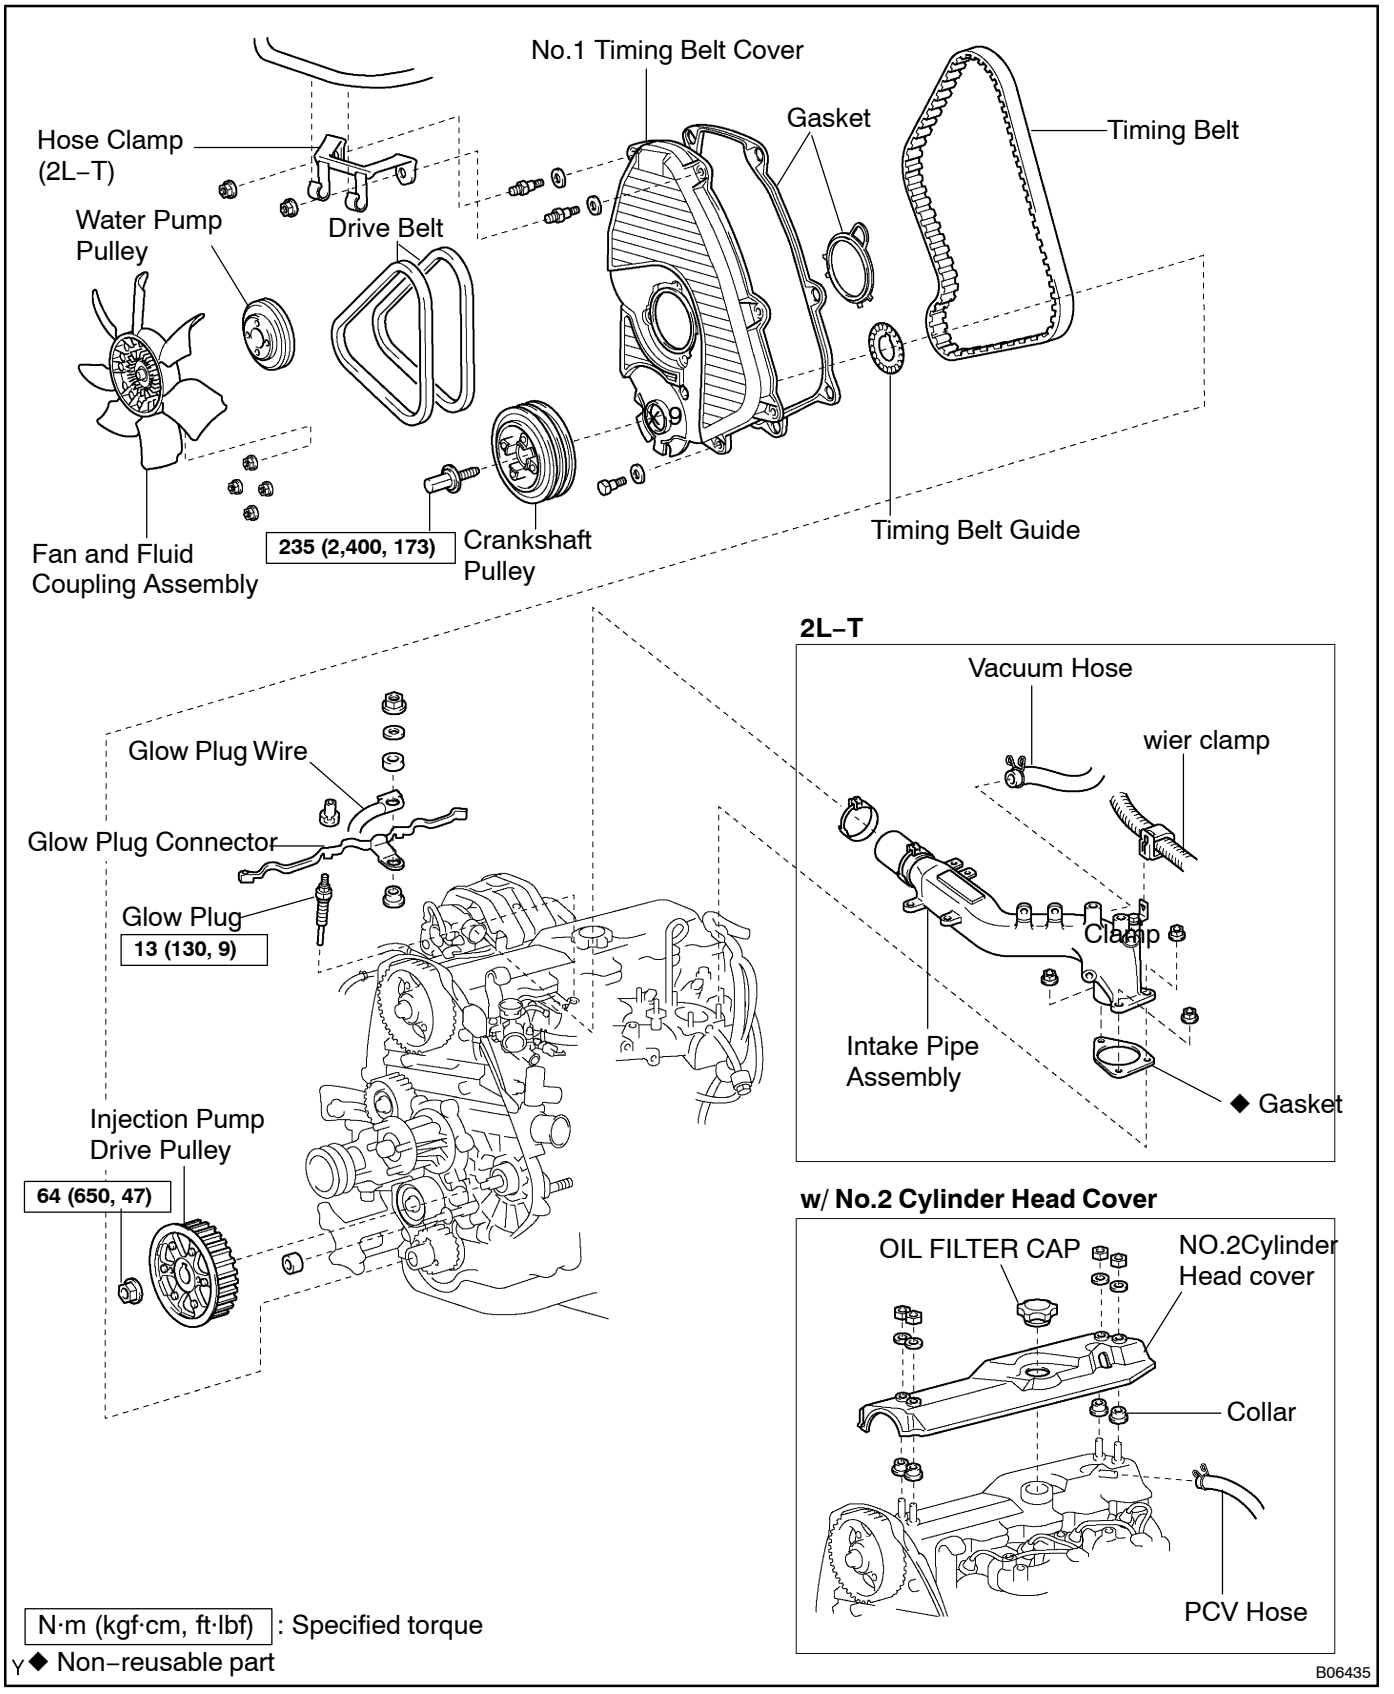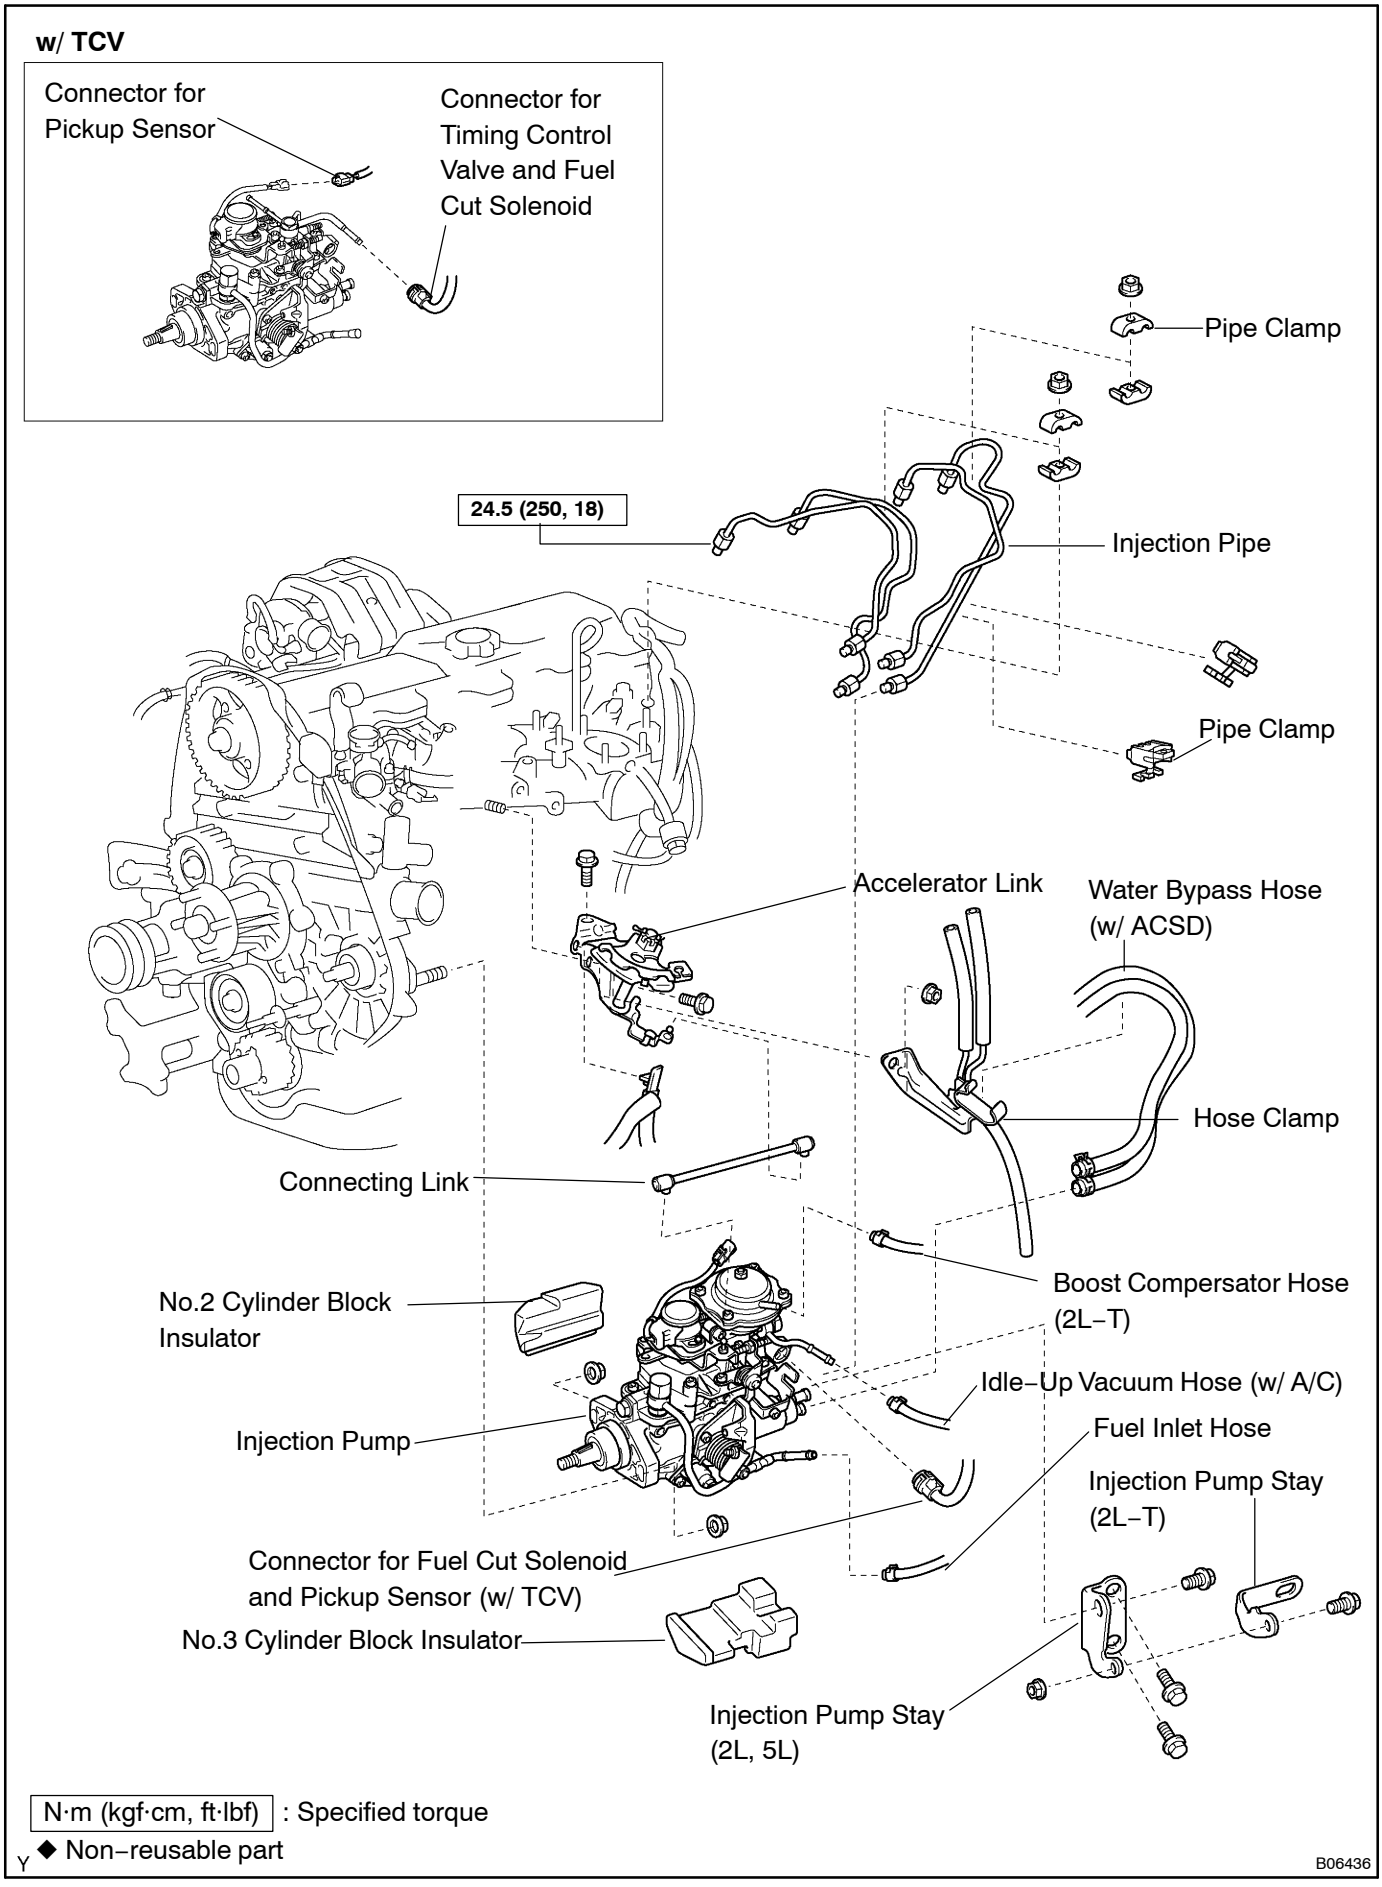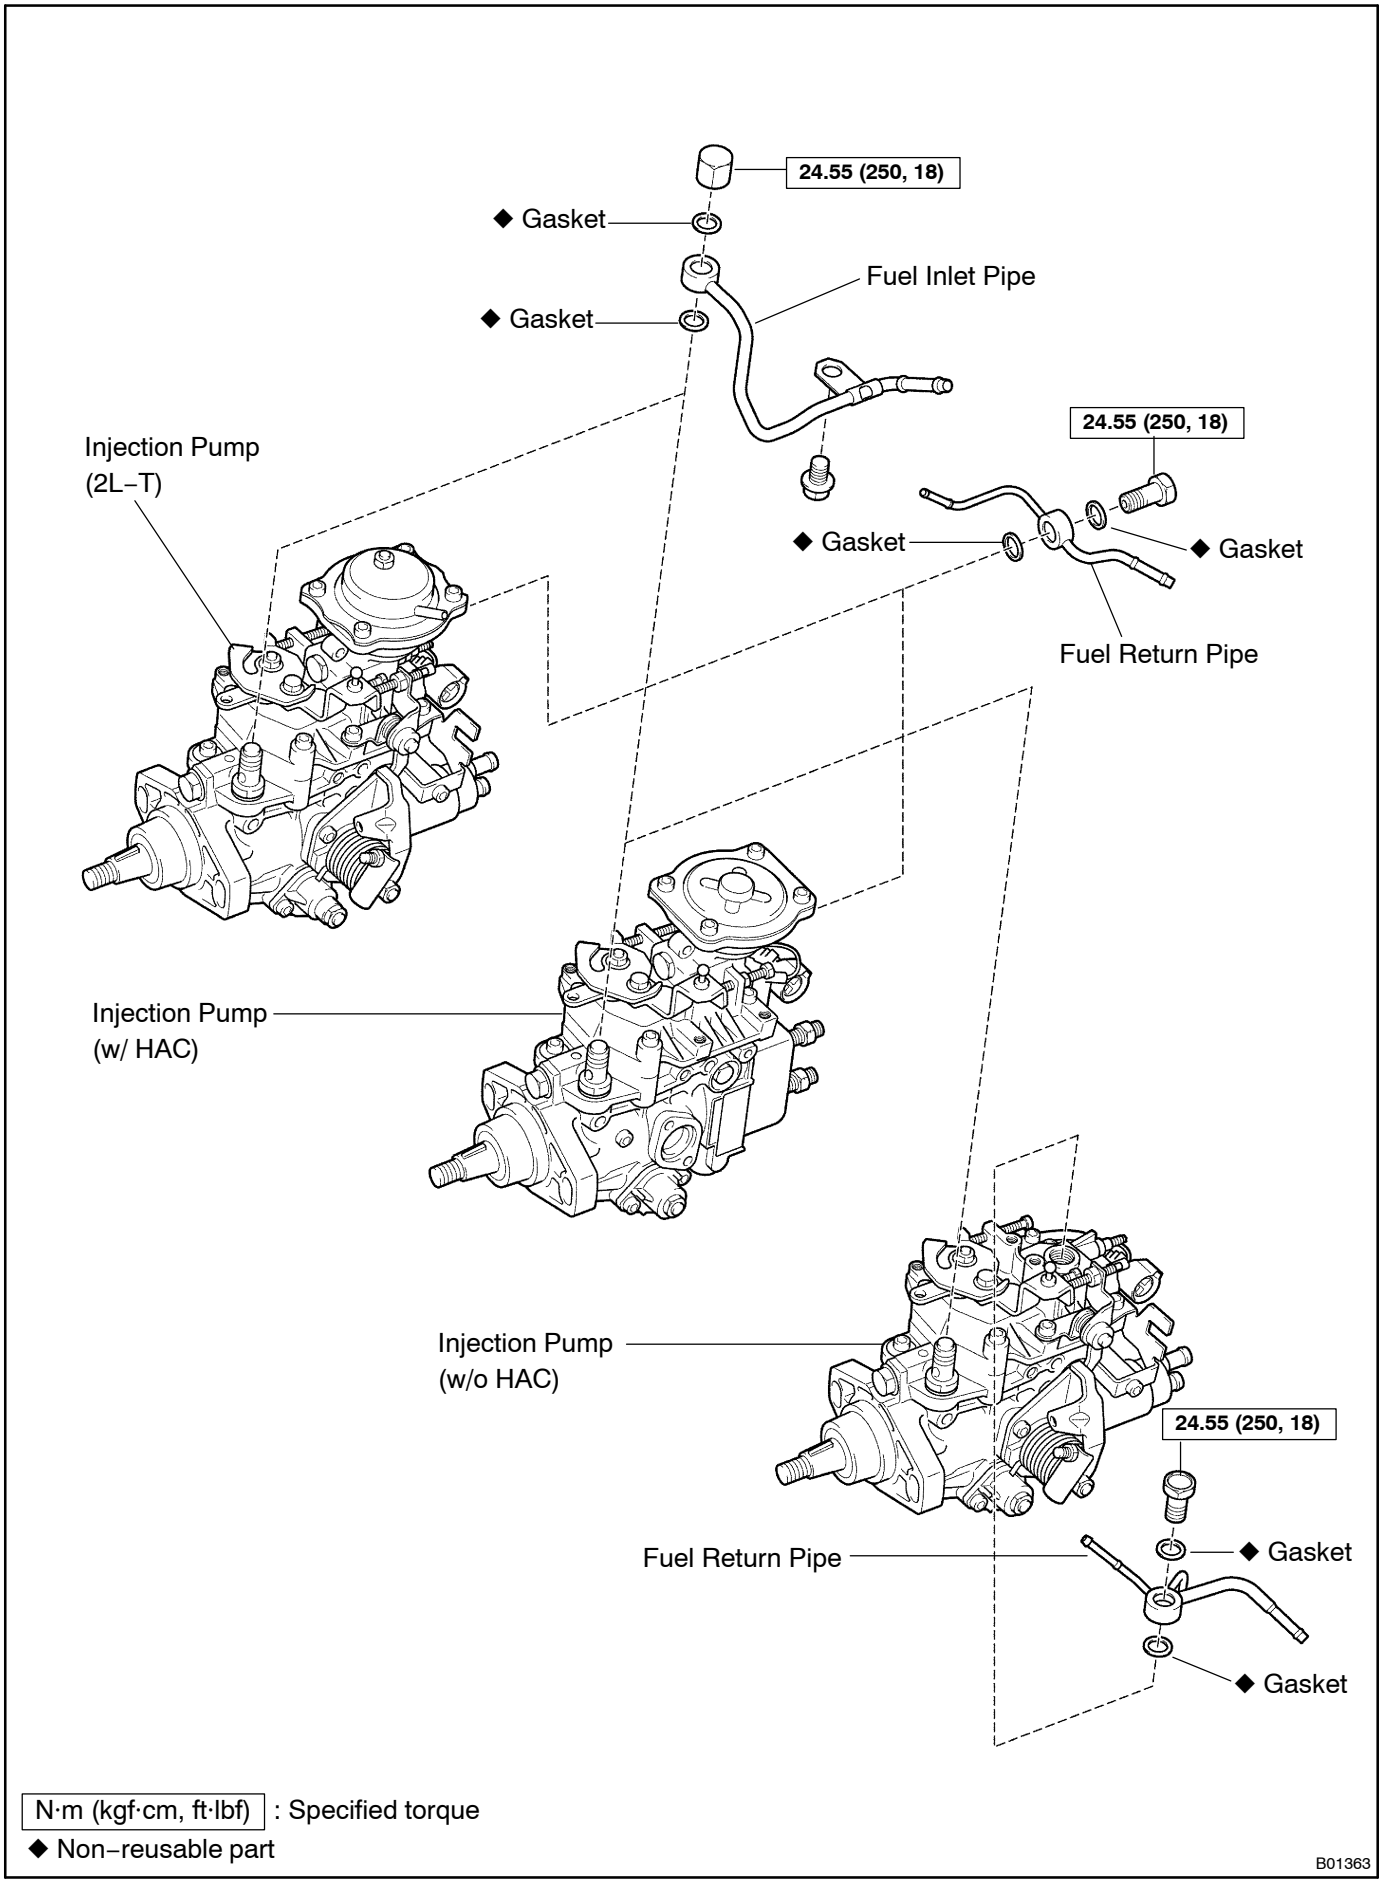



w/ TCV
Connector for Pickup Sensor
Connector for Timing Control Valve and Fuel Cut Solenoid
Pipe Clamp
24.5 (250, 18)
Injection Pipe
Pipe Clamp
Accelerator Link
Water Bypass Hose (w/ ACSD)
Hose Clamp
Connecting Link
Boost Compersator Hose (2L–T)
No.2 Cylinder Block Insulator
Idle–Up Vacuum Hose (w/ A/C)
Injection Pump
Fuel Inlet Hose
Injection Pump Stay (2L–T)
Connector for Fuel Cut Solenoid and Pickup Sensor (w/ TCV)
No.3 Cylinder Block Insulator
Injection Pump Stay (2L, 5L)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B06436


24.55 (250, 18)
◆ Gasket
Fuel Inlet Pipe
◆ Gasket
24.55 (250, 18)
Injection Pump
(2L–T)
◆ Gasket
◆ Gasket
Fuel Return Pipe
Injection Pump
(w/ HAC)
Injection Pump
(w/o HAC)
24.55 (250, 18)
Fuel Return Pipe
◆ Gasket
◆ Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B01363

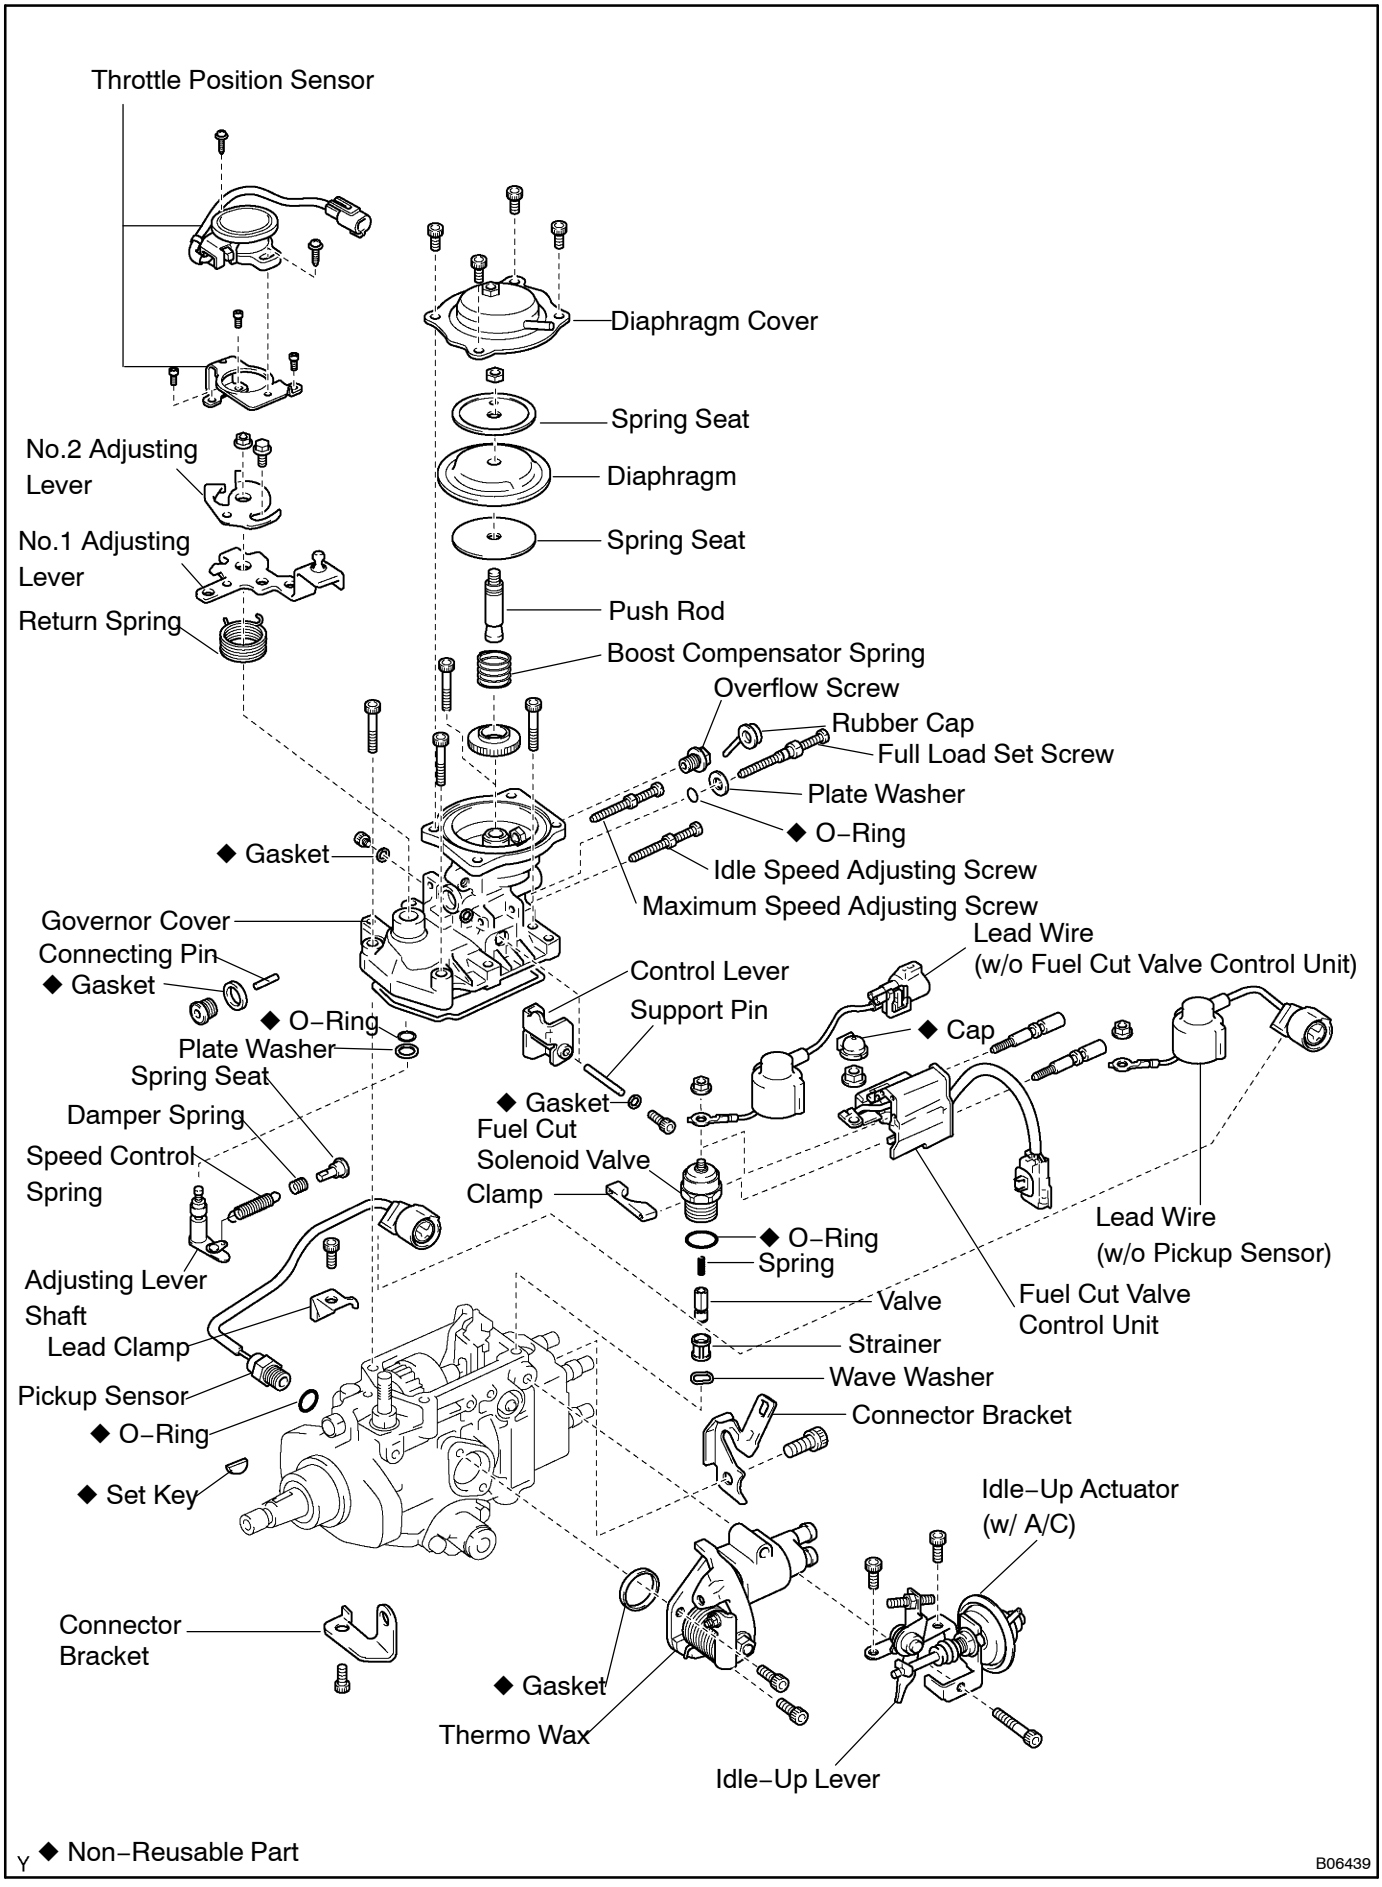
Throttle Position Sensor
Diaphragm Cover
Spring Seat
No.2 Adjusting Lever
Diaphragm
No.1 Adjusting Lever
Spring Seat
Return Spring
Push Rod
Boost Compensator Spring
Overflow Screw
Rubber Cap
Full Load Set Screw
Plate Washer
◆ O–Ring
◆ Gasket
Idle Speed Adjusting Screw
Maximum Speed Adjusting Screw
Governor Cover
Connecting Pin
◆ Gasket
◆ O–Ring
Plate Washer
Spring Seat
Damper Spring
Speed Control Spring
Adjusting Lever Shaft
Lead Clamp
Pickup Sensor
◆ O–Ring
◆ Set Key
Control Lever
Support Pin
◆ Gasket
Fuel Cut Solenoid Valve
Clamp
◆ O–Ring
Spring
Valve
Strainer
Wave Washer
Connector Bracket
Lead Wire (w/o Fuel Cut Valve Control Unit)
◆ Cap
Lead Wire (w/o Pickup Sensor)
Fuel Cut Valve Control Unit
Idle–Up Actuator (w/ A/C)
Connector Bracket
◆ Gasket
Thermo Wax
Idle–Up Lever
◆ Non–Reusable Part
B06439

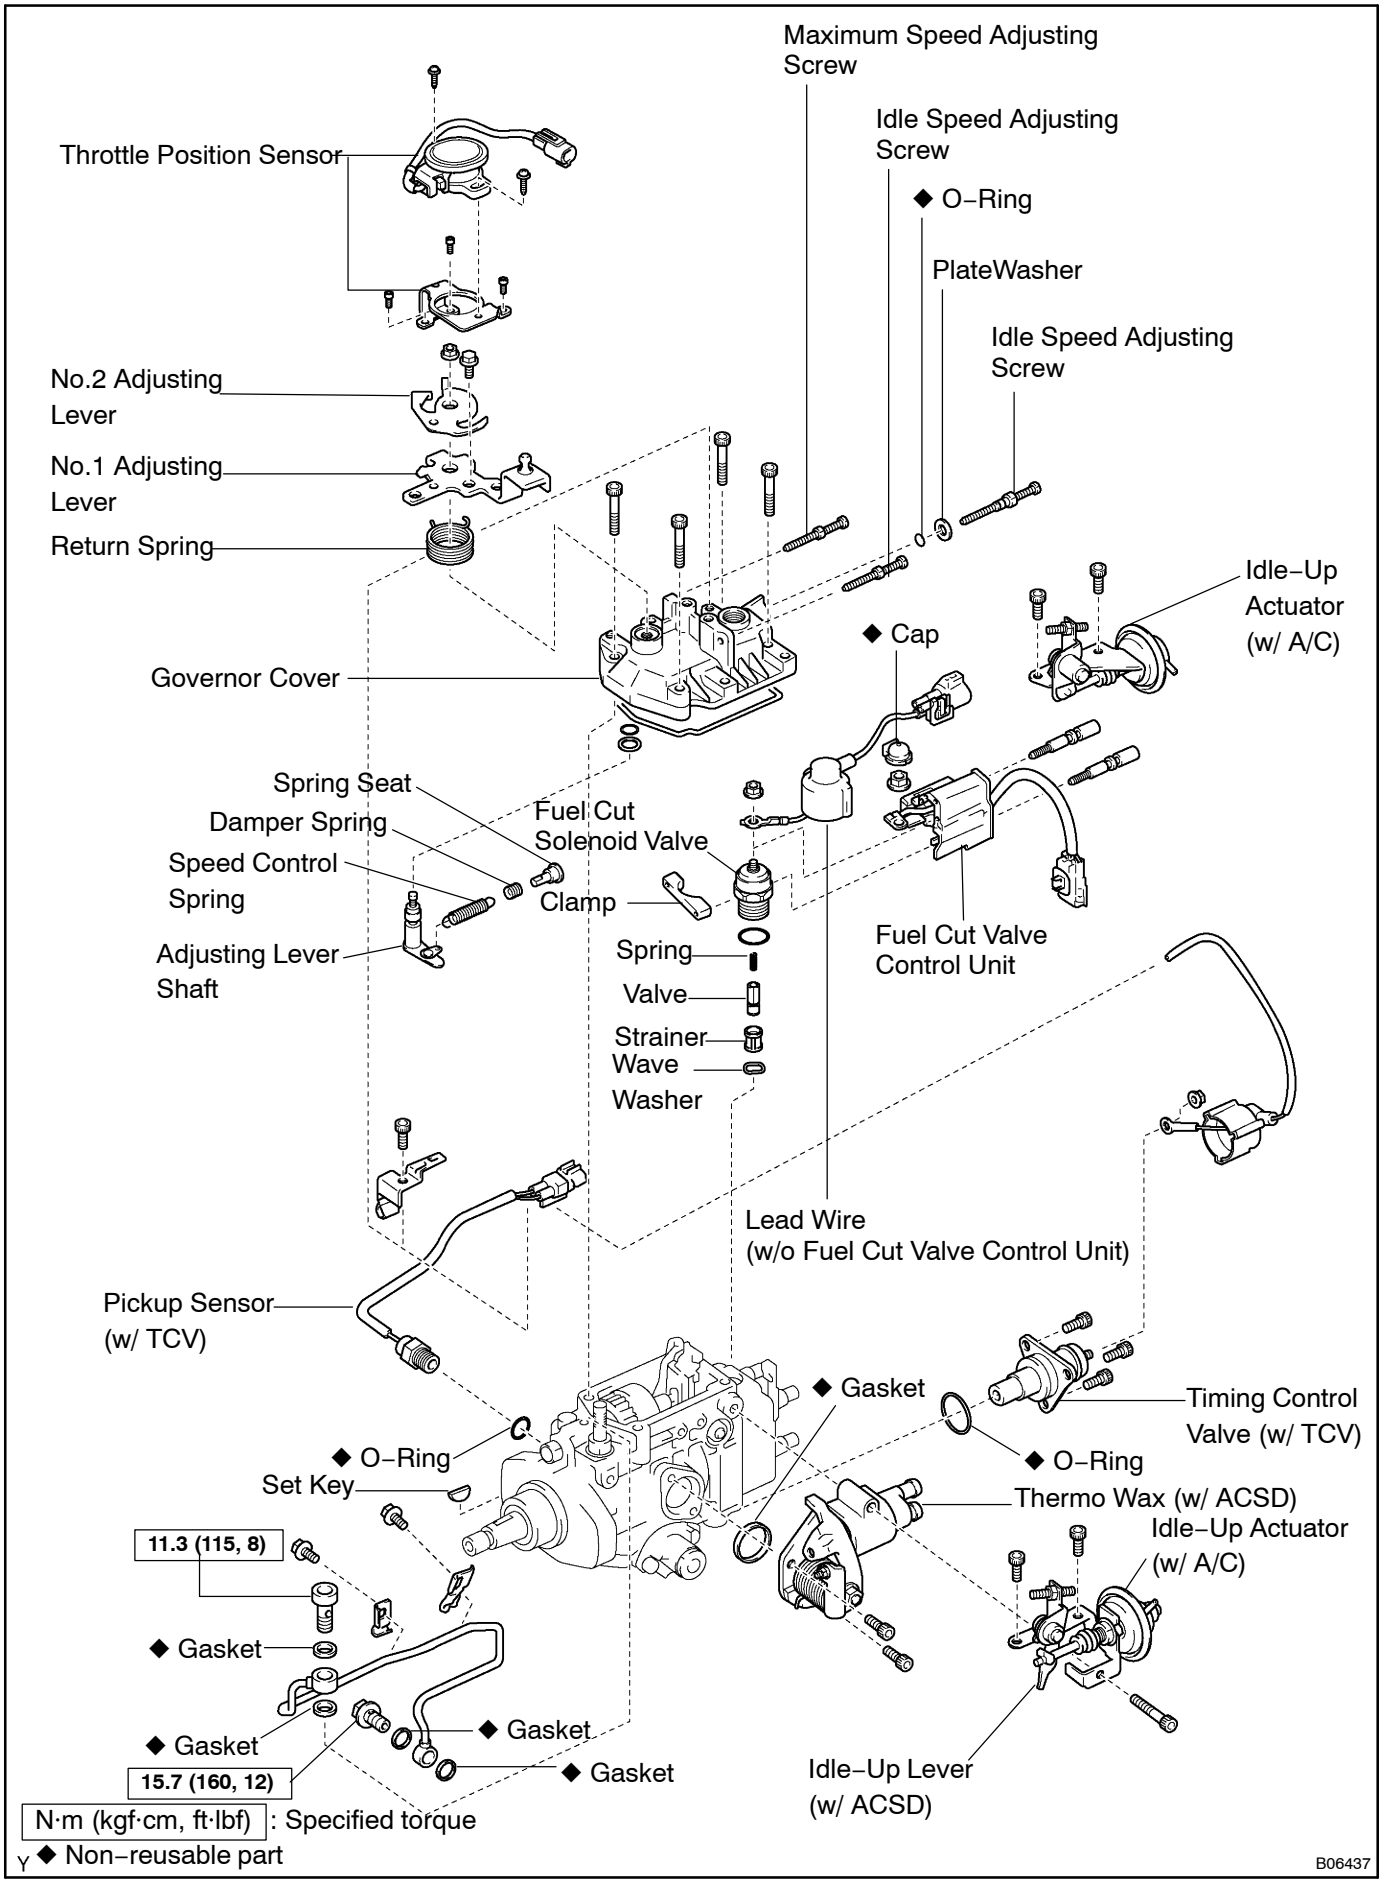
Maximum Speed Adjusting Screw
Idle Speed Adjusting Screw
◆ O–Ring
PlateWasher
Idle Speed Adjusting Screw
Throttle Position Sensor
No.2 Adjusting Lever
No.1 Adjusting Lever
Return Spring
Idle–Up Actuator (w/ A/C)
◆ Cap
Governor Cover
Spring Seat
Damper Spring
Speed Control Spring
Adjusting Lever Shaft
Fuel Cut Solenoid Valve
Clamp
Fuel Cut Valve Control Unit
Spring
Valve
Strainer
Wave Washer
Lead Wire (w/o Fuel Cut Valve Control Unit)
Pickup Sensor (w/ TCV)
◆ Gasket
Timing Control Valve (w/ TCV)
◆ O–Ring
◆ O–Ring
Set Key
Thermo Wax (w/ ACSD)
Idle–Up Actuator (w/ A/C)
11.3 (115, 8)
◆ Gasket
◆ Gasket
◆ Gasket
◆ Gasket
15.7 (160, 12)
Idle–Up Lever (w/ ACSD)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B06437

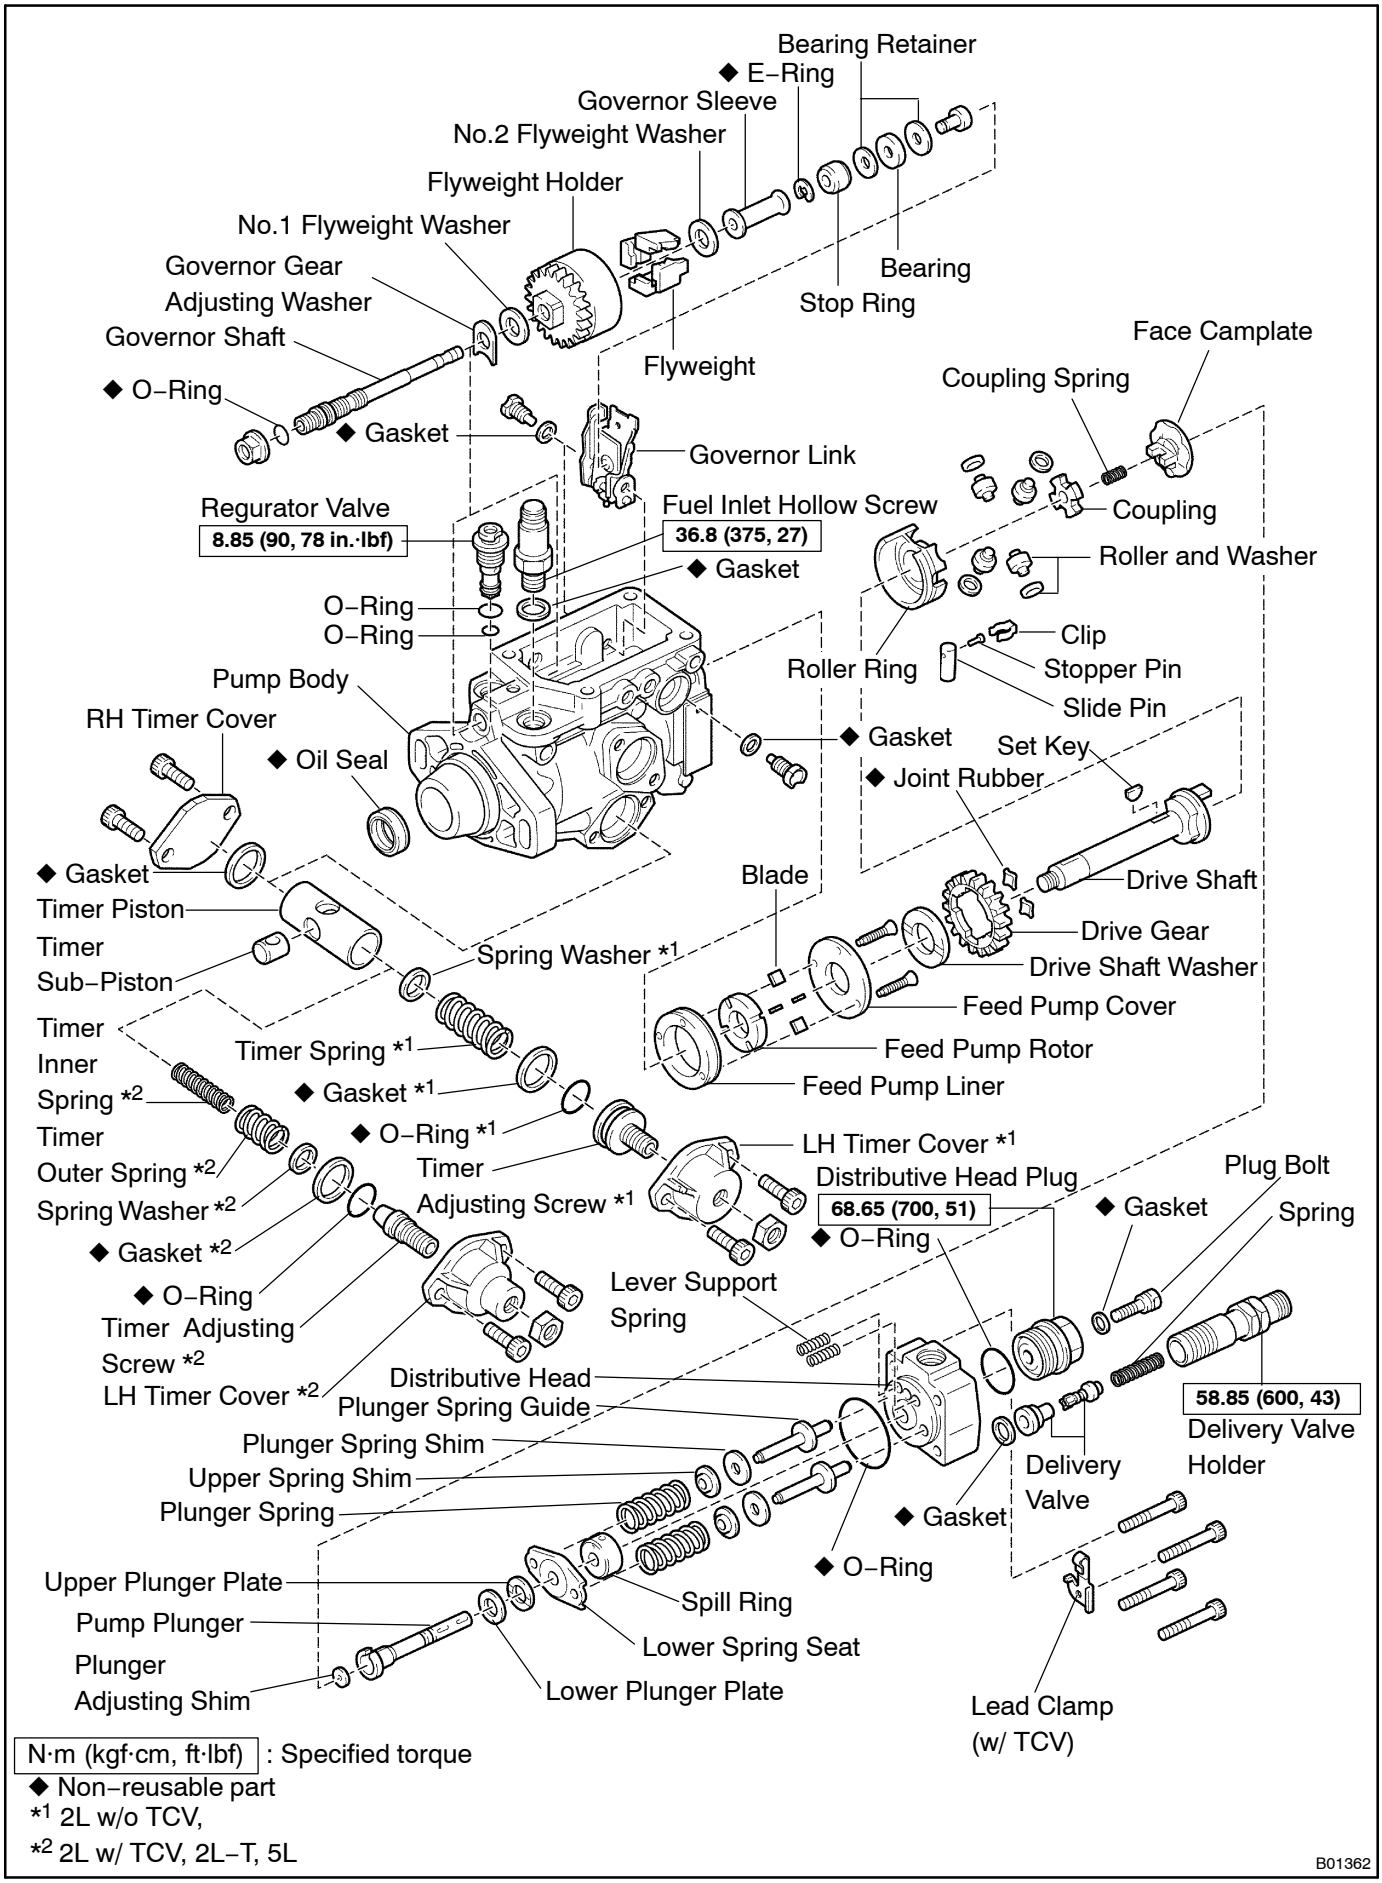


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

*1 2L w/o TCV,

*2 2L w/ TCV, 2L–T, 5L

B01362