

# POWER SOURCE

## LOCATION

BE1CM–01

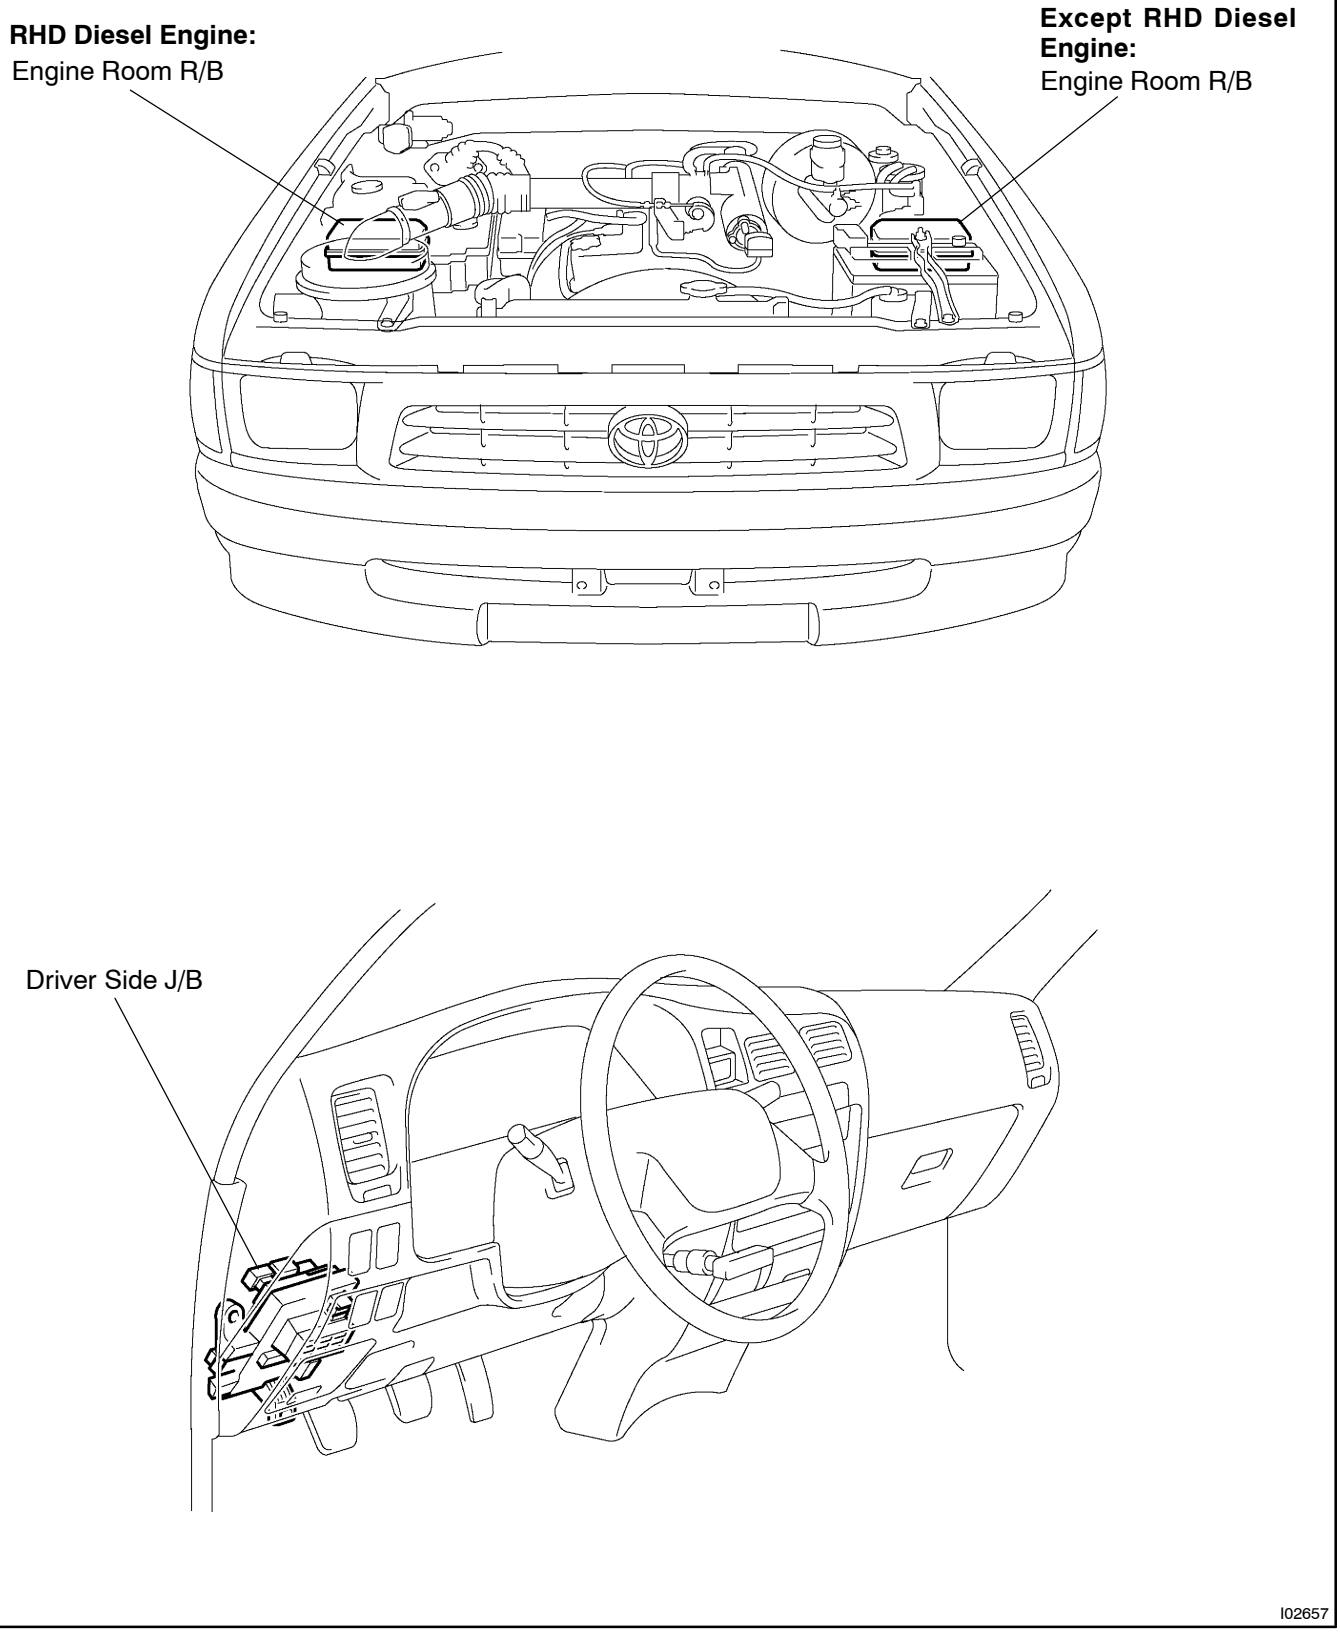

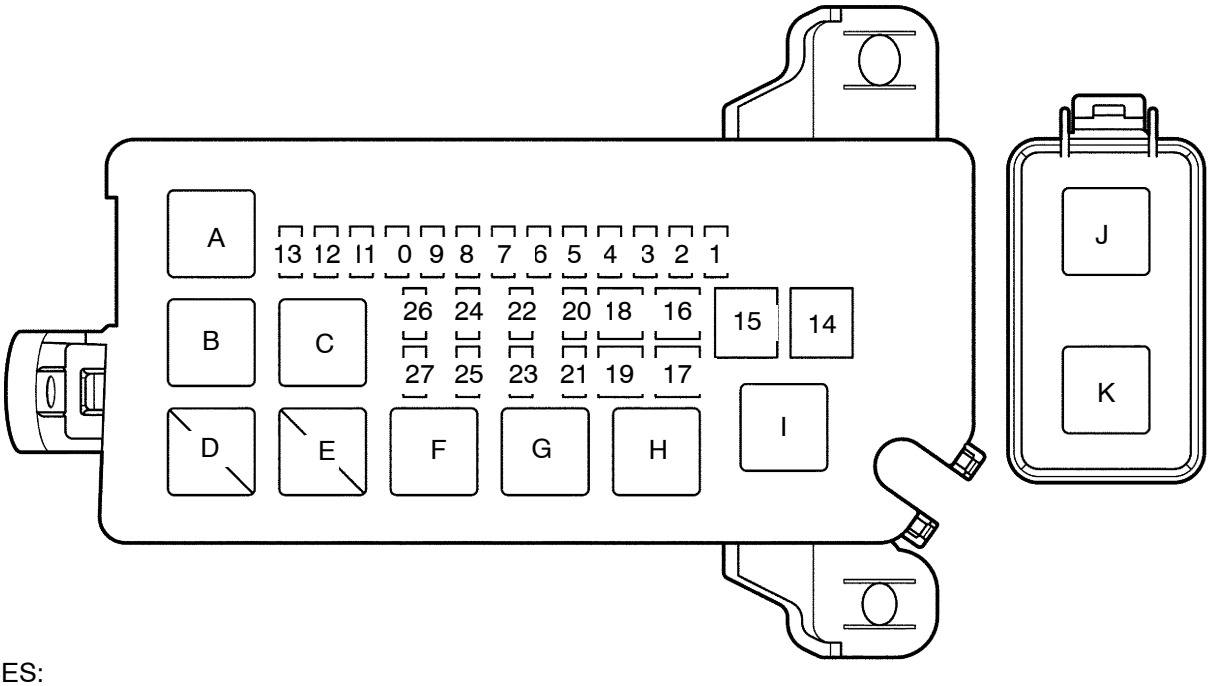


FUSES:

| | |
|---|---|
| 1. – | |
| 2. HEAD RH | 10A |
| 3. HEAD LH | 10A |
| 4. HEAD LO–RH | 10A (w/ DRL Dim–dip System) |
| 5. HEAD LO–RH | 10A (w/ DRL Dim–dip System) |
| 6. TAIL | 10A |
| 7. STA | 7.5A |
| 8. A.C | 10A |
| 9. – | |
| 10. – | |
| 11. – | |
| 12. – | |
| 13. – | |
| 14. ABS | 60A (W/ ABS Gasoline Engine) |
| GLOW ABS | 80A (Diesel Engine or w/ ABS Diesel Engine) |
| 15. ALT | 60A, 80A, 100A |
| 16. CDS FAN | 30A (2L–TE Engine) |
| 17. HEATER | 50A (Heater or Boost ventilator) |
| 18. AM2 | 30A (Gasoline Engine or 1KZ–TE Engine) |
| 19. AM1 | 40A |
| 20. HORN | 15A |
| 21. ALT–S | 7.5A (IC Alternator) |
| 22. DOME | 15A |
| 23. DEFOG | 15A |
| 24. OBD | 7.5A (2RZ–FE, 3RZ–FE Engine) |
| 25. STOP | 10A |
| 26. EFI | 15A (Gasoline EFI Engine) |
| ECD | 15A (1KZ–TE Engine) |
| AM2 | 20A (2L, 3L, 5L, 2L–T Engine) |
| 27. – | |

RELAYS:

A. Headlight Dimmer Relay
B. ECD Relay or EFI Relay
C. Headlight Control Relay
D. –
E. –
F. Taillight Control Relay
G. CDS Fan Relay
H. Heater Main Relay
I. Starter Relay ( Gasoline Engine)
J. Starter Relay (Diesel Engine)
K. Sub Glow Relay (Diesel Engine)

P

I14133