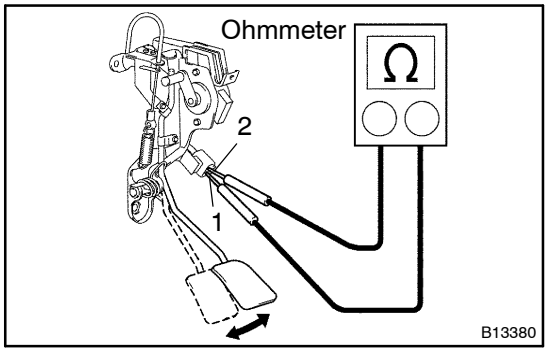


ACCELERATOR PEDAL CLOSED POSITION SWITCH

ED038–04

INSPECTION

INSPECT ACCELERATOR PEDAL CLOSED POSITION SWITCH

(a) Disconnect the accelerator pedal closed position switch connector.

(b) Using an ohmmeter, check the continuity between the accelerator pedal closed position switch terminals.

Continuity:

Accelerator Pedal	Continuity
Fully closed	No continuity
Fully open	Continuity (0 – 20 Ω)

If the is not as continuity, replace the accelerator pedal closed position switch (See page ED–19).

(c) Reconnect the accelerator pedal closed position switch connector.