


OIL PUMP


COMPONENTS

LU0P9–01

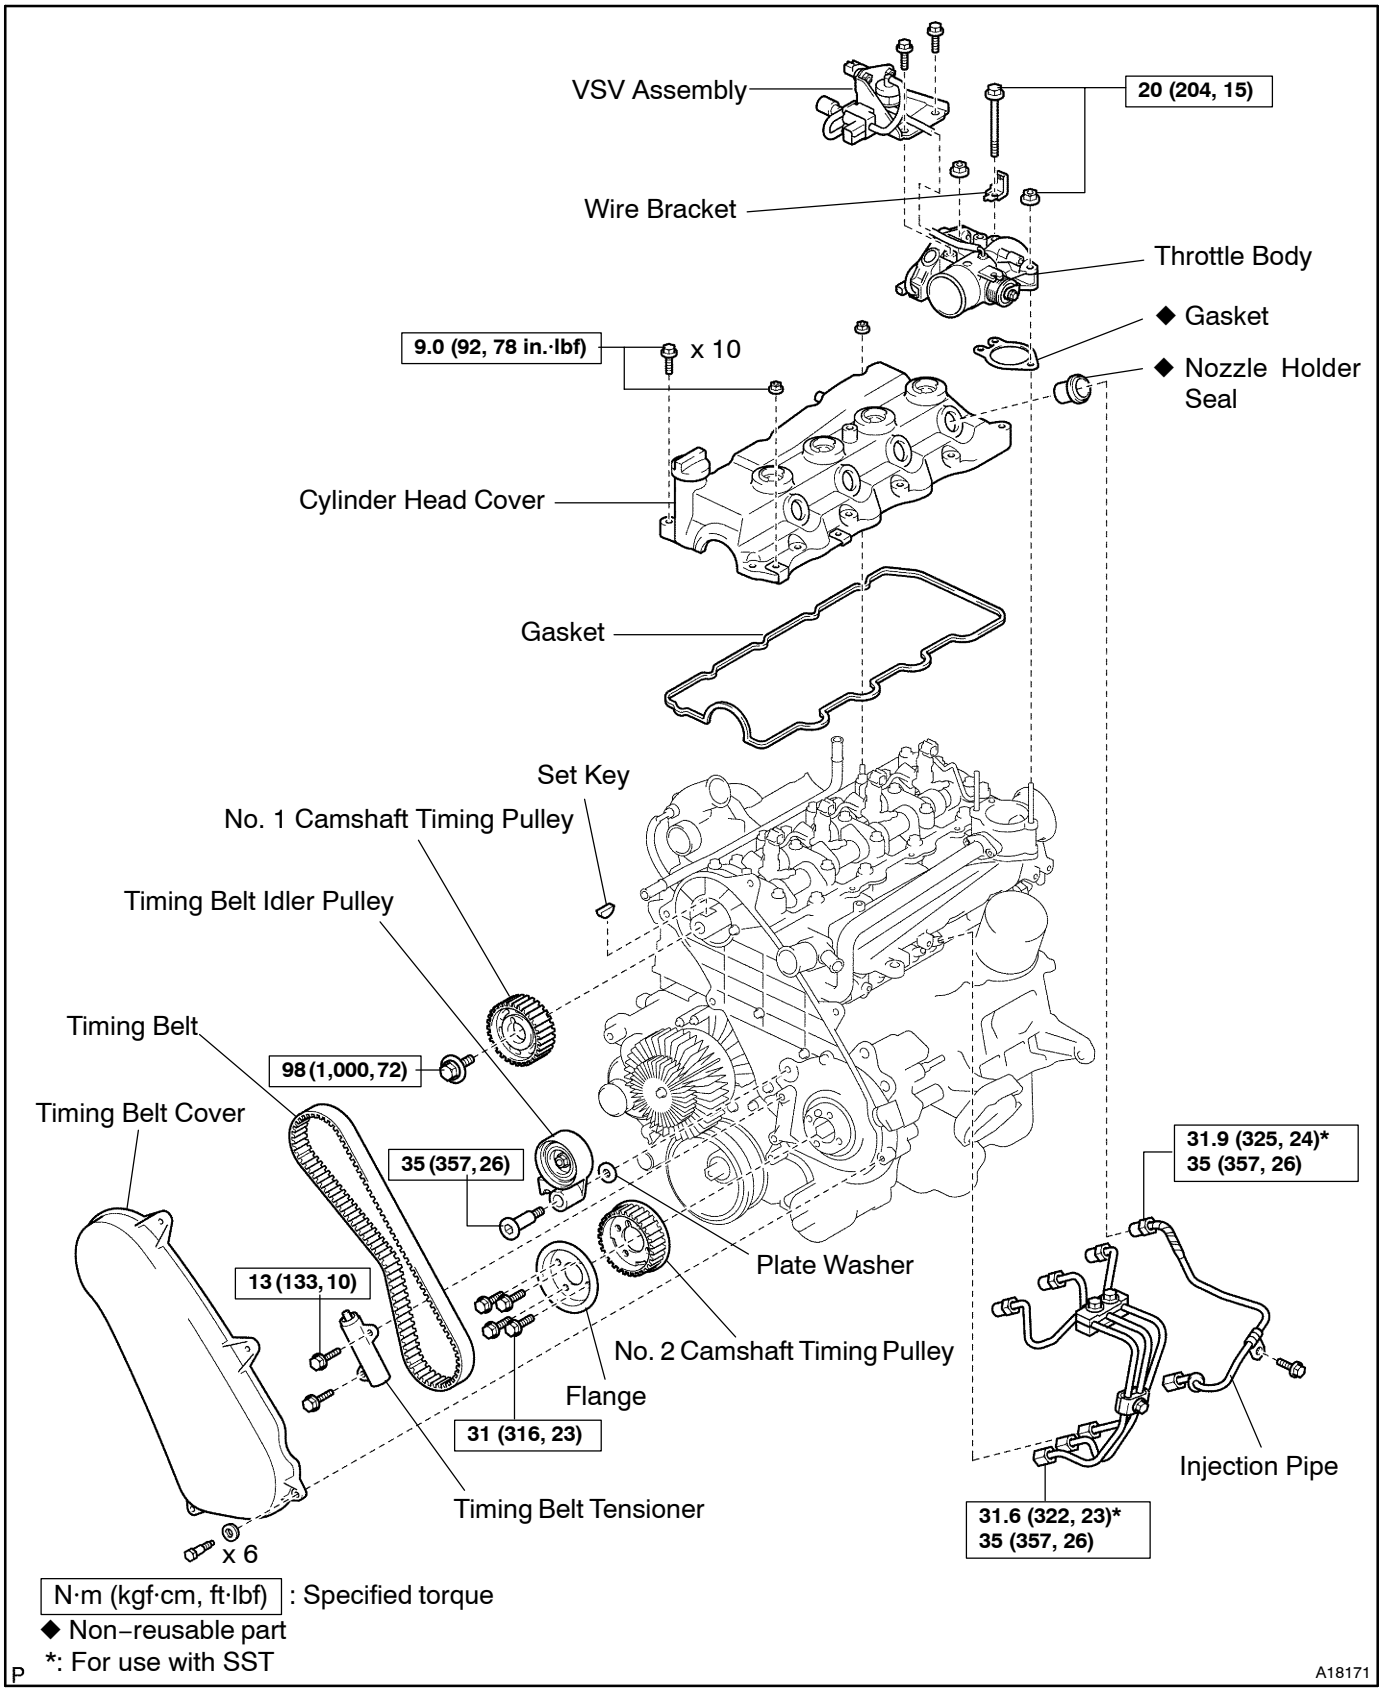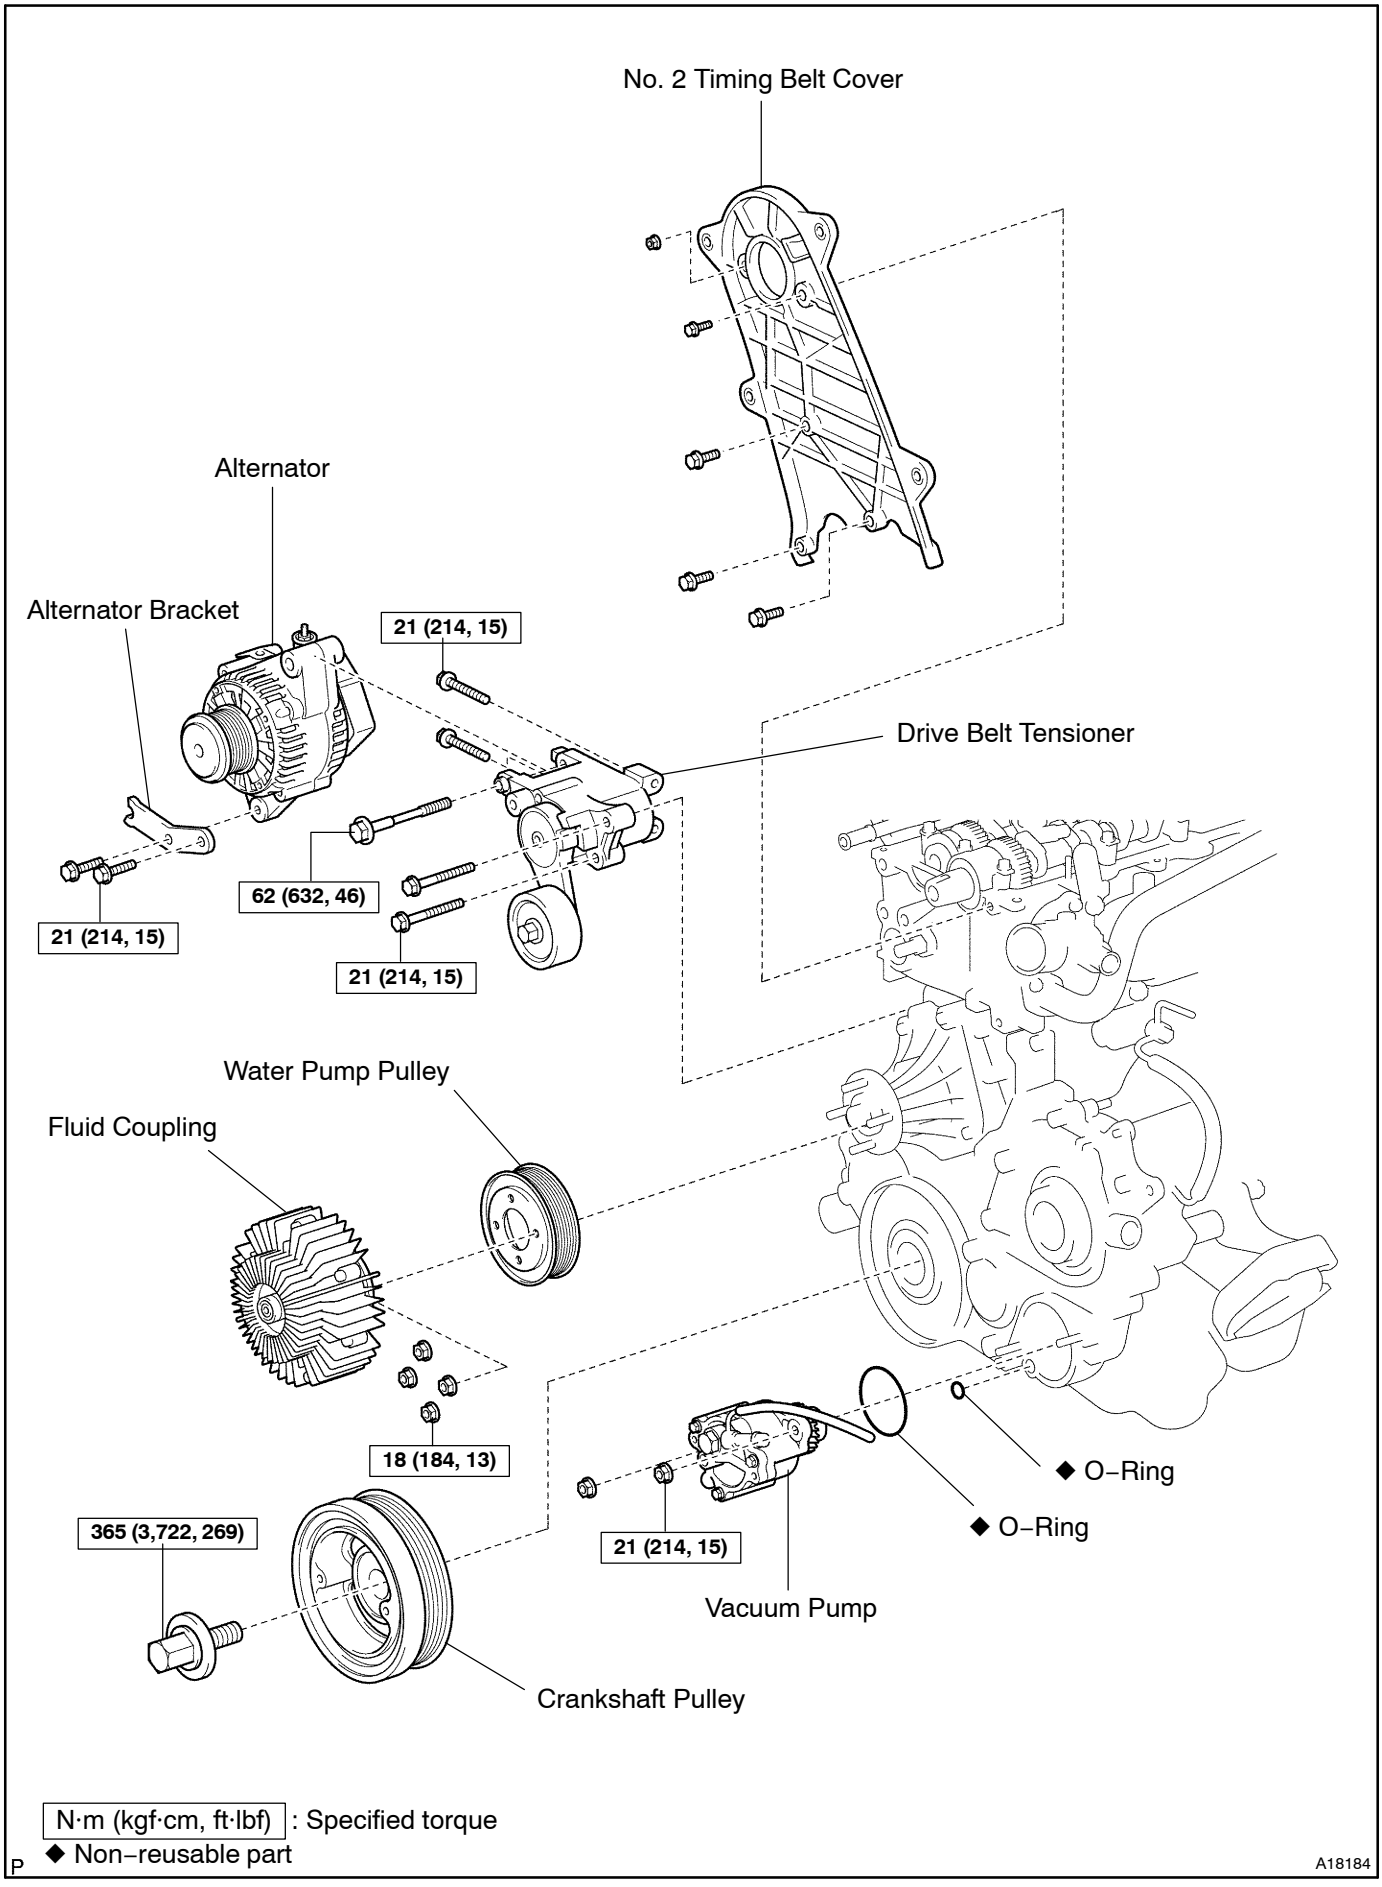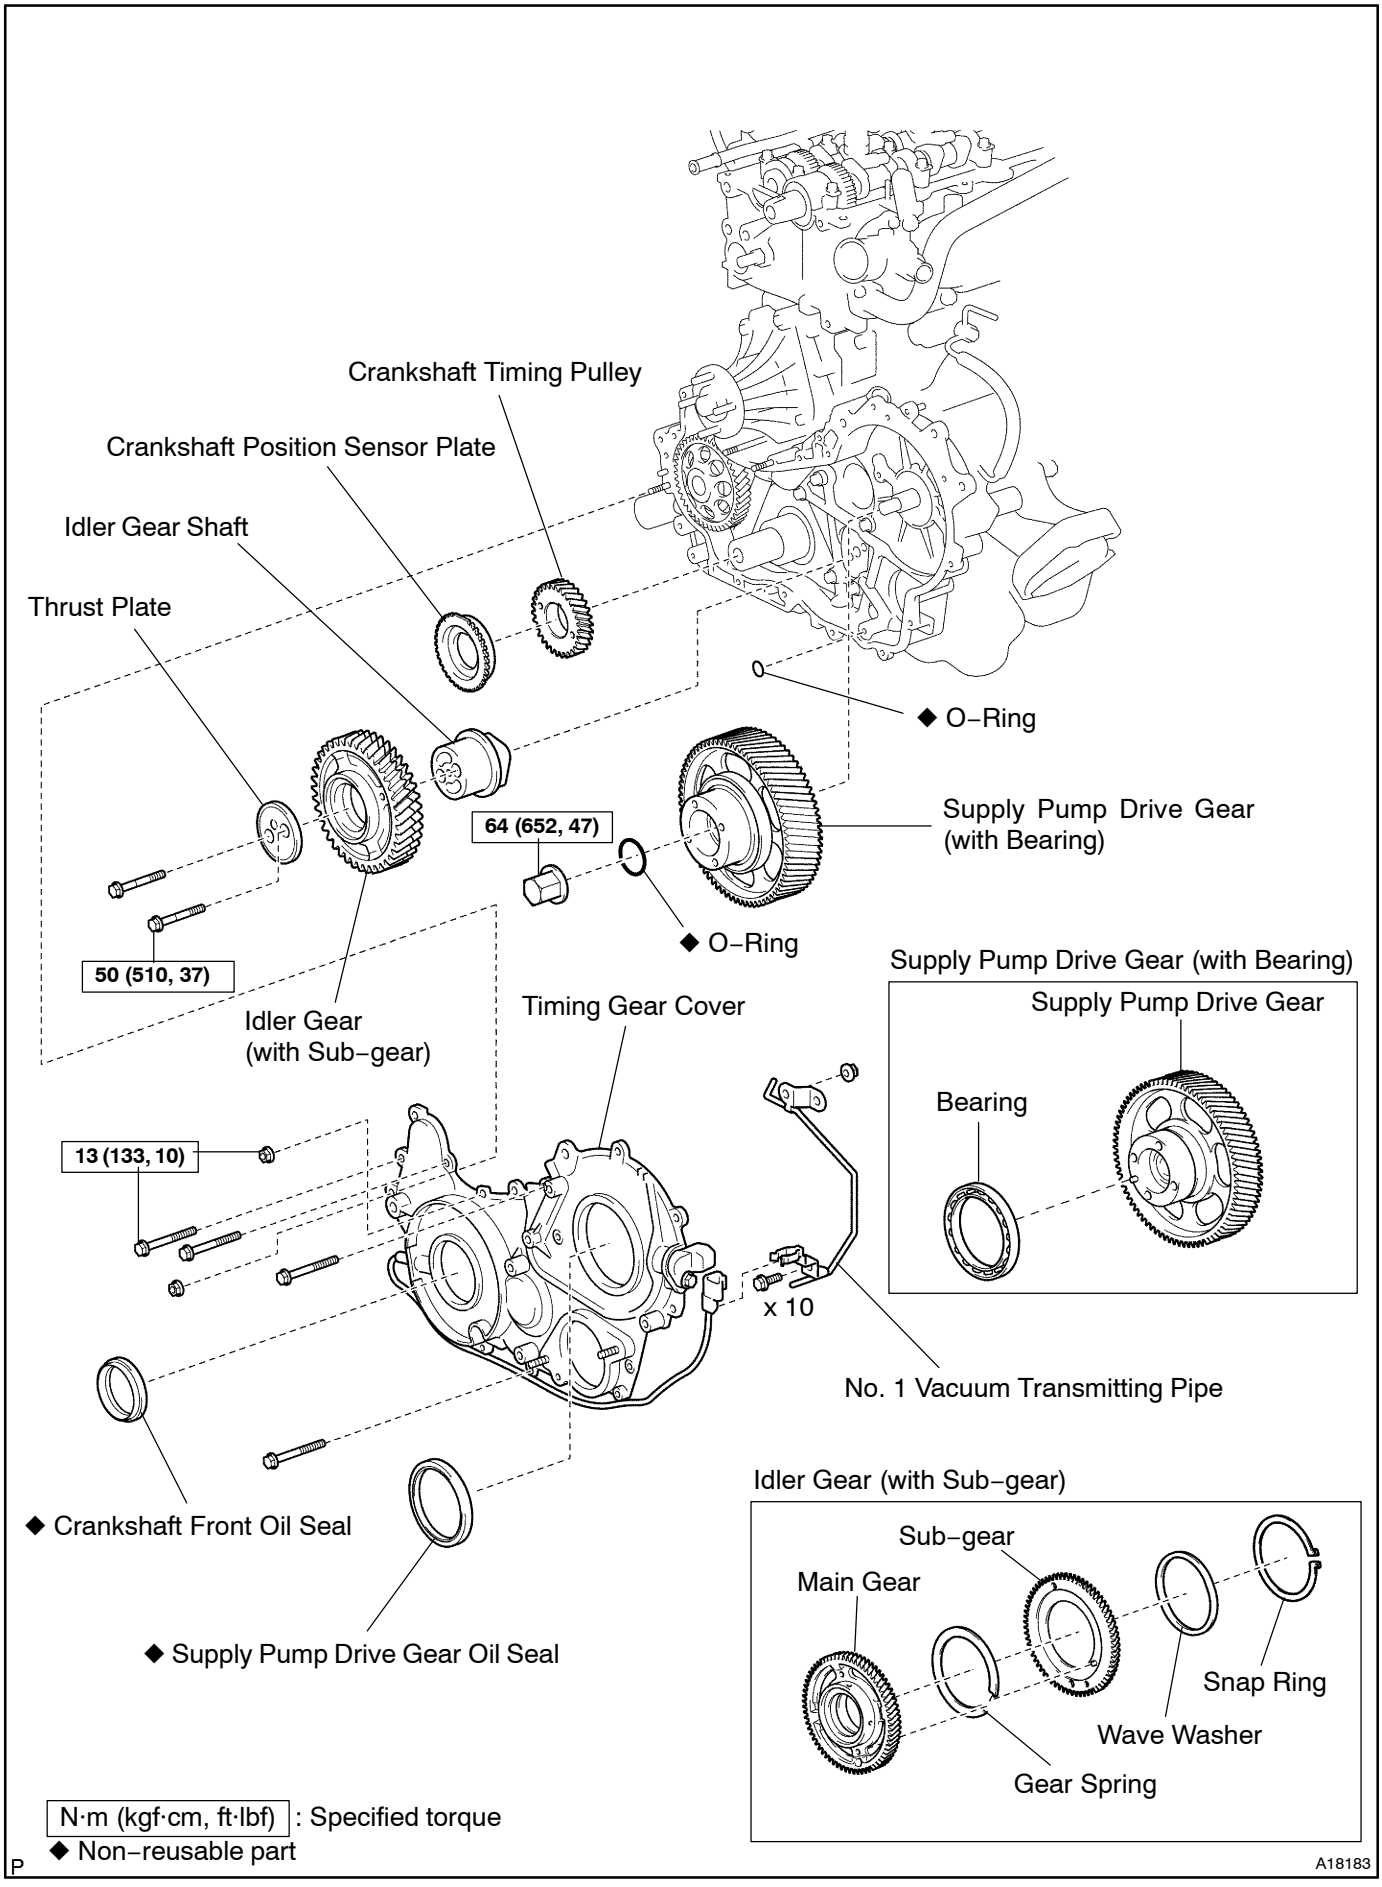


No. 2 Timing Belt Cover
Alternator
Alternator Bracket
21 (214, 15)
Drive Belt Tensioner
62 (632, 46)
21 (214, 15)
21 (214, 15)
Water Pump Pulley
Fluid Coupling
18 (184, 13)
◆ O–Ring
◆ O–Ring
21 (214, 15)
Vacuum Pump
365 (3,722, 269)
Crankshaft Pulley
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A18184


Crankshaft Timing Pulley
Crankshaft Position Sensor Plate
Idler Gear Shaft
Thrust Plate
◆ O–Ring
Supply Pump Drive Gear (with Bearing)
64 (652, 47)
◆ O–Ring
50 (510, 37)
Idler Gear (with Sub–gear)
Timing Gear Cover
13 (133, 10)
x 10
No. 1 Vacuum Transmitting Pipe
◆ Crankshaft Front Oil Seal
◆ Supply Pump Drive Gear Oil Seal
Supply Pump Drive Gear (with Bearing)
Supply Pump Drive Gear
Bearing
Idler Gear (with Sub–gear)
Sub–gear
Main Gear
Snap Ring
Wave Washer
Gear Spring
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A18183

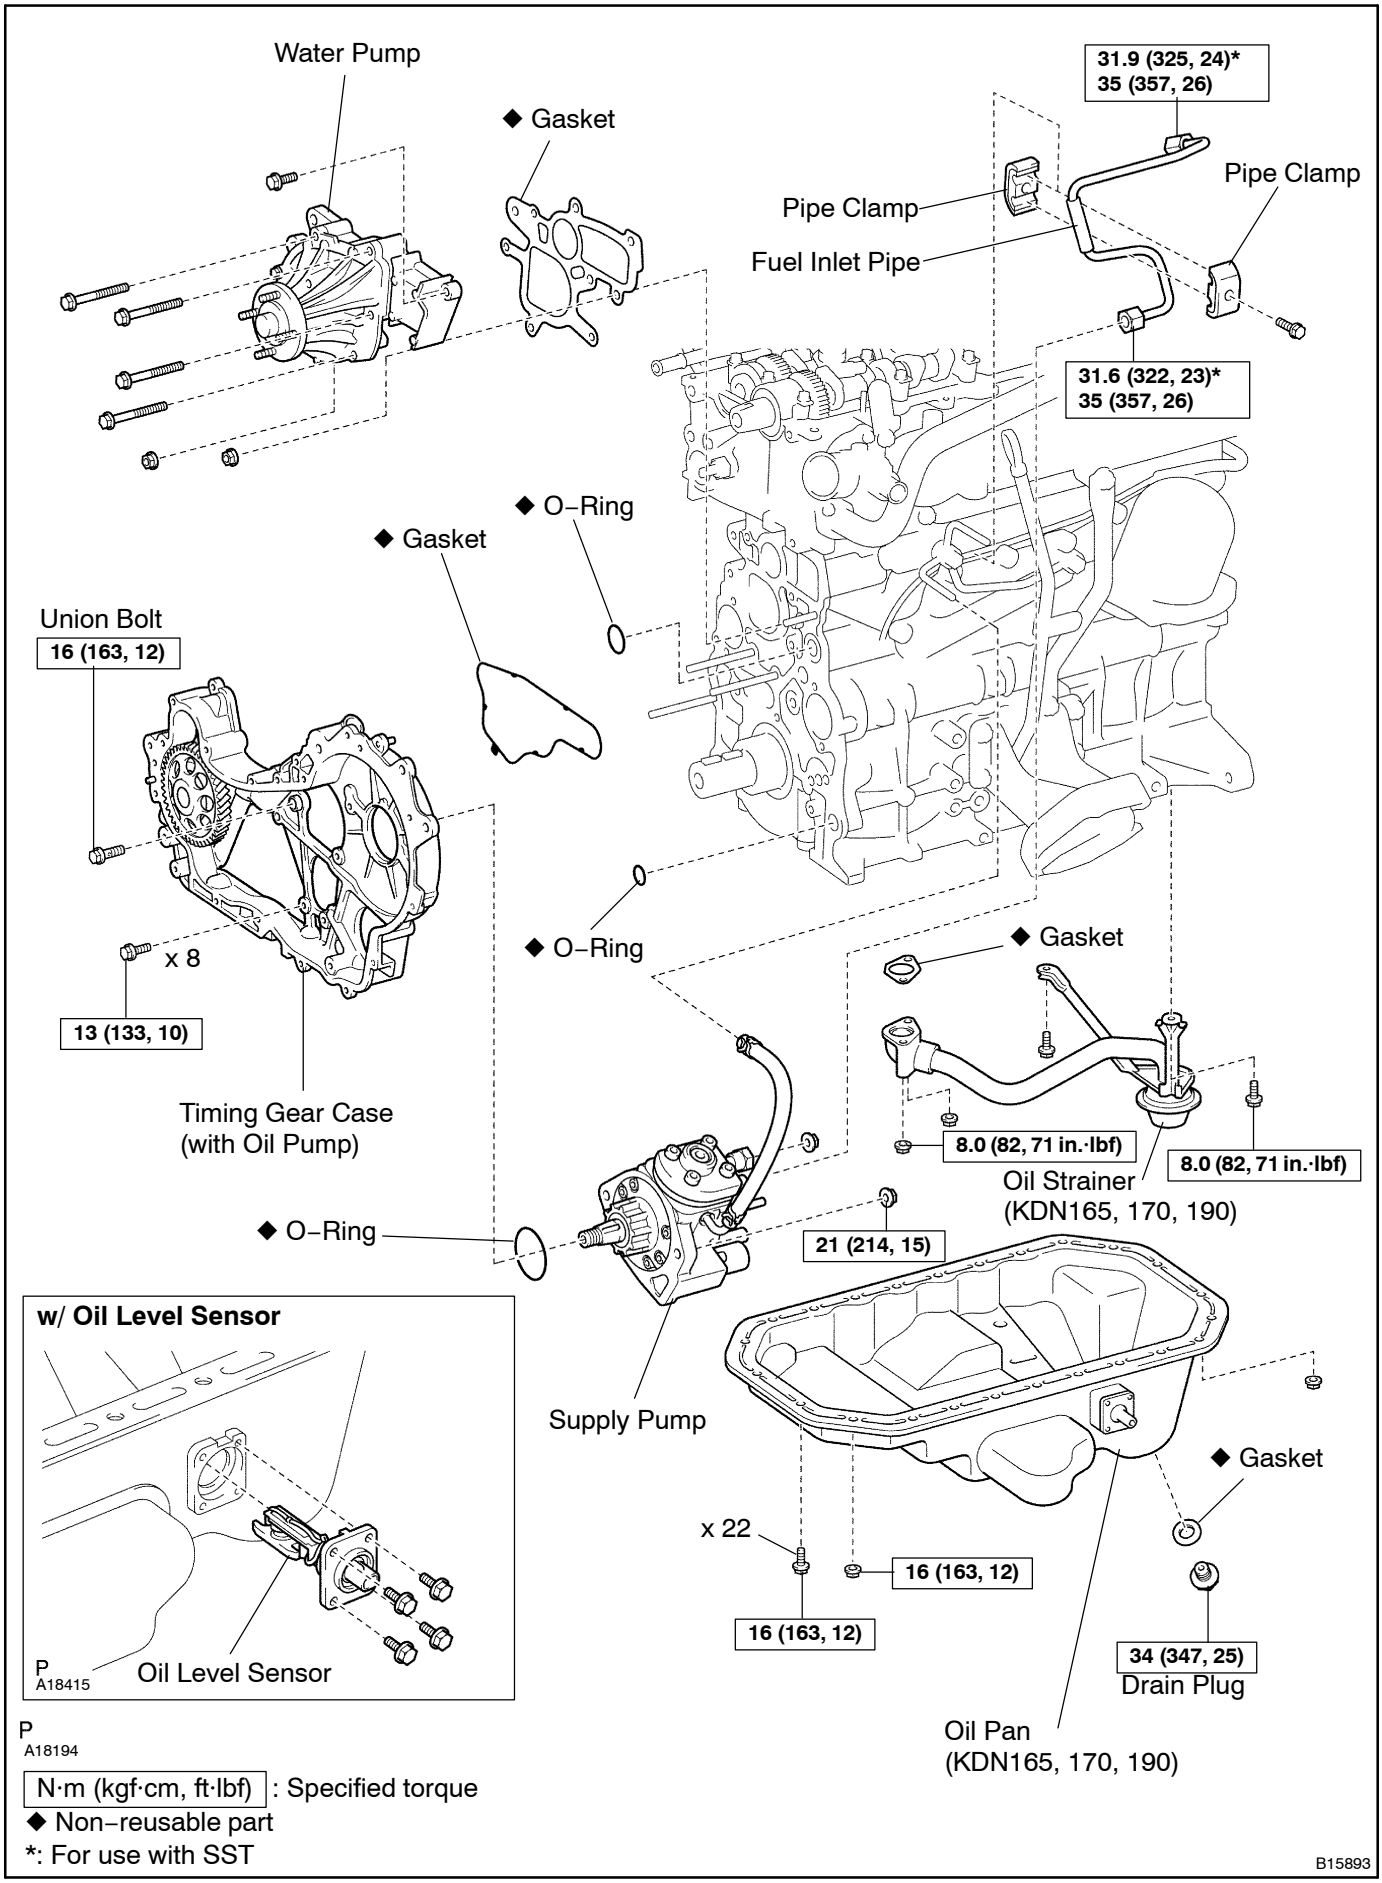


P
A18194

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
*: For use with SST


B15893

KDN145, 150, 155

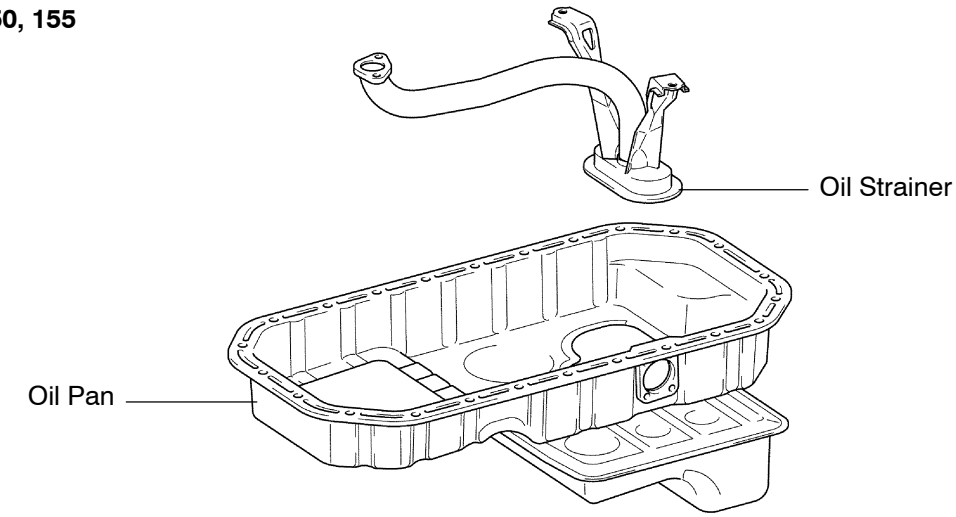


P
A18410
B15891

KLH12, 22

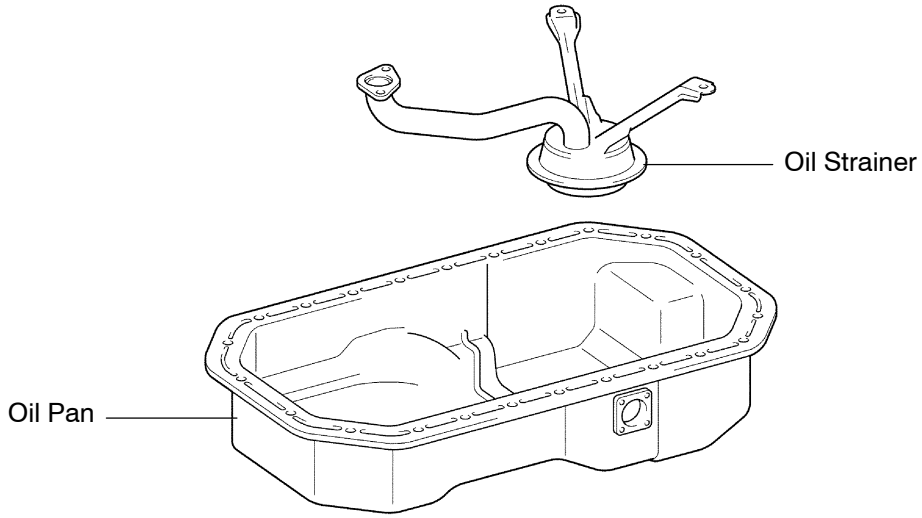


P
A18409
B15890

KLH18, 28

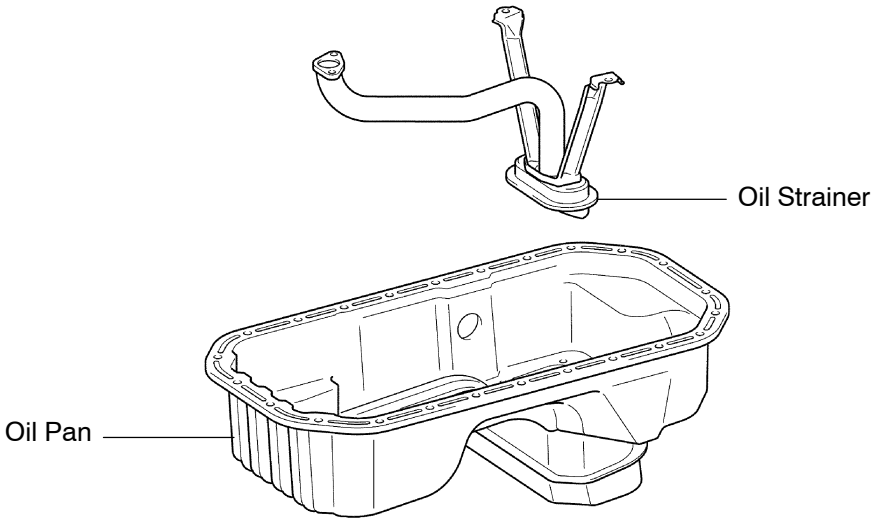

P
A18411
B15892

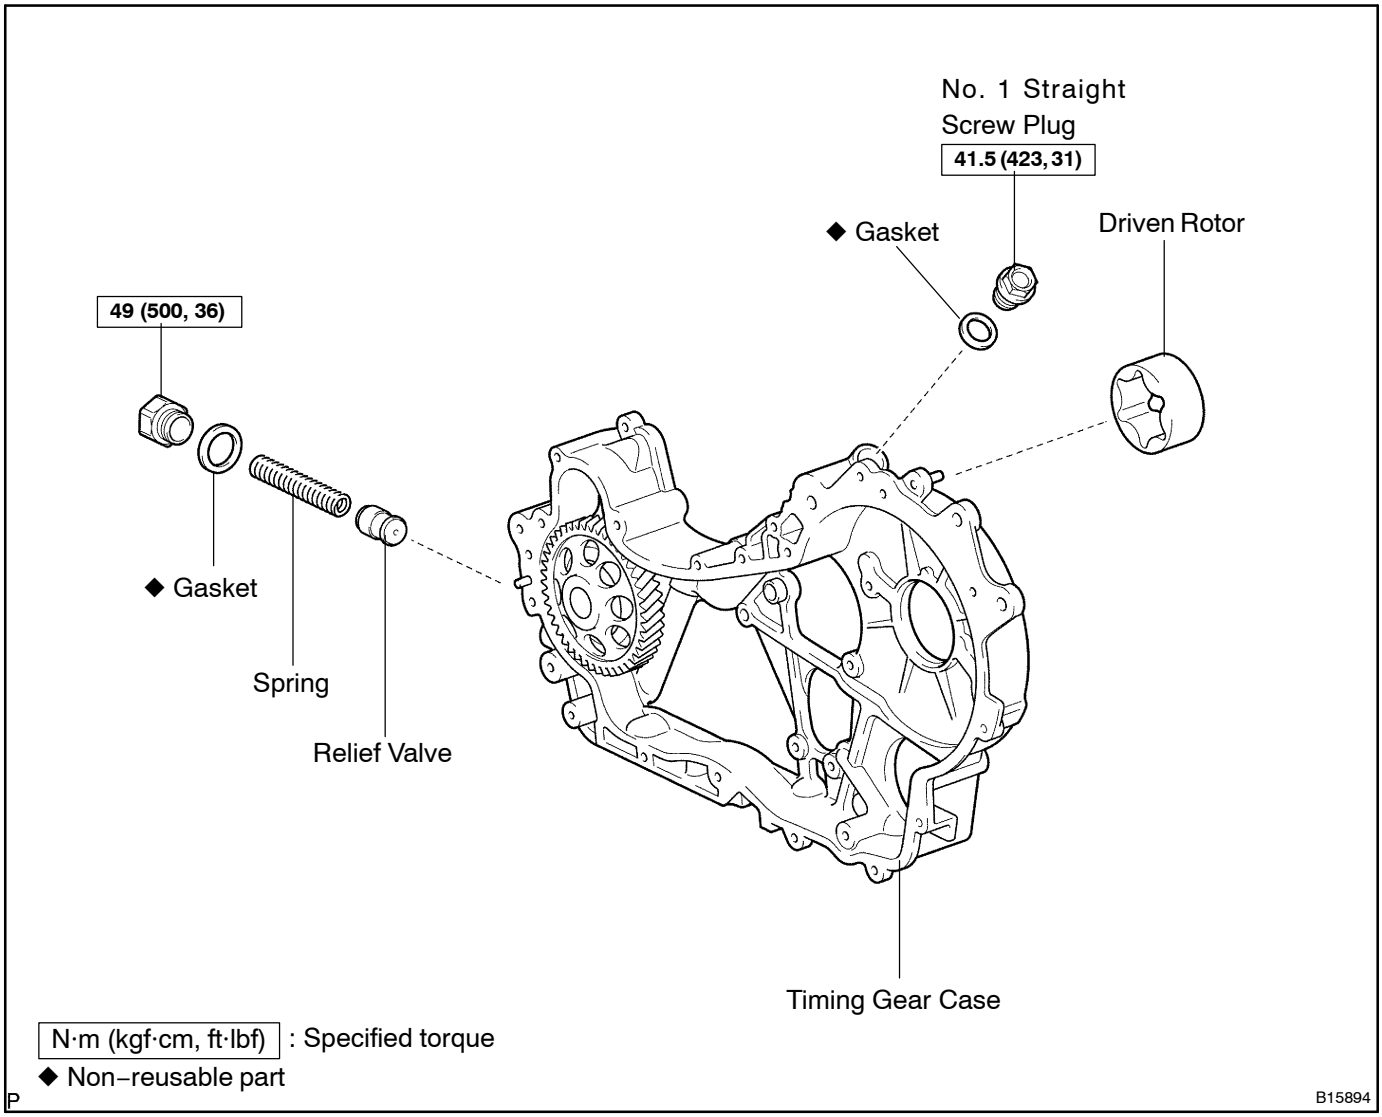
No. 1 Straight
Screw Plug
41.5 (423, 31)
◆ Gasket
Driven Rotor
49 (500, 36)
◆ Gasket
Spring
Relief Valve
Timing Gear Case
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
B15894