
BR0FO–02

# INSTALLATION

**Installation is in the reverse order of removal.**

**NOTICE:**

**Apply lithium soap base glycol grease and high temperature grease to the parts indicated by the arrows (See page BR–9).**

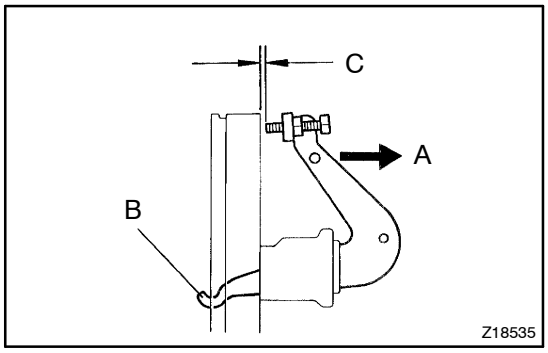


**1. ADJUST BELLCRANK**

(a) Lightly pull the bellcrank to direction A until there is no slack at part B.

(b) In this condition, turn the adjusting bolt so that dimension C will be 0.4 – 0.8 mm (0.016 – 0.031 in.).

(c) Lock the adjusting bolt with the lock nut.

(d) Connect the parking brake cable to the parking brake bellcrank and install the clip.

(e) Install the tension spring.

**2. CHECK OPERATION OF AUTOMATIC ADJUSTING MECHANISM (See Pub. No. RM585E on page BR–53)**

**3. CHECK CLEARANCE BETWEEN BRAKE SHOES AND DRUM (See Pub. No. RM585E on page BR–53)**
**Shoe clearance: 0.6 mm (0.024 in.)**

**4. FILL BRAKE RESERVOIR WITH BRAKE FLUID**

**5. BLEED BRAKE SYSTEM (See Pub. No. RM585E on page BR–4)**

**6. CHECK FOR LEAKS**