

CL03R–04

# REASSEMBLY

**1. COAT PARTS WITH LITHIUM SOAP BASE GLYCOL GREASE, AS SHOWN**

**2. INSERT PISTON WITH SPRING INTO CYLINDER**

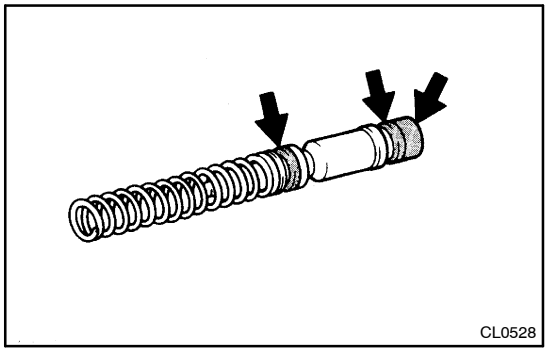

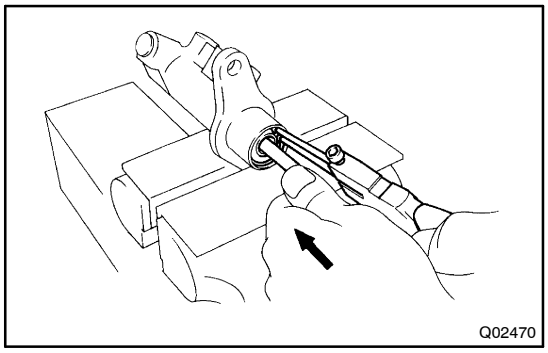




**3. INSTALL PUSH ROD AND BOOT**

(a) Install the washer to the push rod.

(b) Push the push rod to the piston, using snap ring pliers, install the snap ring.

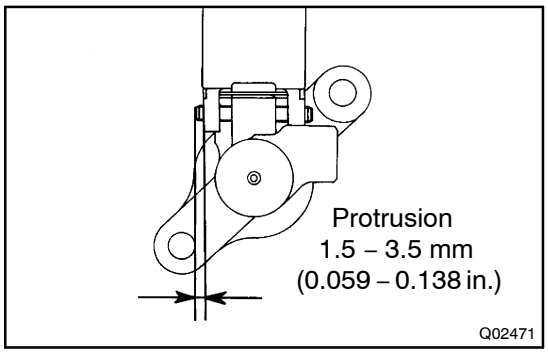(c) Install the boot.




**4. TEMPORARILY INSTALL LOCK NUT AND CLEVIS**

(a) Install the reservoir tank and a new grommet.

(b) Using a pin punch and hammer, drive in the slotted spring pin.