


TERMINALS OF ECU

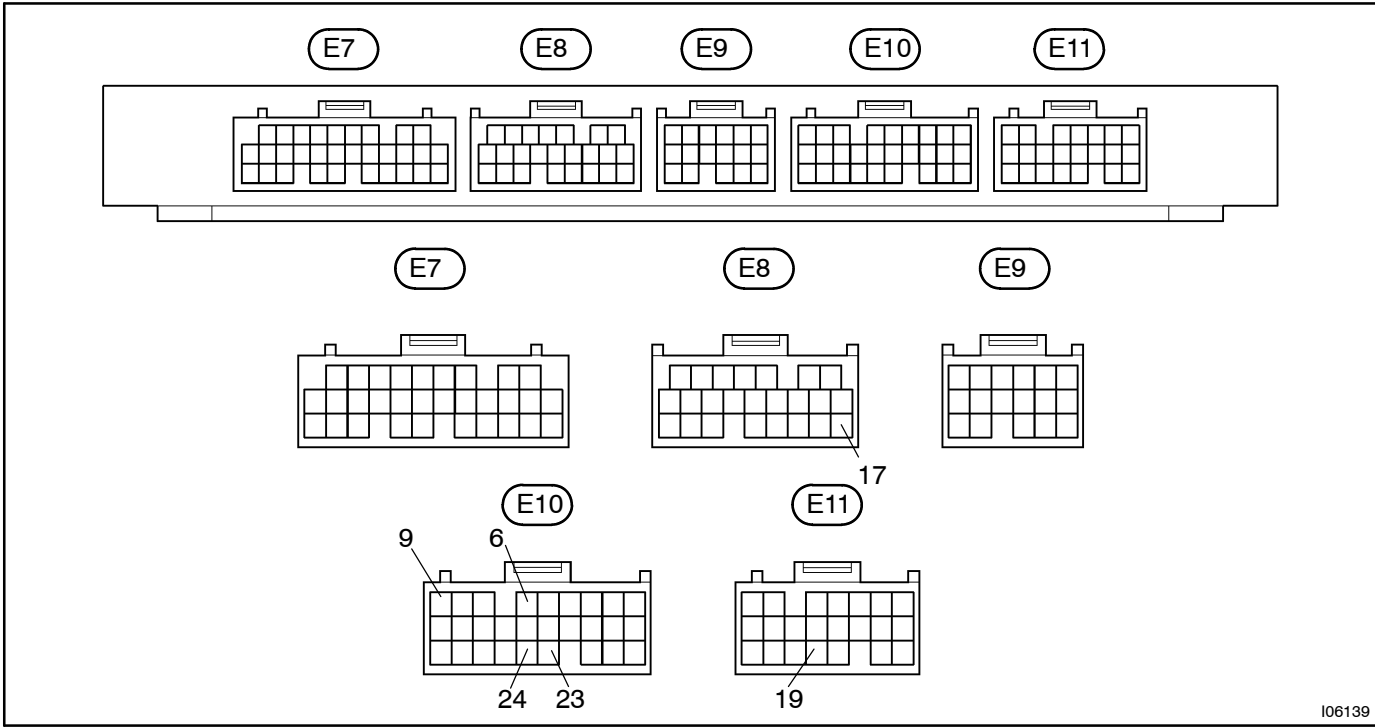

106139

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
STP ↔ E1 (E10-6 ↔ E8-17)	G-W ↔ BR	Depress brake pedal	10 - 16 V
		Release brake pedal	Below 1 V
CCS ↔ E1 (E10-23 ↔ E8-17)	L ↔ BR	Ignition switch ON	10 - 16 V
		Ignition switch ON CANCEL switch hold ON	3.6 - 7.2 V
		Ignition switch ON SET/COAST switch hold ON	2.1 - 4.9 V
		Ignition switch ON RES/ACC switch hold ON	0.7 - 2.6 V
CMS ↔ E1 (E10-24 ↔ E8-17)	Y-R ↔ BR	Ignition switch ON Main switch OFF	Below 1 V
		Ignition switch ON Main switch ON	10 - 14 V
PI ↔ E1 (E10-9 ↔ E8-17)	Y-B ↔ BR	Ignition switch ON Cruise control main switch ON	Below 1 V
		Ignition switch ON Cruise control main switch OFF	10 - 14 V
ST1- ↔ E1 (E10-19 ↔ E8-17)	R-G ↔ BR	Depress brake pedal	Below 1 V
		Release brake pedal	10 - 14 V