


DTC	B2791/99	Key Unlock Warning SW OFF Malfunction
-----	----------	---------------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
B2791/99	• Open circuit in key unlock warning switch circuit. • Key unlock warning switch adheres to OFF position.	• Key unlock warning switch • Wire harness

WIRING DIAGRAM

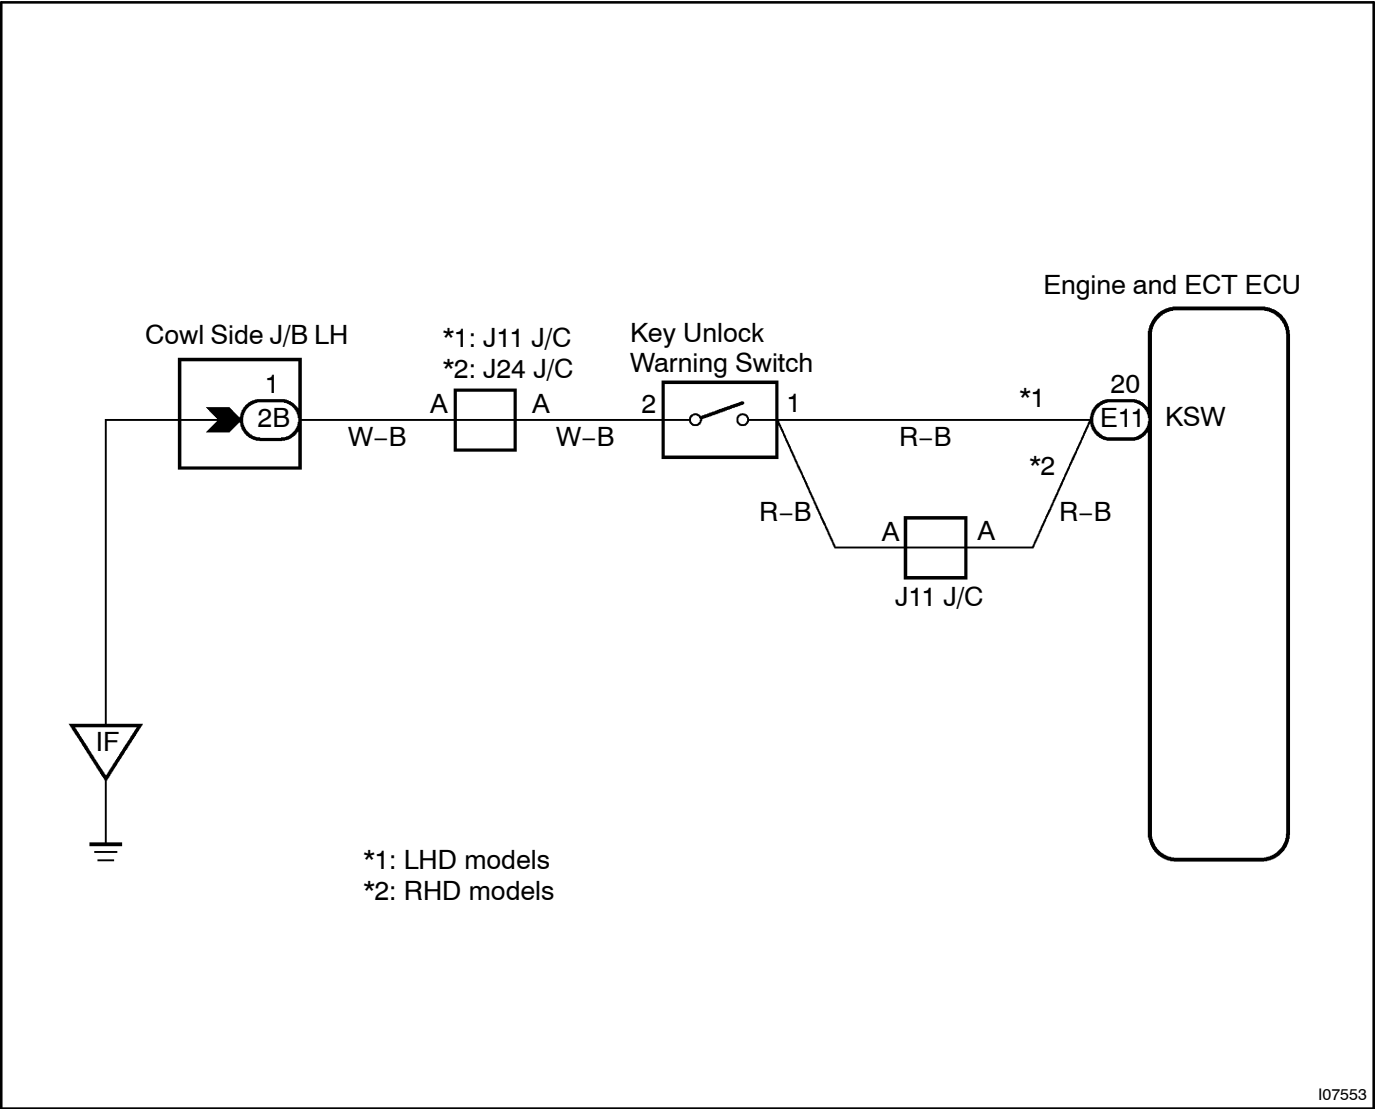

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check key unlock warning switch (See page BE-20). |
|---|---|

NG

Replace key unlock warning switch.

OK

- | | |
|---|---|
| 2 | Check harness and connector between key unlock warning switch and Engine and ECT ECU. |
|---|---|

NG

Repair or replace the harness or connector.

OK

Replace Engine and ECT ECU.
