
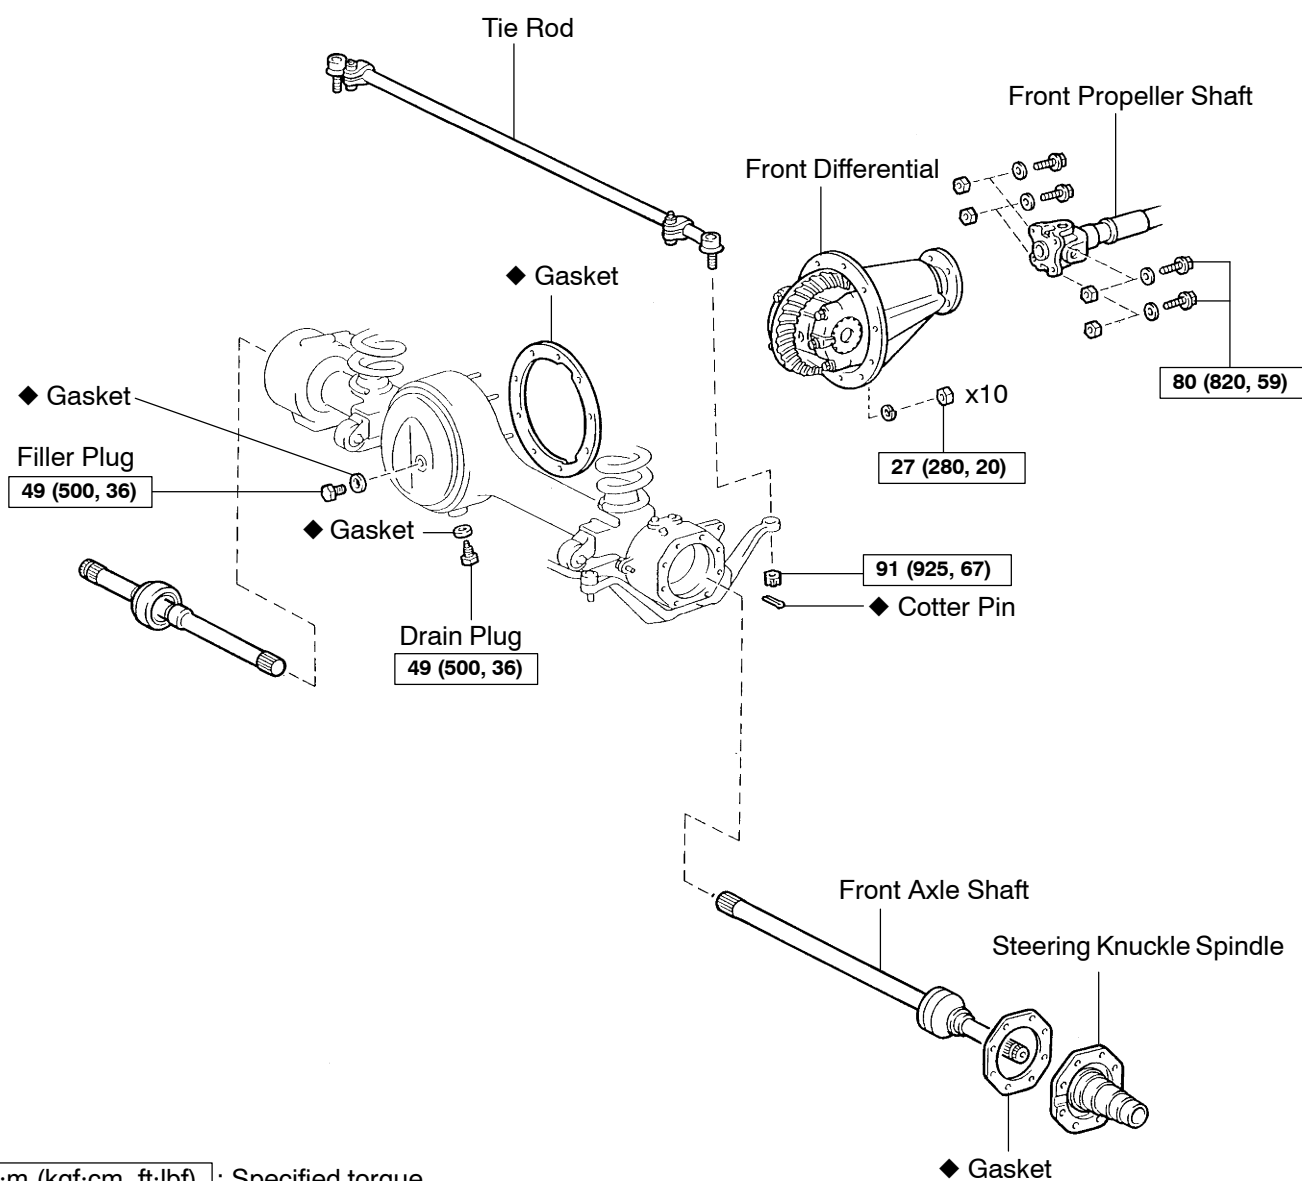


# FRONT DIFFERENTIAL CARRIER (Rigid Front Suspension) COMPONENTS

SA1BX-01

w/ Diff. Lock

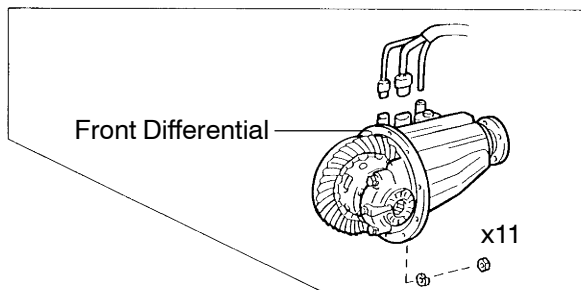


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

F05945

w/o Diff. Lock

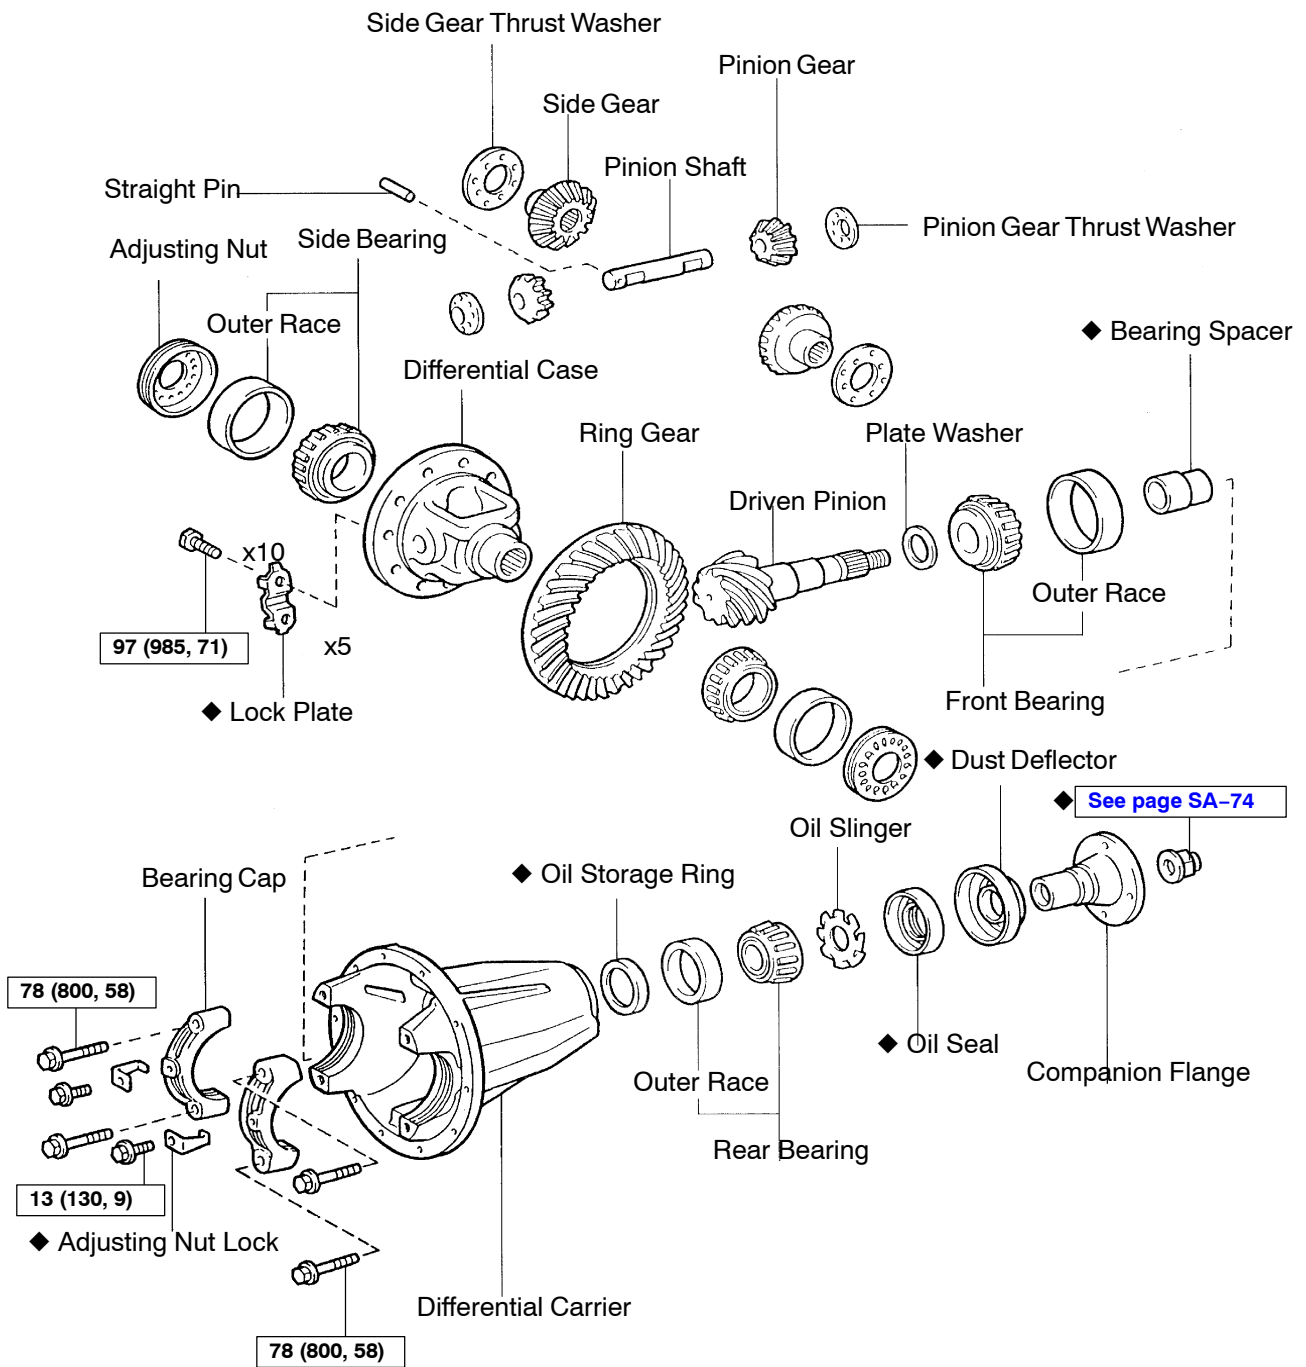

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

★ Straight Screw Plug  
22 (220, 16)

Spring Seat  
Compression Spring  
Ball  
★ 24 (240, 17)

Position Switch  
40 (410, 30)

◆ Gasket  
◆ O-Ring

Actuator  
26 (270, 20)

◆ See page SA-74

◆ Dust Deflector

◆ Oil Storage Ring

Oil Slinger

Companion Flange

◆ Oil Seal

◆ Adjusting Nut Lock  
78 (800, 58)

Sleeve  
13 (130, 9)

Side Bearing

Outer Race

78 (800, 58)

LH Differential Case

47 (480, 35)

x8

RH Differential Case

Ring Gear

Drive Pinion

Front Bearing

Outer Race

Adjusting Nut

97 (985, 71)

x10

◆ Lock Plate

x5

Pinion Gear

Pinion Gear Thrust Washer

Side Gear Thrust Washer

Side Gear

Spider

Adjusting Nut

Plate Washer

◆ Bearing Spacer

◆ Bearing Spacer

◆ Non-reusable part  
★ Precoated part