


The diagram illustrates the electrical system for the tail light and front side marker lights. Key components and connections include:

- Power Source:** A 15A TAIL fuse provides power to the system.
- Tail Relay:** The relay is controlled by a DIODE (IDLE-UP) and has terminals 1, 2, 3, and 5. Terminal 1 is connected to the 15A fuse, and terminal 2 is connected to the tail light assembly.
- Diode (Idle-Up):** A diode is connected in parallel with the tail relay to provide power to the tail light when the engine is idling.
- Wiring Paths:**
 - Green Lines:** Represent the main power path from the 15A fuse through the tail relay and junctions to the tail light assembly.
 - Blue Lines:** Represent the ground path from the tail light assembly through junctions and switches to the chassis.
 - Red Lines:** Represent the power path for the front side marker lights, which are connected to the tail light assembly and the instrument ECU.
- Components:**
 - 15A TAIL:** The main power source for the tail light.
 - TAIL RELAY:** A relay that controls the tail light.
 - DIODE (IDLE-UP):** A diode that provides power to the tail light when the engine is idling.
 - J10 JUNCTION CONNECTOR:** A connector that joins the main power line to the tail light assembly.
 - J19 JUNCTION CONNECTOR:** A connector that joins the main power line to the front side marker lights.
 - C16 COMBINATION SW:** A switch that controls the tail light and front side marker lights.
 - I19 (A), I21 (C):** Instrument ECU components that provide power to the front side marker lights.
 - IF, EB, EA:** Ground points for the tail light, front side marker lights, and front side marker lights, respectively.

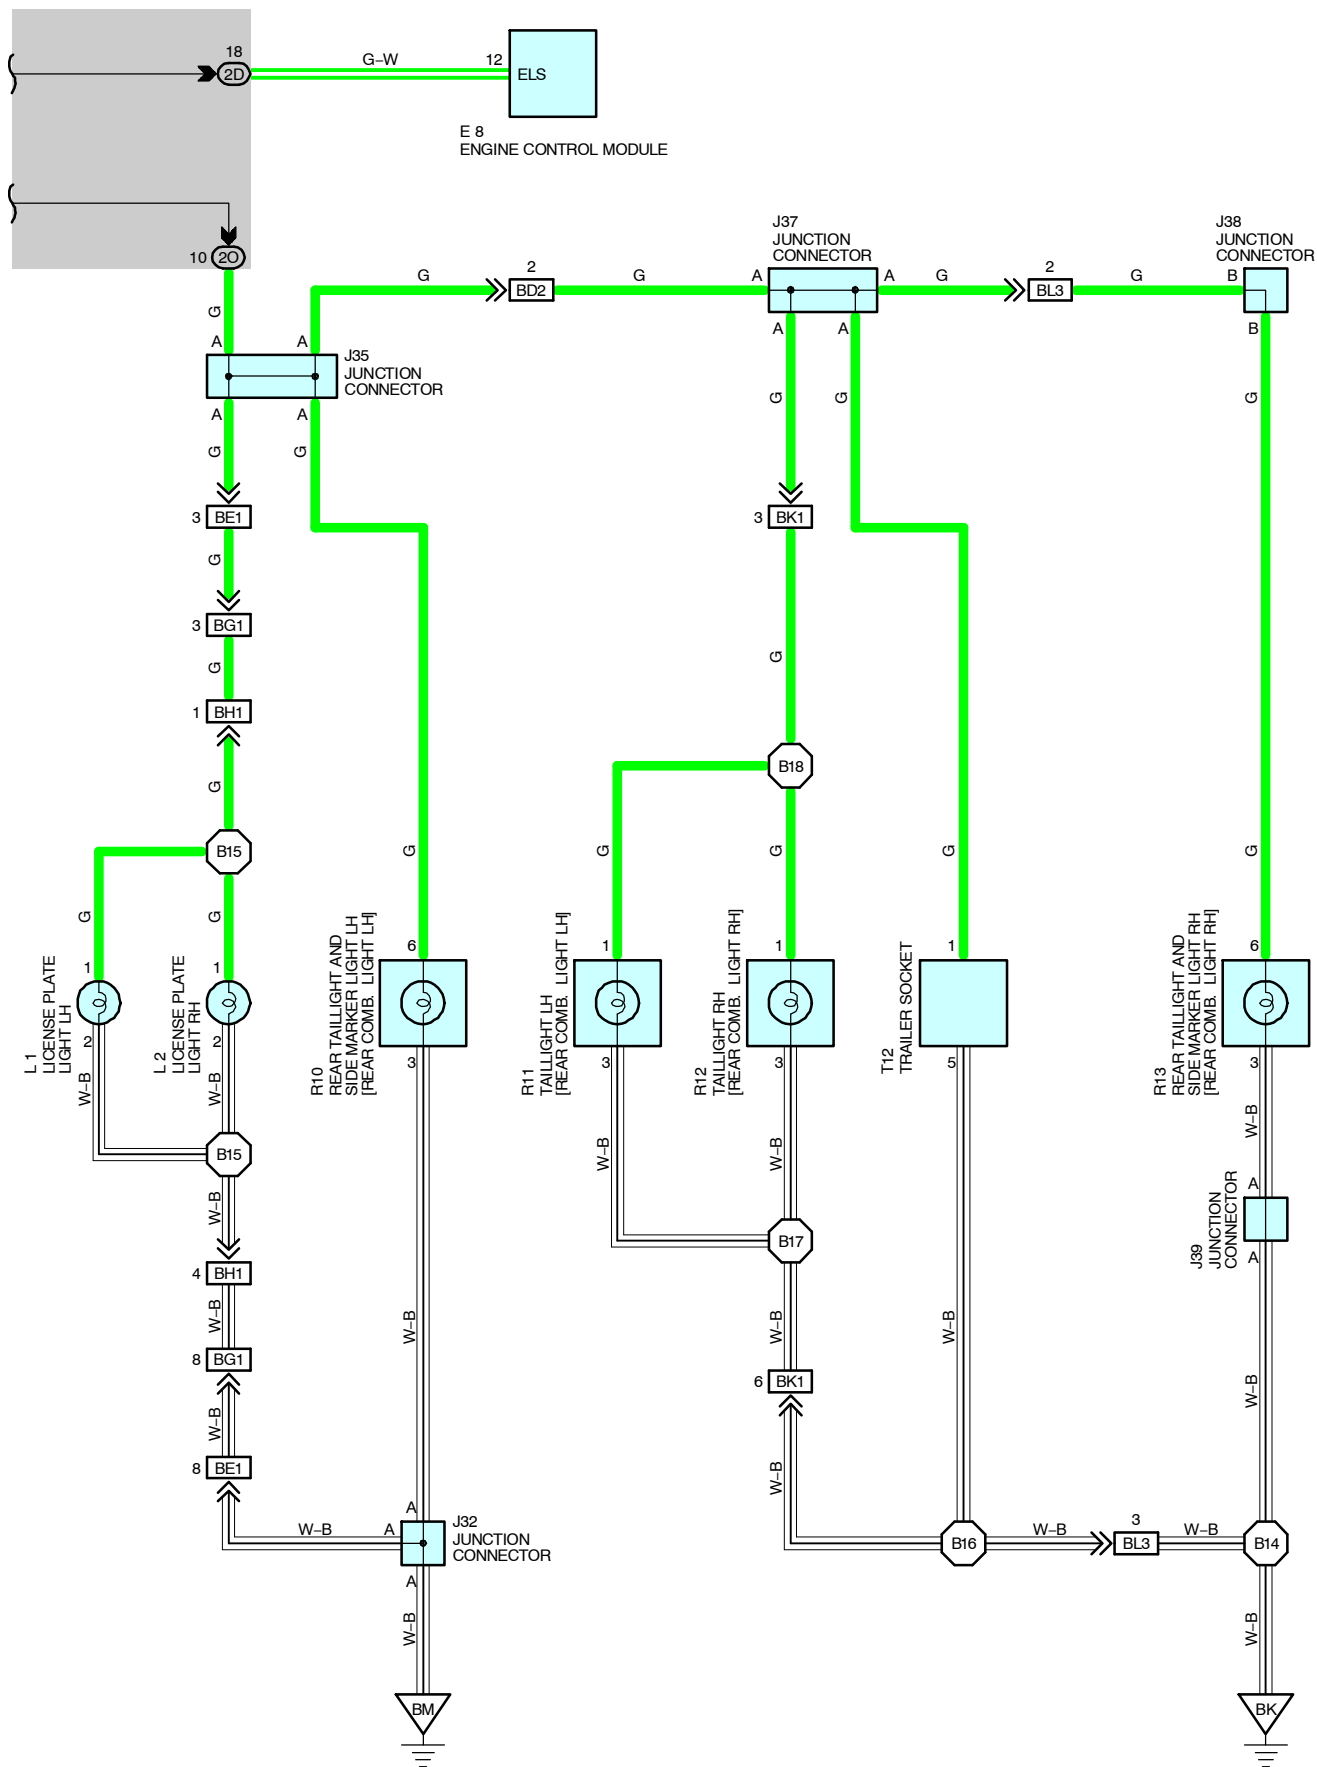

TAILLIGHT

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C16 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C16	38	J32	40	P3	37
E8	38	J35	40	R10	41
F3	36	J37	40	R11	41
F4	36	J38	40	R12	41
I19	38	J39	40	R13	41
I21	38	L1	40	T12	41
J10	39	L2	40		
J19	39	P2	37		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IU4	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
BD2	54	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BE1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BG1	56	Pillar No.1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BH1	56	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK1	56	Back Door Lower Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BL3	56	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

▽ : GROUND POINTS


Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB		
IF	46	Set Bolt of Cowl Side J/B LH
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel




: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E3	44	Engine Room Main Wire	B15	56	Back Door Upper Wire
E6			B16	56	Floor No.3 Wire
E12			B17	56	Back Door Lower Wire
B14	56	Floor No.2 Wire	B18		

C16

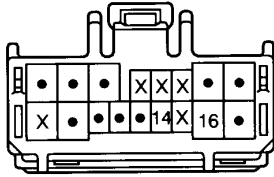

E8

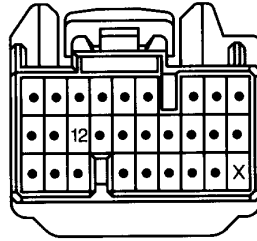


F3
GRAY




F4
GRAY




I19 (A)

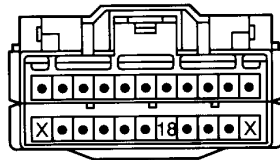

I21 (C)
BLUE

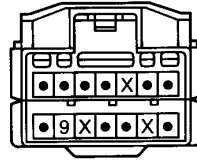


J10

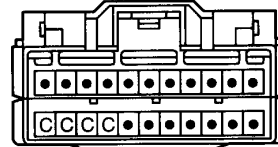


(Hint : See Page 7)

J19
GRAY

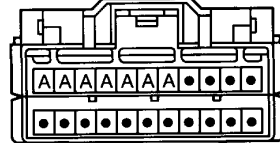


(Hint : See Page 7)

J32




(Hint : See Page 7)

J35
GREEN




(Hint : See Page 7)

J37
GREEN




(Hint : See Page 7)

J38
BLUE



(Hint : See Page 7)

J39



(Hint : See Page 7)


L1




L2




P2
GRAY

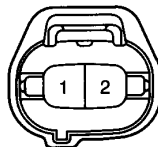


P3
GRAY

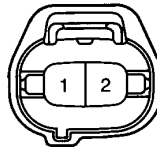


R10




R11



R12



R13



T12
GRAY

