


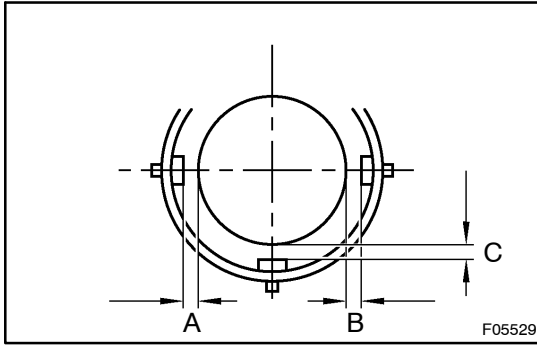

REASSEMBLY

Reassembly is in the reverse order of disassembly
(See page [BR-52](#)).

INSTALL ACCUMULATOR BRACKET

When installing the accumulator bracket, adjust to secure the clearance shown in the illustration on the left.

Standard clearance:

A + B: 4.1 mm (0.161 in.) or less

C: 0.3 – 3.8 mm (0.012 – 0.150 in.)

HINT:

Secure more than 0.3 mm (0.012 in.) clearance for A and B each.