


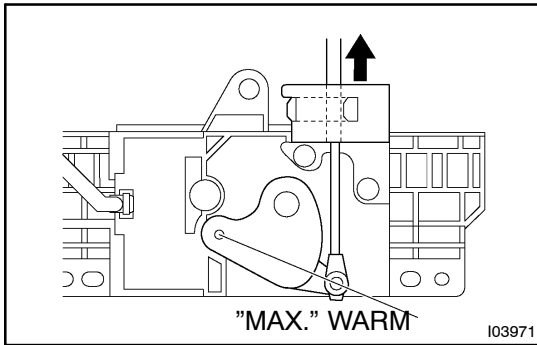


INSTALLATION

1. INSTALL HEATER CONTROL ASSEMBLY

- (a) Connect the heater control cable.
 - (1) Set the heater control dial to "MAX. WARM" position.
 - (2) Connect the heater control cable to the heater control assembly.

HINT:

Lock the clamp during lightly pulling the outer cable in the direction, as shown in the illustration by an arrow.

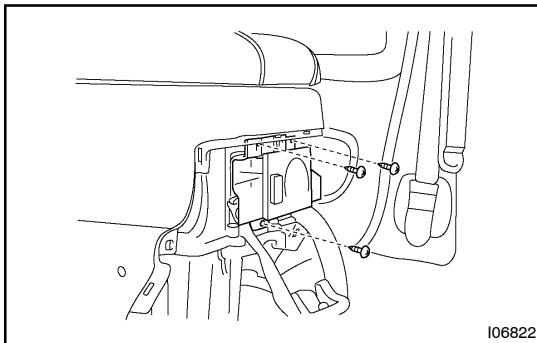

- (b) Connect the connector to heater control assembly.
- (c) Install the heater control assembly to rear console box with the 3 screws.

2. INSTALL REAR CONSOLE END PANEL