


36. No power coming in.

INSPECTION PROCEDURE

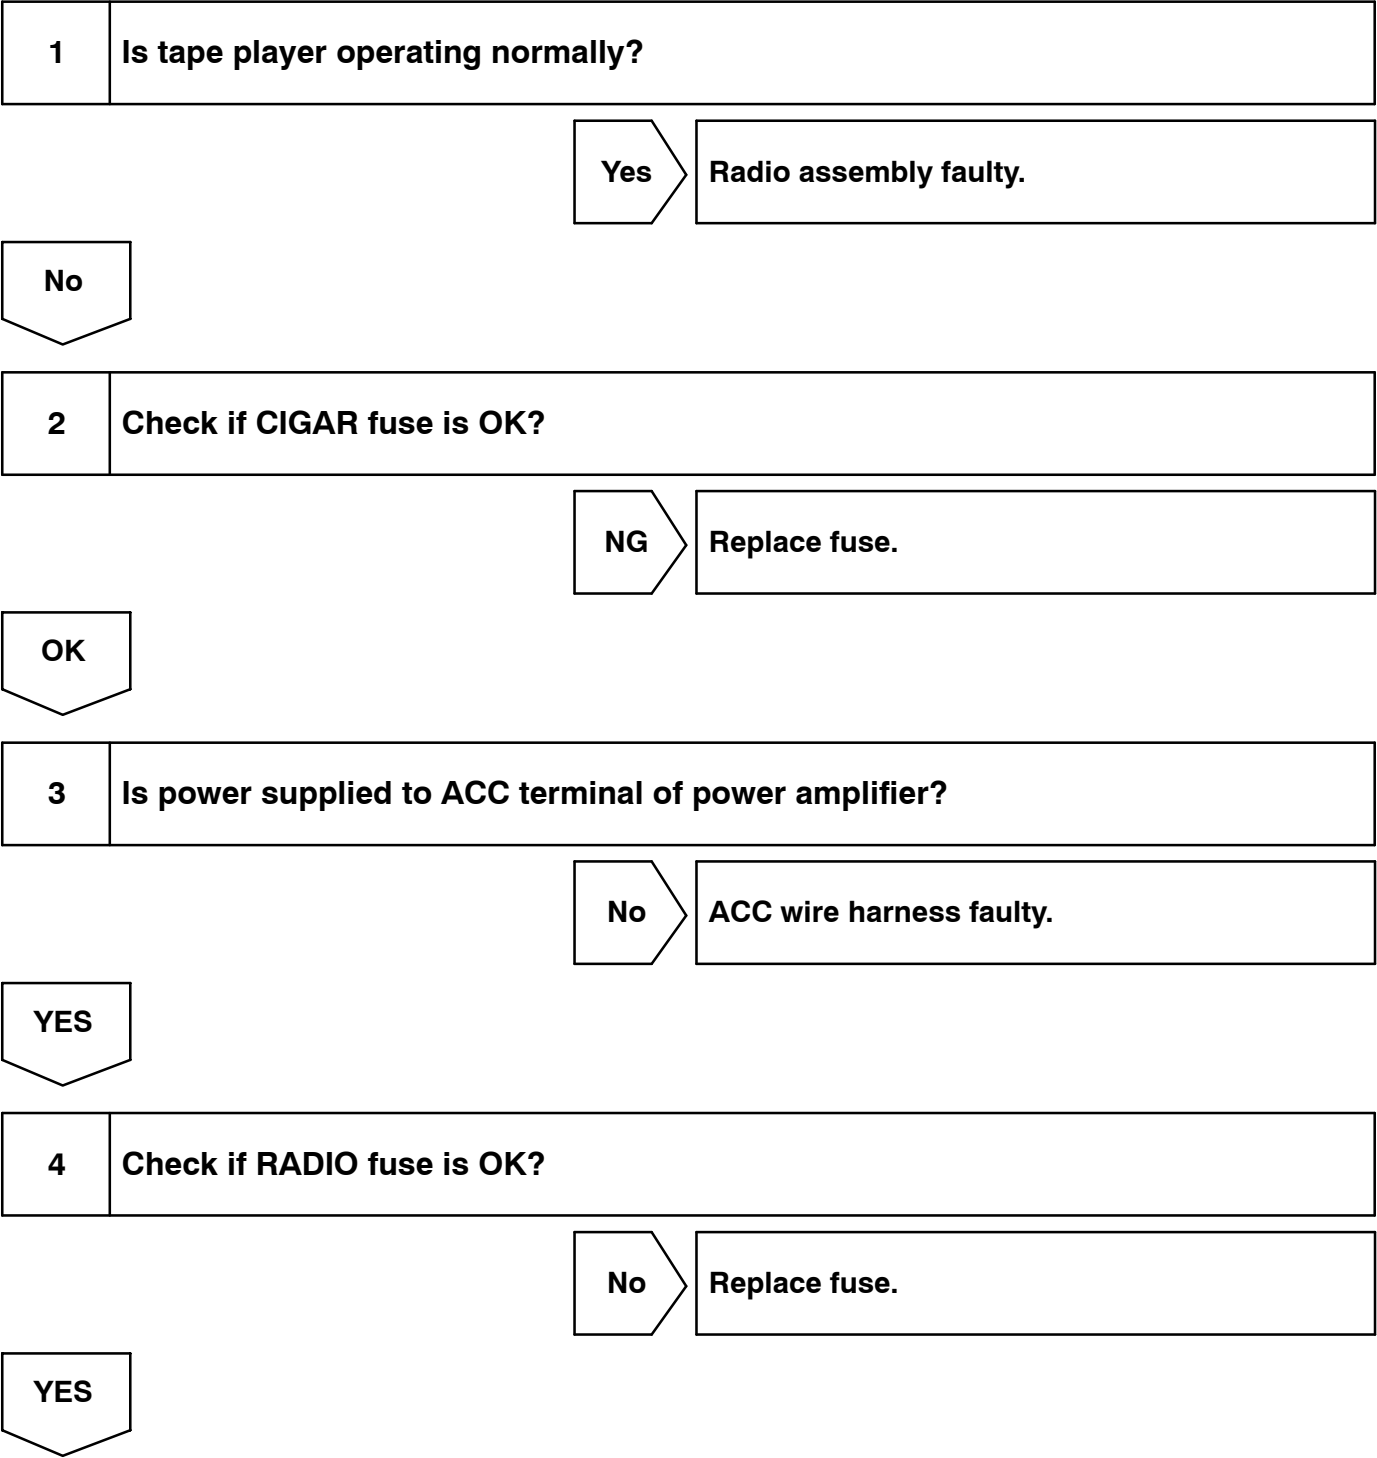

5 Is power supplied to +B terminal of power amplifier?

No

+B wire harness faulty.

YES

6 Check if GND (wire harness side) of power amplifier grounded normally?

NG

Ground faulty.

OK

7 Is power supplied to ACC terminal of radio assembly?

No

Power amplifier or wire harness faulty.

YES

8 Is power supplied to +B terminal of radio receiver assembly?

No

Power amplifier or wire harness faulty.

YES

9	Check if GND (wire harness side) of radio receiver assembly grounded normally?
---	--

NG	Ground faulty.
----	----------------

OK

Radio receiver assembly faulty.
