

INSTALLATION

1. INSTALL REINFORCEMENT
2. INSTALL NO. 1 BRACE
3. INSTALL FLOOR BRACE
4. INSTALL GLOVE COMPARTMENT DOOR DAMPER
5. INSTALL NO. 4 HEATER TO REGISTER DUCT
6. INSTALL NO. 3 HEATER TO REGISTER DUCT
7. INSTALL ECM (See page [SF-61](#))



8. INSTALL INSTRUMENT PANEL

HINT:

- Install the airbag connector between the No. 5 heater to register duct and center bracket temporarily, then install the instrument panel.
 - Remove the airbag connector before installing the lower No. 2 panel.
- (a) Install the 6 bolts, 2 nuts and instrument panel, then connect the connectors.
 - (b) Install the 2 bolts to the front passenger airbag assembly.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
 - (c) Connect the junction connectors.


HINT:

The connectors can be connected by tightening the bolts.

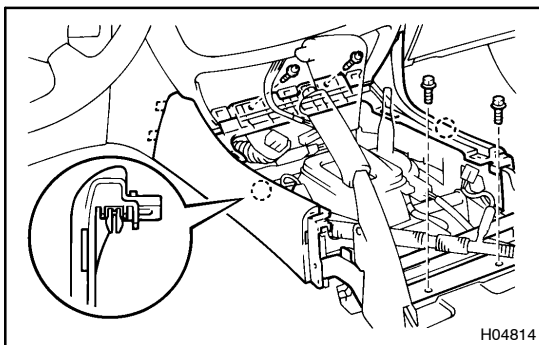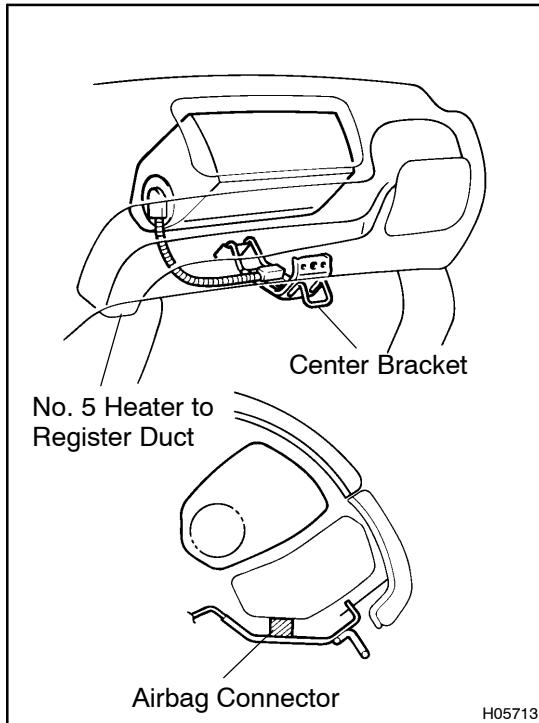


9. INSTALL FRONT CONSOLE BOX

Install the front console box with the 2 bolts and 2 screws.

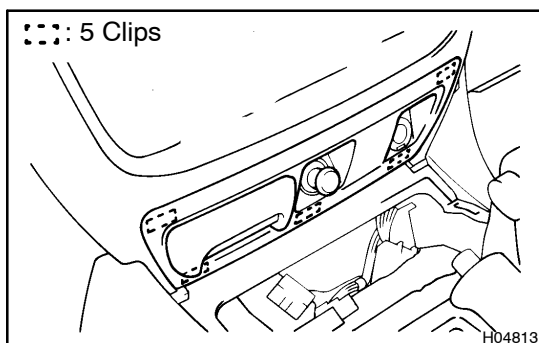


10. INSTALL CENTER LOWER CLUSTER FINISH PANEL

Connect the connector, then install the center lower cluster finish panel.

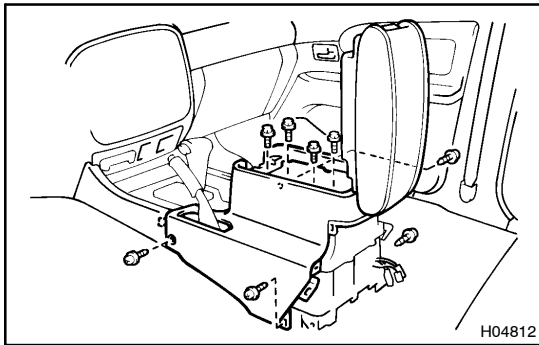**11. INSTALL REAR CONSOLE BOX**

(a) w/o Navigation system:

Install the rear console box with the 4 bolts and 4 screws.

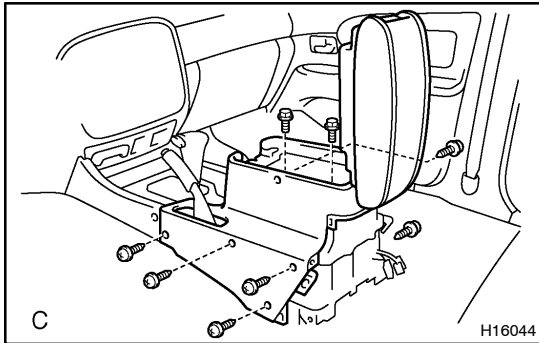


(b) w/ Navigation system:


Install the rear console box with the 2 bolts and 6 screws.

12. w/o Rear cooler:**INSTALL REAR HEATER CONTROL PANEL**

Install the rear heater control panel with the 3 screws, then connect the connector and control cable.

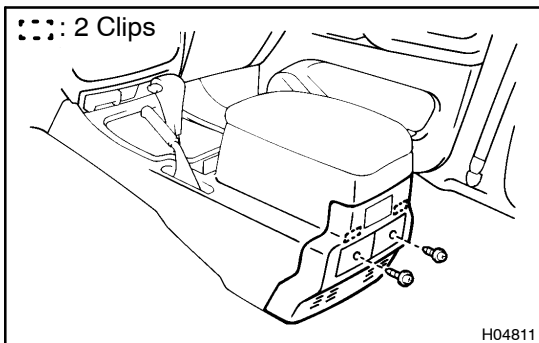**13. INSTALL CONSOLE REAR END PANEL**

Install the console rear end panel with the 2 screws.

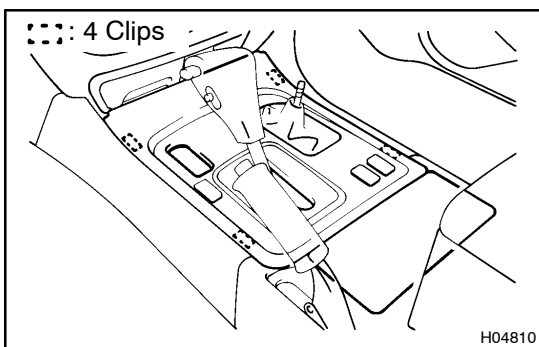**14. INSTALL REAR CONSOLE PANEL**


Install the rear console panel, then install the transfer shift lever knob.

15. w/o Navigation system:**INSTALL RADIO ASSEMBLY****16. w/ Navigation system:****INSTALL RADIO WITH A/C CONTROL ASSEMBLY****17. INSTALL CENTER CLUSTER**


Connect the connectors, then install the center cluster.

18. INSTALL LOWER NO. 2 PANEL


Install the lower No. 2 panel with the 3 screws.

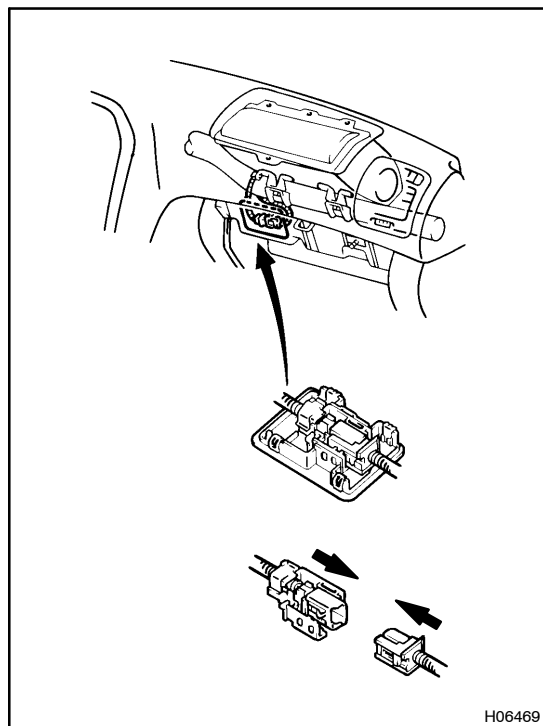**19. CONNECT AIRBAG CONNECTOR (See page RS-35)****20. INSTALL GLOVE COMPARTMENT DOOR**

- (a) Connect the glove compartment door damper clip, then install the glove compartment door.
- (b) Install the 2 screws.

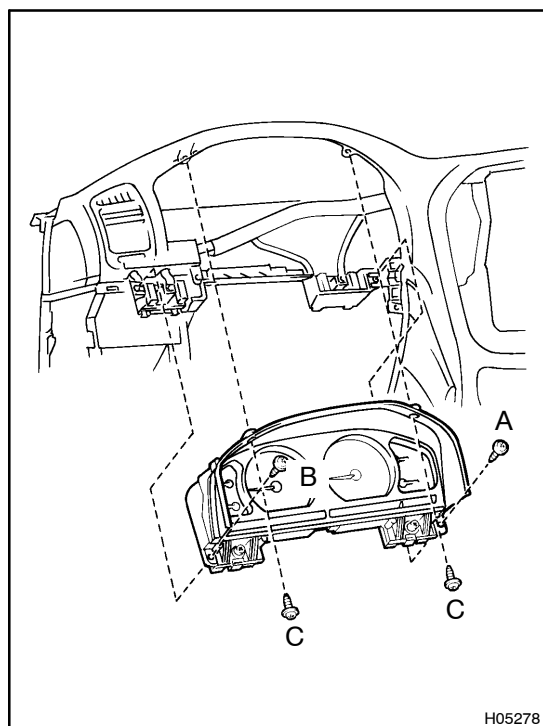**21. INSTALL COMBINATION METER**

- (a) Check that the set-in connectors are connected in the installation holes on the instrument panel securely.
- (b) Place the combination meter on the instrument panel.
- (c) Install the combination meter by tightening the screws, "A", "B" and "C" in the order.

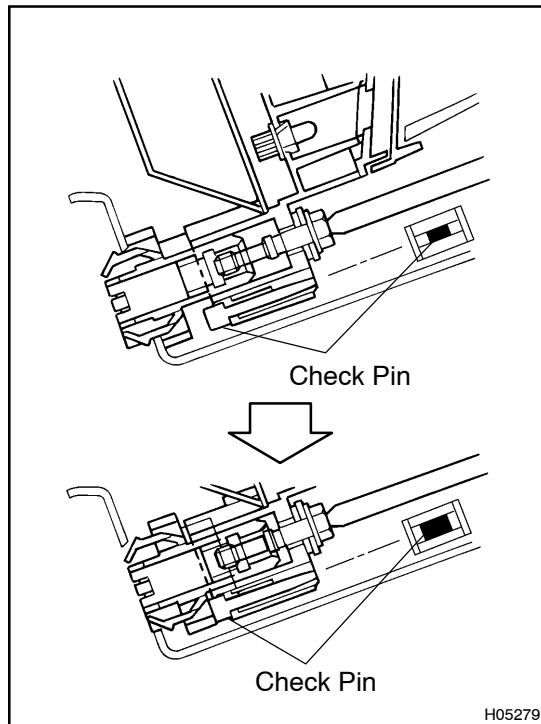

(d) Tighten the connection bolts.

HINT:


- When connection completes, the bolts turn vainly, causing turning noise.
- Check this noise and that the connection check pins protrude from the lower side of the connection bolts.

NOTICE:

Follow the procedures in order of (c) and (d). Otherwise, set-in connectors on the wire harness side and connectors on the meter side might not be connected properly.


22. INSTALL STEERING COLUMN

(See page [SR-22](#) or [SR-35](#))

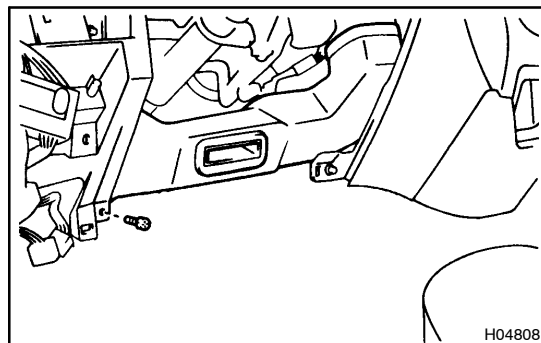

23. INSTALL NO. 2 HEATER TO REGISTER DUCT

Install the No. 2 heater to register duct with the screw.

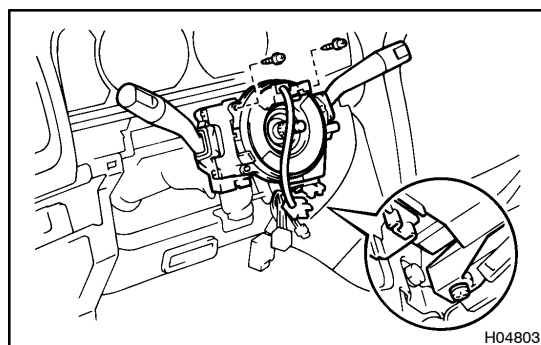


24. INSTALL COMBINATION SWITCH

- Install the combination switch with the 3 screws.
- Install the clamp, then connect the connectors.

25. INSTALL COLUMN COVERS

Install the column covers with the 3 screws.

26. INSTALL LH LOWER PANEL

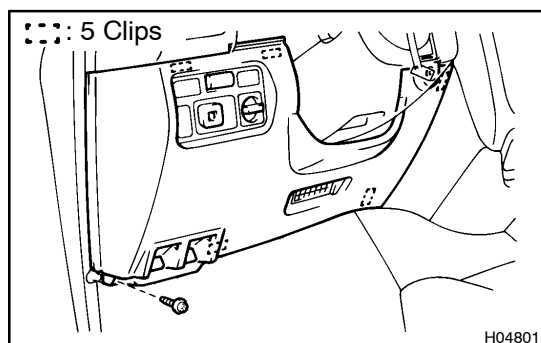


27. INSTALL LOWER NO. 1 PANEL


Connect the connector, then install the lower No. 1 panel with the screw.

28. INSTALL HOOD LOCK AND FUEL LID CONTROL CABLE LEVER

- Install the fuel lid control cable lever with the 2 screws.
- Install the hood lock control cable with the 2 screws.

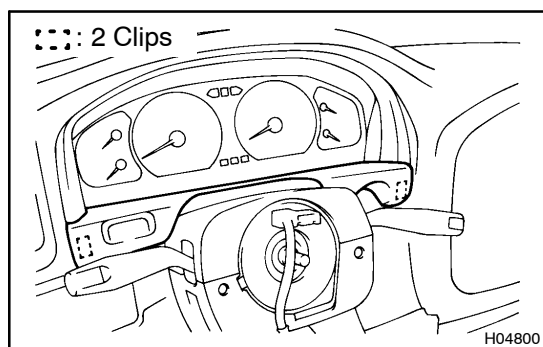

- 29. INSTALL CLUSTER FINISH PANEL**
- 30. INSTALL STEERING WHEEL**
(See page [SR-22](#) or [SR-35](#))

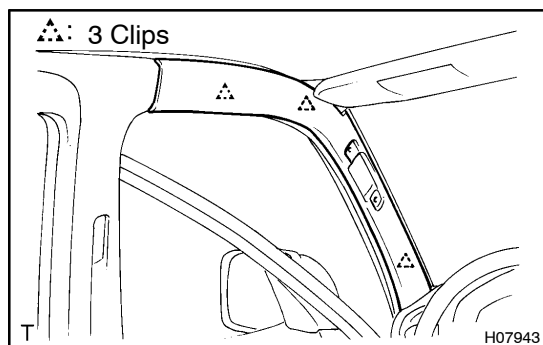

- 31. INSTALL FRONT PILLAR GARNISH**
 - (a) Install the front pillar garnish.
 - (b) Employ the same manner described above to the other side.
 - (c) Driver's side:
Install the assist grip with the 2 screws, then install the 2 assist grip plugs.
 - (d) Passenger's side:
Install the 2 assist grips with the 4 screws, then install the 4 assist grip plugs.
- 32. INSTALL FRONT DOOR OPENING TRIMS**
- 33. INSTALL COWL SIDE TRIMS**
- 34. INSTALL FRONT DOOR SCUFF PLATES**