



TERMINALS OF ECM

2UZ-FE:

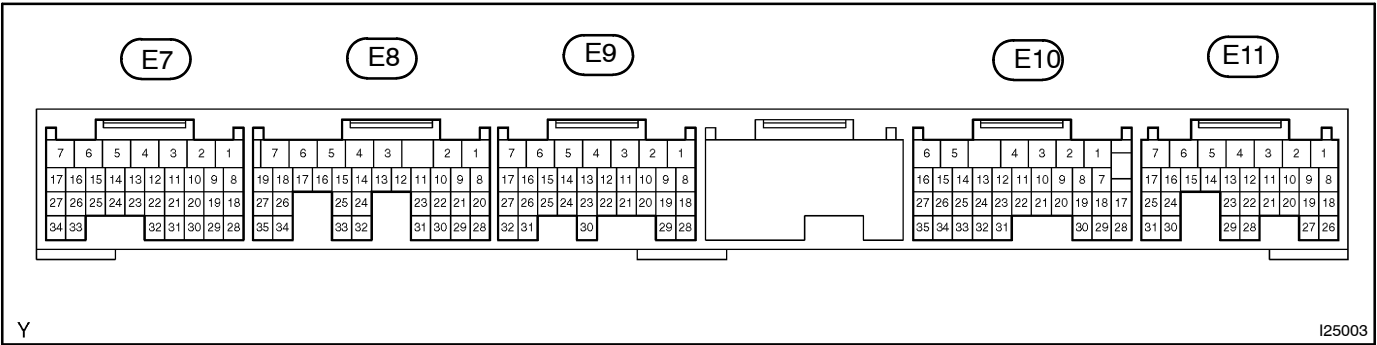

Symbols (Terminals No.)	Wiring Color	Condition	Specified condition
STP ↔ E1 (E10-19 ↔ E9-1)	G-W ↔ BR	Depress brake pedal	10 – 16 V
		Release brake pedal	Below 1 V
CCS ↔ E1 (E10-24 ↔ E9-1)	L ↔ BR	Ignition switch ON	10 – 16 V
		Ignition switch ON CANCEL switch hold ON	3.6 – 7.2 V
		Ignition switch ON -/SET switch hold ON	2.1 – 4.9 V
		Ignition switch ON +/RES switch hold ON	0.7 – 2.6 V
		Ignition switch ON Main switch OFF	Below 1 V
		Ignition switch ON Main switch ON	10 – 14 V
ST1- ↔ E1 (E10-12 ↔ E9-1)	R-G ↔ BR	Depress brake pedal	Below 1 V
		Release brake pedal	10 – 14 V

1HD-FTE:

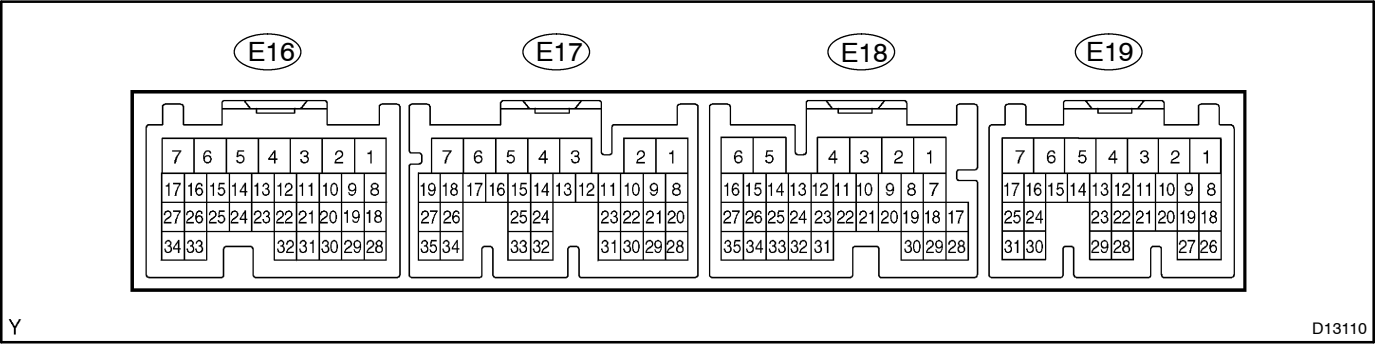

Symbols (Terminals No.)	Wiring Color	Condition	Specified condition
STP ↔ E1 (E17-21 ↔ E17-14) *1 (E18-19 ↔ E16-1) *2	G-W ↔ BR	Depress brake pedal	10 – 16 V
		Release brake pedal	Below 1 V
CCS ↔ E1 (E16-13 ↔ E17-14) *1 (E18-24 ↔ E16-1) *2	L ↔ BR	Ignition switch ON	10 – 16 V
		Ignition switch ON CANCEL switch hold ON	3.6 – 7.2 V
		Ignition switch ON -/SET switch hold ON	2.1 – 4.9 V
		Ignition switch ON +/RES switch hold ON	0.7 – 2.6 V
		Ignition switch ON Main switch OFF	Below 1 V
		Ignition switch ON Main switch ON	10 – 14 V
ST1- ↔ E1 (E19-19 ↔ E17-14) *1 (E18-12 ↔ E16-1) *2	R-G ↔ BR	Depress brake pedal	Below 1 V
		Release brake pedal	10 – 14 V

*1: Europe
*2: Except Europe