


INSPECTION

INSPECT WASHER NOZZLE

While operating the washer, check if the point where the washer fluid hits the windshield is within the range indicated by the hatched line.

- A: Approx. 311 mm (12.24 in.)**
- B: Approx. 110 mm (4.33 in.)**
- C: Approx. 86 mm (3.39 in.)**
- D: Approx. 116 mm (4.57 in.)**
- E: Approx. 205 mm (8.07 in.)**
- F: Approx. 22 mm (0.87 in.)**
- G: Approx. 138 mm (5.43 in.)**
- H: Approx. 60 mm (2.36 in.)**
- I: Approx. 85 mm (3.35 in.)**
- J: Approx. 364 mm (14.33 in.)**
- K: Approx. 496 mm (19.53 in.)**
- L: Approx. 81 mm (3.19 in.)**
- M: Approx. 35 mm (1.38 in.)**
- N: Approx. 157 mm (6.18 in.)**
- O: Approx. 159 mm (6.26 in.)**
- P: Approx. 63 mm (2.48 in.)**
- Q: Approx. 169 mm (6.65 in.)**
- R: Approx. 331 mm (13.03 in.)**
- S: Approx. 465 mm (18.31 in.)**
- T: Approx. 468 mm (18.43 in.)**
- U: Approx. 45 mm (1.77 in.)**
- V: Approx. 104 mm (4.09 in.)**
- W: Approx. 119 mm (4.69 in.)**
- X: Approx. 44 mm (1.73 in.)**

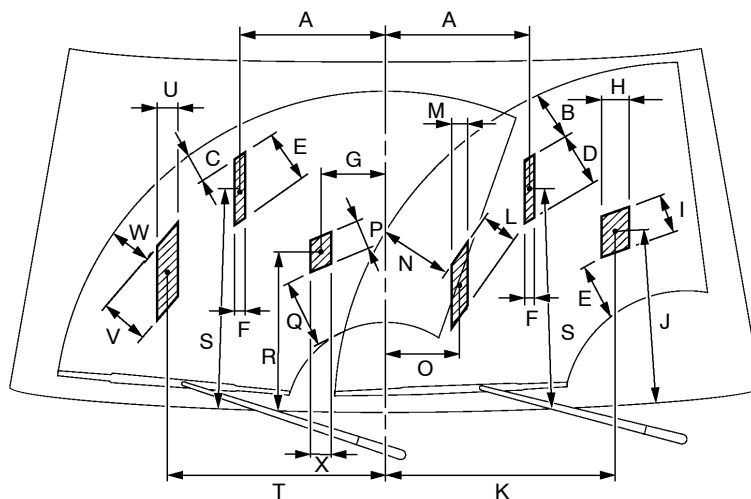

H04842