

REMOVAL

1. REMOVE ASSIST GRIP


(a) Using a screwdriver, remove the 2 assist grip plugs.

HINT:

Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.

2. REMOVE INSIDE HANDLE BEZEL

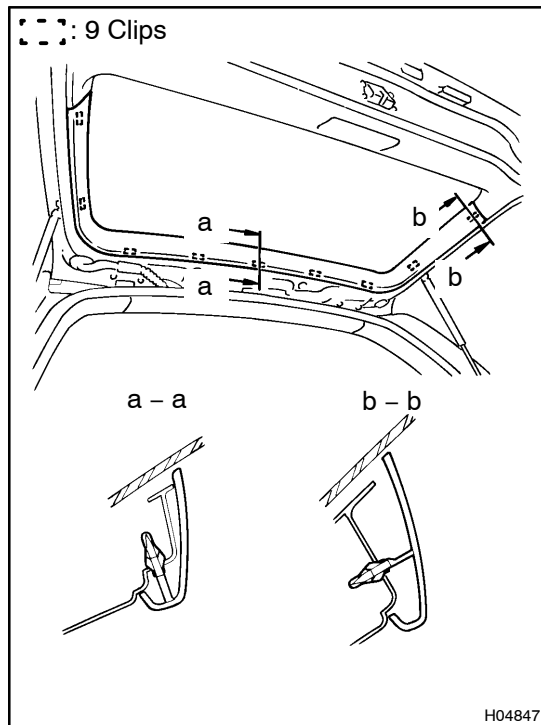


3. REMOVE CENTER BACK DOOR GARNISH

Using a screwdriver, remove the center back door garnish.

HINT:

Tape the screwdriver tip before use.

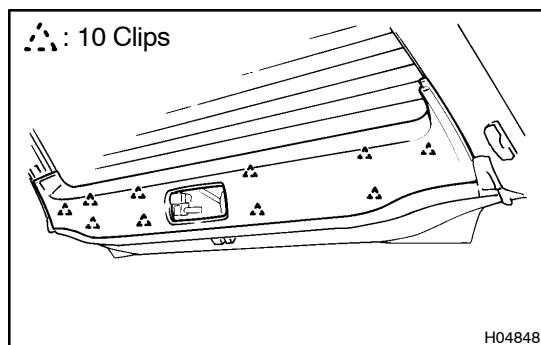


4. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

5. REMOVE REAR WIPER ARM (See page [BO-38](#))

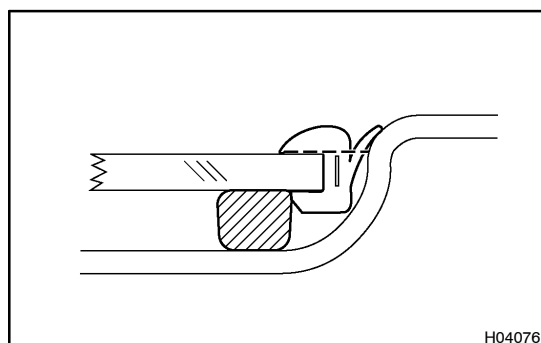


6. REMOVE OUTSIDE BACK WINDOW MOULDING

Using a knife, cut off the moulding as shown in the illustration.

NOTICE:


Do not damage the body with the knife.

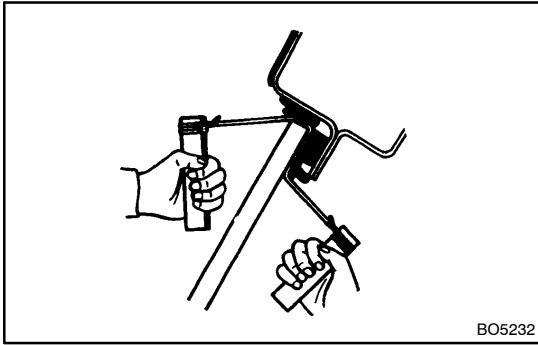**7. REMOVE BACK DOOR GLASS**

- (a) Disconnect the connector.
- (b) Push piano wire through between the body and glass from the interior.
- (c) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

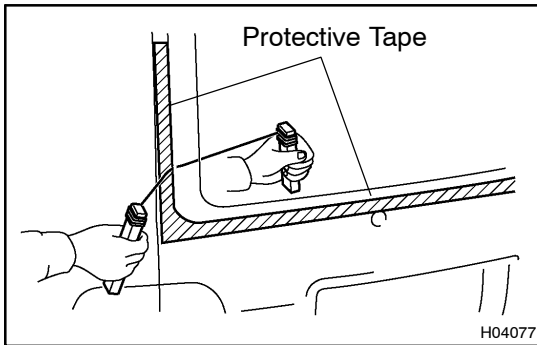**NOTICE:**

When separating the glass, take care not to damage the paint and exterior ornaments.

- (d) Cut the adhesive by pulling the piano wire around it.
- (e) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.