


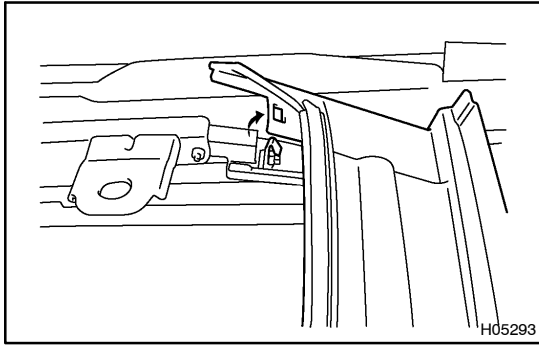


DISASSEMBLY

1. REMOVE REAR DRIP CHANNEL

- (a) Using a screwdriver, remove the front side of rear drip channel.

HINT:

Tape the screwdriver tip before use.

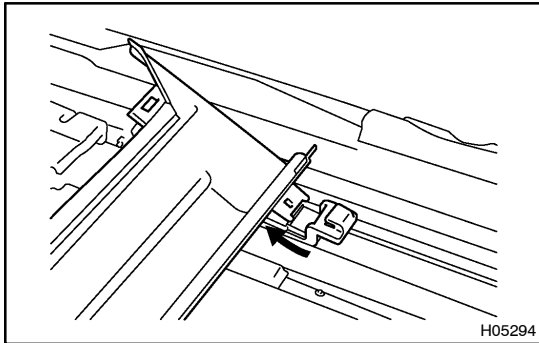


- (b) Remove the rear drip channel as shown in the illustration.

2. REMOVE SLIDING ROOF PANEL STOPPERS


Remove the 2 screws and 2 stoppers.

3. REMOVE SUNSHADE TRIM

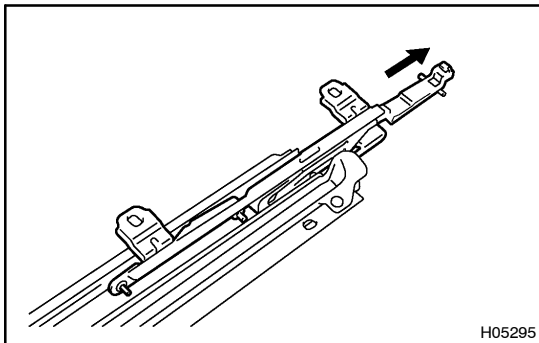

4. REMOVE DRIVE CABLE


- (a) Remove the screw and guide rail stopper.
(b) Slide the drive cable rearward, then remove it.

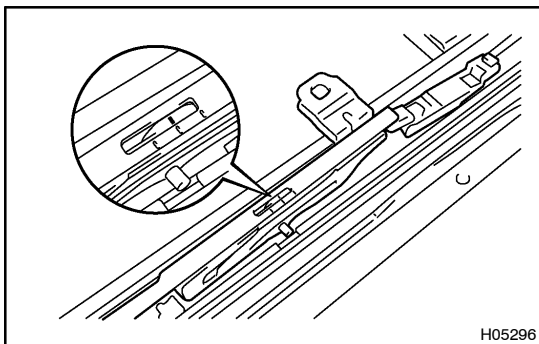

HINT:


At the time of reassembly, please refer to the following items.

- Adjust the drive cable to a closed and tilted down position.
 - Slide the cable forward or backward to align the 2 marks as shown.
 - Slide the cable to the forefront with your hand.
- (c) Employ the same manner described above to the other side.

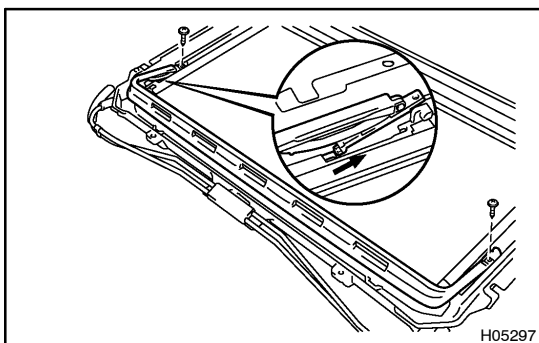


5. REMOVE WIND DEFLECTOR PANEL

Remove the 2 screws and wind deflector panel as shown in the illustration.

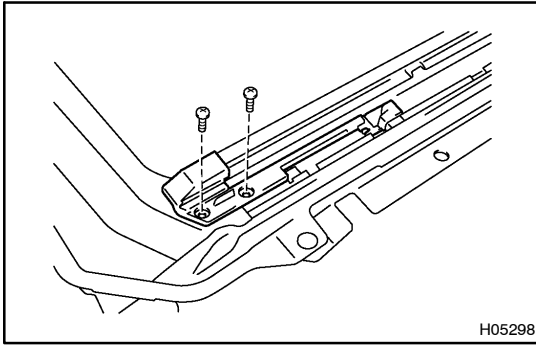**6. REMOVE GUIDE BLOCK**

- (a) Remove the 2 screws and guide block.
- (b) Employ the same manner described above to the other side.

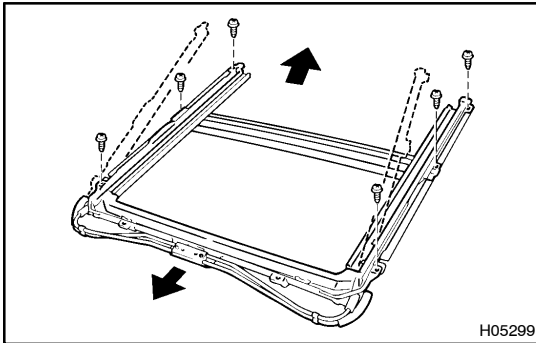**7. REMOVE SLIDING ROOF HOUSING**

Remove the 6 screws and sliding roof housing.

8. REMOVE CABLE GUIDE CASING