




F RELAY LOCATIONS

[Engine Compartment]

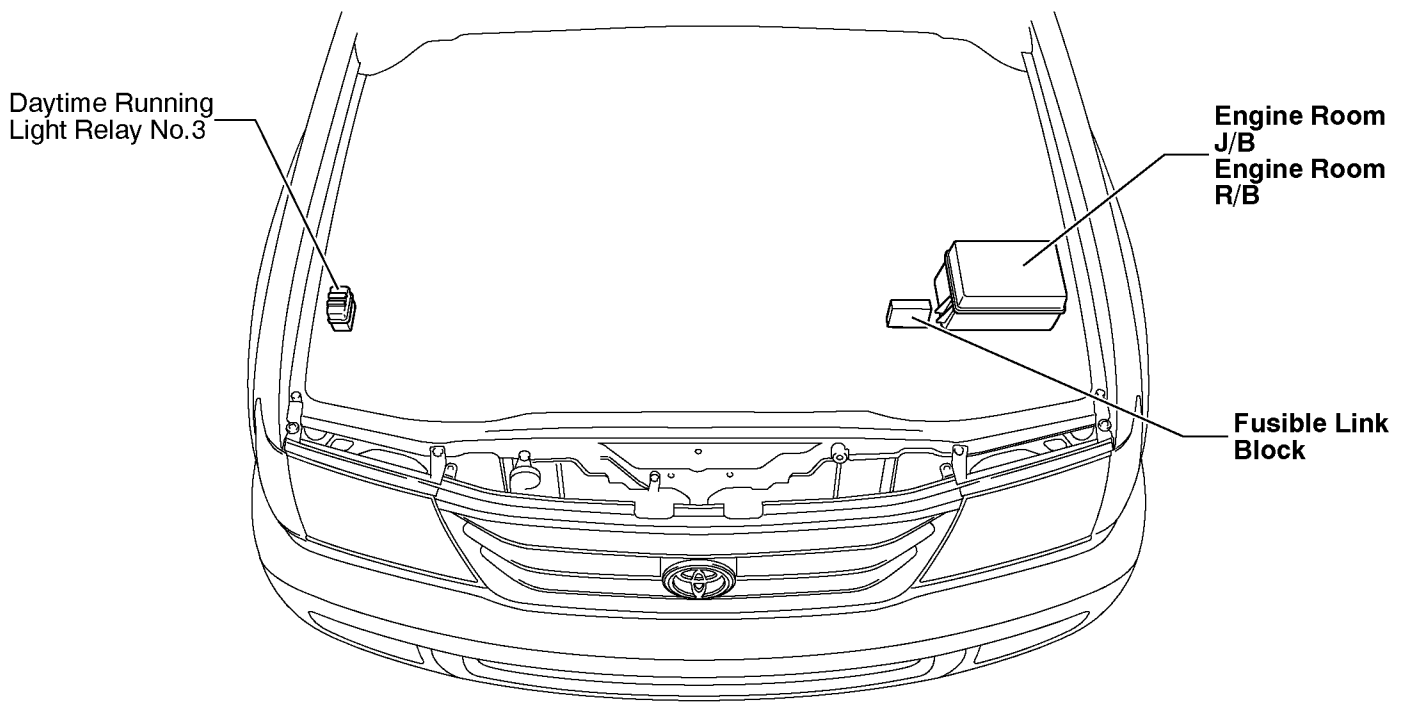

[Instrument Panel]

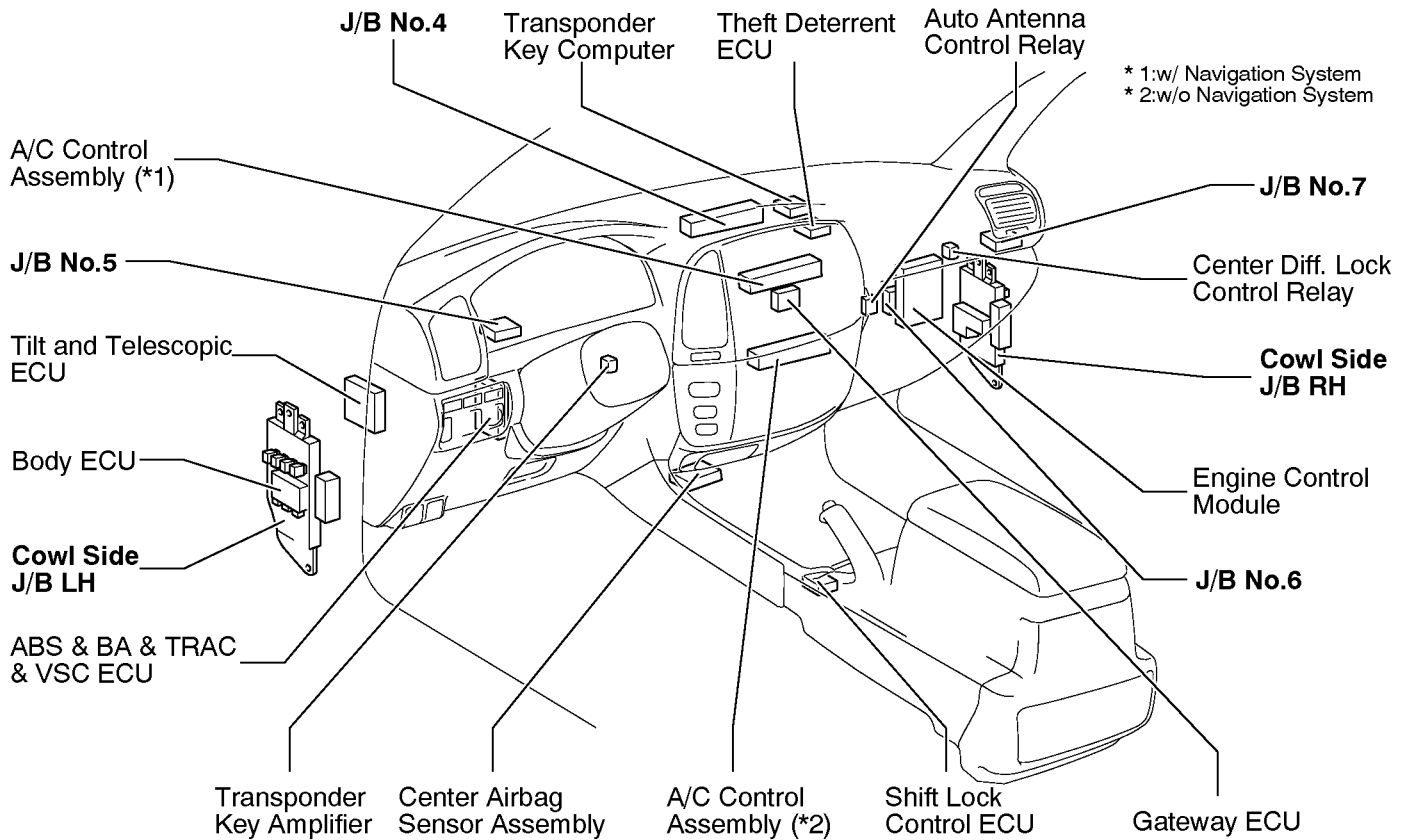


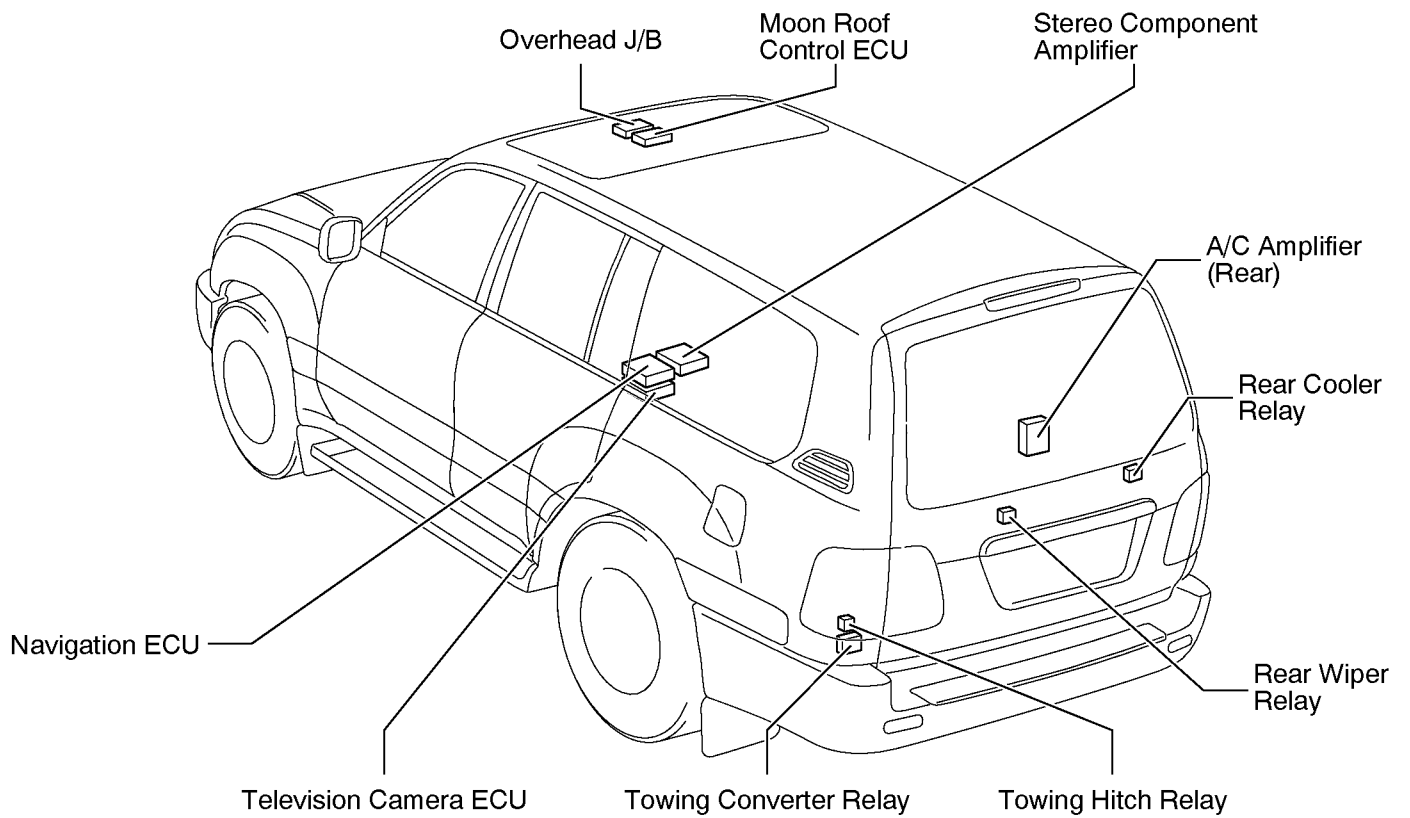
[Body]

F RELAY LOCATIONS

○ : Engine Room J/B	Engine Compartment Left (See Page 20)
① : Engine Room R/B	

(Inner Circuit : See Page 26)

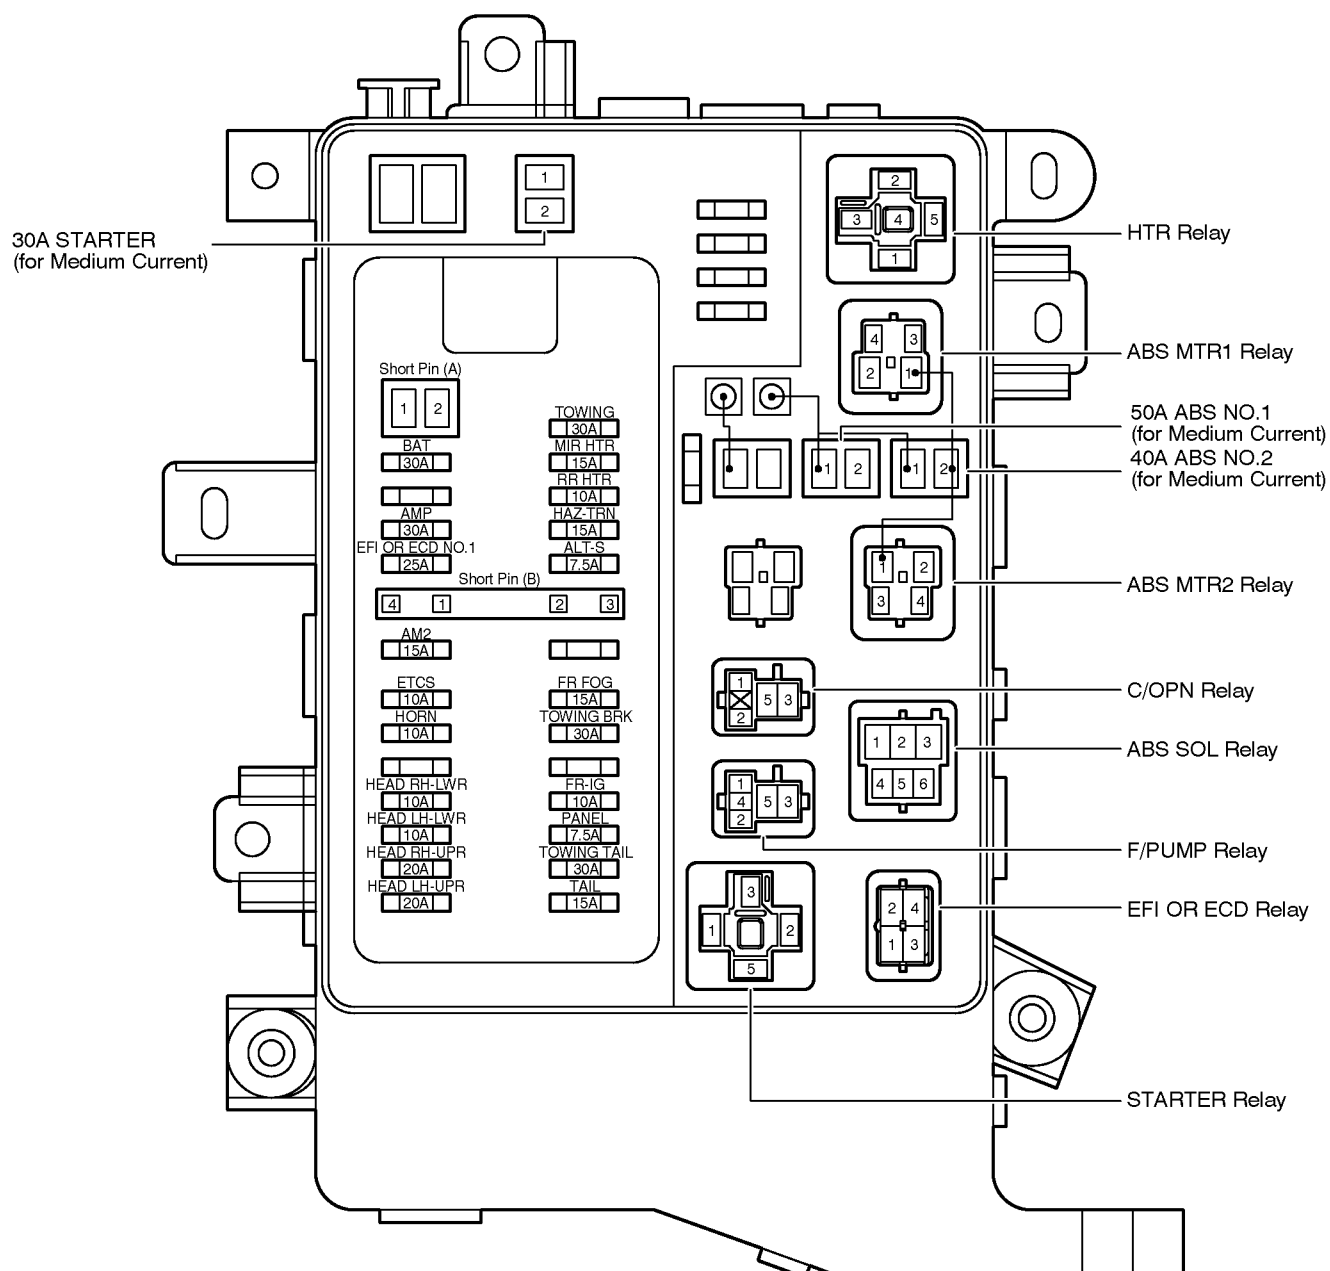

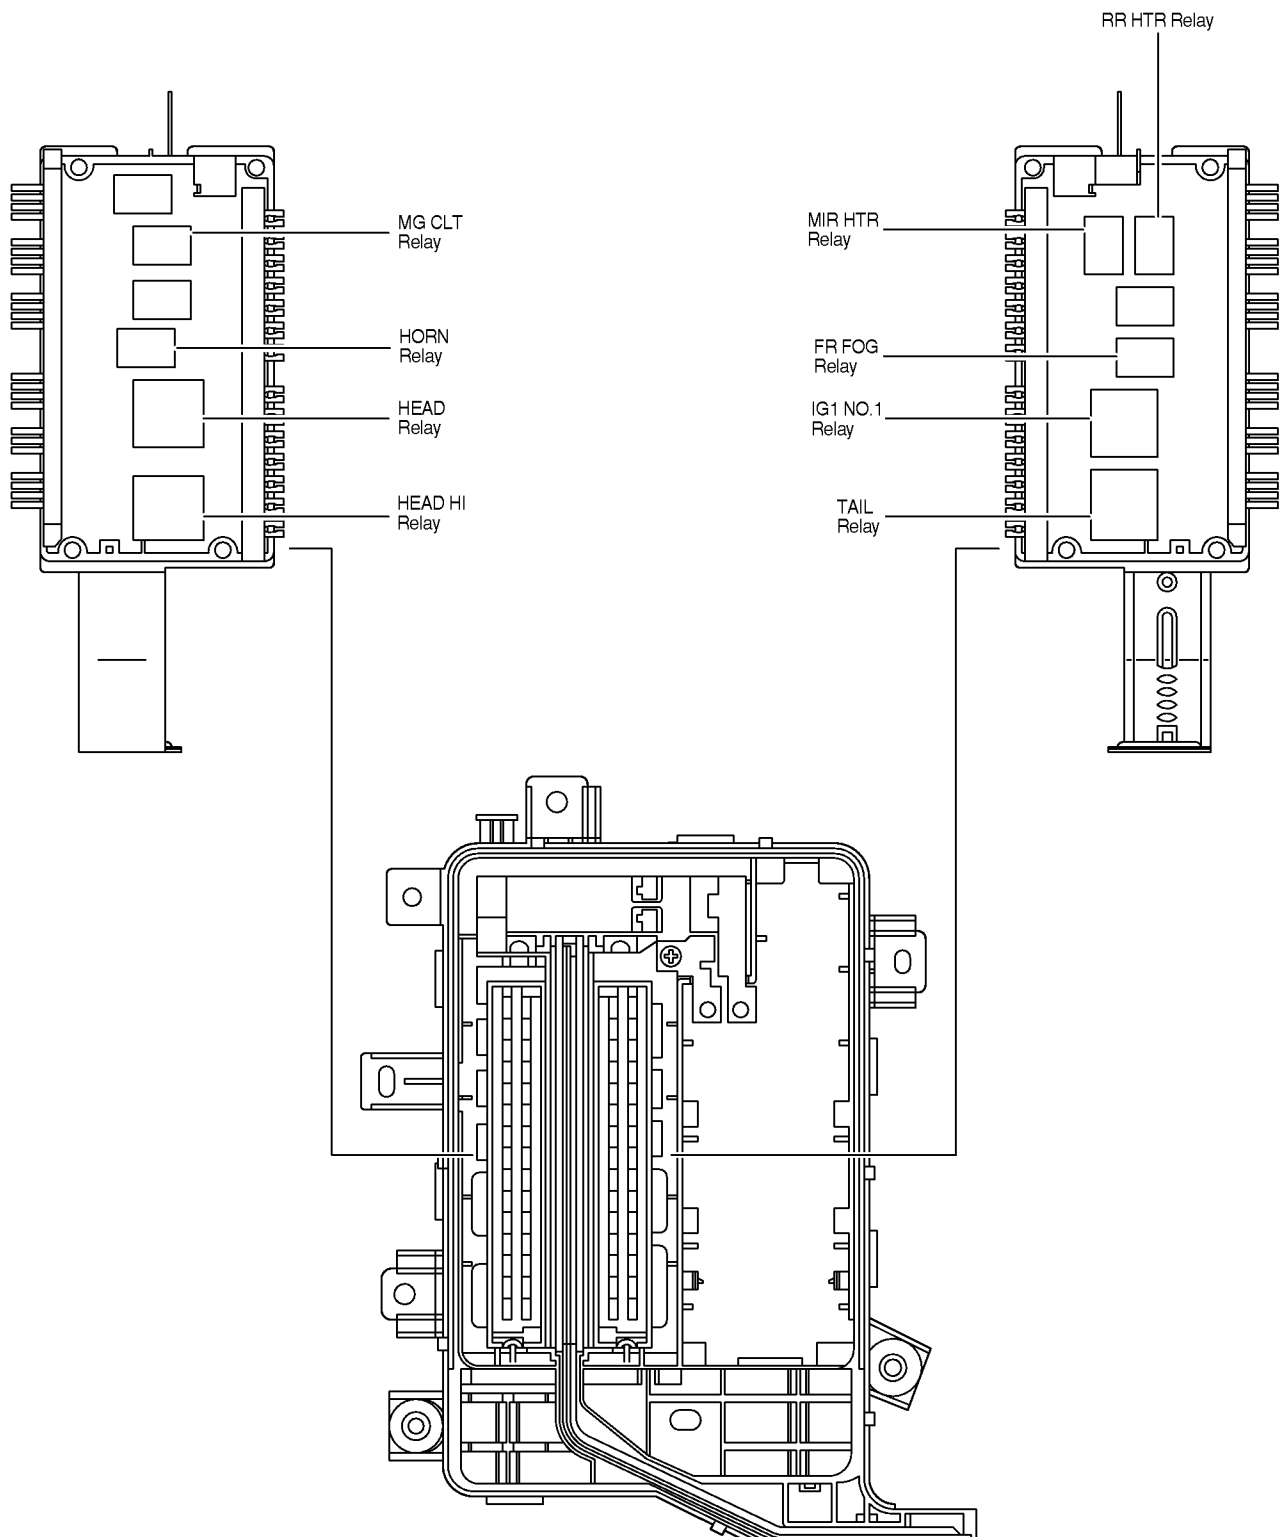



F RELAY LOCATIONS

○ : Engine Room J/B


Engine Compartment Left (See Page 20)

(Inner Circuit : See Page 26)


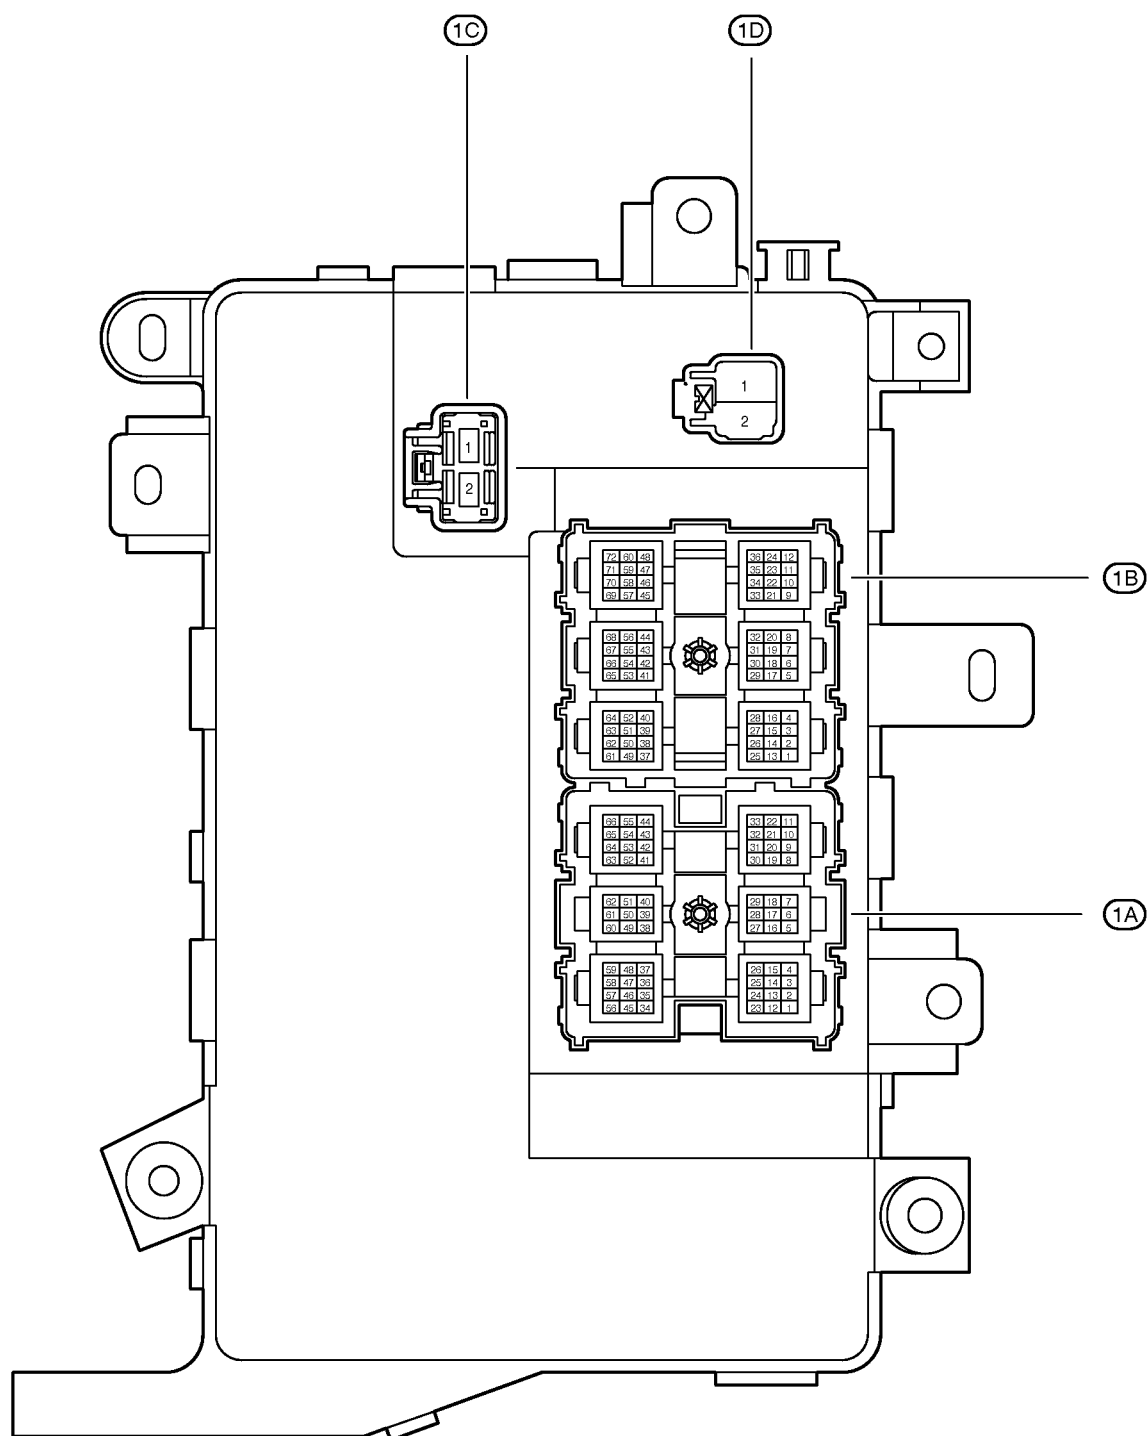


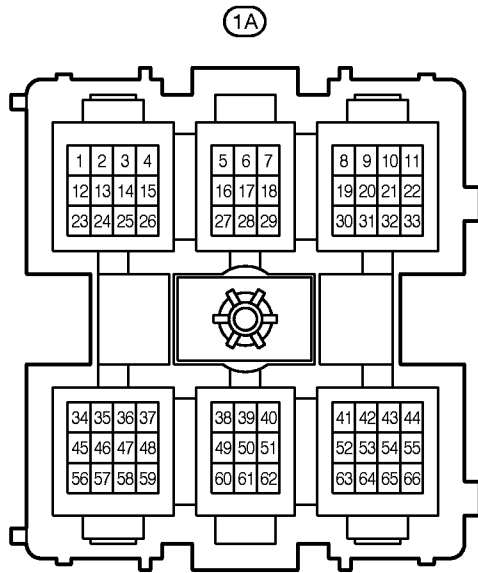

(from Engine Room Main Wire)

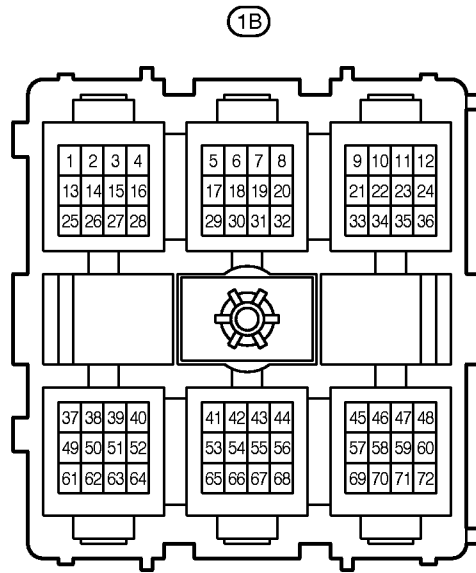


(from Engine Room No.2 Wire)

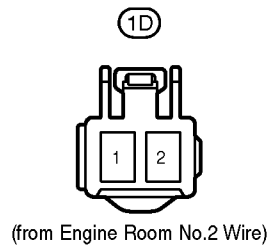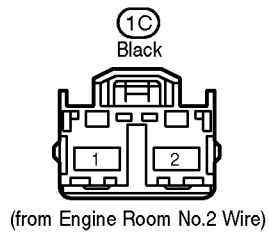


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

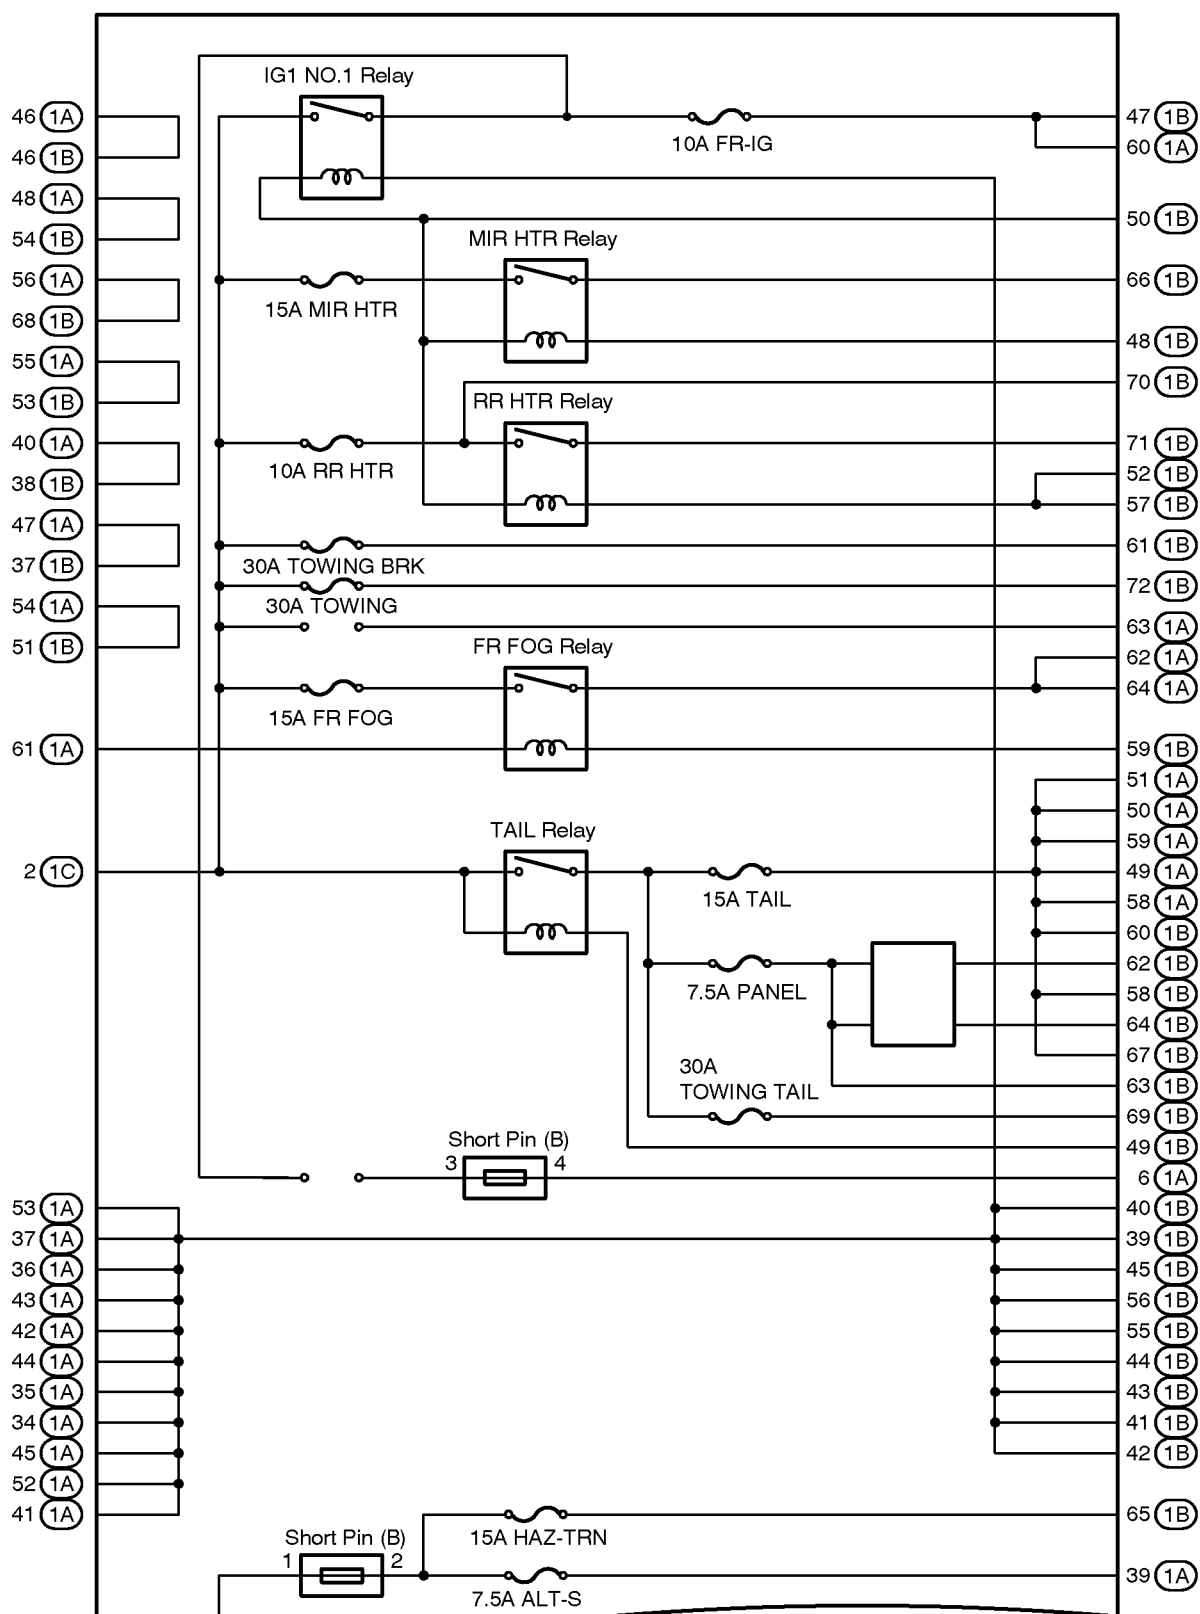

(Cont. next page)

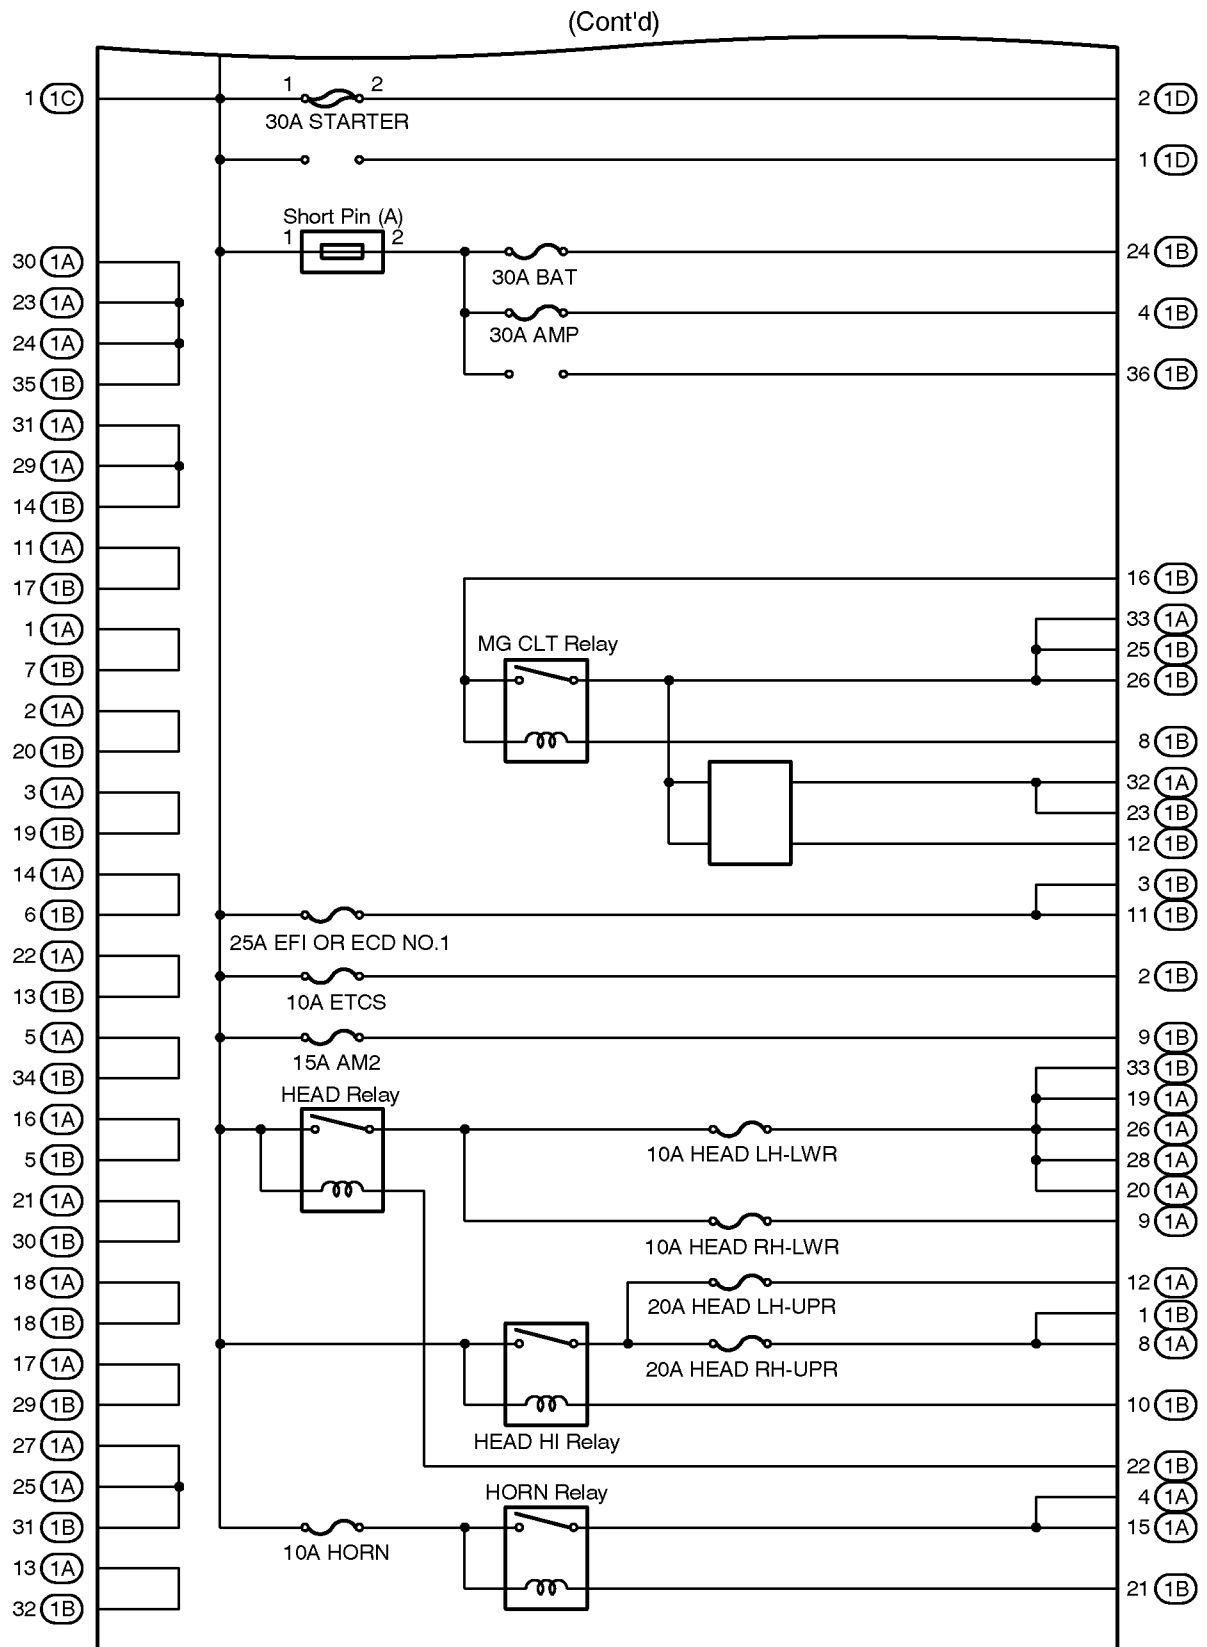



F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

(Inner Circuit : See Page 34)

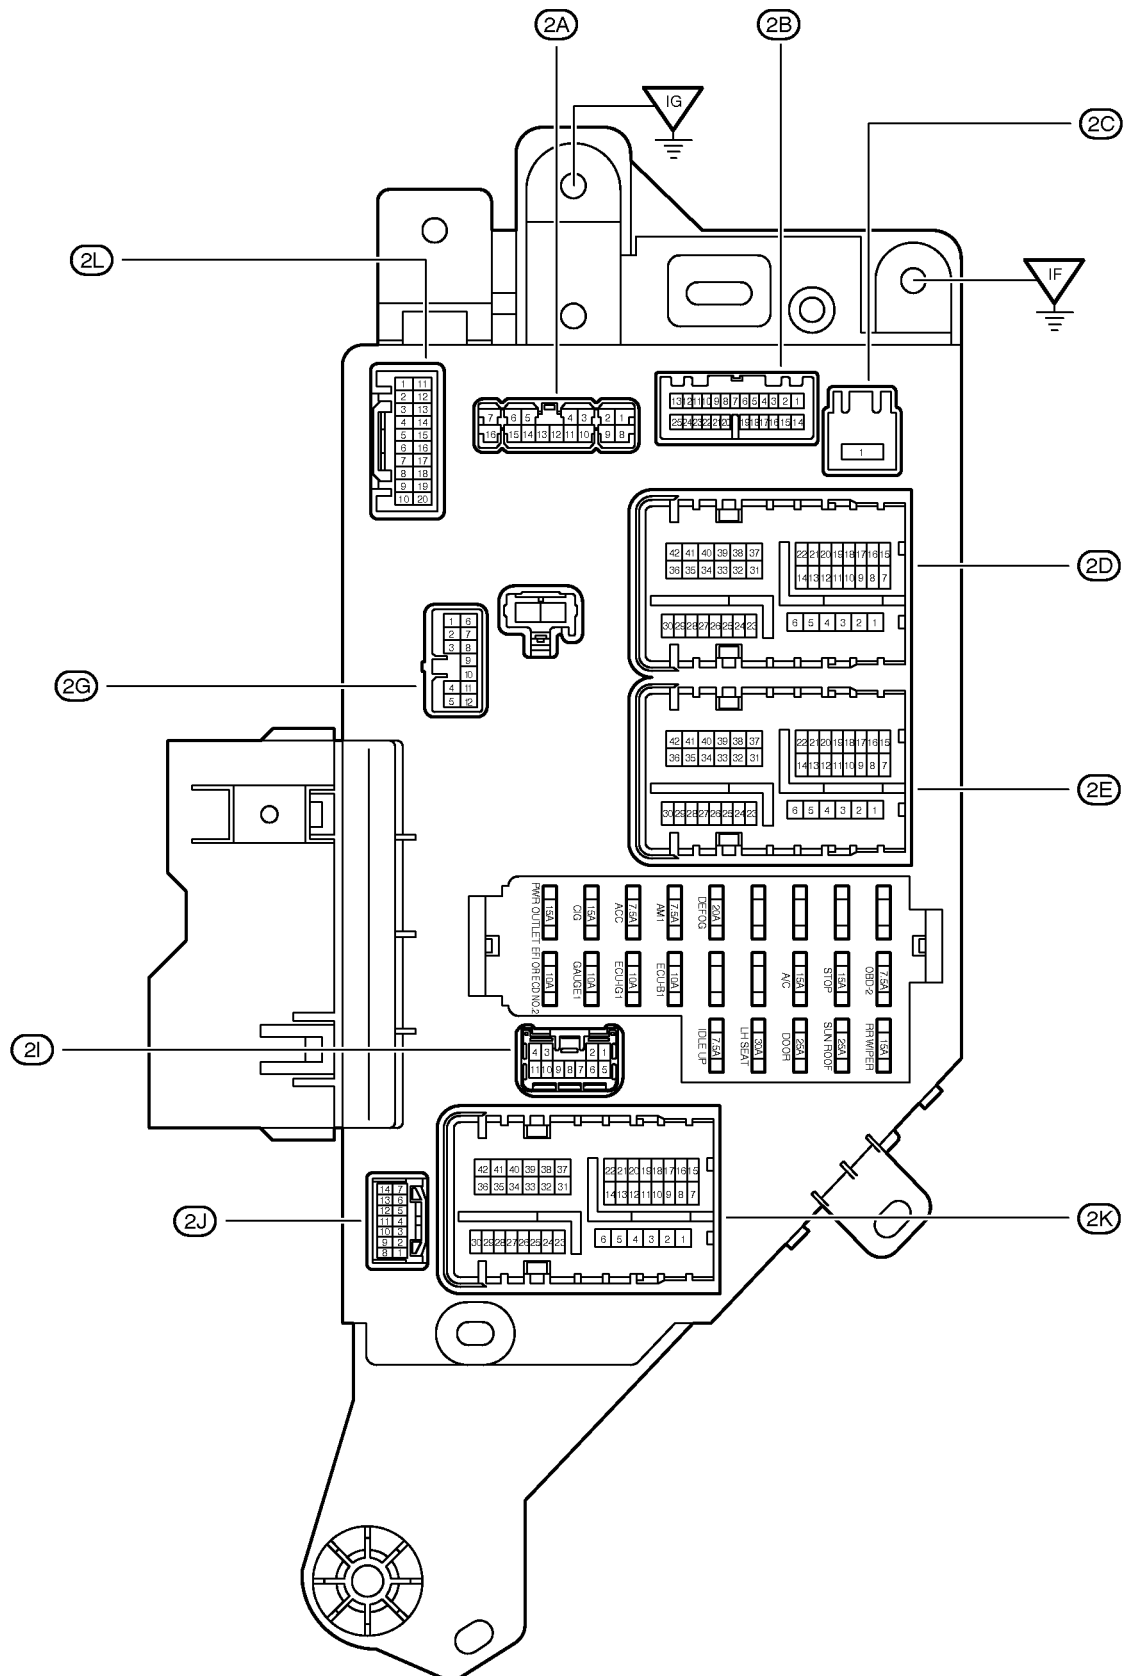

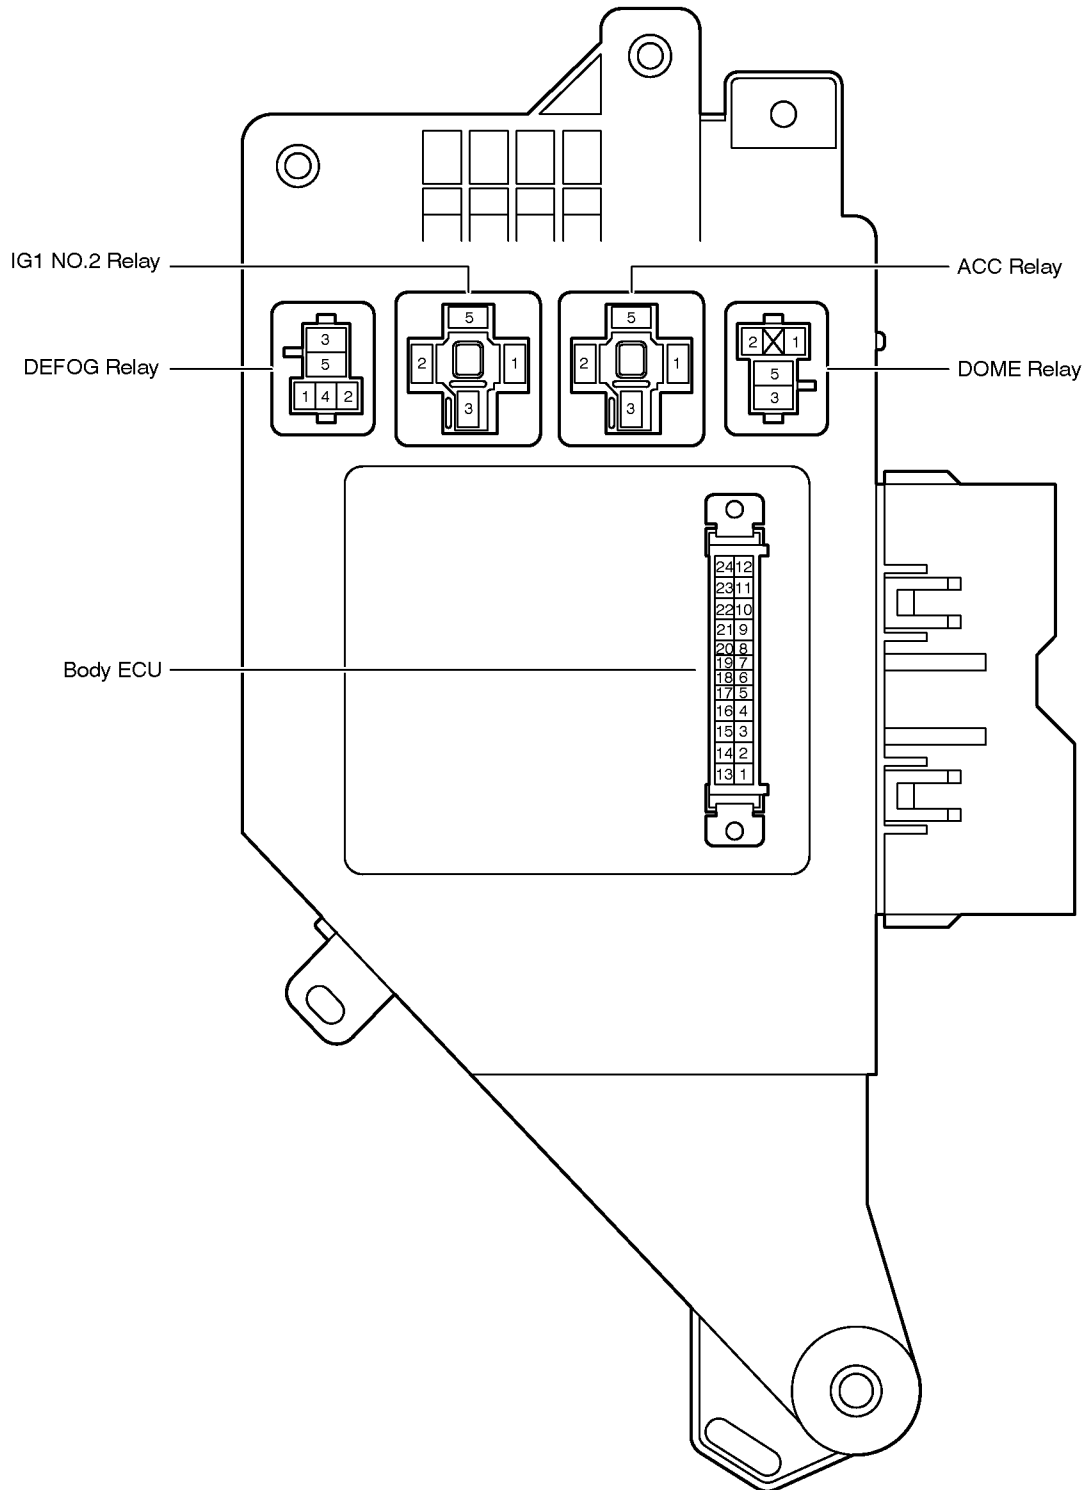


F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

(Inner Circuit : See Page 34)

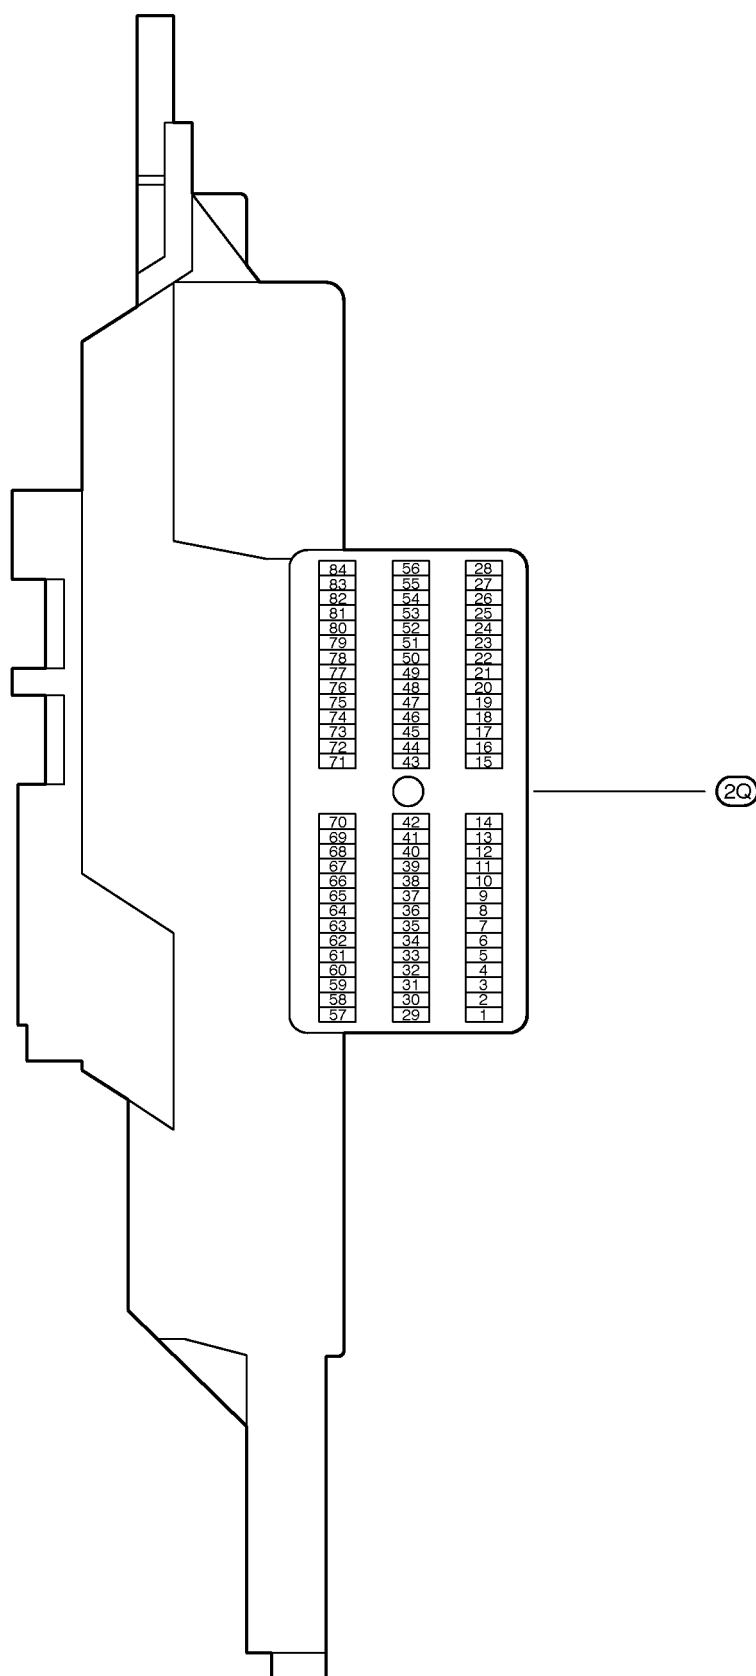


F RELAY LOCATIONS


 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

(Inner Circuit : See Page 34)

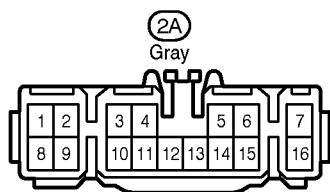


(from Engine Room No.2 Wire)

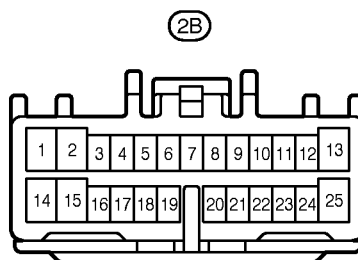


(from Engine Room No.2 Wire)




(from Engine Room No.2 Wire)

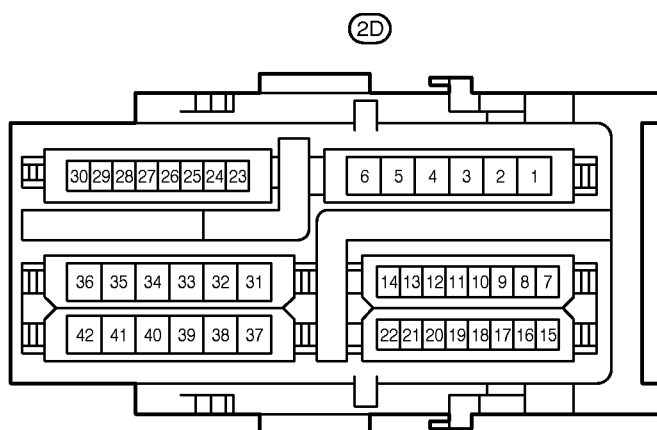


(from Dash Wire)

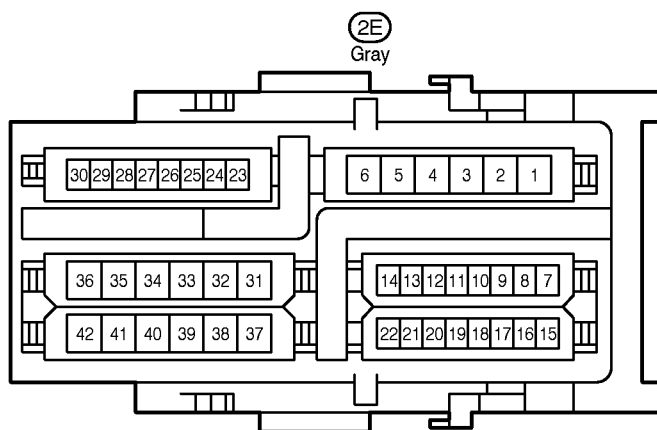


(from Dash Wire)

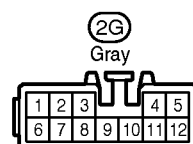




(from Dash Wire)

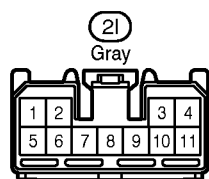

(from Front Door LH Wire)

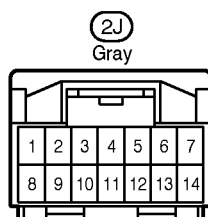


(from Front Door LH Wire)

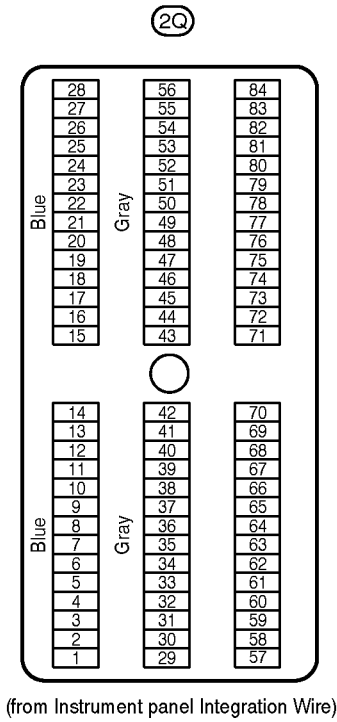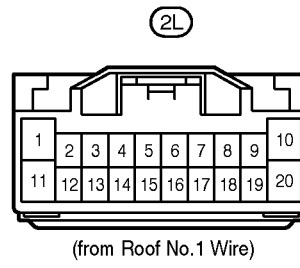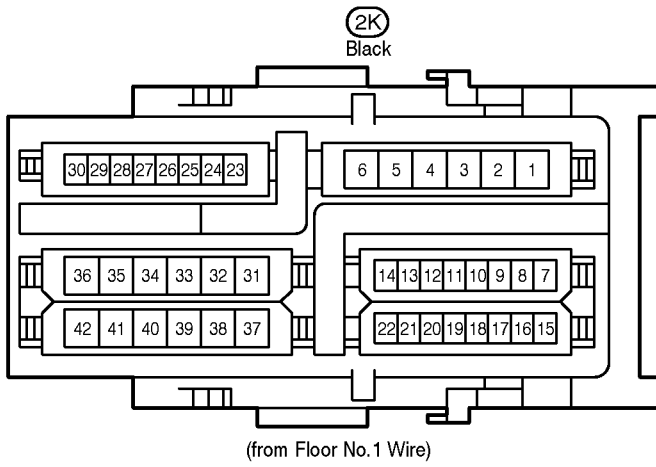

F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

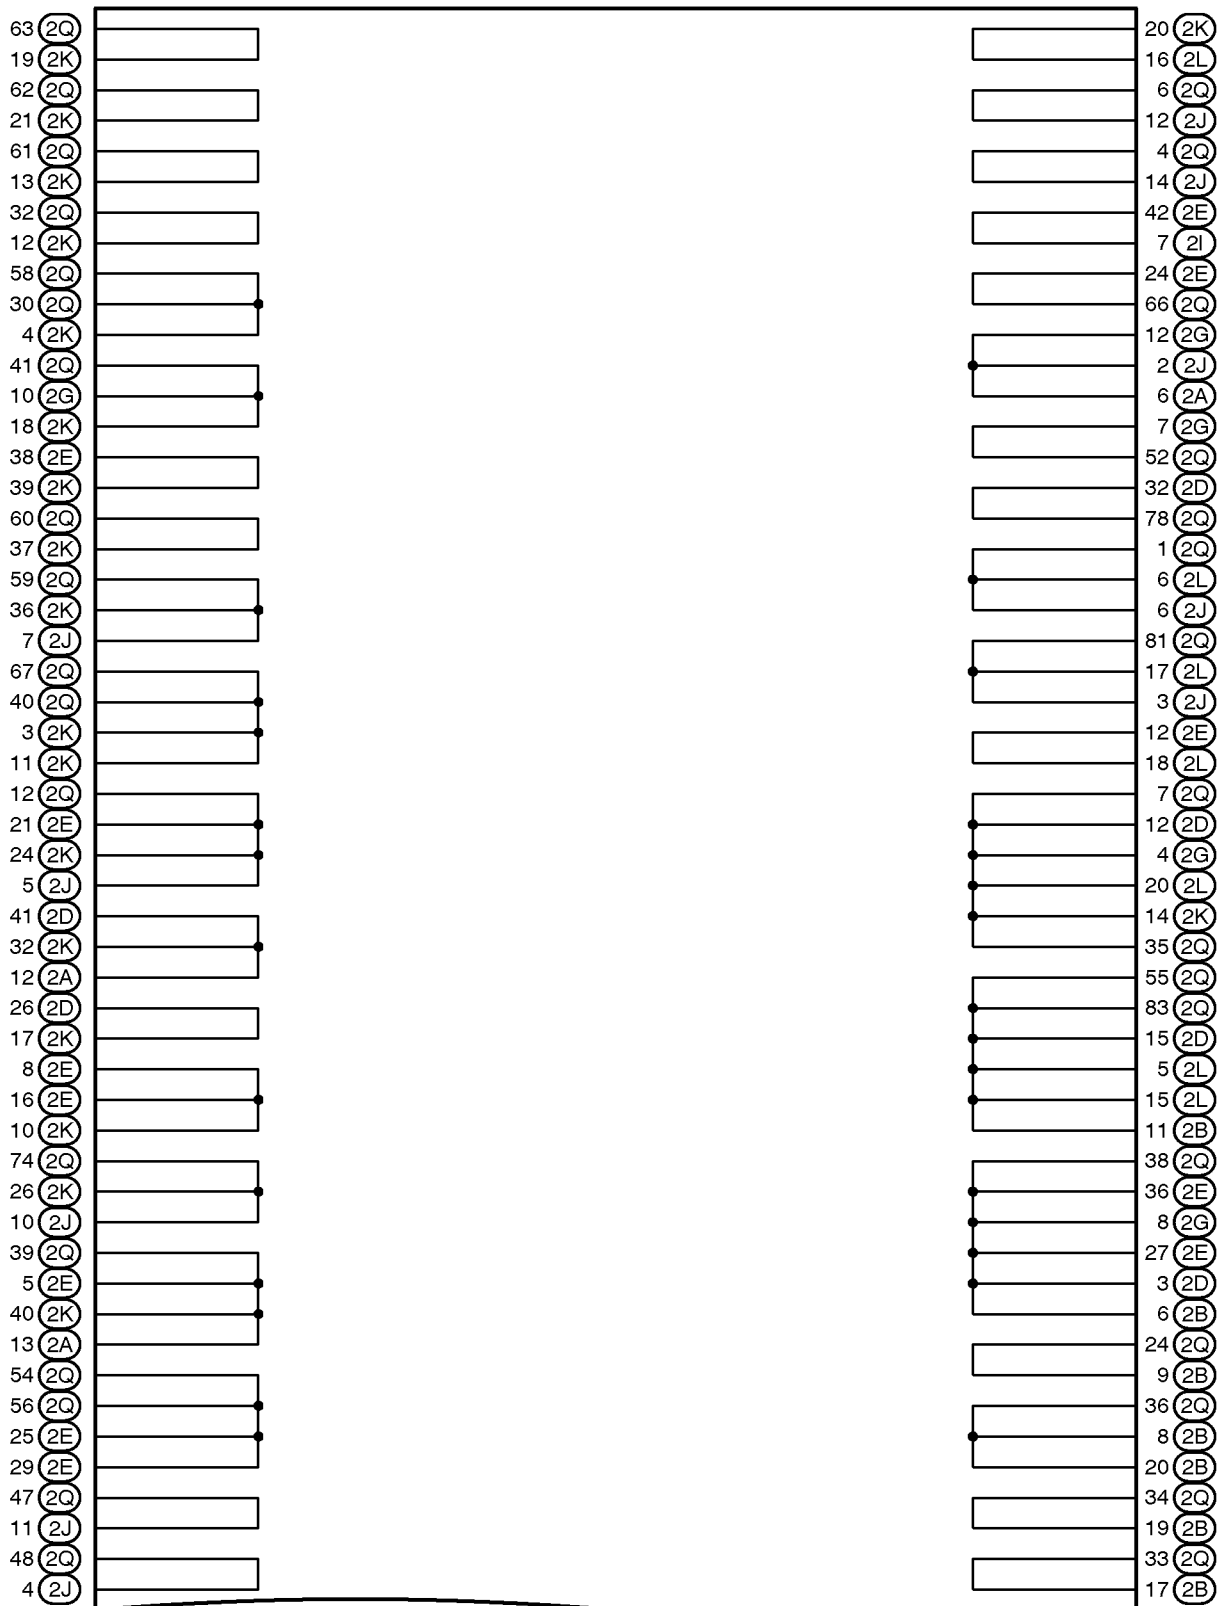

(Cont. next page)


(Cont'd)

53	(2Q)	
16	(2A)	
42	(2Q)	
68	(2Q)	•
2	(2B)	
42	(2D)	
25	(2B)	
40	(2D)	
14	(2B)	
38	(2D)	
1	(2A)	
33	(2E)	
1	(2B)	
8	(2D)	
10	(2D)	•
9	(2A)	
6	(2G)	
16	(2B)	
41	(2E)	
10	(2A)	
9	(2G)	
4	(2D)	•
7	(2B)	
39	(2D)	
14	(2A)	•
34	(2K)	
49	(2Q)	
1	(2E)	•
4	(2A)	
6	(2E)	
8	(2A)	
2	(2E)	
15	(2B)	
4	(2E)	
2	(2A)	
29	(2D)	
33	(2D)	•
15	(2A)	
29	(2Q)	
31	(2Q)	•
4	(2B)	•
27	(2K)	
14	(2E)	
37	(2Q)	
28	(2Q)	
84	(2Q)	•
30	(2K)	•
1	(2J)	
72	(2Q)	
28	(2K)	•
8	(2J)	

(Cont. next page)


F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

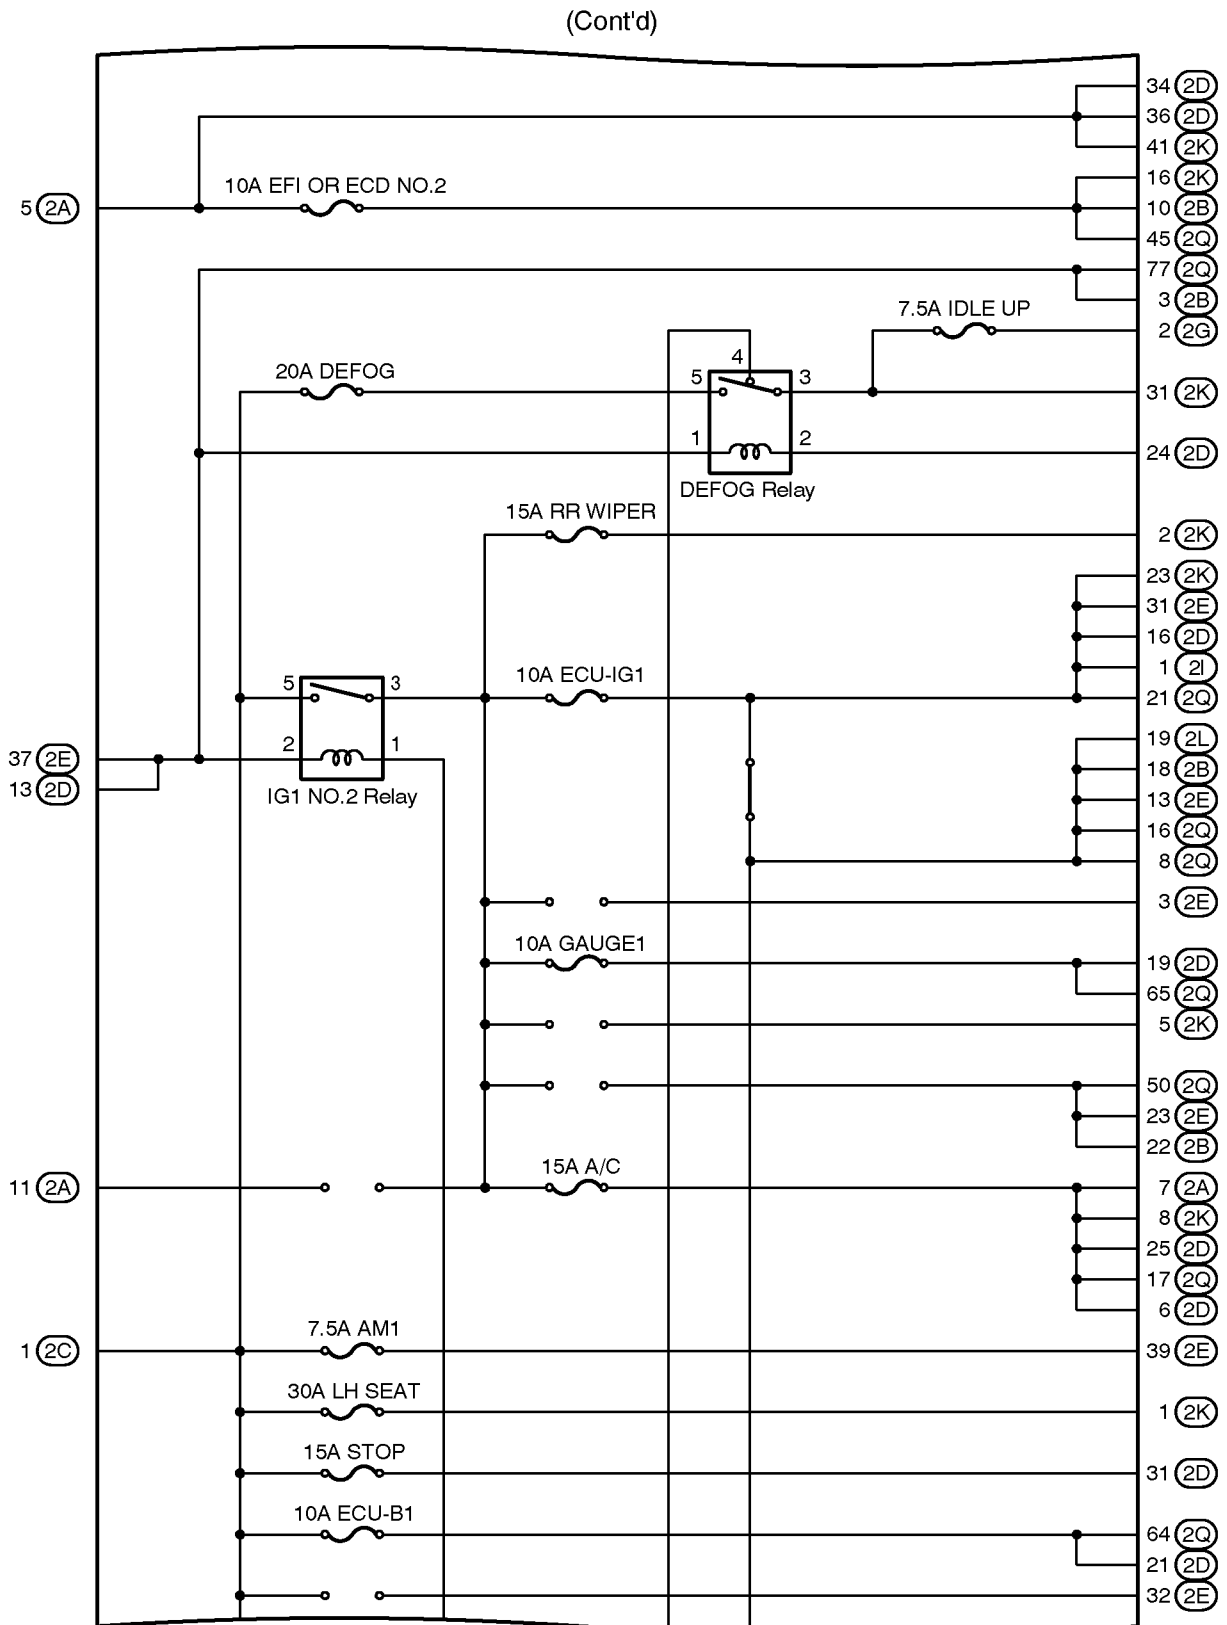

(Cont. next page)


(Cont'd)

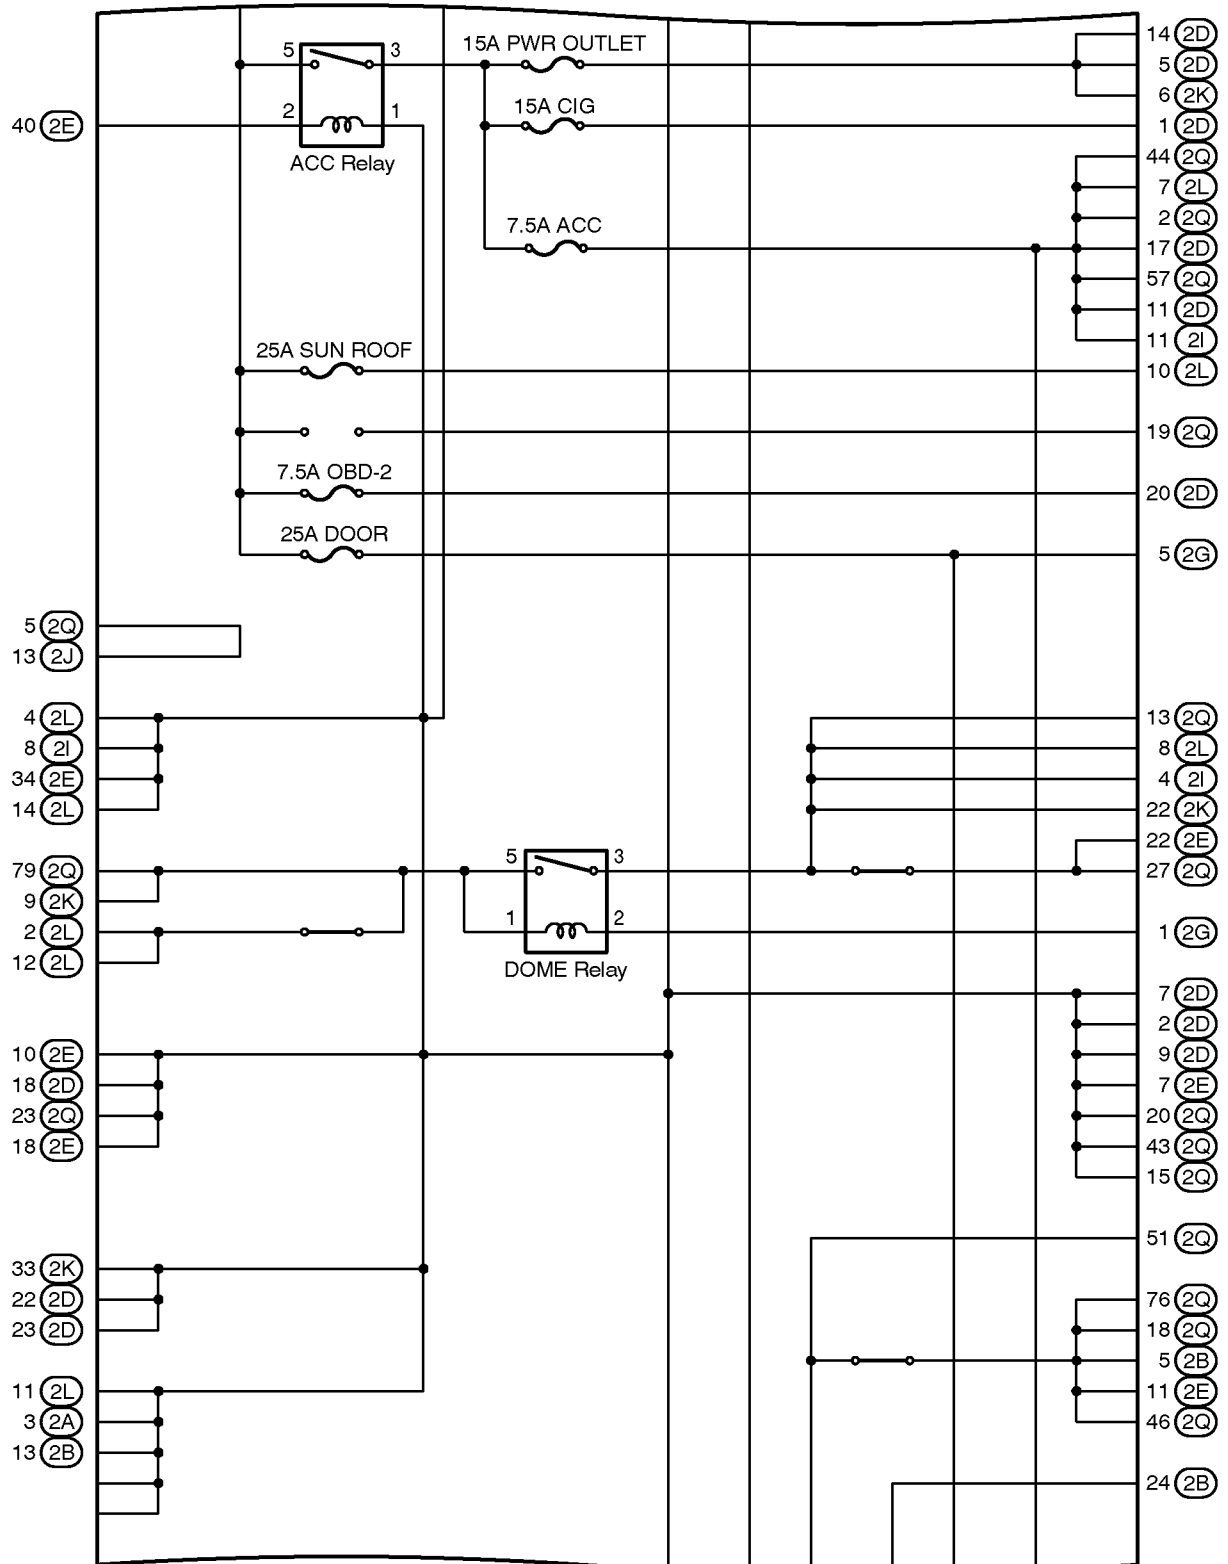

(Cont. next page)

F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

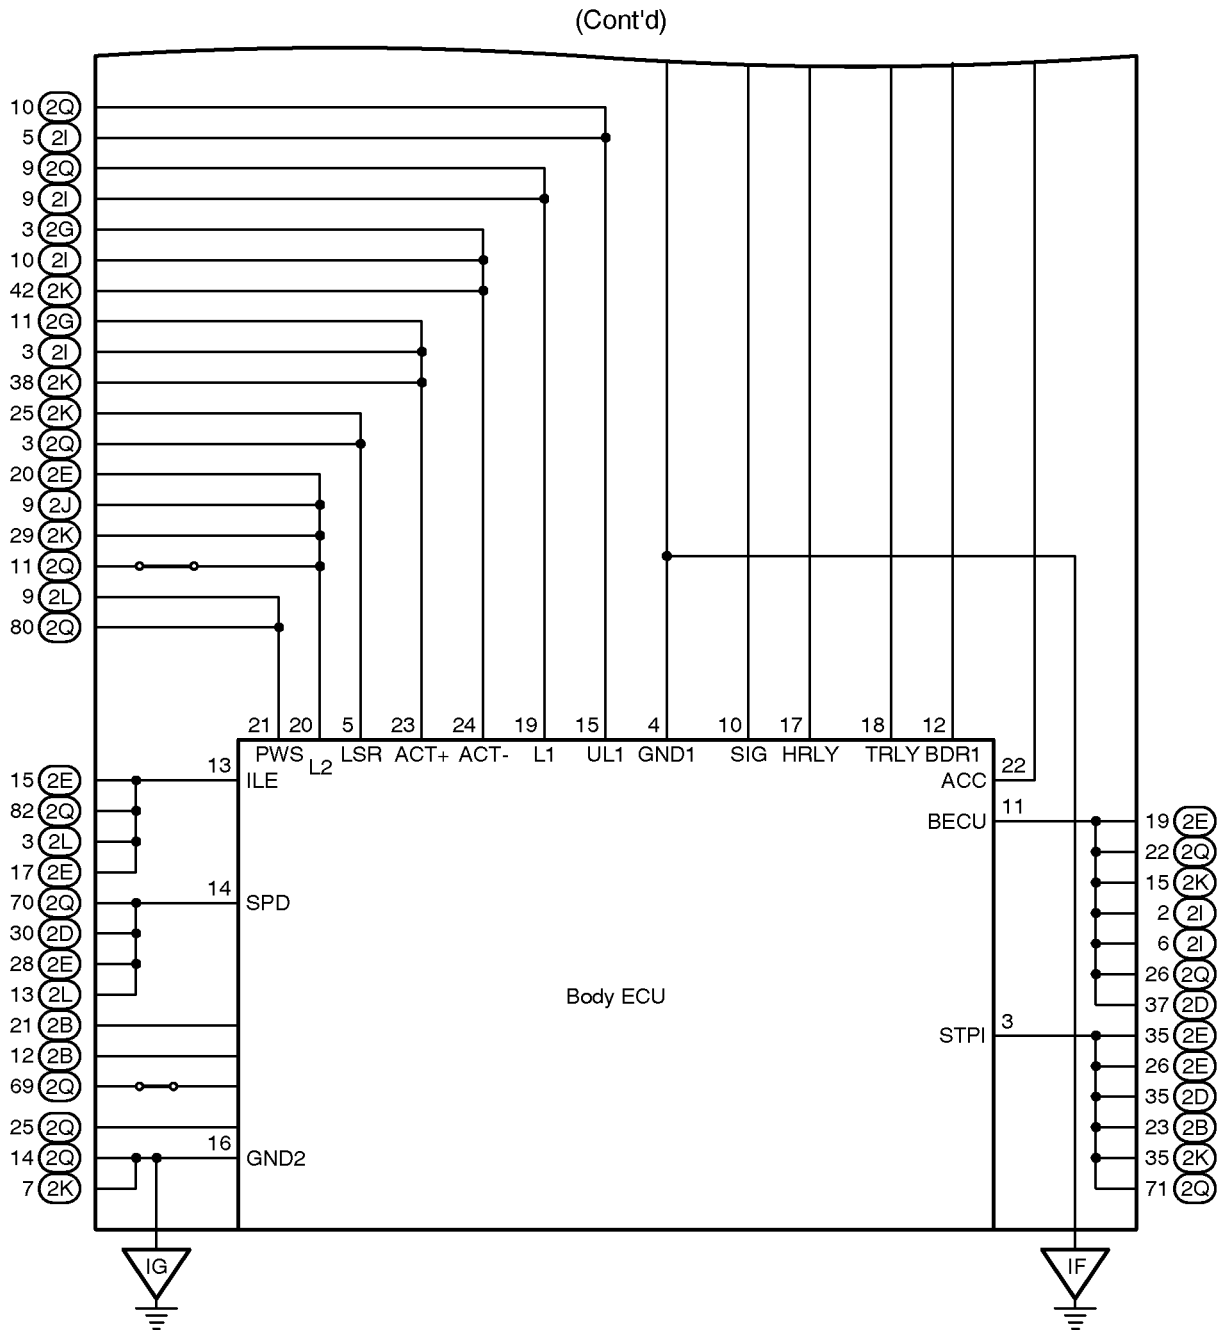



F RELAY LOCATIONS

 : Cowl Side J/B RH

Right Kick Panel (See Page 20)

(Inner Circuit : See Page 46)

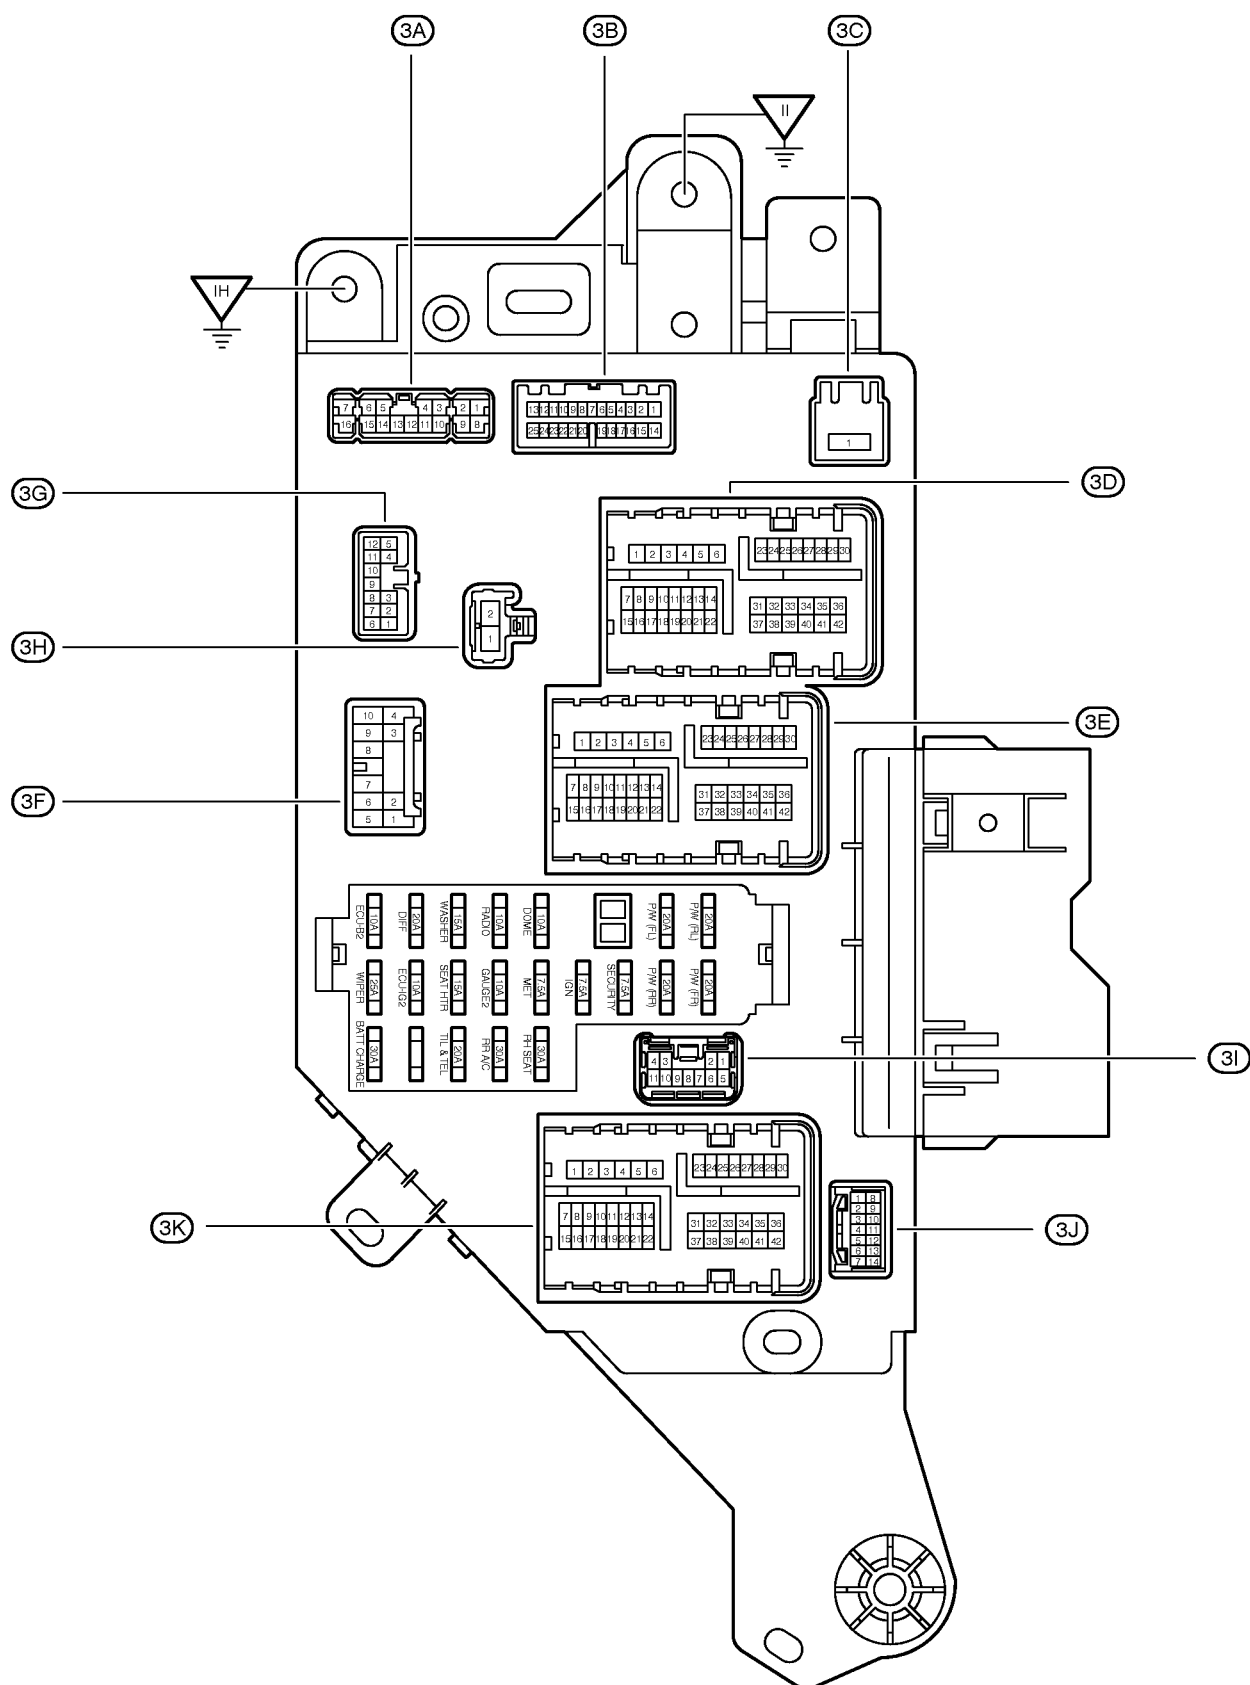

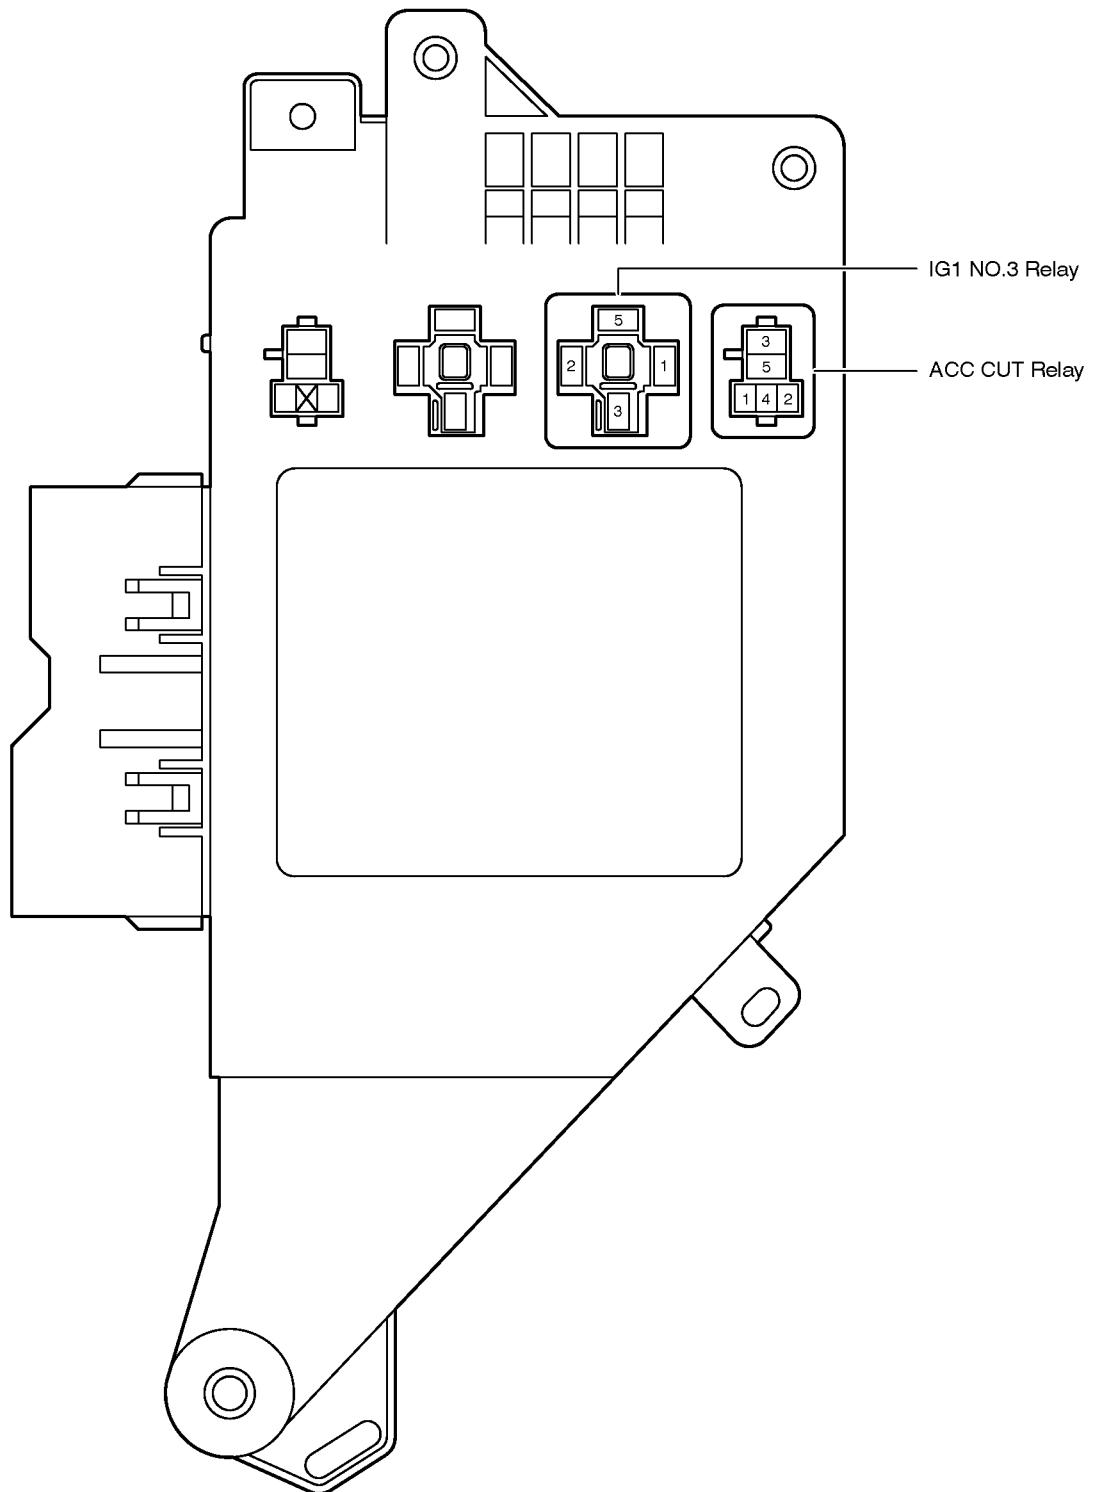



F RELAY LOCATIONS

 : Cowl Side J/B RH

Right Kick Panel (See Page 20)

(Inner Circuit : See Page 46)

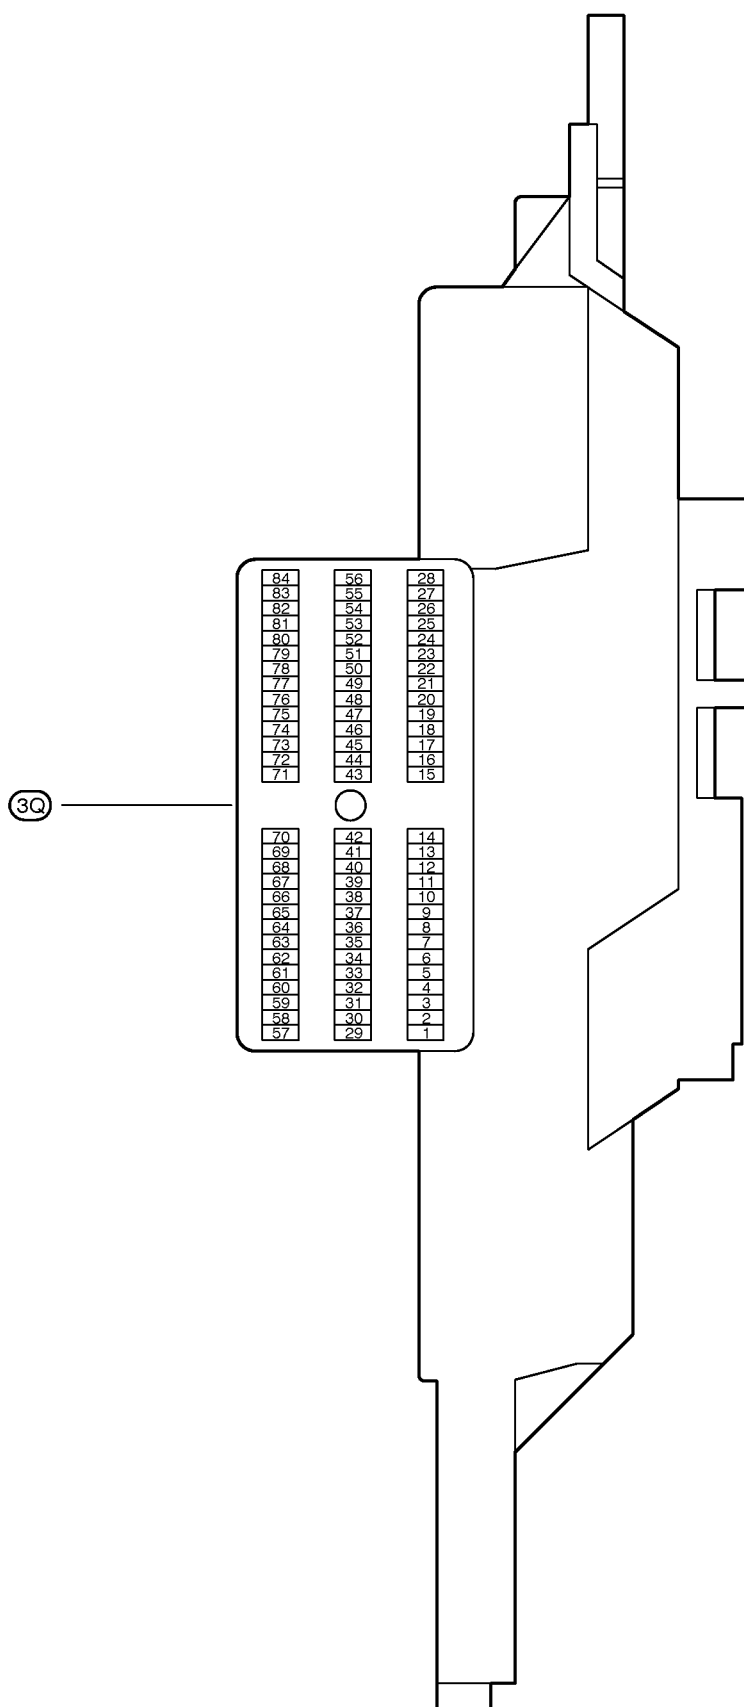










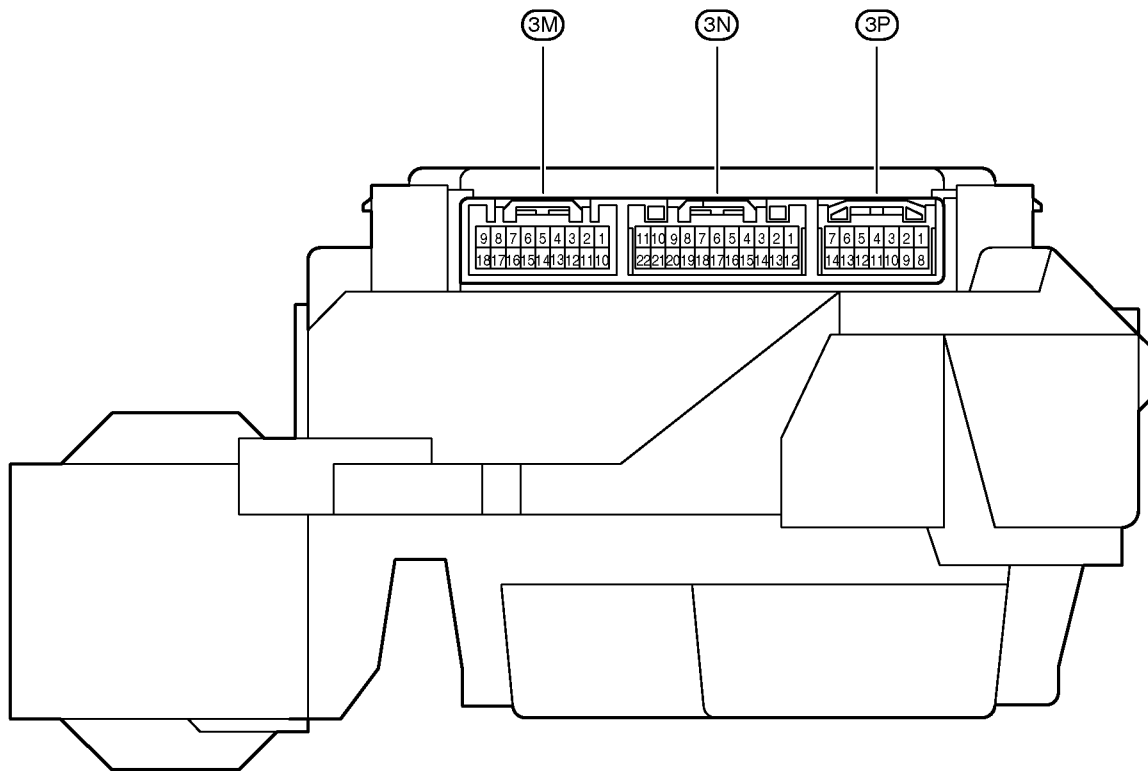







F RELAY LOCATIONS

 : Cowl Side J/B RH

Right Kick Panel (See Page 20)


(Inner Circuit : See Page 46)

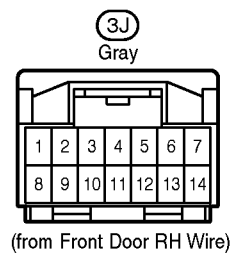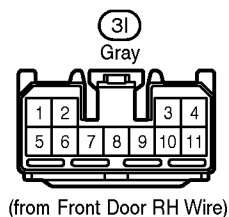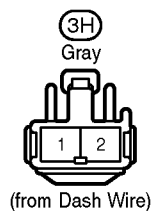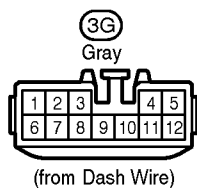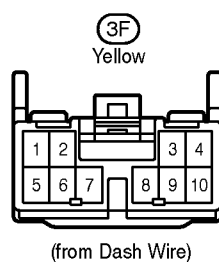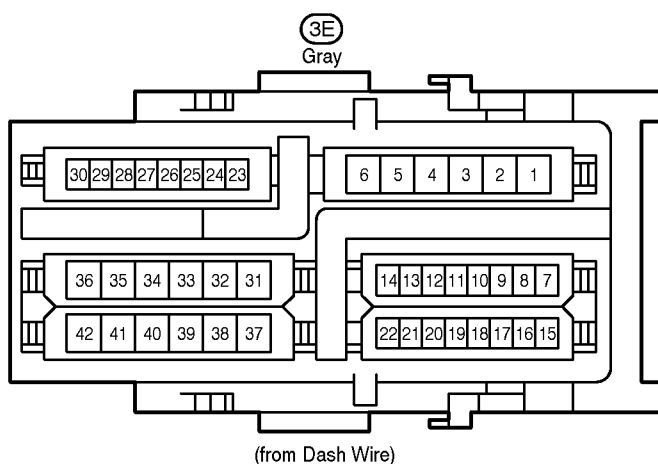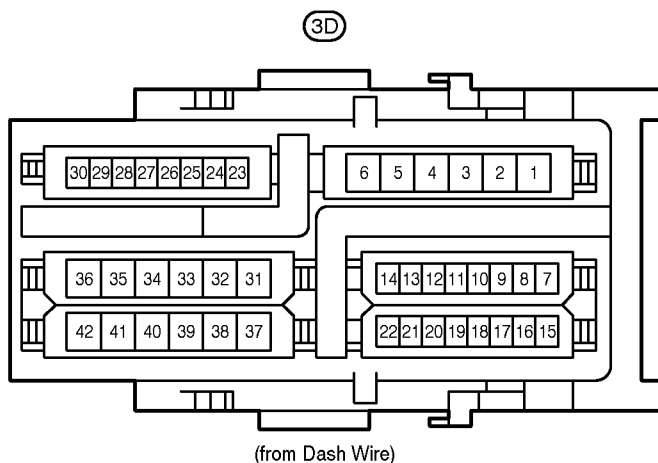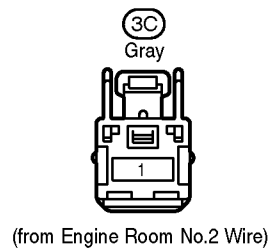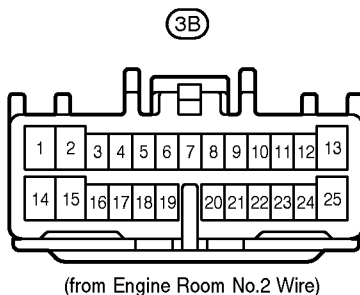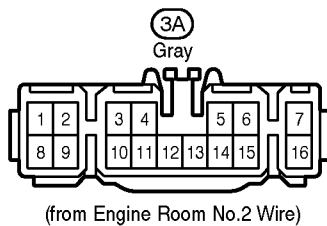

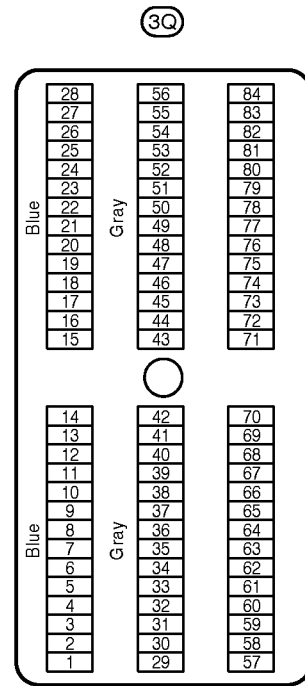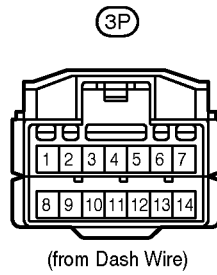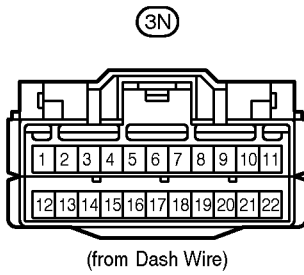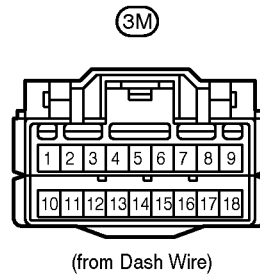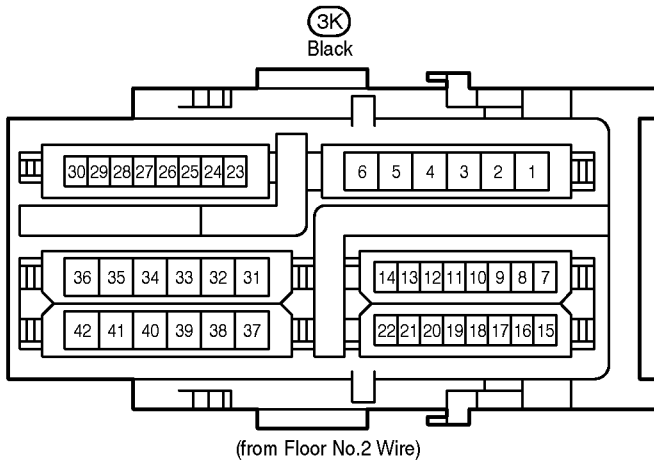

F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

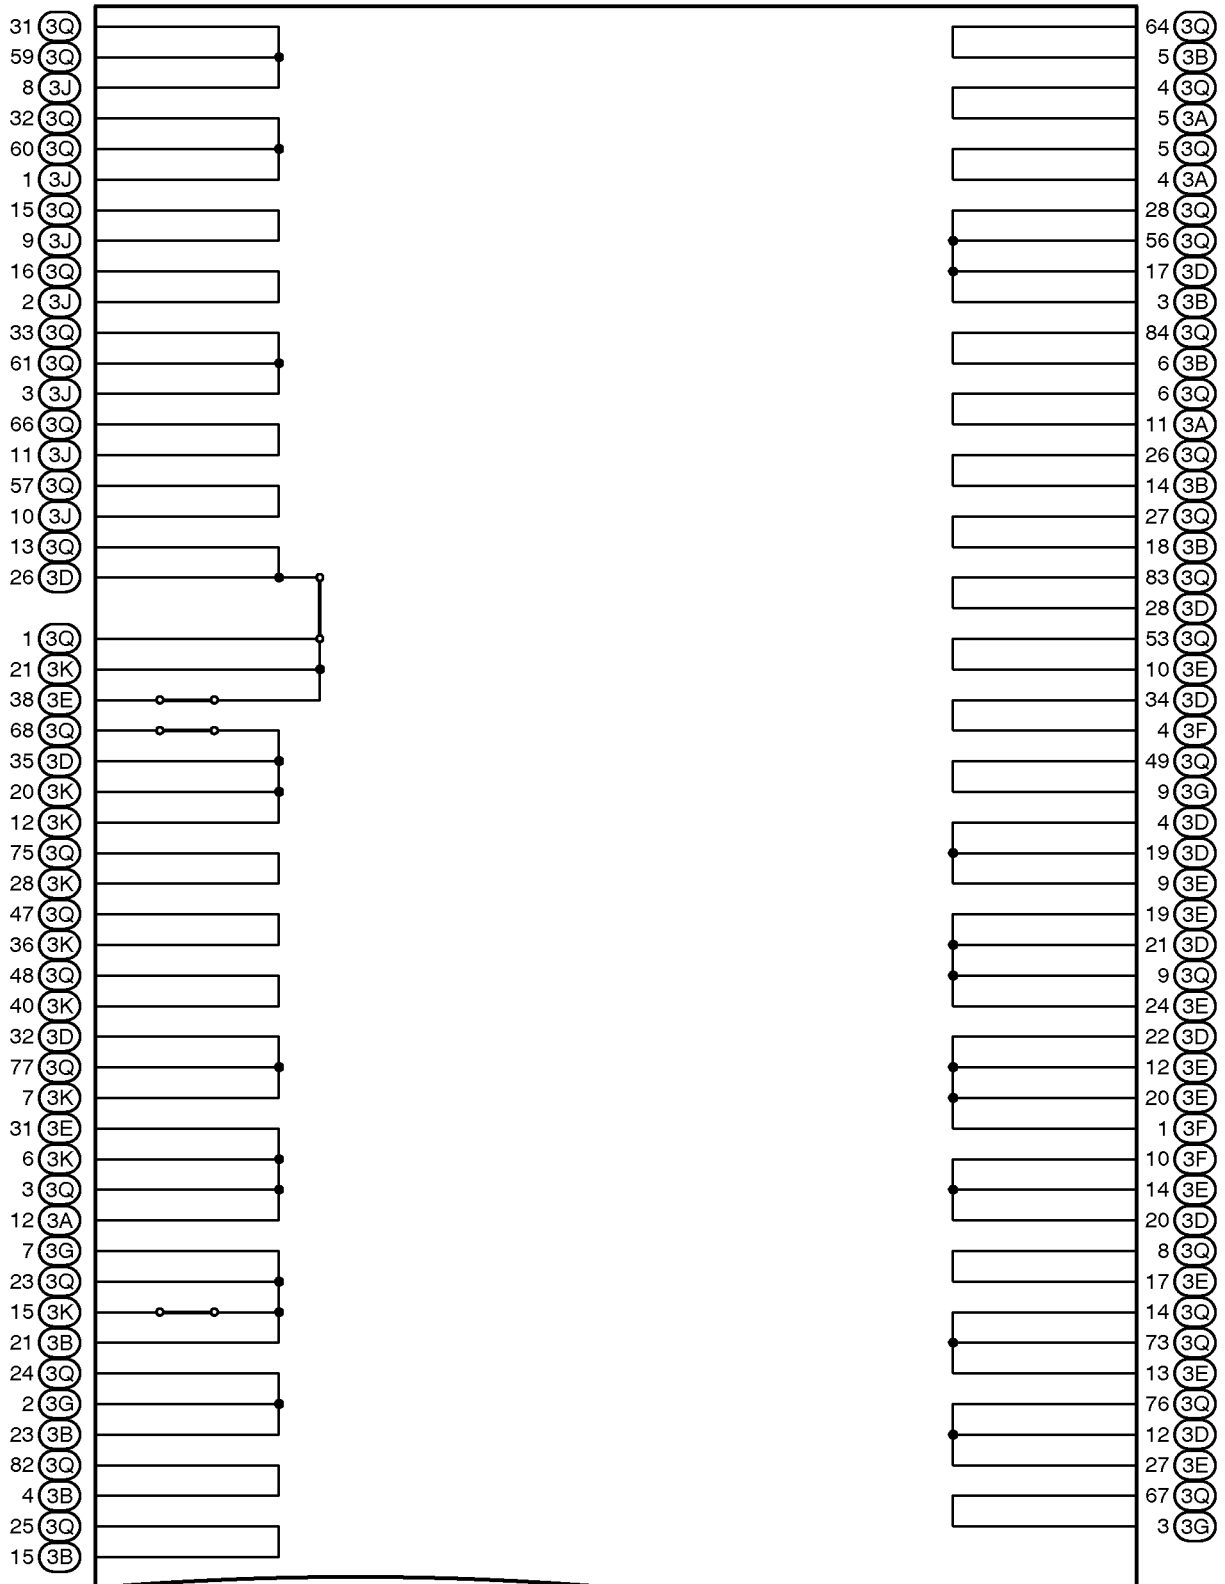

(Cont. next page)

(Cont'd)


26 (3E)			36 (3Q)
10 (3Q)			27 (3K)
21 (3E)			12 (3J)
13 (3D)			41 (3E)
40 (3E)			40 (3D)
42 (3Q)			23 (3E)
14 (3J)			18 (3E)
2 (3Q)			46 (3Q)
7 (3D)			74 (3Q)
13 (3K)			25 (3E)
6 (3A)			81 (3Q)
80 (3Q)			30 (3E)
5 (3D)			2 (3F)
22 (3K)			69 (3Q)
7 (3J)			28 (3E)
11 (3Q)			15 (3E)
8 (3F)			26 (3K)
14 (3A)			8 (3P)
11 (3E)			9 (3P)
54 (3Q)			1 (3P)
5 (3G)			2 (3P)
6 (3D)			3 (3P)
20 (3B)			10 (3M)
8 (3B)			11 (3M)
22 (3Q)			7 (3N)
15 (3D)			10 (3P)
16 (3B)			3 (3M)
19 (3Q)			12 (3M)
30 (3K)			13 (3M)
4 (3J)			11 (3P)
18 (3K)			4 (3M)
10 (3B)			5 (3M)
2 (3E)			14 (3M)
13 (3B)			12 (3P)
8 (3G)			1 (3M)
15 (3A)			13 (3P)
4 (3G)			2 (3M)
10 (3A)			14 (3P)
12 (3G)			6 (3M)
13 (3A)			5 (3P)
37 (3Q)			15 (3M)
41 (3D)			6 (3P)
7 (3F)			16 (3M)
25 (3K)			17 (3M)
30 (3D)			18 (3N)
5 (3F)			7 (3M)
62 (3Q)			12 (3N)
34 (3Q)			8 (3M)
29 (3K)			14 (3N)
5 (3J)			

(Cont. next page)

F RELAY LOCATIONS


[Cowl Side J/B RH Inner Circuit]

(Cont'd)

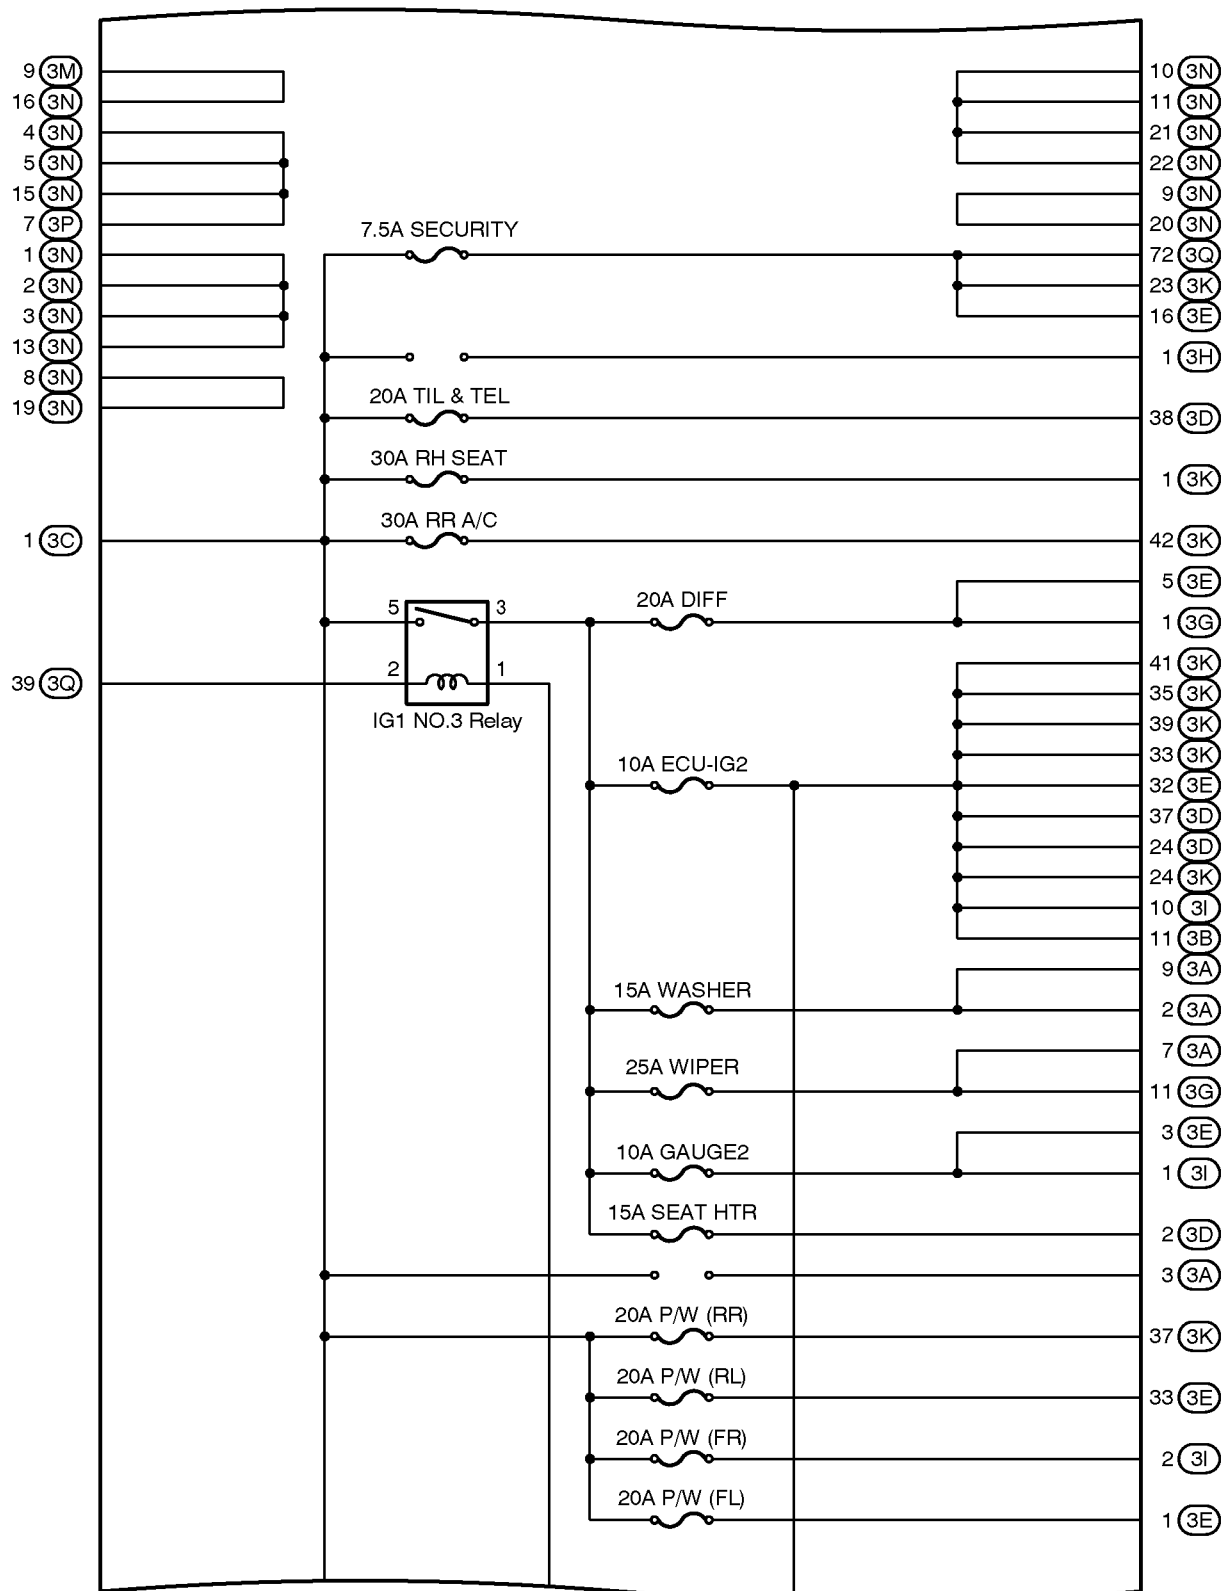

(Cont. next page)


(Cont'd)

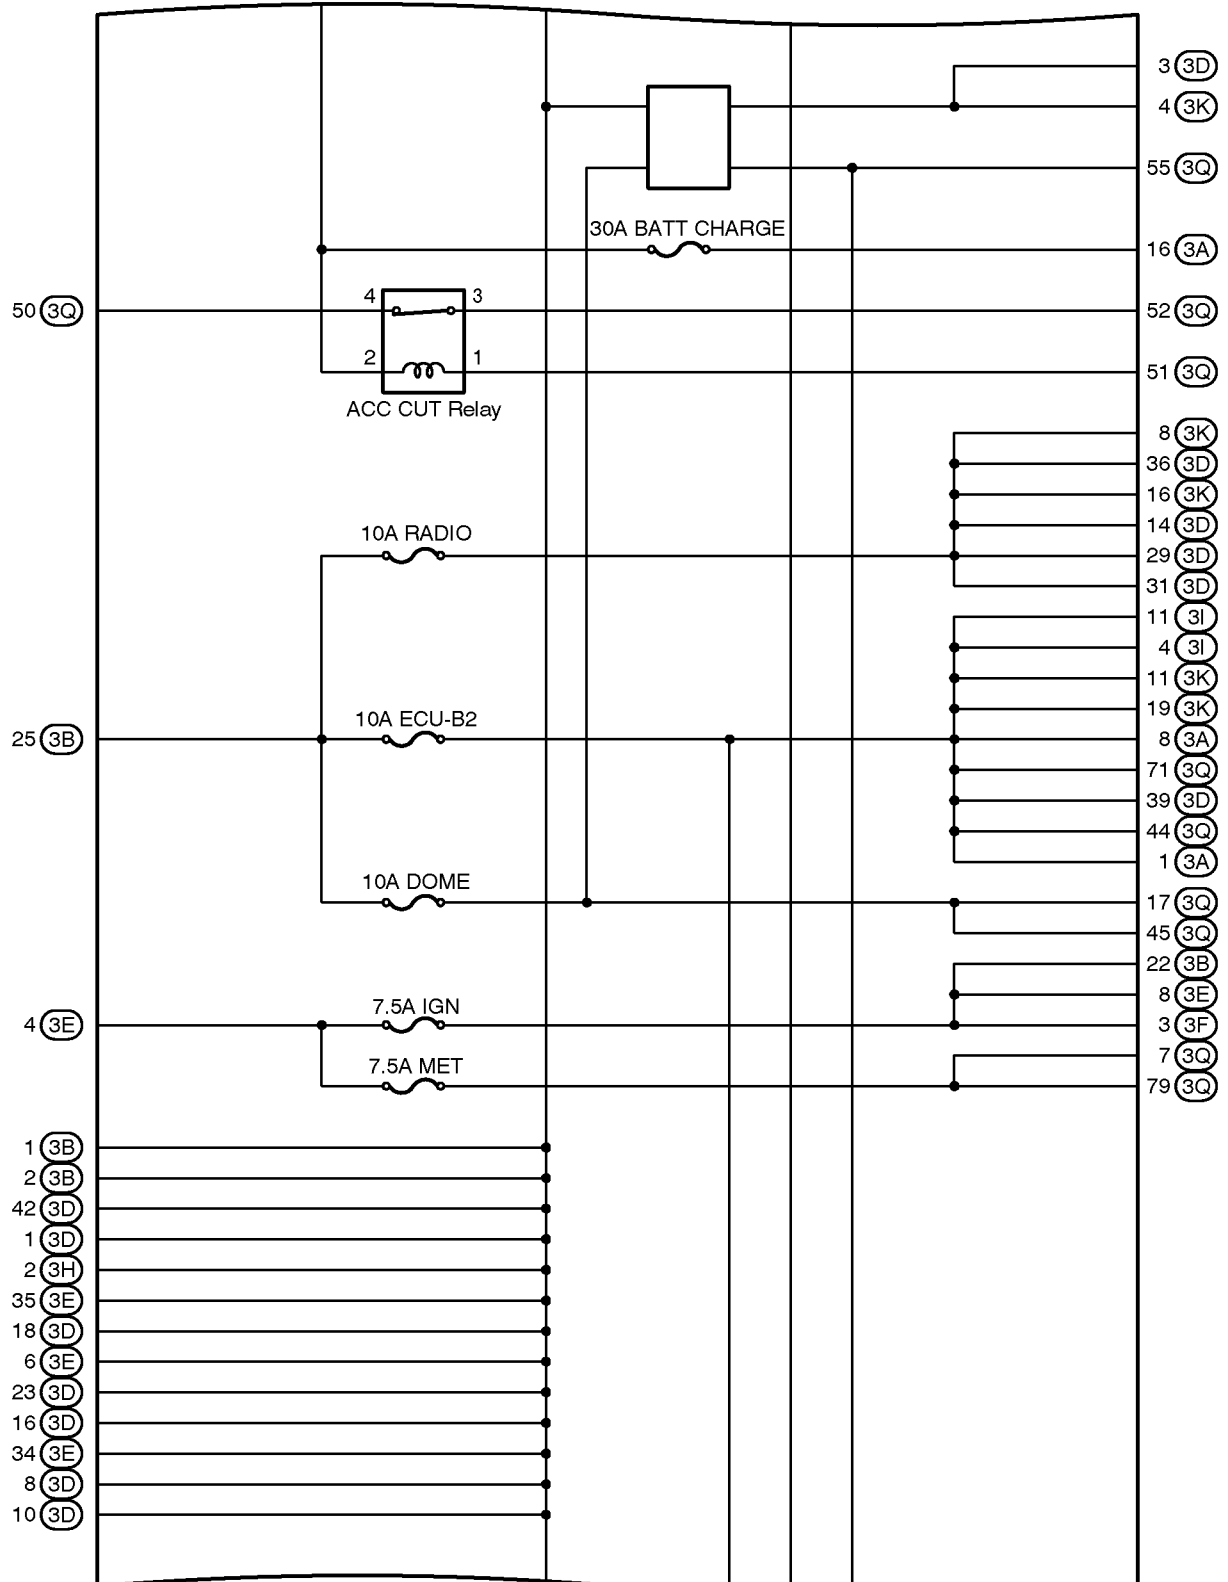

(Cont. next page)

F RELAY LOCATIONS


[Cowl Side J/B RH Inner Circuit]

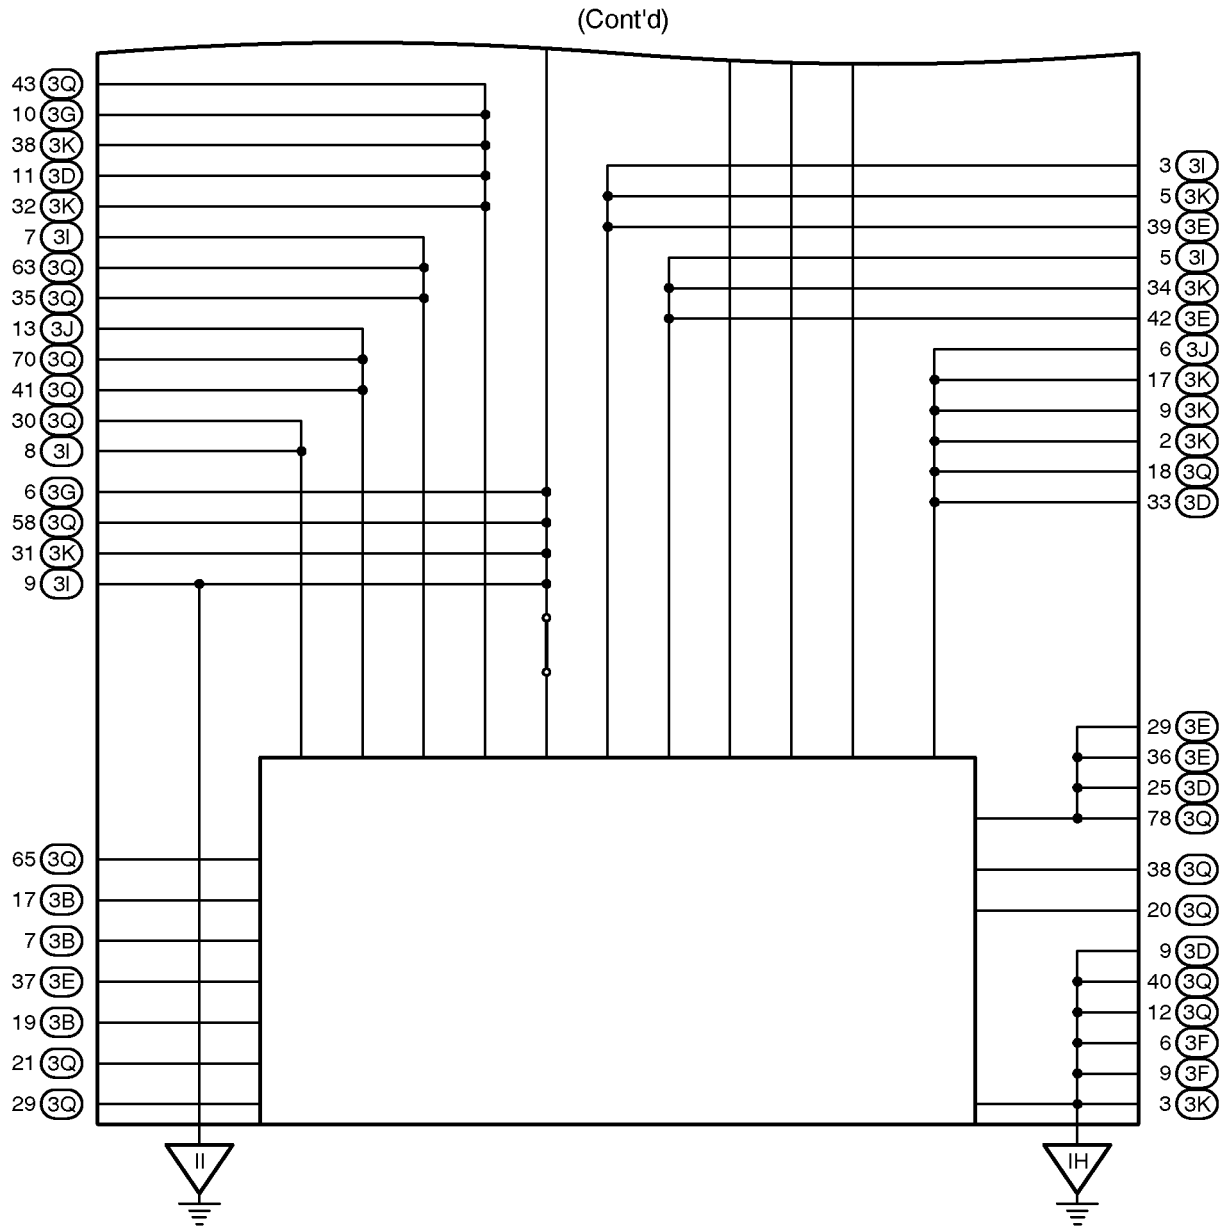

F RELAY LOCATIONS


○ : J/B No.4

Instrument Panel Center (See Page 20)

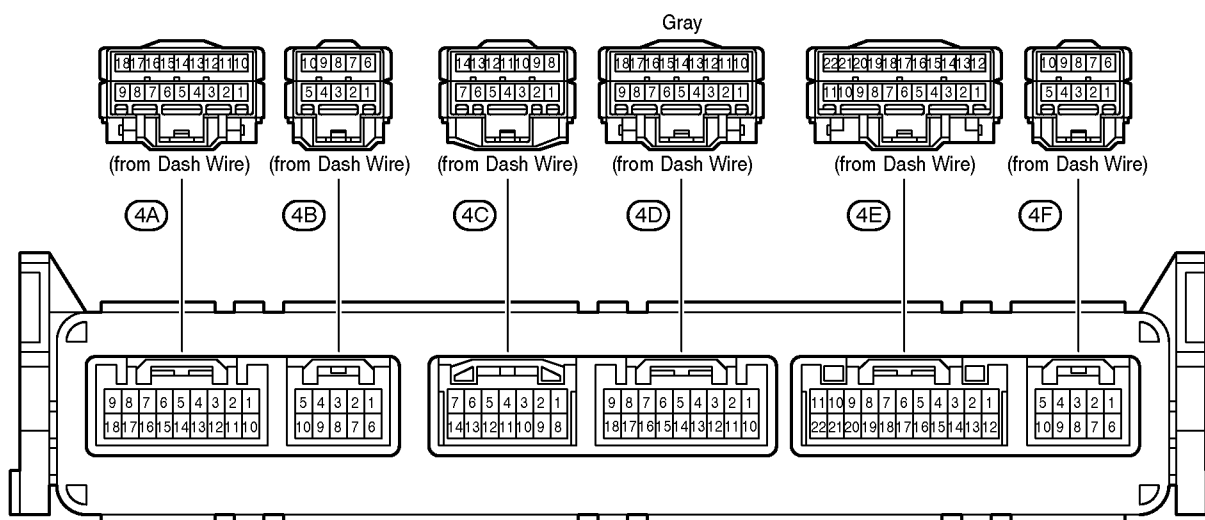

F RELAY LOCATIONS

[J/B No.4 Inner Circuit]

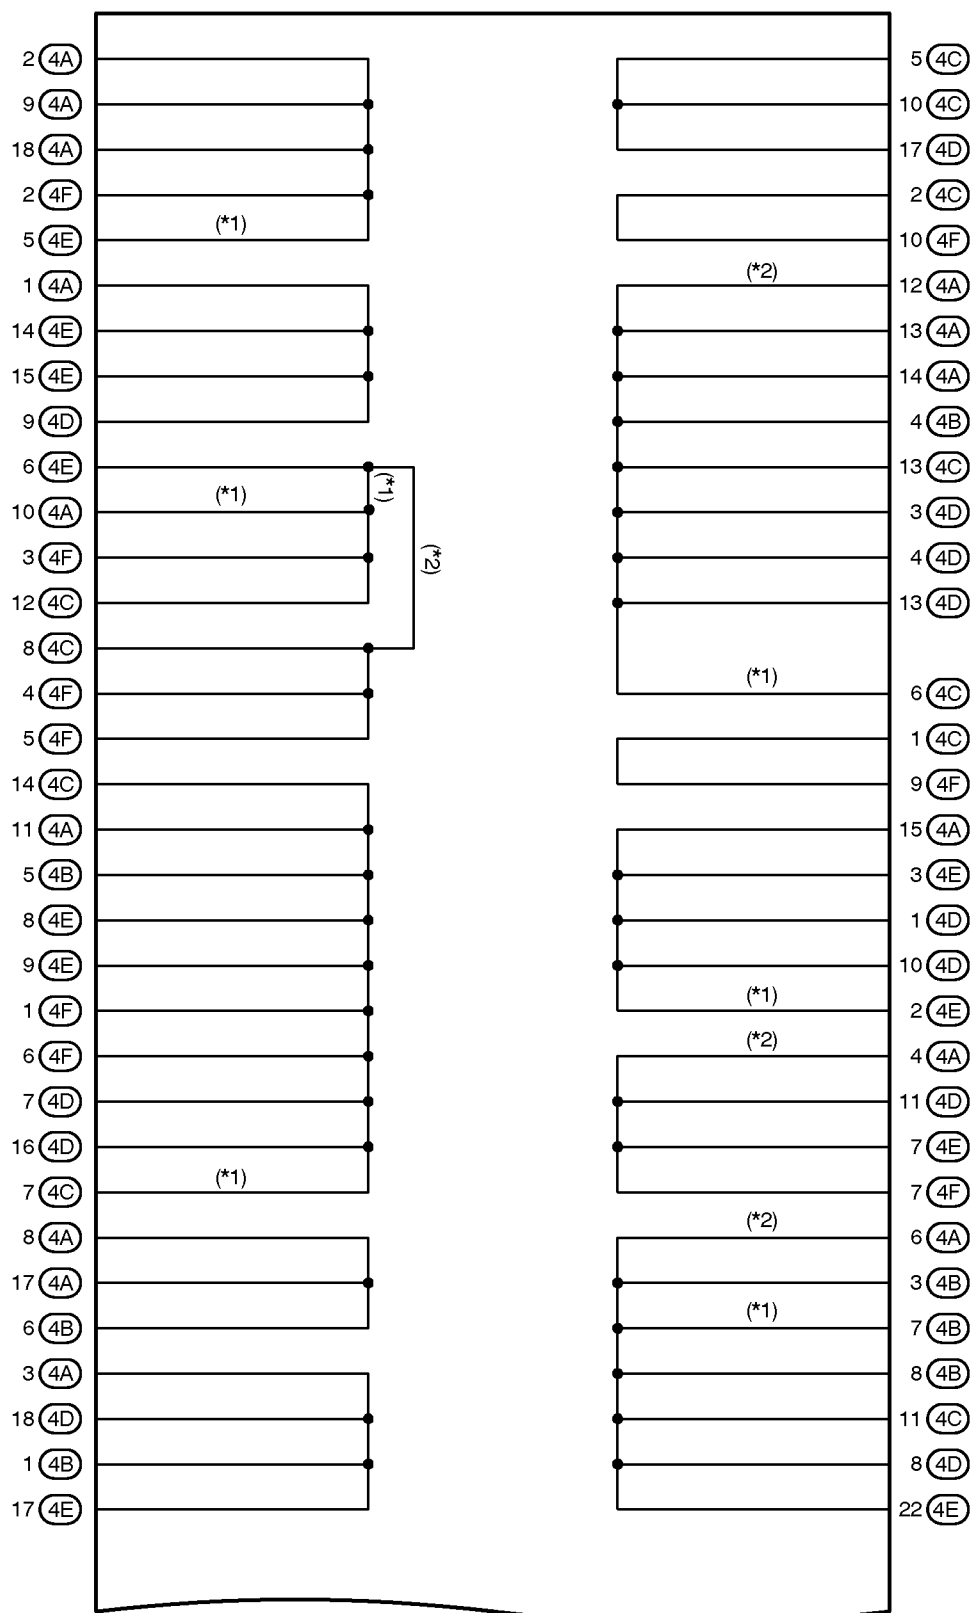

(Cont. next page)

(Cont'd)


2 (4B)			9 (4C)
12 (4D)			13 (4E)
21 (4E)			4 (4C)
10 (4E)	(*1)		19 (4E)
2 (4D)			5 (4A)
12 (4E)			10 (4B)
5 (4D)			6 (4D)
14 (4D)			15 (4D)
20 (4E)			11 (4E)
4 (4E)			9 (4B)
3 (4C)	(*1)		
16 (4A)			
1 (4E)	(*2)		

* 1:w/ Navigation System
* 2:w/o Navigation System

F RELAY LOCATIONS


○ : J/B No.5

Behind the Combination Meter (See Page 20)

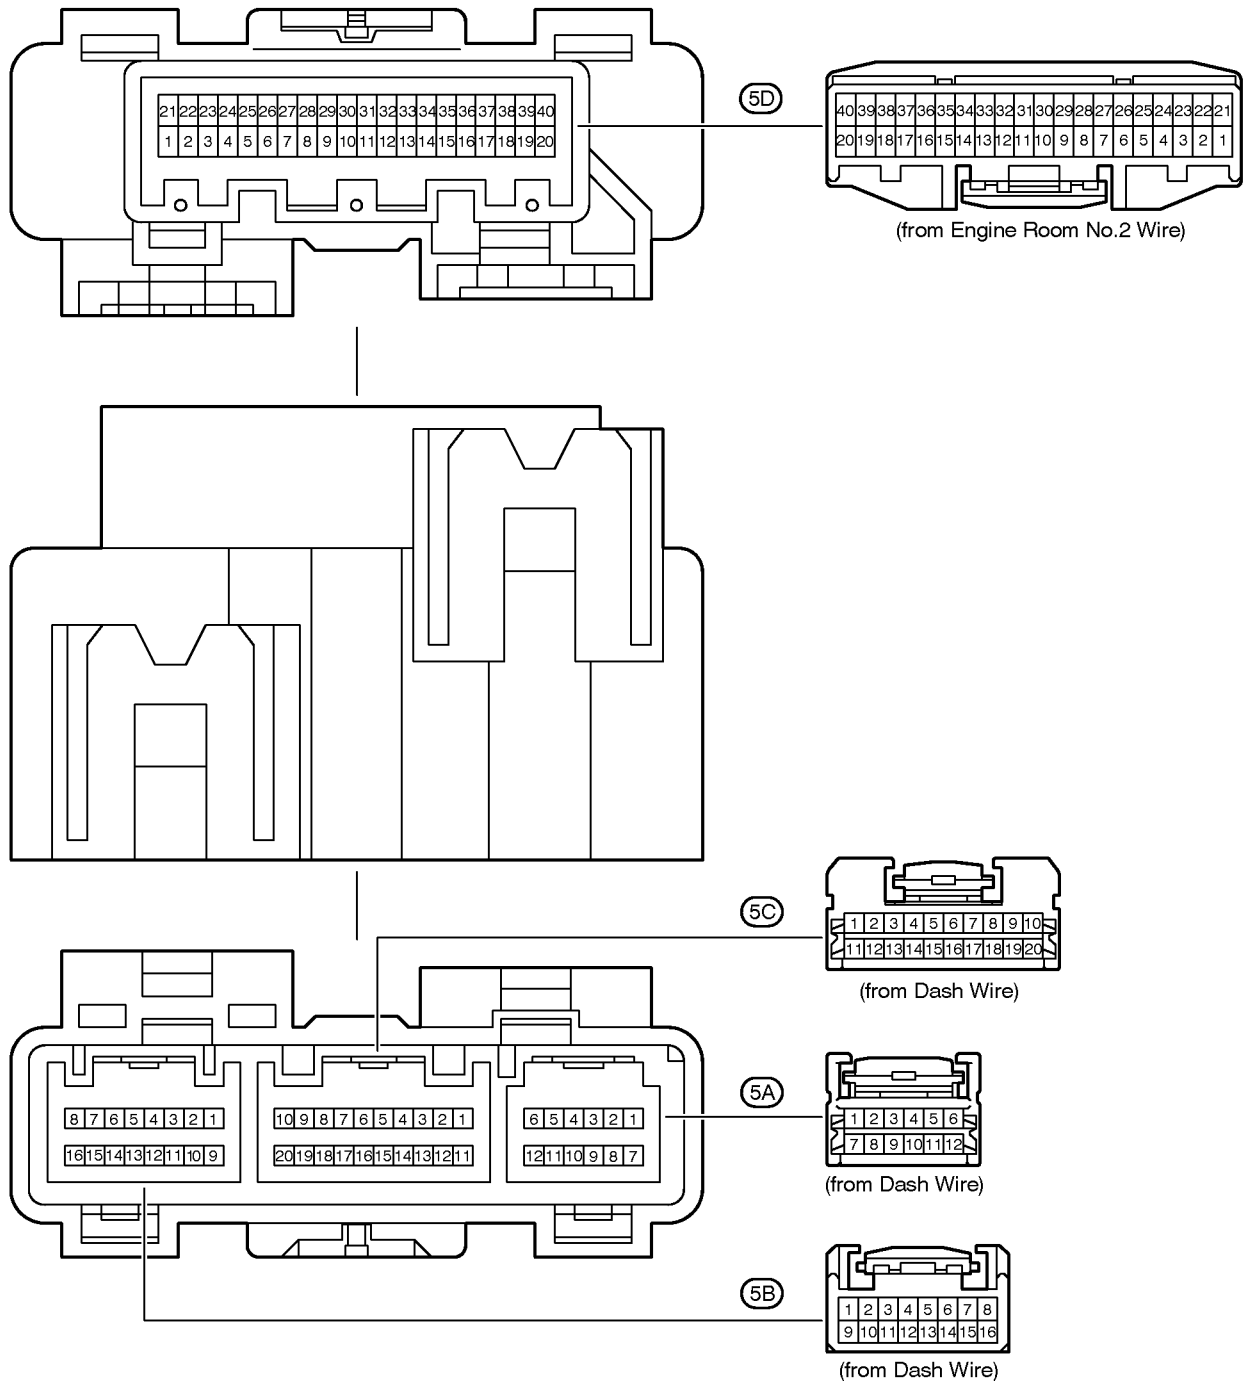

F RELAY LOCATIONS

[J/B No.5 Inner Circuit]

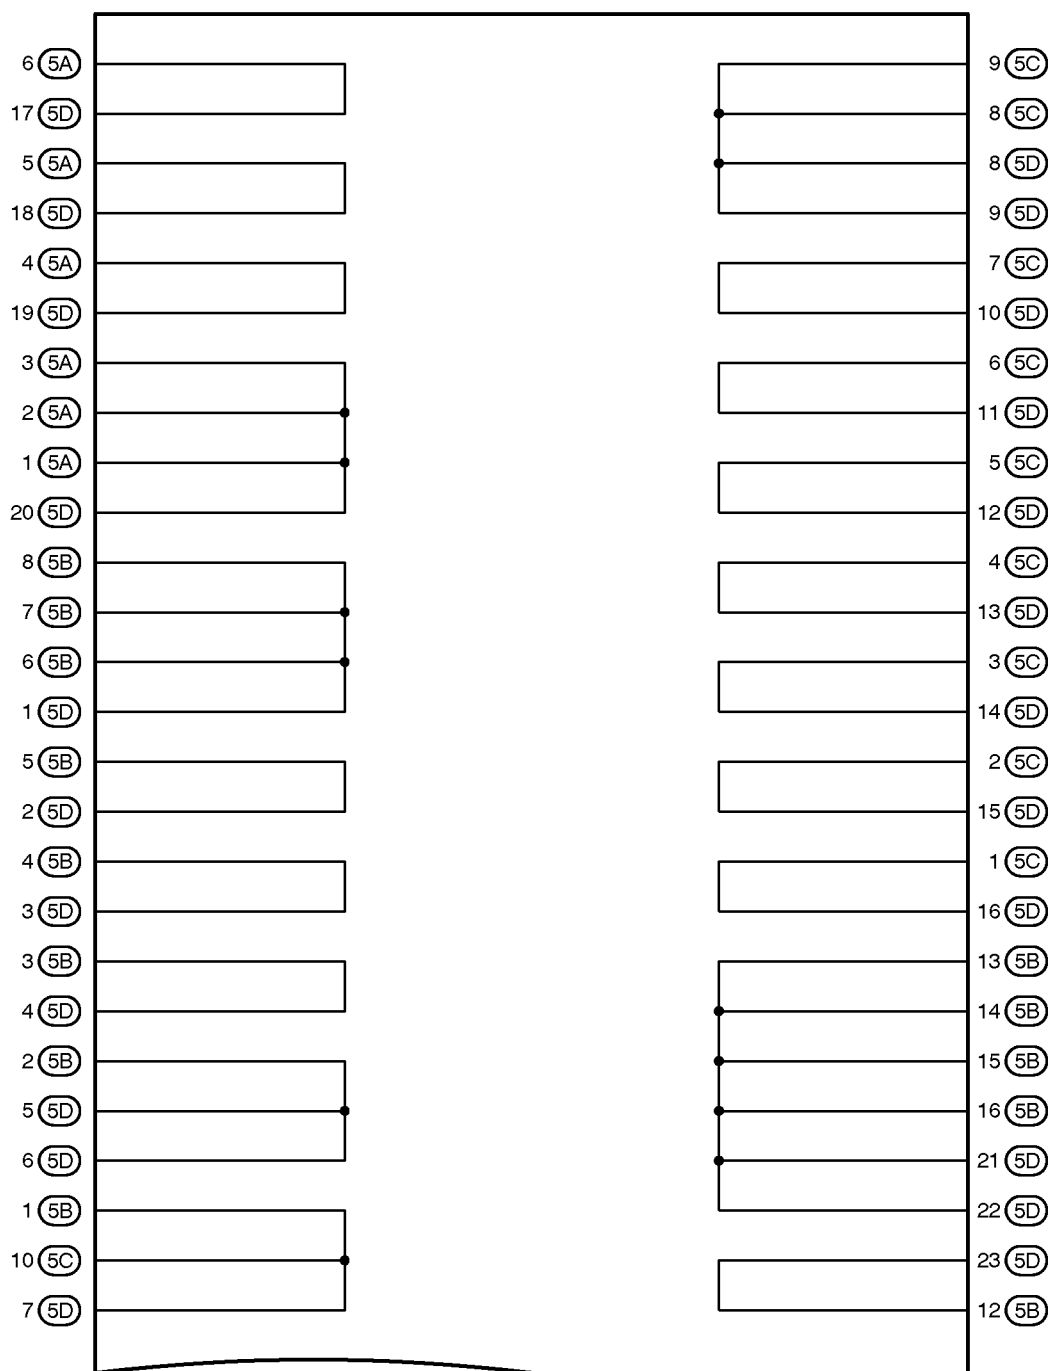

(Cont. next page)


(Cont'd)

24 (5D)			33 (5D)
11 (5B)			14 (5C)
25 (5D)			34 (5D)
10 (5B)			13 (5C)
26 (5D)			35 (5D)
9 (5B)		•	36 (5D)
27 (5D)		•	12 (5C)
20 (5C)			11 (5C)
28 (5D)			12 (5A)
19 (5C)			37 (5D)
29 (5D)			38 (5D)
18 (5C)			11 (5A)
30 (5D)			39 (5D)
17 (5C)	•		10 (5A)
31 (5D)	•		40 (5D)
16 (5C)		•	9 (5A)
32 (5D)		•	8 (5A)
15 (5C)			7 (5A)

F RELAY LOCATIONS


 : J/B No.6

Behind the Glove Box (See Page 20)

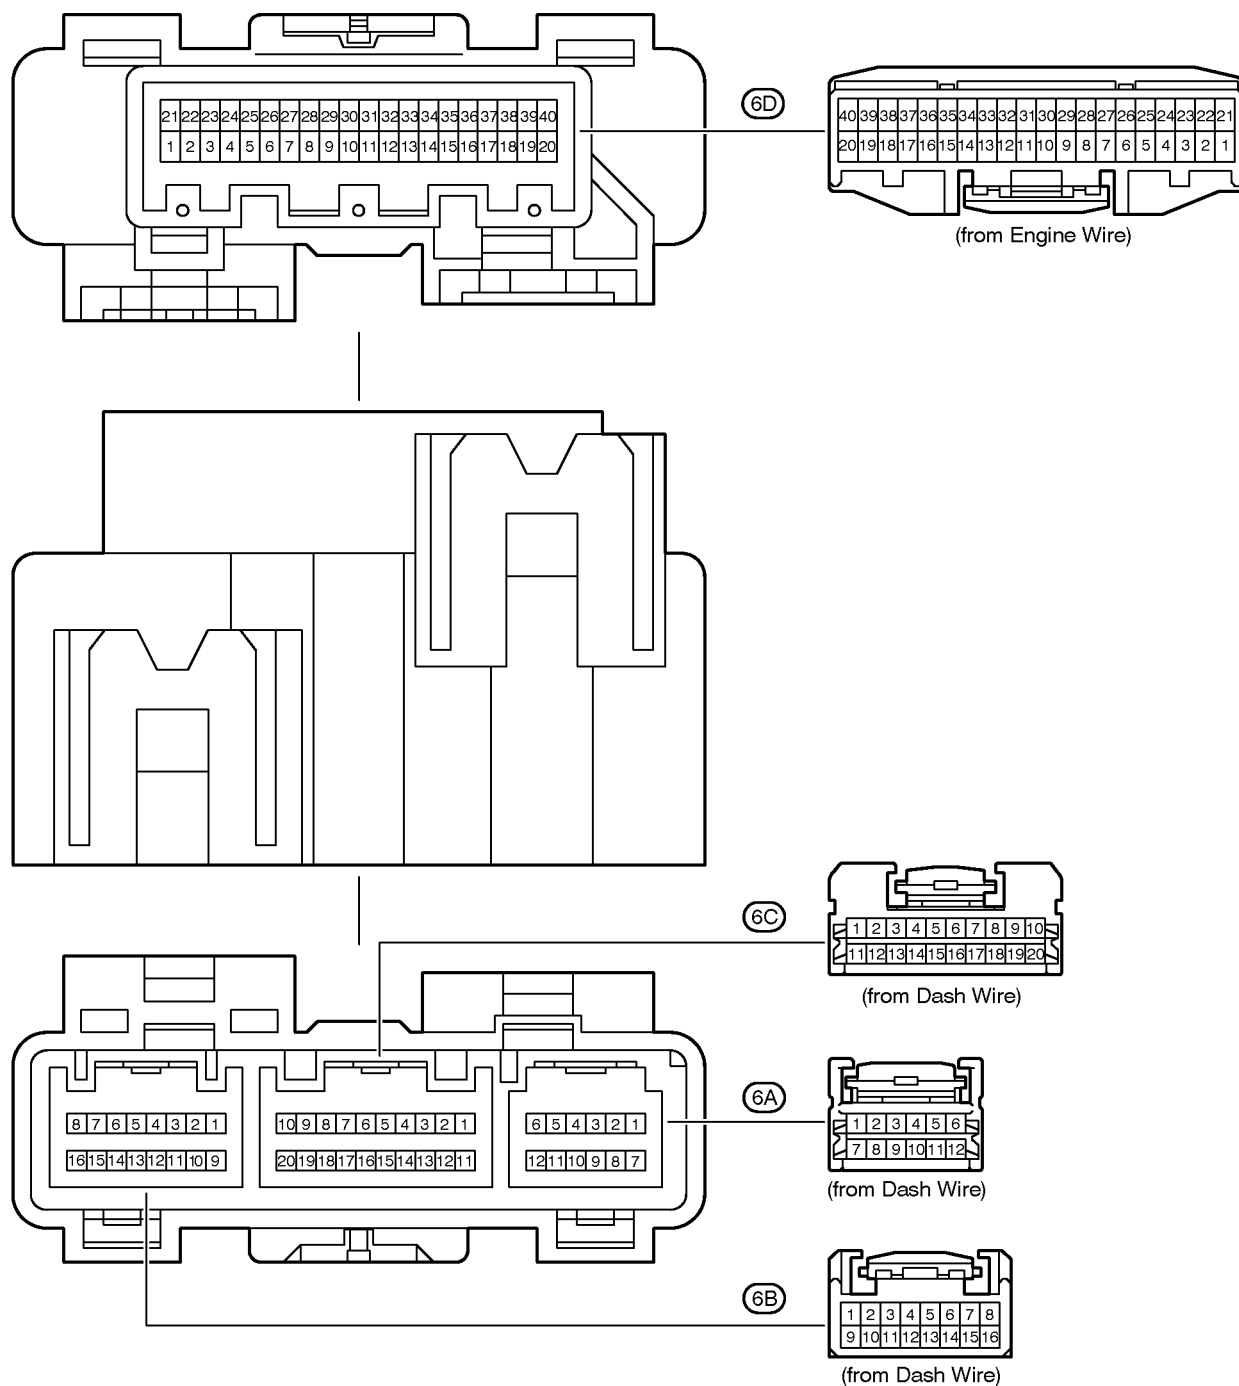


F RELAY LOCATIONS

[J/B No.6 Inner Circuit]

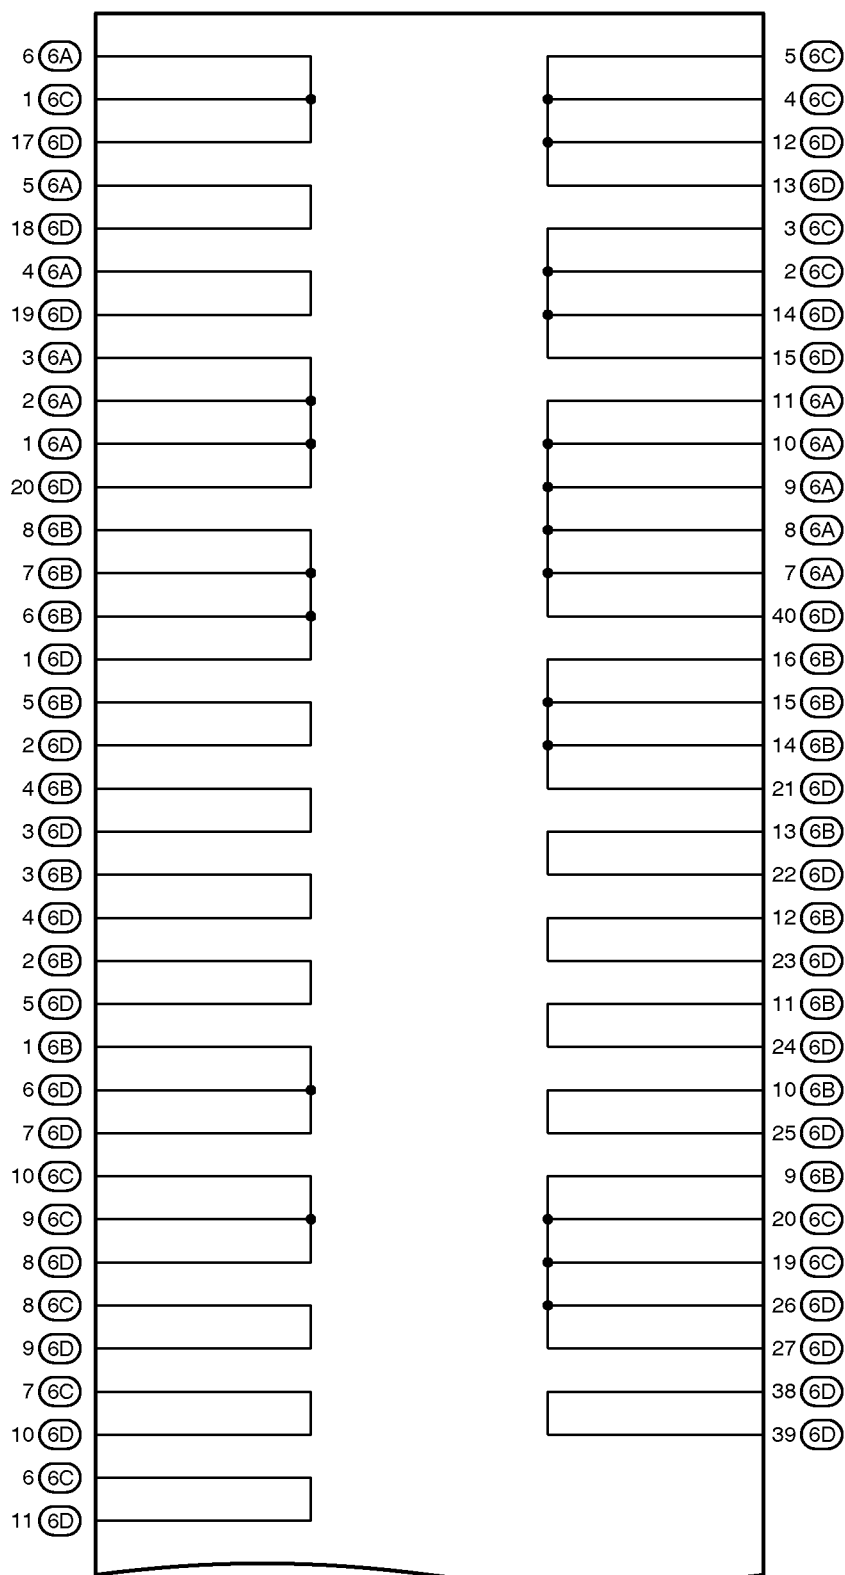

(Cont. next page)


(Cont'd)

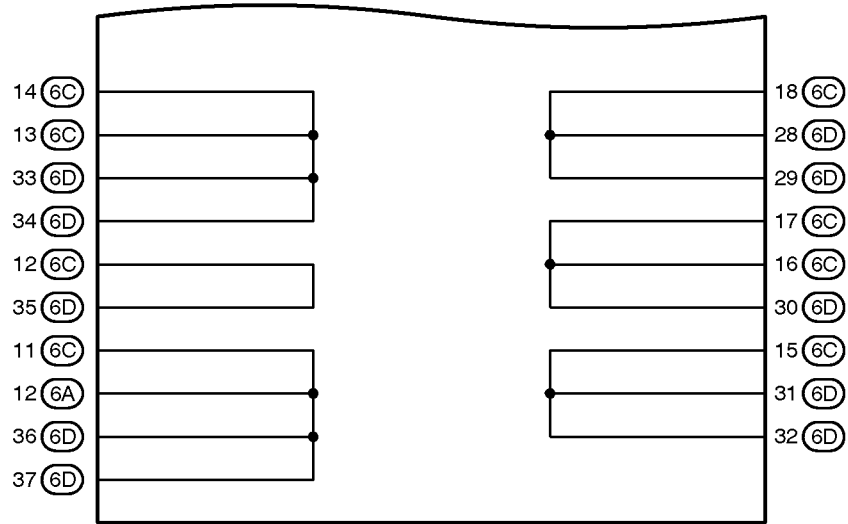

F RELAY LOCATIONS


○ : J/B No.7

Behind the Glove Box (See Page 20)

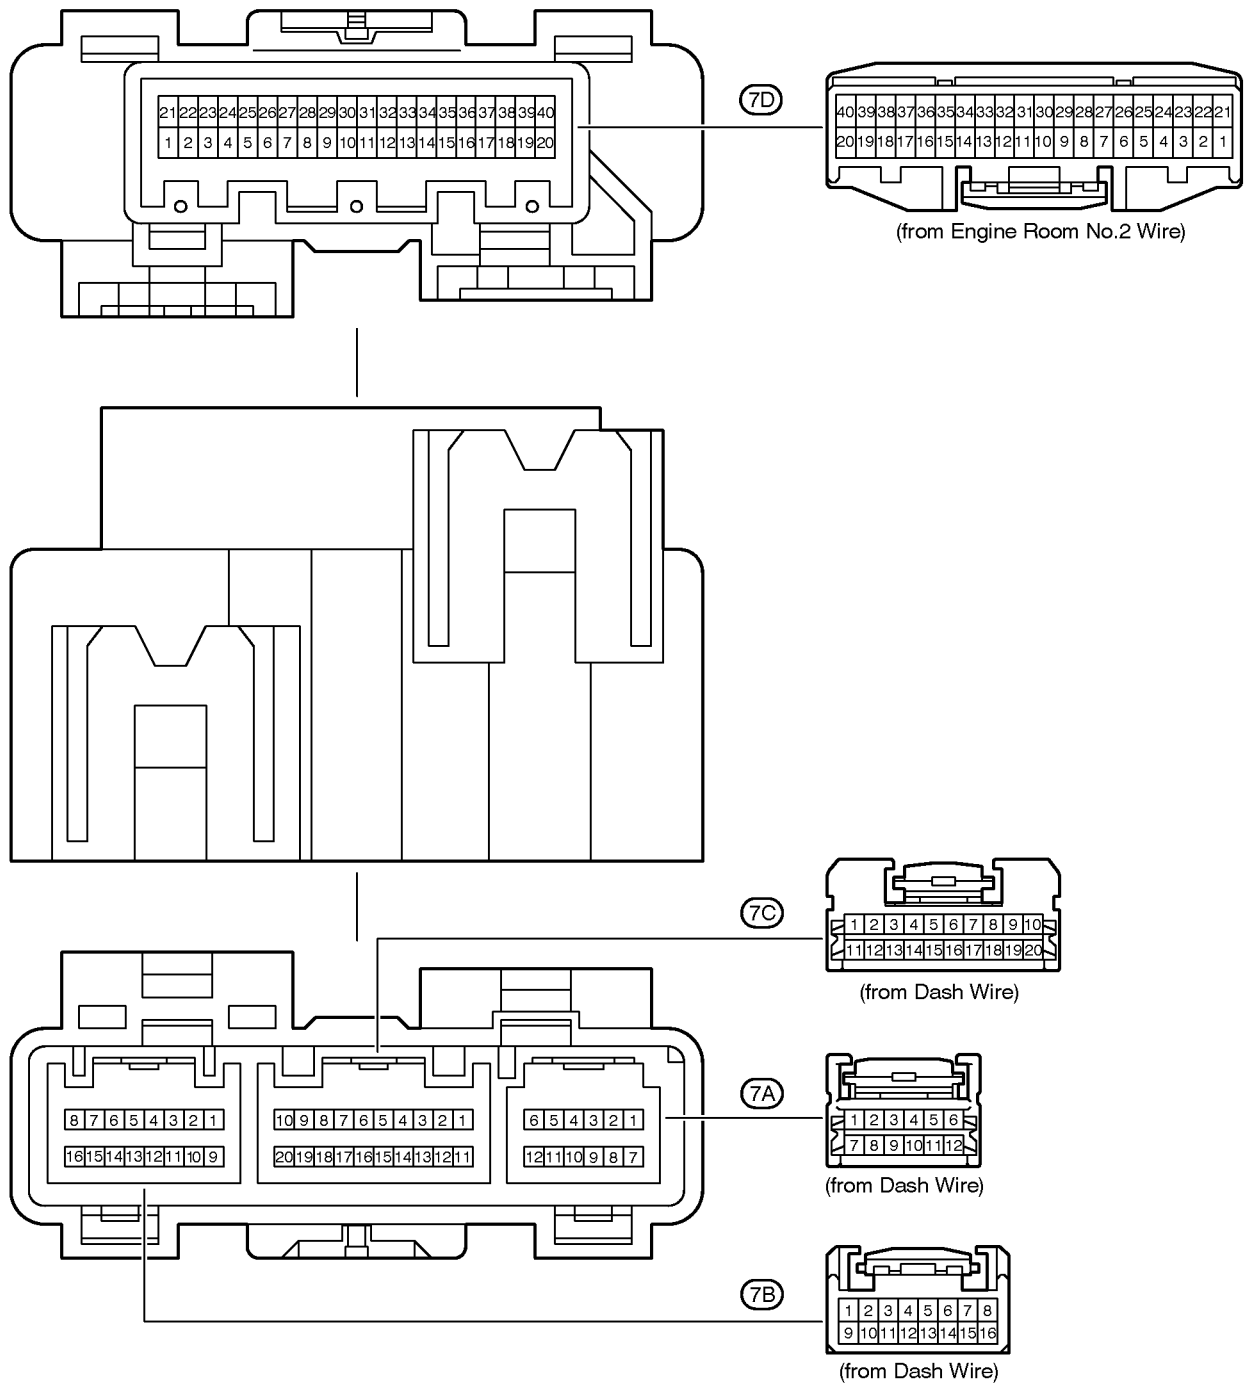

F RELAY LOCATIONS

[J/B No.7 Inner Circuit]

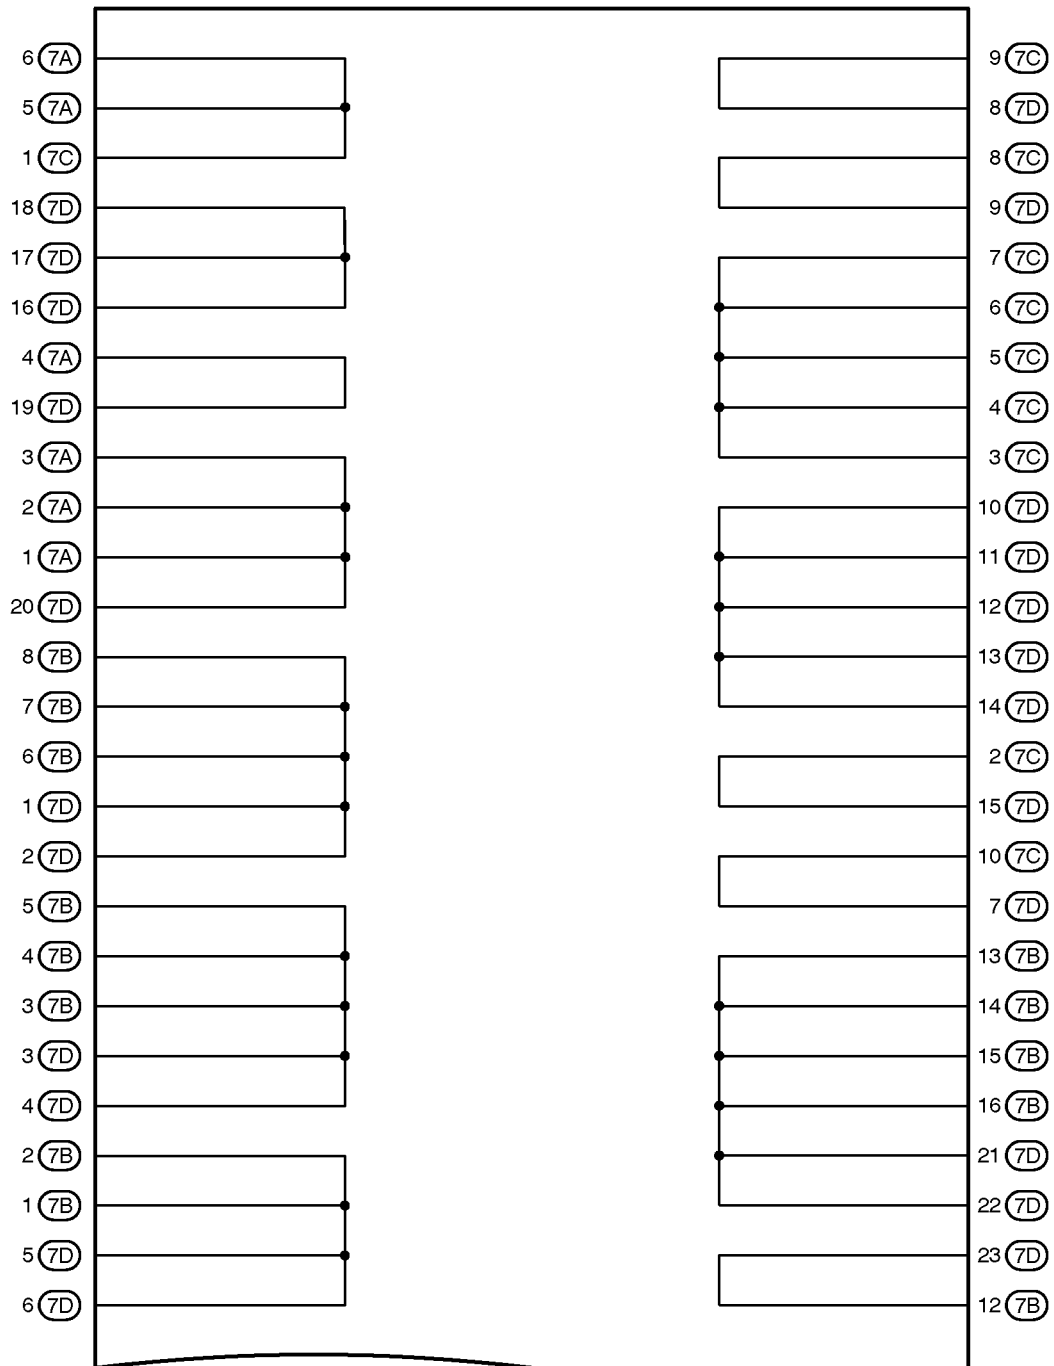

(Cont. next page)

(Cont'd)

24 (7D)			33 (7D)
11 (7B)			14 (7C)
25 (7D)			34 (7D)
10 (7B)		•	13 (7C)
26 (7D)		•	35 (7D)
9 (7B)		•	36 (7D)
27 (7D)		•	12 (7C)
20 (7C)	•		37 (7D)
28 (7D)	•		11 (7C)
19 (7C)	•	•	12 (7A)
29 (7D)	•	•	38 (7D)
18 (7C)			11 (7A)
30 (7D)			39 (7D)
17 (7C)			10 (7A)
31 (7D)		•	40 (7D)
16 (7C)		•	9 (7A)
32 (7D)		•	8 (7A)
15 (7C)			7 (7A)