


# Back-Up Light

From Power Source System (See Page 94)

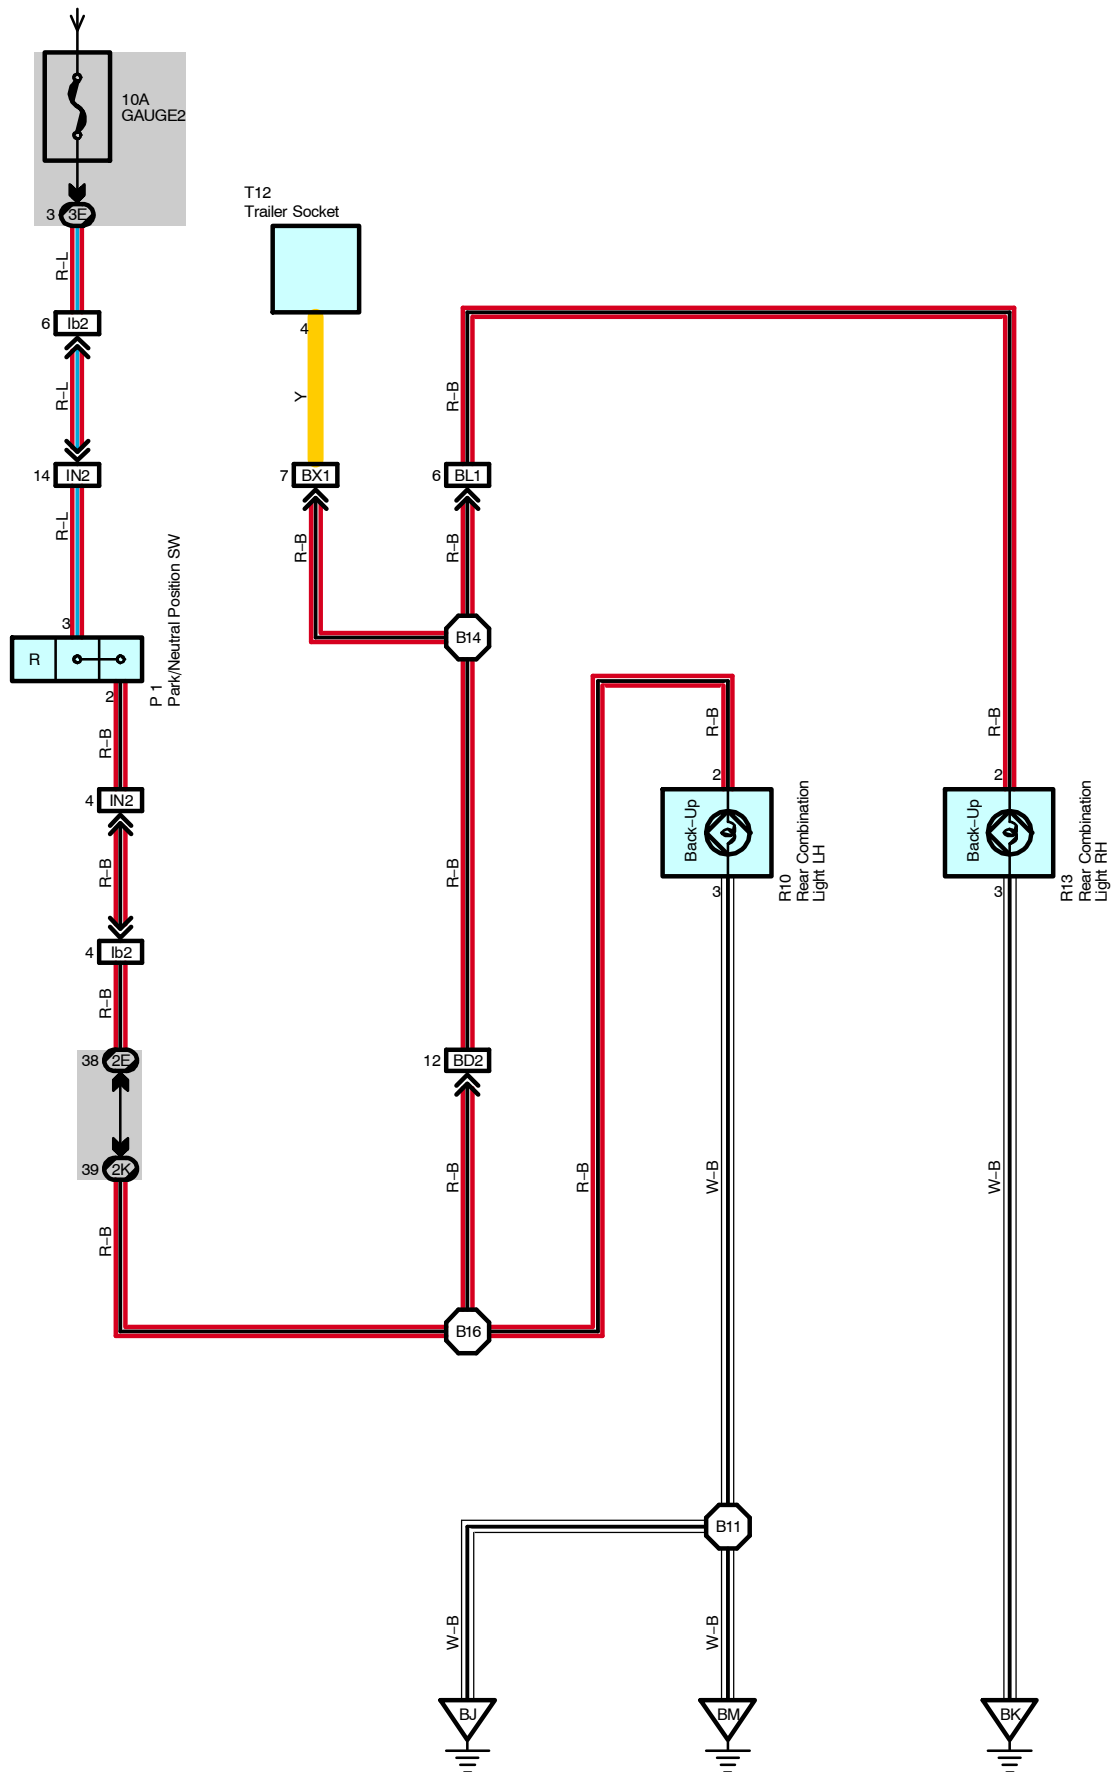

## Service Hints

### P1 Park/Neutral Position SW

3-2 : Closed with shift lever at R position

### : Parts Location

| Code | See Page           | Code | See Page           | Code | See Page |
|------|--------------------|------|--------------------|------|----------|
| P1   | <a href="#">69</a> | R13  | <a href="#">73</a> |      |          |
| R10  | <a href="#">73</a> | T12  | <a href="#">73</a> |      |          |

### : Junction Block and Wire Harness Connector

| Code | See Page           | Junction Block and Wire Harness (Connector Location)   |
|------|--------------------|--------------------------------------------------------|
| 2E   | <a href="#">28</a> | Dash Wire and Cowl Side J/B LH (Left Kick Panel)       |
| 2K   | <a href="#">28</a> | Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel) |
| 3E   | <a href="#">40</a> | Dash Wire and Cowl Side J/B RH (Right Kick Panel)      |

### : Connector Joining Wire Harness and Wire Harness

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|--------------------|----------------------------------------------------------------------------|
| IN2  | <a href="#">80</a> | Engine Wire and Dash Wire (Behind the Glove Box)                           |
| Ib2  | <a href="#">84</a> | Dash Wire and Dash Wire (Behind the Combination Meter)                     |
| BD2  | <a href="#">86</a> | Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)         |
| BL1  | <a href="#">88</a> | Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember) |
| BX1  | <a href="#">88</a> | Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)  |

### : Ground Points

| Code | See Page           | Ground Points Location                      |
|------|--------------------|---------------------------------------------|
| BJ   | <a href="#">86</a> | Under the Driver's Seat                     |
| BK   | <a href="#">86</a> | Front Side Under the Front Passenger's Seat |
| BM   | <a href="#">86</a> | Left Rear Side Quarter Panel                |

### : Splice Points

| Code | See Page           | Wire Harness with Splice Points | Code | See Page           | Wire Harness with Splice Points |
|------|--------------------|---------------------------------|------|--------------------|---------------------------------|
| B11  | <a href="#">88</a> | Floor No.1 Wire                 | B16  | <a href="#">88</a> | Floor No.3 Wire                 |
| B14  | <a href="#">88</a> | Floor No.2 Wire                 |      |                    |                                 |