

TOYOTA LAND CRUISER

PARTS CATALOG

No. 2

TOYOTA MOTOR

CONTENTS

GENERAL INFORMATION	Page 1
SPECIFICATIONS	Page 3 Thru 5
ILLUSTRATION INDEX	Page 11 Thru 17
ENGINE GROUP	Page 23
FUEL GROUP	Page 25 Thru 27
CHASSIS GROUP	Page 35 Thru 67
ELECTRICAL GROUP	Page 79 Thru 123
BODY GROUP	Page 135 Thru 271
ALPHABETICAL INDEX	Page 293 Thru 314
MANUFACTURER'S NUMERICAL INDEX	Page 315 Thru 326
STANDARD HARDWARE INDEX	Page 327 Thru 331

EXHIBIT

Page 1
Page 2
Page 3
Page 4
Page 5
Page 6
Page 7
Page 8
Page 9
Page 10
Page 11
Page 12
Page 13
Page 14
Page 15
Page 16
Page 17
Page 18
Page 19
Page 20
Page 21
Page 22
Page 23
Page 24
Page 25
Page 26
Page 27
Page 28
Page 29
Page 30
Page 31
Page 32
Page 33
Page 34
Page 35
Page 36
Page 37
Page 38
Page 39
Page 40
Page 41
Page 42
Page 43
Page 44
Page 45
Page 46
Page 47
Page 48
Page 49
Page 50
Page 51
Page 52
Page 53
Page 54
Page 55
Page 56
Page 57
Page 58
Page 59
Page 60
Page 61
Page 62
Page 63
Page 64
Page 65
Page 66
Page 67
Page 68
Page 69
Page 70
Page 71
Page 72
Page 73
Page 74
Page 75
Page 76
Page 77
Page 78
Page 79
Page 80
Page 81
Page 82
Page 83
Page 84
Page 85
Page 86
Page 87
Page 88
Page 89
Page 90
Page 91
Page 92
Page 93
Page 94
Page 95
Page 96
Page 97
Page 98
Page 99
Page 100

Page 1
Page 2
Page 3
Page 4
Page 5
Page 6
Page 7
Page 8
Page 9
Page 10
Page 11
Page 12
Page 13
Page 14
Page 15
Page 16
Page 17
Page 18
Page 19
Page 20
Page 21
Page 22
Page 23
Page 24
Page 25
Page 26
Page 27
Page 28
Page 29
Page 30
Page 31
Page 32
Page 33
Page 34
Page 35
Page 36
Page 37
Page 38
Page 39
Page 40
Page 41
Page 42
Page 43
Page 44
Page 45
Page 46
Page 47
Page 48
Page 49
Page 50
Page 51
Page 52
Page 53
Page 54
Page 55
Page 56
Page 57
Page 58
Page 59
Page 60
Page 61
Page 62
Page 63
Page 64
Page 65
Page 66
Page 67
Page 68
Page 69
Page 70
Page 71
Page 72
Page 73
Page 74
Page 75
Page 76
Page 77
Page 78
Page 79
Page 80
Page 81
Page 82
Page 83
Page 84
Page 85
Page 86
Page 87
Page 88
Page 89
Page 90
Page 91
Page 92
Page 93
Page 94
Page 95
Page 96
Page 97
Page 98
Page 99
Page 100

GENERAL INFORMATION

SCOPE This parts catalog is a supplement to our parts catalog for the Toyota Land Cruiser Model FJ40, 43 (Running No 93629 65) to cover all the special parts exclusively used for the following models

MODEL FJ40V TOYOTA LAND CRUISER, Hard Top, RHD

MODEL FJ40LV TOYOTA LAND CRUISER, Hard Top, LHD

MODEL FJ45V TOYOTA LAND CRUISER, Utility Wagon, RHD

MODEL FJ45LV TOYOTA LAND CRUISER, Utility Wagon, LHD

ASSEMBLIES AND SUBASSEMBLIES Only the component parts of assemblies and subassemblies are shown with key letter in the plates Assemblies and subassemblies are listed in the catalog with code letters of the items listed below the headings to show component parts

ASTERISKS (*) Items shown with asterisks (*) after their Part Number will not be supplied individually as service replacement parts. Assemblies or subassemblies of which these items are component parts must be requested

MODEL COLUMN Items common to FJ40V (Hard Top RHD), FJ40LV (Hard Top LHD), FJ45V (Utility Wagon RHD) and FJ45LV (Utility Wagon LHD) are shown with abbreviations 40V LV 45V and LV

LOCATIONAL TERMS—The terms “left” and “right” and “front” and “rear” are established with reference to the operator sitting in the driver's seat “Right” indicates the direction to the right of the operator , “Left” the direction to the left of the operator “Front” indicates the direction toward the radiator end of the vehicle , “Rear” the direction toward the back of the vehicle

DIMENSIONS All parts are manufactured in accordance with metric standards Dimensions shown throughout this catalog are in millimeters unless otherwise designated.

PART NUMBER ALTERNATION The revised Part Numbers will be in the newly issued insertion sheets or in the Parts & Accessories NEWS

FIG.—1 TOYOTA LAND CRUISER, MODELS FJ40V AND FJ40LV
(Hard Top)



P 0447



P 0448

MODELS FJ40V AND FJ40LV, TOYOTA LAND CRUISER SPECIFICATIONS

Length, overall (mm.)	3,870 (151.2 in.)
Width, overall (mm.)	1,665 (65.6 in.)
Height, overall (mm.)	1,950 (76.8 in.)
Wheelbase (mm.)	2,285 (90.2 in.)
Tread, front (mm.)	1,404 (55.3 in.)
Tread, rear (mm.)	1,400 (55.1 in.)
Ground Clearance (mm.)	200 (7.9 in.)
Overhang (mm.) (c rear axle to rear end of body)	710
Chassis Weight (kg.)	990
Net Vehicle Weight (kg.)	1,550 (3,410 lb.)
Cab Seating Capacity	3 persons or 7 persons
Maximum Payload (kg.)	400 (880 lb.) or 0
Maximum Allowable Speed (km. hr.)	135 (85 mph)
Gradeability	46
Minimum Turning Radius (m.)	5.3 (17.4 ft)
Maximum Braking Distance (m.) Initial Speed 50km. hr.)	12
Fuel Tank Capacity (liters)	70 (18.5 US gal.)
Tire Size	7.10-15 4 ply Optional 7.60-15 6 ply
Engine	Model F (135 hp 3,800 r.p.m. SAE) gasoline.
Clutch	Dry single plate with torsion rubbers.
Transmission	3-speed, 2nd and 3rd gears synchromesh.
Transfer	2-speed, helical gear sliding type.
Propeller Shaft	Two tubular type shafts w four spider type universal joint.
Rear Axle	Semi-floating, hypoid gear drive.
Front Axle	Full-floating, hypoid gear drive.
Steering Gear	Worm and sector roller type.
Brake, service	Hydraulic brake, operating all wheels.
Brake, parking	Mechanical brake operating on propeller shaft.
Suspension, front	Semi-elliptic leaf springs and double acting hydraulic shock absorbers.
Suspension, rear	Semi-elliptic leaf springs, torsion stabilizer and double acting hydraulic shock absorbers.
Frame	Girder type, channel section.

FIG.—2 TOYOTA LAND CRUISER, MODELS FJ45V AND FJ45LV
(Utility Wagon)



P 0449



P 0450

MODELS FJ45V AND FJ45LV, TOYOTA LAND CRUISER

SPECIFICATIONS

Length, overall (mm.)	4,660 (183.4 in.)
Width, overall (mm.)	1,720 (67.7 in.)
Height, overall (mm.)	1,770 (69.7 in.)
Wheelbase (mm.)	2,650 (104.3 in.)
Tread, front (mm.)	1,404 (55.3 in.)
Tread, rear (mm.)	1,400 (55.1 in.)
Ground Clearance (mm.)	210 (8.3 in.)
Overhang (mm.) (c/l rear axle to rear end of body)	1,260
Chassis Weight, bare (kg.)	1,070
Net Vehicle Weight (kg.)	1,850 (4,070 lb.)
Cab Seating Capacity	3 persons or 6 persons
Maximum Payload (kg.)	600 (1,320 lb.) or 400 (880 lb.)
Maximum Allowable Speed (km. hr.)	120 (75 mph)
Gradeability	34°
Minimum Turning Radius (m.)	6.2 (20.3 ft)
Maximum Braking Distance (m.) (Initial Speed 50km. hr.)	15
Fuel Tank Capacity (liters)	70 (18.5 US gal.)
Tire Size, front	7.00-15 6 ply rating
Tire Size, rear	7.00-15 8 ply rating
Engine	Model F (135 hp, 3,800 r.p.m SAE) gasoline.
Clutch	Dry single plate with torsion rubbers.
Transmission	3-speed, 2nd and 3rd gears synchromesh.
Transfer	2-speed, helical gear sliding type.
Propeller Shaft	Two tubular type shafts w four spider type universal joint.
Rear Axle	Semi-floating, hypoid gear drive.
Front Axle	Full-floating, hypoid gear drive.
Steering Gear	Worm and sector roller type.
Brake, service	Hydraulic brake, operating all wheels.
Brake, parking	Mechanical brake operating on propeller shaft.
Suspension, front	Semi-elliptic leaf springs and double acting hydraulic shock absorbers.
Suspension, rear	Progressive type semi-elliptic leaf springs, torsion stabilizer and double acting hydraulic shock absorbers.
Frame	Girder type, channel section.

SPACE FOR MEMO

SUMMARY	FIGURE NUMBER	PAGE
TOYOTA LAND CRUISER, Hard Top MODELS		
FJ40V AND FJ40LV	1	2
TOYOTA LAND CRUISER, Utility Wagon MODELS		
FJ45V AND FJ45LV	2	4
ENGINE GROUP		
MODEL F ENGINE SECTION	(Refer Fig — 11 of Parts Catalog Model FJ40)	
ENGINE ASSEMBLY	(Refer Fig 12 of Parts Catalog Model FJ40)	
ENGINE ASSEMBLY (For U S A)	(Refer Fig — 13 of Parts Catalog Model FJ40)	
CYLINDER HEAD & MANIFOLD	(Refer Fig — 14 of Parts Catalog Model FJ40)	
CYLINDER BLOCK & TIMING GEAR COVER	(Refer Fig 15 of Parts Catalog Model FJ40)	
CRANKSHAFT & CONNECTING ROD	(Refer Fig 16 of Parts Catalog Model FJ40)	
CAMSHAFT & VALVE	(Refer Fig 17 of Parts Catalog Model FJ40)	
OIL PUMP	(Refer Fig 18 of Parts Catalog Model FJ40)	
OIL FILTER	(Refer Fig 19 of Parts Catalog Model FJ40)	
OIL DELIVERY PIPE & OIL PRESSURE REGULATOR		
(FJ40V, 45V)	(Refer Fig 20 of Parts Catalog Model FJ40)	
OIL DELIVERY PIPE & OIL PRESSURE REGULATOR		
(FJ40LV, 45LV)	(Refer Fig — 21 of Parts Catalog Model FJ40)	
WATER PUMP & WATER OUTLET	(Refer Fig 22 of Parts Catalog Model FJ40)	
RADIATOR & FAN	(Refer Fig 23 of Parts Catalog Model FJ40)	
EXHAUST PIPE & MUFFLER (FJ40V)	(Refer Fig 24 of Parts Catalog Model FJ40)	
EXHAUST PIPE & MUFFLER (FJ40LV)	(Refer Fig 25 of Parts Catalog Model FJ40)	
EXHAUST PIPE & MUFFLER (FJ45V, 45LV)	5	22
AIR CLEANER	(Refer Fig 26 of Parts Catalog Model FJ40)	
AIR CLEANER (OPT)	(Refer Fig — 27 of Parts Catalog Model FJ40)	
ANTI-SMOG DEVICE (OPT, For U S A)	(Refer Fig 28 of Parts Catalog Model FJ40)	
FUEL GROUP		
FUEL PIPE & VACUUM PIPE	(Refer Fig 31 of Parts Catalog Model FJ40)	
CARBURETOR	(Refer Fig 32 of Parts Catalog Model FJ40)	
FUEL PUMP	(Refer Fig — 33 of Parts Catalog Model FJ40)	

SUMMARY	FIGURE NUMBER	PAGE
FUEL FILTER	(Refer Fig - 34 of Parts Catalog Model FJ40)	
FUEL TANK & BAND (FJ40V, 40LV)	(Refer Fig 35 of Parts Catalog Model FJ40)	
FUEL TANK & BAND (FJ45V, 45LV)	8	24, 26
AUXILIARY FUEL TANK (OPT)	(Refer Fig 36 of Parts Catalog Model FJ40)	
CHASSIS GROUP		
CLUTCH SECTION	(Refer Fig 41 of Parts Catalog Model FJ40)	
CLUTCH & RELEASE CYLINDER	(Refer Fig 42 of Parts Catalog Model FJ40)	
CLUTCH PEDAL & BRAKE PEDAL (FJ40V, 40LV)	(Refer Fig 43 of Parts Catalog Model FJ40)	
CLUTCH PEDAL & BRAKE PEDAL (FJ45V, 45LV)	11	37
MASTER CYLINDER	(Refer Fig 44 of Parts Catalog Model FJ40)	
TRANSMISSION & TRANSFER SECTION	(Refer Fig —45 of Parts Catalog Model FJ40)	
TRANSMISSION SECTION (OPT)	(Refer Fig 46 of Parts Catalog Model FJ40)	
TRANSMISSION CASE & COVER (FJ40V, 45V)	(Refer Fig 47 of Parts Catalog Model FJ40)	
TRANSMISSION CASE & COVER (FJ40LV, 45LV)	(Refer Fig —48 of Parts Catalog Model FJ40)	
TRANSMISSION CASE & COVER (OPT)	(Refer Fig —49 of Parts Catalog Model FJ40)	
TRANSMISSION GEAR	(Refer Fig —50 of Parts Catalog Model FJ40)	
CONTROL SHAFT & LINK (FJ40V, 45V)	(Refer Fig 51 of Parts Catalog Model FJ40)	
CONTROL SHAFT & LINK (FJ40LV, 45LV)	(Refer Fig 52 of Parts Catalog Model FJ40)	
TRANSFER CASE & COVER	(Refer Fig 53 of Parts Catalog Model FJ40)	
TRANSFER GEAR SHIFT FORK	(Refer Fig 55 of Parts Catalog Model FJ40)	
TRANSFER SHIFT LEVER & LINK	(Refer Fig 57 of Parts Catalog Model FJ40)	
TRANSFER SHIFT LEVER & LINK (OPT)	(Refer Fig 58 of Parts Catalog Model FJ40)	
DIAPHRAGM CYLINDER & TRANSFER FRONT DRIVE FORK	(Refer Fig —59 of Parts Catalog Model FJ40)	
TRANSFER FRONT DRIVE CONTROL	(Refer Fig —60 of Parts Catalog Model FJ40)	
FRONT POWER TAKE-OFF SECTION (OPT)	(Refer Fig 61 of Parts Catalog Model FJ40)	
FRONT POWER TAKE-OFF (OPT)	(Refer Fig 62 of Parts Catalog Model FJ40)	
CENTER POWER TAKE-OFF SECTION (OPT)	(Refer Fig 63 of Parts Catalog Model FJ40)	
CENTER POWER TAKE-OFF (OPT)	(Refer Fig 64 of Parts Catalog Model FJ40)	
WINCH (OPT)	(Refer Fig 65 of Parts Catalog Model FJ40)	
WINCH DRIVE SHAFT & LEVER (OPT)	(Refer Fig 66 of Parts Catalog Model FJ40)	
INTERMEDIATE & REAR DRIVE SHAFT (FJ40V, 40LV, OPT)	(Refer Fig —67 of Parts Catalog Model FJ40)	

SUMMARY	FIGURE NUMBER	PAGE
PROPELLER SHAFT & UNIVERSAL JOINT (FJ40V, 40LV)	(Refer Fig — 68 of Parts Catalog Model FJ40)	
PROPELLER SHAFT & UNIVERSAL JOINT (FJ45V, 45LV)	12	38, 40
REAR AXLE SECTION	(Refer Fig — 70 of Parts Catalog Model FJ40)	
REAR AXLE HOUSING & DIFFERENTIAL (FJ40V, 40LV)	(Refer Fig — 71 of Parts Catalog Model FJ40)	
REAR AXLE HOUSING & DIFFERENTIAL (FJ45V, 45LV)	13	42, 44, 46, 48
REAR AXLE SHAFT & DISC WHEEL	(Refer Fig — 73 of Parts Catalog Model FJ40)	
FRONT AXLE SECTION	(Refer Fig — 74 of Parts Catalog Model FJ40)	
FRONT AXLE HOUSING & DIFFERENTIAL	(Refer Fig — 76 of Parts Catalog Model FJ40)	
FRONT AXLE SHAFT & DISC WHEEL	(Refer Fig — 78 of Parts Catalog Model FJ40)	
DRAG LINK & TIE ROD (FJ40V, 45V)	(Refer Fig — 79 of Parts Catalog Model FJ40)	
DRAG LINK & TIE ROD (FJ40LV, 45LV)	(Refer Fig — 80 of Parts Catalog Model FJ40)	
STEERING SECTION	(Refer Fig — 81 of Parts Catalog Model FJ40)	
STEERING COLUMN & HOUSING (FJ40V, 45V)	(Refer Fig — 82 of Parts Catalog Model FJ40)	
STEERING COLUMN & HOUSING (FJ40LV, 45LV)	14	50, 52, 54
STEERING WHEEL	(Refer Fig — 84 of Parts Catalog Model FJ40)	
PARKING BRAKE	(Refer Fig — 85 of Parts Catalog Model FJ40)	
REAR BACKING PLATE & WHEEL CYLINDER	(Refer Fig — 86 of Parts Catalog Model FJ40)	
FRONT BACKING PLATE & WHEEL CYLINDER	(Refer Fig — 87 of Parts Catalog Model FJ40)	
OIL BRAKE TUBE & CLAMP (FJ40V)	(Refer Fig — 88 of Parts Catalog Model FJ40)	
OIL BRAKE TUBE & CLAMP (FJ40LV)	(Refer Fig — 89 of Parts Catalog Model FJ40)	
OIL BRAKE TUBE & CLAMP (FJ45V)	15	56, 58
OIL BRAKE TUBE & CLAMP (FJ45LV)	16	60, 62
FRONT SPRING & SHOCK ABSORBER	(Refer Fig — 90 of Parts Catalog Model FJ40)	
REAR SPRING & SHOCK ABSORBER (FJ40V, 40LV)	(Refer Fig — 91 of Parts Catalog Model FJ40)	
REAR SPRING & SHOCK ABSORBER (FJ45V, 45LV)	17	64, 66
ELECTRICAL GROUP		
IGNITION COIL & BUTTERY	(Refer Fig — 101 of Parts Catalog Model FJ40)	
ALTERNATOR	(Refer Fig — 102 of Parts Catalog Model FJ40)	
ALTERNATOR (OPT)	(Refer Fig — 103 of Parts Catalog Model FJ40)	
STATER	(Refer Fig — 104 of Parts Catalog Model FJ40)	
DISTRIBUTOR	(Refer Fig — 105 of Parts Catalog Model FJ40)	

ILLUSTRATION INDEX

SUMMARY	FIGURE NUMBER	PAGE
COMBINATION METER & SWITCH	20	80, 82
WIRING HARNESS & CLAMP (FJ40V)	(Refer Fig 108 of Parts Catalog Model FJ40)	
WIRING HARNESS & CLAMP (FJ40LV)	(Refer Fig 109 of Parts Catalog Model FJ40)	
WIRING HARNESS & CLAMP (FJ45V) -Old	21	84
WIRING HARNESS & CLAMP (FJ45V)	22	86
WIRING HARNESS & CLAMP (FJ45LV) -Old	23	88
WIRING HARNESS & CLAMP (FJ45LV)	24	90
LAMP & SWITCH (FJ40V)	(Refer Fig 110 of Parts Catalog Model FJ40)	
LAMP & SWITCH (FJ40LV)	(Refer Fig 111 of Parts Catalog Model FJ40)	
LAMP & SWITCH (FJ45V, 45LV)	25	92, 94
HEADLAMP & REAR COMBINATION LAMP	(Refer Fig 113 of Parts Catalog Model FJ40)	
FRONT TURN SIGNAL LAMP & LICENSE PLATE LAMP (FJ40V, 40LV)	(Refer Fig 114 of Parts Catalog Model FJ40)	
FRONT TURN SIGNAL LAMP & ROOM LAMP (FJ45V, 45LV)	26	96
REAR COMBINATION LAMP & INSPECTION LAMP (FJ45V, 45LV)	27	98, 100
FOG LAMP (OPT)	(Refer Fig 115 of Parts Catalog Model FJ40)	
HORN & HORN RELAY (Densa)	(Refer Fig 116 of Parts Catalog Model FJ40)	
HORN & HORN RELAY (Maruko)	(Refer Fig 117 of Parts Catalog Model FJ40)	
WINDSHIELD WIPER (FJ45V, 45LV)	28	102, 104
WINDSHIELD WIPER (FJ45LV, For U.S.A.)	29	106, 108
WINDSHIELD WIPER MOTOR (FJ45LV, For U.S.A.)	30	110, 112
HEATER & ACCESSORY (FJ45V, OPT)	31	114
HEATER & ACCESSORY (For Front Seat) (FJ40LV, 45LV, OPT)	32	116, 118, 120
HEATER & ACCESSORY (For Rear Seat) (FJ40LV, 45LV, OPT)	33	122
BODY GROUP		
ACCELERATOR LINK (FJ40V, 45V)	(Refer Fig 141 of Parts Catalog Model FJ40)	
ACCELERATOR LINK (FJ40LV, 45LV)	(Refer Fig 142 of Parts Catalog Model FJ40)	
FRAME & BUMPER (FJ40V, 40LV)	(Refer Fig 143 of Parts Catalog Model FJ40)	
FRAME & BUMPER (FJ45V, 45LV)	35	136, 138, 140

SUMMARY	FIGURE NUMBER	PAGE
FRAME & BUMPER (FJ45V, 45LV, OPT)	36	142, 144, 146
HOOD & RADIATOR GRILLE	37	148, 150 152
RADIATOR SUPPORT, COWL & STEP (FJ40V, 40LV)	38	154, 156
RADIATOR SUPPORT, COWL & STEP (FJ45V, 45LV)	39	158
INSTRUMENT PANEL & GROVE COMPARTMENT	40	160, 162
VENTILATOR (FJ40V, 40LV)	(Refer Fig 149 of Parts Catalog Model FJ40)	
FRONT WINDOW & WINDSHIELD WIPER (FJ40V)	41	164, 166
FRONT WINDOW & WINDSHIELD WIPER (FJ40LV)	42	168 170
REAR BODY LOWER (FJ40V, 40LV)	43	172, 174, 176, 178
REAR BODY UPPER (FJ40V, 40LV)	44	180, 182
SPARE WHEEL CARRIER (FJ40V)	(Refer Fig 159 of Parts Catalog Model FJ40)	
SPARE WHEEL CARRIER (FJ40LV)	(Refer Fig 160 of Parts Catalog Model FJ40)	
REAR UPPER DOOR (FJ40V, 40LV)	45	184, 186
DOOR & WINDOW GLASS (FJ40V, 40LV)	46	188, 190
DOOR LOCK & WINDOW REGULATOR (FJ40V, 40LV)	47	192, 194
MARK & FLOOR MAT	(Refer Fig 163 of Parts Catalog Model FJ40)	
SEAT (FJ40V)	(Refer Fig 164 of Parts Catalog Model FJ40)	
SEAT (FJ40LV)	(Refer Fig 165 of Parts Catalog Model FJ40)	
SEAT (FJ40V, 40LV)	(Refer Fig 166 of Parts Catalog Model FJ40)	
MAIN BODY (FJ45V, 45LV)	48	196
VENTILATOR (FJ45V, 45LV)	49	198
VENTILATOR FJ45LV, For U S A	50	200
FLOOR & SPARE WHEEL CARRIER FJ45V, 45LV)	51	202, 204, 206
SIDE MEMBER FJ45V, 45LV)	52	208, 210, 212, 214
WINDOW GLASS & PROTECTOR (FJ45V, 45LV)	53	216, 218
FRONT DOOR & WINDOW GLASS (FJ45V, 45LV)	54	220, 222
FRONT DOOR & WINDOW GLASS (FJ45L, For U S A)	55	224, 226, 228
FRONT DOOR LOCK & WINDOW REGULATOR (FJ45V, 45LV)	56	230, 232, 234
REAR DOOR & WINDOW GLASS (FJ45V, 45LV)	57	236, 238
REAR DOOR LOCK & WINDOW REGULATOR (FJ45V, 45LV)	58	240, 242
REAR GATE & GLASS (FJ45V, 45LV)	59	224
REAR GATE LOCK (FJ45V, 45LV)	60	246, 248, 250

ILLUSTRATION INDEX


SUMMARY	FIGURE NUMBER	PAGE
BACK DOOR & WINDOW GLASS (FJ45V, 45LV, OPT)	61	252
BACK DOOR LOCK (FJ45V, 45LV, OPT)	62	254, 256
ROOF SILENCER & MAT (FJ45V, 45LV)	63	258, 260
ROOF SILENCER & MAT (FJ45LV, For U.S.A)	64	262, 264
SEAT & SEAT TRUCK (FJ45V, 45LV)	65	226, 268, 270

TOOL GROUP

STANDARD TOOL	(Refer Fig - 191 of Parts Catalog Model FJ40)
SPECIAL SERVICE TOOL	(Refer Fig 192 of Parts Catalog Model FJ40)
SPECIAL SERVICE TOOL	(Refer Fig 193 of Parts Catalog Model FJ40)
SPECIAL SERVICE TOOL	(Refer Fig 194 of Parts Catalog Model FJ40)
SPECIAL SERVICE TOOL	(Refer Fig 195 of Parts Catalog Model FJ40)
SPECIAL SERVICE TOOL	(Refer Fig 196 of Parts Catalog Model FJ40)

CHASSIS GROUP

FIG.—11 CLUTCH PEDAL & BRAKE PEDAL (FJ45V, 45LV)

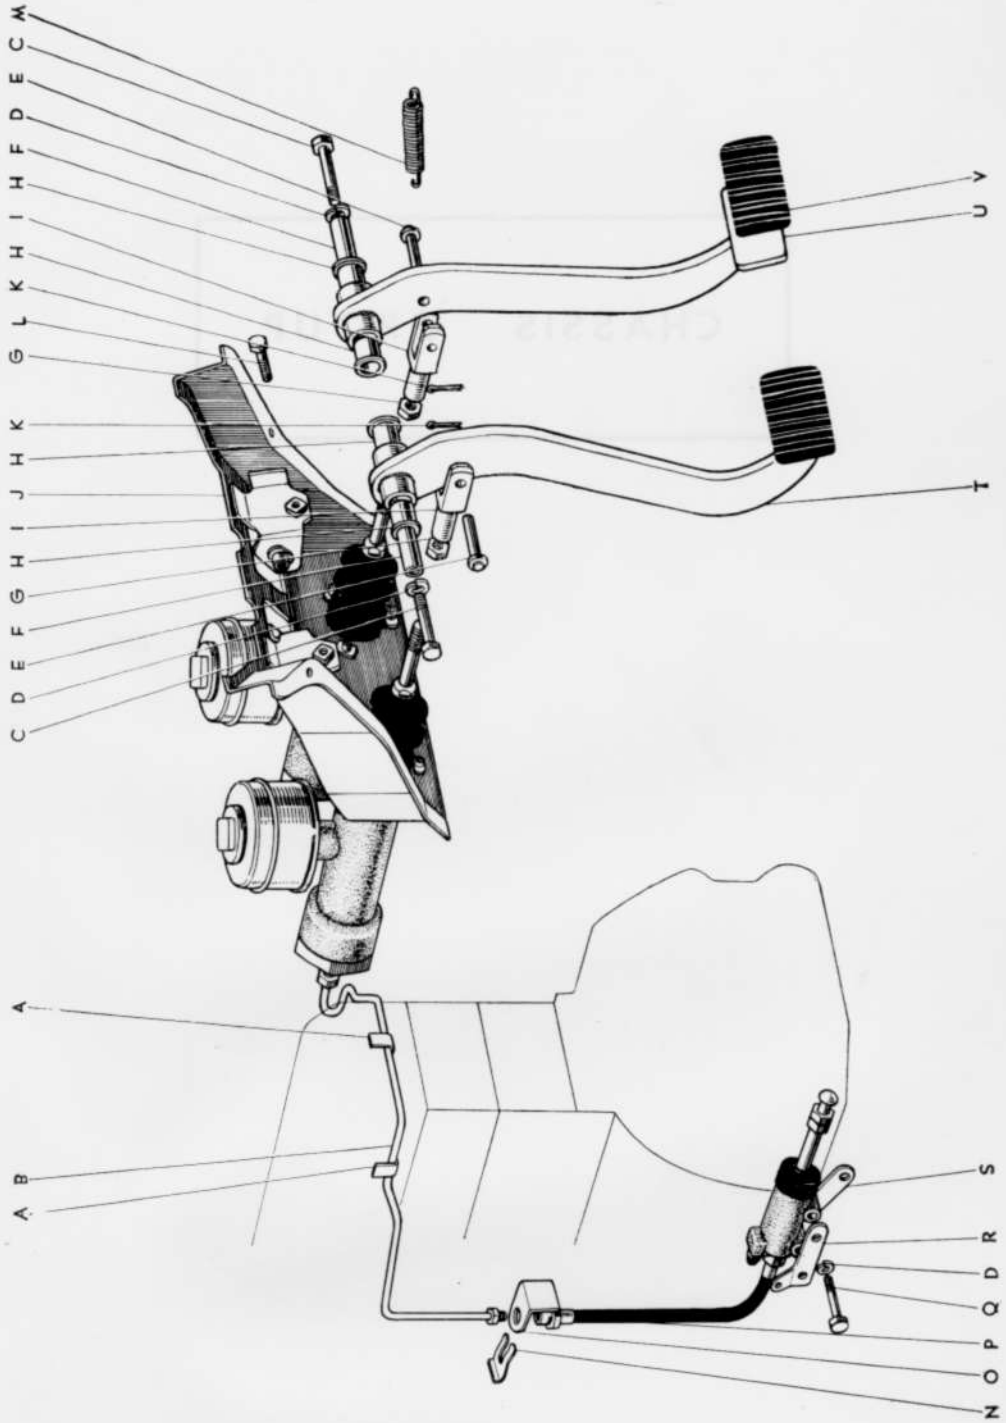


C0720-A

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Clutch Pedal & Brake Pedal (FJ45V 45LV)				
(FIG 11)				
A	90463-10045	Clamp	2	40V 45V
B	31481-60020	Tube, master cylinder to flexible hose	1	40V 45V
	31481-60030	Tube, master cylinder to flexible hose	1	LV LV
C	91111-51075	Bolt hex-hd 10 125p 75	2	
D	94512-01000	Washer, spring (10)	4	
E	90249-10002	Pin	2	40V LV 45V LV
F	90387-10004	Collar	2	40V LV 45V LV
G	94120-41000	Nut hex 10 125p)	2	
H	90386-13007	Bushing	4	40V LV 45V LV
I	47264-35010	Clevis, master cylinder push rod	2	40V LV 45V LV
J	55901-92000	Bracket sub-assy, pedal	1	45V LV
K	95381-03020	Pin, cotter	2	
L	91111-41025	Bolt hex hd 10-125p 25)	1	
M	90506-12023	Spring, tension	2	40V LV 45V LV
N	90468-08001	Clip	1	40V LV 45V LV
O	31484-60010	Bracket, flexible hose	1	40V LV 45V LV
P	90947-02006	Hose, flexible	1	40V LV 45V LV
Q	91111-41056	Bolt hex-hd 10 125p 56)	2	
R	31238-60020	Hanger, release fork retracting spring	1	40V LV 45V LV
S	31479-60010	Support, release cylinder	1	40V 45V
	31479-60020	Support, release cylinder	1	LV LV
T	31301-60020	Pedal sub-assy, clutch	1	40V LV 45V LV
U	47101-60020	Pedal sub-assy, brake	1	40V 45V
	47101-60030	Pedal sub-assy, brake	1	LV LV
V	31321-61010	Pad, pedal	2	40V LV 45V LV

FIG.—12 PROPELLER SHAFT & UNIVERSAL JOINT (FJ45V, 45LV)

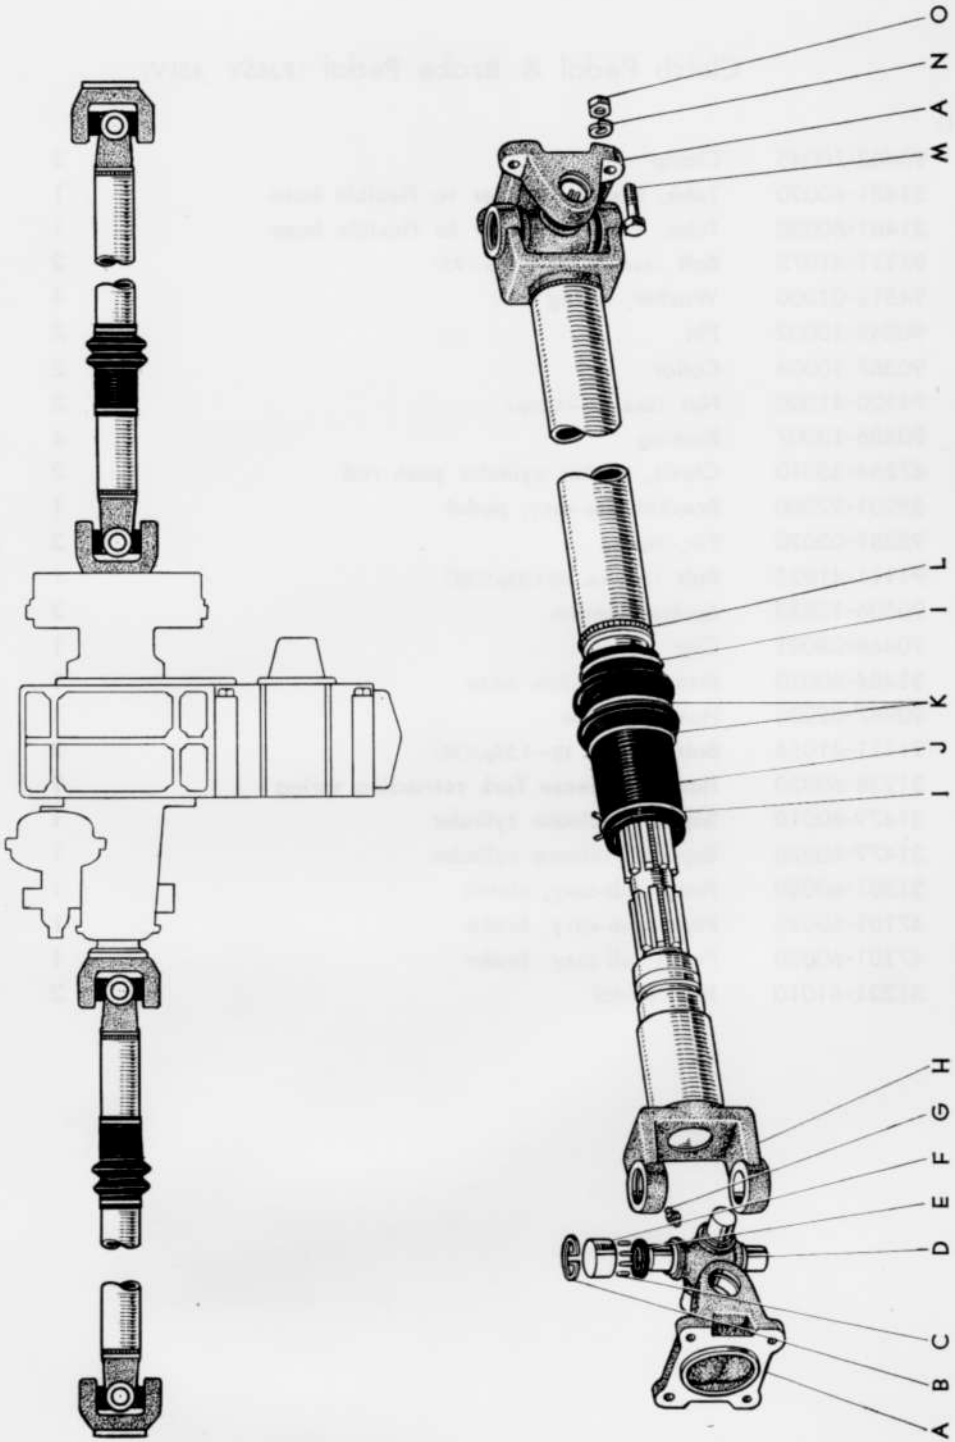


C 0678-B

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
Propeller Shaft & Universal Joint (FJ45V, 45LV)				
(FIG.12)				
	37140-60010	Shaft assy, propeller, front (includes illustrations A~L of Fig 12)	1	40V LV 45V LV
	37110-60030	Shaft assy, propeller, rear	1	45V LV
	04371-60010	Spider kit, universal joint (includes illustrations B~G of Fig 12)	1	40V LV 45V LV
A	37315-60010	Yoke, universal joint, flange	4	40V LV 45V LV
B	90521-31038*	Ring, hole snap Optional specifications	16	40V LV 45V LV
	90521-31039*	Ring, hole snap (Replaced by 37402-60010 or		
	90521-31040*	Ring, hole snap 37402-60020 or 37402-60030		
	90521-31041*	Ring, hole snap or 37402-60040)		
C	90361-03023*	Roller (Replaced by 37402-60010 or 37402-60020 or 37402-60030 or 37402-60040)	384	40V LV 45V LV
D	37411-60020	Spider, universal joint	4	40V LV 45V LV
E	37343-60010	Seal, universal joint spider bearing	16	40V LV 45V LV
	37402-60010	Bearing, universal joint spider		
	37402-60020	Bearing, universal joint spider Optional specifications		
	37402-60030	Bearing, universal joint spider	16	40V LV 45V LV
	37402-60040	Bearing, universal joint spider (includes illustrations C, E, F of Fig 12)		
F	37431-60020+	Cup, spider bearing Optional specifications	16	40V LV 45V LV
	37431-60030*	Cup, spider bearing (Replaced by 37402-60010 or		
	37431-60040*	Cup, spider bearing 37402-60020 or 37402-60030		
	37431-60050*	Cup, spider bearing or 37402-60040)		
G	96451-00600	Fitting, grease, small	4	40V LV 45V LV
	37410-60020	Joint assy, universal, w yoke (includes illustrations A~H of Fig 12)	2	40V LV 45V LV
H	37302-60010	Yoke sub-assy, universal joint slide	2	40V LV 45V LV
I	90467-41023	Clip	4	40V LV 45V LV
J	37334-60010	Boot, sliding shaft	2	40V LV 45V LV
K	37335-60010	Ring, sliding shaft boot	4	40V LV 45V LV
	37180-60010	Shaft sub-assy, propeller, front, w universal joint (includes illustrations A~H, L of Fig 12)	1	40V LV 45V LV
	37170-60030	Shaft sub-assy, propeller, rear, w universal joint	1	45V LV
	90937-01016	Piece, balance (30g)		
	90937-01017	Piece, balance (20g) Optional specifications	0~2	40V LV 45V LV
	90937-01018	Piece, balance (10g)		
	90937-01019	Piece, balance (5g)		

FIG.—12 PROPELLER SHAFT & UNIVERSAL JOINT (FJ45V, 45LV)

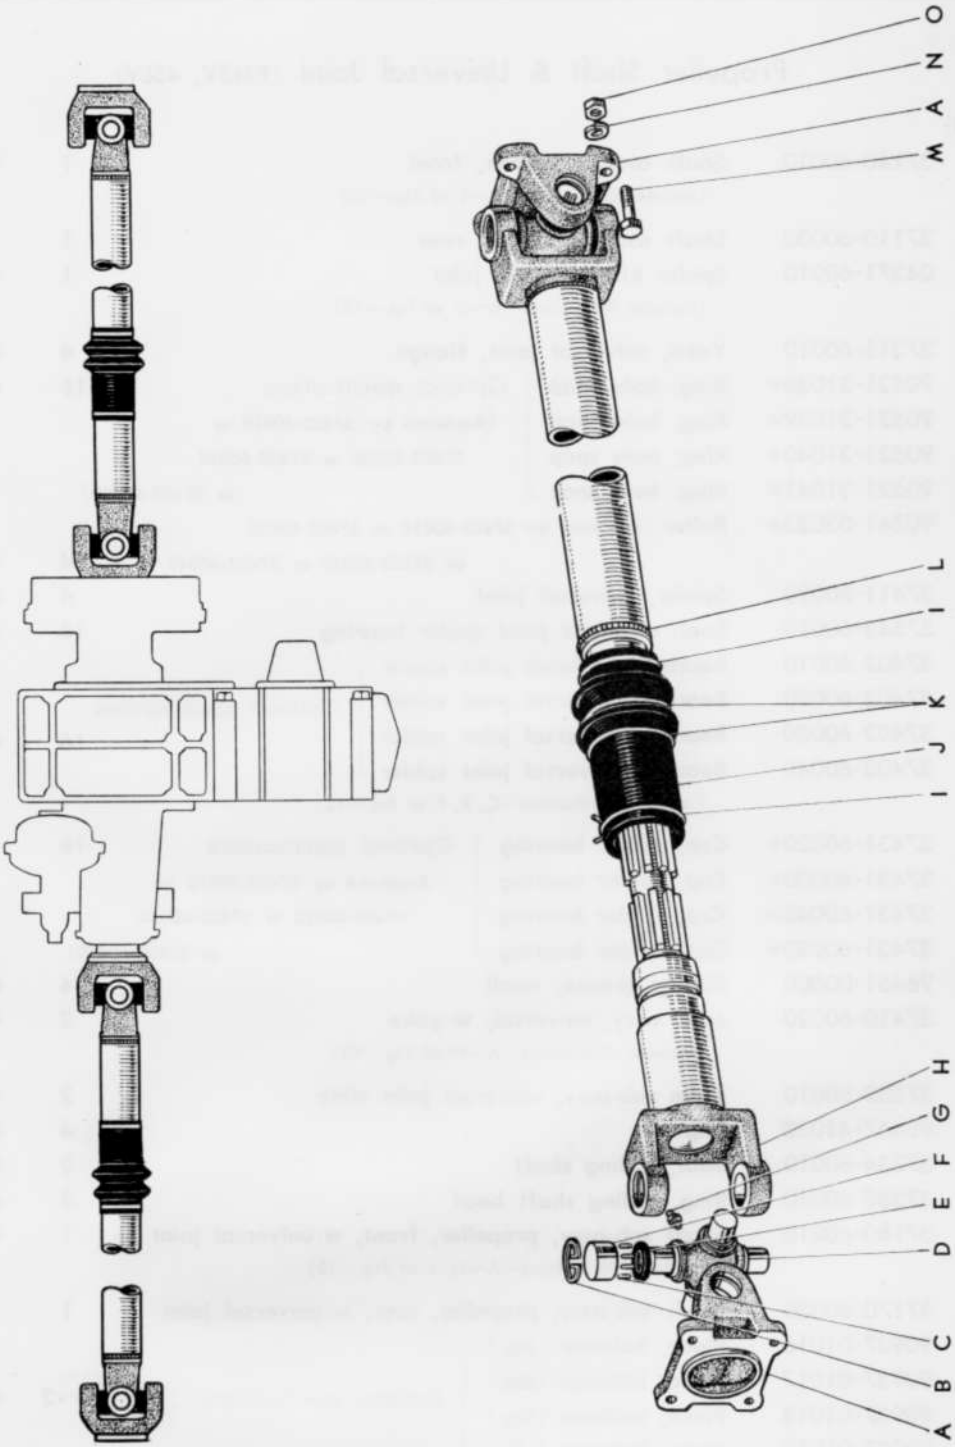

C 0578-B

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 12)				
L	37104-60010	Shaft sub-assy, propeller, front	1	40V LV 45V LV
	37101-60030	Shaft sub-assy, propeller, rear	1	45V LV
M	90101-08072	Bolt, hexagon	12	40V LV 45V LV
N	94512-00800	Washer, spring (8)	16	
O	94110-40800	Nut (hex 8 1.25p)	16	

CHASSIS

Donated by Dominic Smith cruisercult.com

FIG.—13 REAR AXLE HOUSING & DIFFERENTIAL (FJ45V, 45LV)



C 1490

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------

Rear Axle (FJ45V, 45LV)

42100-60050	Axle assy, rear For gear ratio 4.11:1 (includes illustrations A~J, N of Fig. 73, illustrations A~AD of Fig. 86 on Model FJ40 Parts Catalog and illustrations G, I~T, Y~BI of Fig. 13 and illustration T of Fig. 14)	1	45V LV
42100-60060	Axle assy, rear STD (For gear ratio 3.7:1)	1	45V LV

Rear Axle Housing & Differential

(FIG 13)

41110-60010	Carrier assy (For gear ratio 4.11:1) (includes illustrations I, Q, R, V, Y, AB~AD, AQ~AX, AZ~BI of Fig. 13)	1	40V LV 45V LV
41110-60020	Carrier assy (STD) (For gear ratio 3.7:1)	1	40V LV 45V LV
41110-60901	Carrier assy, differential For gear ratio 4.11:1 (includes illustrations I, Q, R, V, Y, AB~AK, AQ~AX, AZ~BI of Fig. 13)	1	40V LV 45V LV
41110-60902	Carrier assy, differential For gear ratio 3.7:1	1	40V LV 45V LV
A 48827-30010	Rod, stabilizer end link	4	45V LV
B 48819-30010	Piece, stabilizer bushing	1	45V LV
C 48812-60010	Bar, stabilizer, rear	1	45V LV
D 90385-11021	Bushing	4	45V LV
E 48802-60010	Link sub-assy, stabilizer	2	45V LV
F 94141-41000	Nut (hex 10 1.25p)	4	
G 91111-40820	Bolt (hex-hd 8 1.25p 20)	8	
H 95381-02025	Pin, cotter	4	
I 94512-00800	Washer, spring 8	25	
J 90341-18014	Plug, w head straight screw	2	40V LV 45V LV
K 94711-90800	Washer, seal	14	
L 90430-18012	Gasket (For drain plug)	2	40V LV 45V LV
M 94110-40800	Nut (hex 8 1.25p)	14	
N 42109-60010	Cover sub-assy, rear axle housing	1	40V LV 45V LV
O 90116-08012	Bolt, stud	2	40V LV 45V LV
P 42183-60010	Gasket	1	40V LV 45V LV

CHASSIS

Donated by Dominic Smith cruisercult.com

FIG.—13 REAR AXLE HOUSING & DIFFERENTIAL (FJ45V, 45LV)



C 1490

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 13)				
Q	41114-35010	Bolt, differential bearing cap	4	40V LV 45V LV
R	94512-01200	Washer, spring (12)	4	
S	42110-60030	Housing assy, rear axle (includes illustrations AL~AN of Fig 13)	1	45V LV
	42101-60902	Housing sub-assy, rear axle (includes illustrations—AN, AO of Fig 13)	1	45V LV
T	90116-08025	Bolt, stud	6	40V LV 45V LV
	90116-08026	Bolt, stud	4	40V LV 45V LV
U	48824-60010	Bracket, stabilizer	2	45V LV
V	91111-40816	Bolt (hex-hd 8 125p 16)	4	
W	48815-60010	Bushing, stabilizer	2	45V LV
X	48823-60010	Cover, stabilizer bracket	2	45V LV
Y	41222-35010	Plate, ring gear set bolt	6	40V LV 45V LV
Z	90930-03019	Plug, breather	1	40V LV 45V LV
AA	94511-01000	Washer, spring (10)	2	
AB	90101-10061	Bolt, hexagon	12	40V LV 45V LV
AC	41315-30010	Nut, differential adjusting	2	40V LV 45V LV
AD	97700-17887	Bearing	2	40V LV 45V LV
	97700-17831	Bearing	2	40V LV 45V LV
AE	41343-55010	Pin, differential pinion shaft	1	40V LV 45V LV
AF	41342-55010	Shaft, differential pinion	1	40V LV 45V LV
AG	41344-35010	Spacer, differential pinion shaft, No 1	Optional specifications	
	41345-35010	Spacer, differential pinion shaft, No 2		
	41346-35010	Spacer, differential pinion shaft, No 3		
AH	41331-55010	Gear, differential side (N 16)	2	40V LV 45V LV
AI	41361-35010	Washer, differential side gear thrust	2	40V LV 45V LV
	41362-39010	Washer, differential side gear thrust	2	40V LV 45V LV
AJ	41341-55010	Pinion, differential (N-10)	2	40V LV 45V LV
AK	41351-35010	Washer, differential pinion thrust	2	40V LV 45V LV
	41352-39020	Washer, differential pinion thrust	2	40V LV 45V LV
AL	42137-55010	Collar, rear axle housing side	2	40V LV 45V LV
AM	42122-35010*	Flange, rear axle housing (Replaced by 42110-60030)	2	40V LV 45V LV
AN	42151-60030	Seat, rear spring	2	45V LV
AO	42171-60011	Bracket, rear stabilizer link, RH	1	45V LV
	42172-60010	Bracket, rear stabilizer link, LH	1	45V LV
AP	90930-03023	Plug, breather	1	40V LV 45V LV
AQ	41316-30010	Lock, differential bearing adjusting nut	2	40V LV 45V LV

CHASSIS

FIG.—13 REAR AXLE HOUSING & DIFFERENTIAL (FJ45V, 45LV)



Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 13)				
AR	41113-35010*	Cap, differential bearing (Replaced by 41101-60020)	2	40V LV 45V LV
	41201-60010	Ring gear & drive pinion kit, differential (For gear ratio 4.11 : 1) (includes illustrations As, AT of Fig 13)	1	40V LV 45V LV
	41201-60020	Ring gear & drive pinion kit, differential (STD) (For gear ratio 3.7 : 1)	1	40V LV 45V LV
AS	41221-60010*	Gear, differential ring (N 37) (Replaced by 41201-60010) (For gear ratio 4.11 : 1)	1	40V LV 45V LV
	41221-60020*	Gear, differential ring (N 37) (Replaced by 41201-60020) (For gear ratio 3.7 : 1)	1	40V LV 45V LV
AT	41211-60010)	Pinion, differential drive (N 9) (Replaced by 41201-60010) For gear ratio 4.11 : 1	1	40V LV 45V LV
	41211-60020)	Pinion, differential drive (N 10) (Replaced by 41201-60020) For gear ratio 3.7 : 1	1	40V LV 45V LV
AU	41311-35010	Case, differential	1	40V LV 45V LV
AV	97610-30308	Bearing (For differential drive pinion rear)	1	40V LV 45V LV
AW	90564-75048	Shim (thk 0.25)	1~2	40V LV 45V LV
	90564-75049	Shim (thk 0.30)		
	90564-75050	Shim (thk 0.35)		
	90564-75051	Shim (thk 0.45)		
AX	90560-30157	Spacer	1	40V LV 45V LV
AY	42181-60010	Gasket, differential carrier (thk 0.2)	1	40V LV 45V LV
AZ	41101-60020	Carrier sub-assy, differential (includes illustrations Q, R, AR of Fig 13)	1	40V LV 45V LV
BA	90564-30033	Shim (thk 0.03)	1~2	40V LV 45V LV
	90564-30034	Shim (thk 0.10)		
	90564-30035	Shim (thk 0.25)		
	90564-30063	Shim (thk 0.45)		
BB	97610-30306	Bearing	1	40V LV 45V LV
BC	41214-30010	Slinger, drive pinion oil	1	40V LV 45V LV
BD	90311-38028	Seal, type "T" oil	1	40V LV 45V LV
BE	37341-30010	Deflector, dust	1	40V LV 45V LV

FIG.—13 REAR AXLE HOUSING & DIFFERENTIAL (FJ45V, 45LV)




C 1490

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 13)				
BF	37324-30010	Flange, universal joint	1	40V LV 45V LV
BG	90201-19117	Washer, plate	1	40V LV 45V LV
BH	90171-19012	Nut, castle	1	40V LV 45V LV
BI	95381-04030	Pin, cotter	1	

CHASSIS

FIG.—14 STEERING COLUMN & HOUSING (LHD)

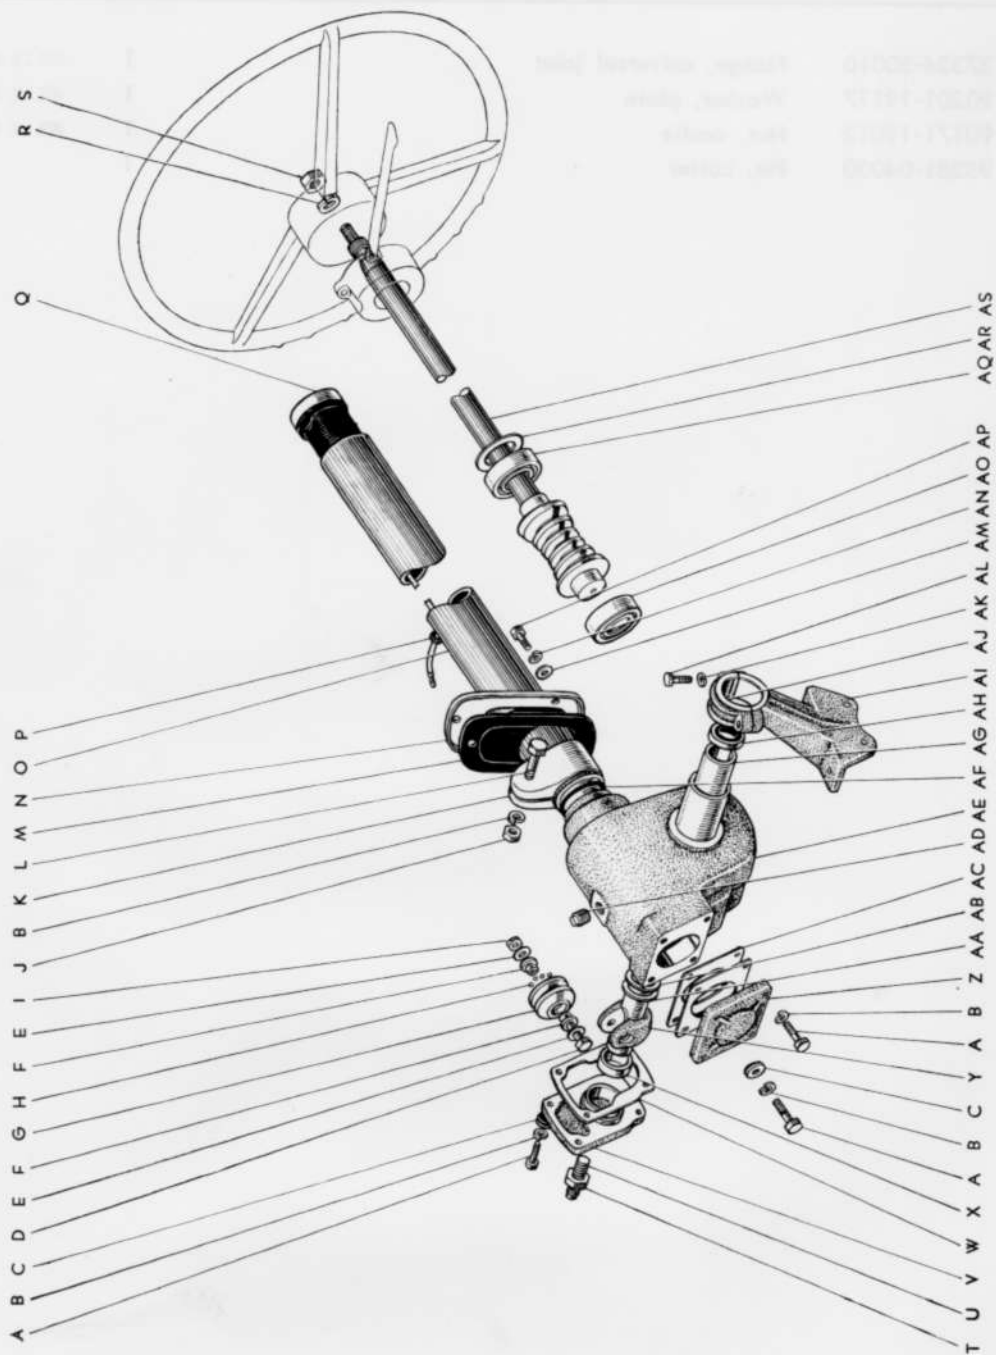

C 0076-D

Toyota Land Cruiser

51

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------

Steering (LHD)

45200-60040	Post assy, steering (includes illustrations A~C, E~T, AI~AO of Fig 52 and illustration-L of Fig 111 on Model FJ40 Parts Catalog and illustrations-A~I, O~Q, T~AH, AO AQ~AS of Fig 14)	1	LV	LV
45200-60050	Post assy, steering (OPT)	1	LV	LV


Steering Column, Housing, Main Shaft & Sector Shaft

(FIG 14)

	45300-60030	Post assy, steering L winker (includes illustrations A~I, O~Q, T~AH, AO, AQ~AS of Fig 14)	1	LV	LV
	45300-60040	Post assy, steering L winker (OPT)	1	LV	LV
	04452-55010	Roller kit, steering sector (includes illustrations D~I of Fig 14)	1	40V LV 45V LV	
A	91111-50822	Bolt (hex hd 8-1 25p 22)	8		
B	94512-00800	Washer, spring (8)	9		
C	94711-90800	Washer, seal	4		
D	45361-55010	Shaft, steering sector roller	1	40V LV 45V LV	
E	90564-10059	Shim	2	40V LV 45V LV	
F	90945-01003	Race, steering sector, No 2 (Replaced by 90945-01001)	2	40V LV 45V LV	
G	90945-01001	Roller, steering sector (includes illustrations F, H of Fig 14)	1	40V LV 45V LV	
H	90945-01004	Roller, steering sector, No 3 (Replaced by 90945 01001)	20	40V LV 45V LV	
I	90170-10054	Nut, hexagon	1	40V LV 45V LV	
J	94110-40800	Nut (hex 8 1 25p)	1		
K	45272-55010	Clamp, steering column, lower (OPT)	1	40V LV 45V LV	
L	91111-50850	Bolt (hex-hd 8-1 25p 50)	1		
M	55122-60010	Dust-proof, steering column hole	1	40V LV 45V LV	
	55122-92170	Dust-proof, steering column hole (For U.S.A.)	1		LV
	55122-60020	Dust-proof, steering column hole (OPT)	1	40V LV 45V LV	

CHASSIS

FIG.—14 STEERING COLUMN & HOUSING (LHD)

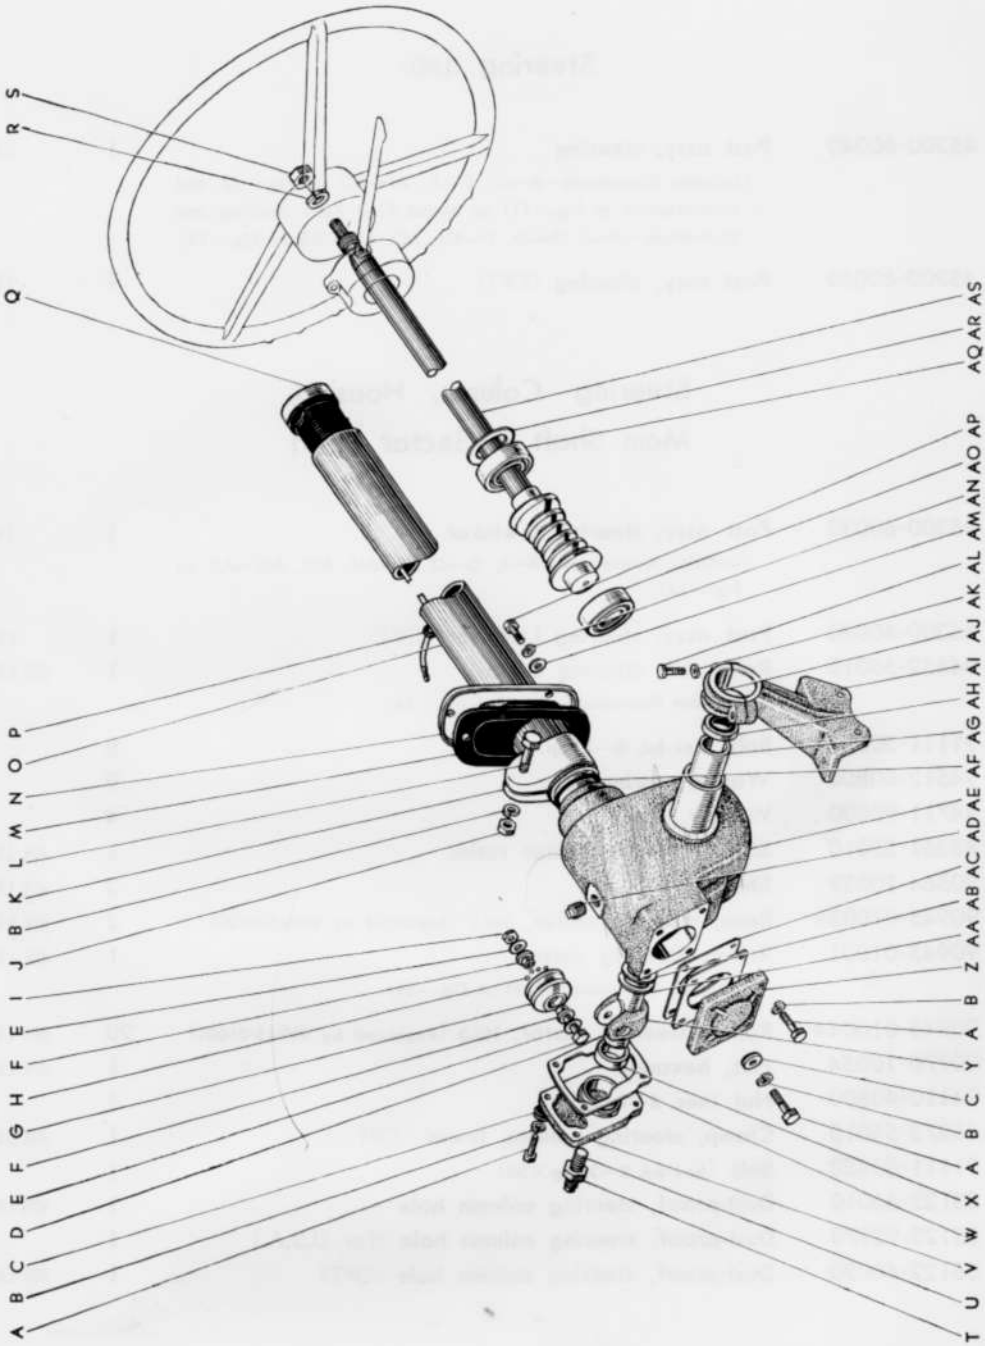


C 0076-D

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 14)				
N	55121-60010	Plate, steering, column hole dust-proof set	1	40V LV 45V LV
	55121-92170	Plate, steering, column hole dust-proof set (For U.S.A.)	1	LV
	55123-92170	Sub-plate, steering column hole dust-proof set (For U.S.A.)	1	LV
	45205-60030	Tube sub-assy, steering column (includes illustrations O~Q of Fig 14)	1	LV LV
O	45251-60030	Tube, steering column	1	LV LV
P	90480-12069	Grommet, steering column	1	40V LV 45V LV
Q	45206-60010	Insulator sub-assy, w column tube bushing	1	40V LV 45V LV
	45207-60020	Insulator sub-assy, L column tube bushing	1	40V LV 45V LV
	90386-18026	Bushing	1	40V LV 45V LV
R	90204-13012	Washer, spring	1	40V LV 45V LV
S	94120-41300	Nut (hex 13 15p)	1	
T	90170-14057	Nut, hexagon	1	40V LV 45V LV
U	90113-14012	Bolt, set	1	40V LV 45V LV
V	45304-60010	Cover sub-assy, sector shaft end (includes illustration X of Fig 14)	1	40V LV 45V LV
W	45332-60010	Gasket, sector shaft end cover (thk.-0.5)	1	40V LV 45V LV
X	90380-32038	Bushing, solid	1	40V LV 45V LV
Y	45350-60020	Shaft assy, steering sector (includes illustrations D~I of Fig 14)	1	LV LV
Z	45321-60010	Cover, gear housing end	1	40V LV 45V LV
AA	45352-55010	Plate, steering sector adjusting	1	40V LV 45V LV
AB	90564-33062	Shim (6ea of thk. 0.3 and 5ea. of thk -0.5)	11	40V LV 45V LV
	45338-55010	Shim, steering sector adjusting (thk 0.31)	0~3	40V LV 45V LV
AC	45322-55010	Gasket, gear housing end cover (thk 0.3, 0.2, 0.1)	some	40V LV 45V LV
	45322-60010	Gasket, gear housing end cover (thk 0.5)	0~2	40V LV 45V LV
AD	90345-53008	Plug, steering gear box oil	1	40V LV 45V LV
AE	45301-25020	Housing sub-assy, steering gear (includes illustration AG of Fig 14)	1	LV LV
AF	90301-29035	Ring, "O"	1	40V LV 45V LV
AG	90384-32058	Bushing, solid	1	40V LV 45V LV
AH	90310-32010	Retainer, oil steering sector	1	40V LV 45V LV
AI	45312-60010	Bracket, steering gear housing	1	40V LV 45V LV
	45302-60010	Bracket sub-assy, steering gear housing (includes illustrations AJ~AL of Fig 14)	1	40V LV 45V LV
AJ	45341-35010	Cap, gear housing bracket	1	40V LV 45V LV

CHASSIS

FIG.—14 STEERING COLUMN & HOUSING (LHD)

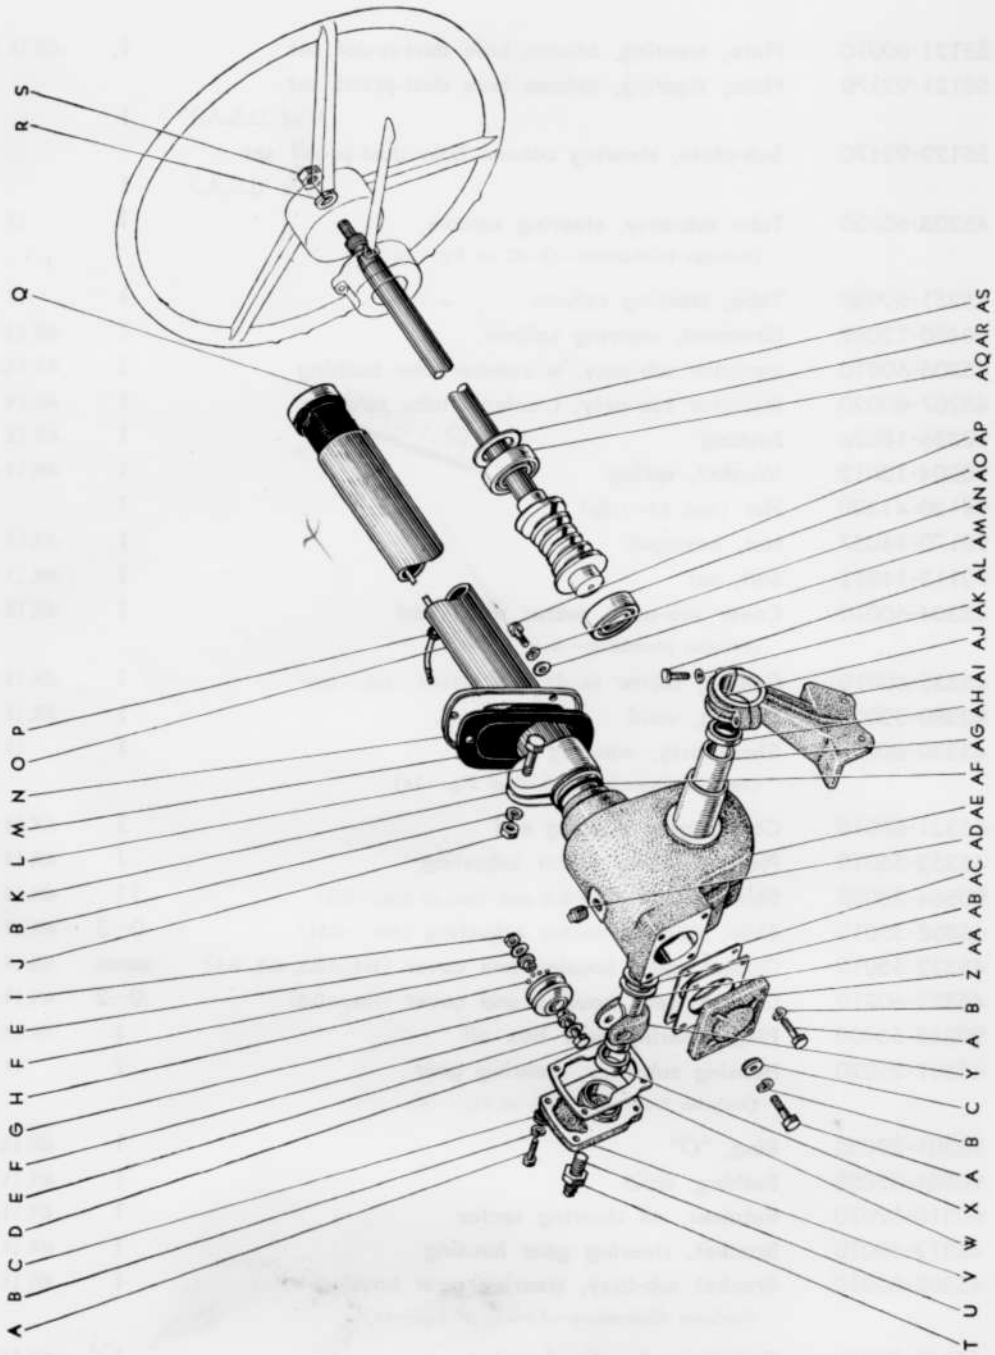


C 0076-D

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 14)				
AK	94512-01200	Washer, spring (12)	2	
AL	91111-51240	Bolt (hex-hd 12 1.5p 40)	2	
AM	94613-10600	Washer, plate (6 10)	4	
AN	94511-00600	Washer, spring (6)	4	
AO	97600-30206	Bearing	1	40V LV 45V LV
AP	91111-40620	Bolt (hex-hd 6—1.0p 20)	4	
AQ	97600-30205	Bearing	1	40V LV 45V LV
AR	90564-40037	Shim (thk 0.5)	some	40V LV 45V LV
	90564-40038	Shim (thk 0.2)		
	90564-40039	Shim (thk. 0.1)		
AS	45201-60020	Shaft sub-assy, steering main	1	LV LV

FIG. 15 OIL BRAKE TUBE & CLAMP (FJ45V)

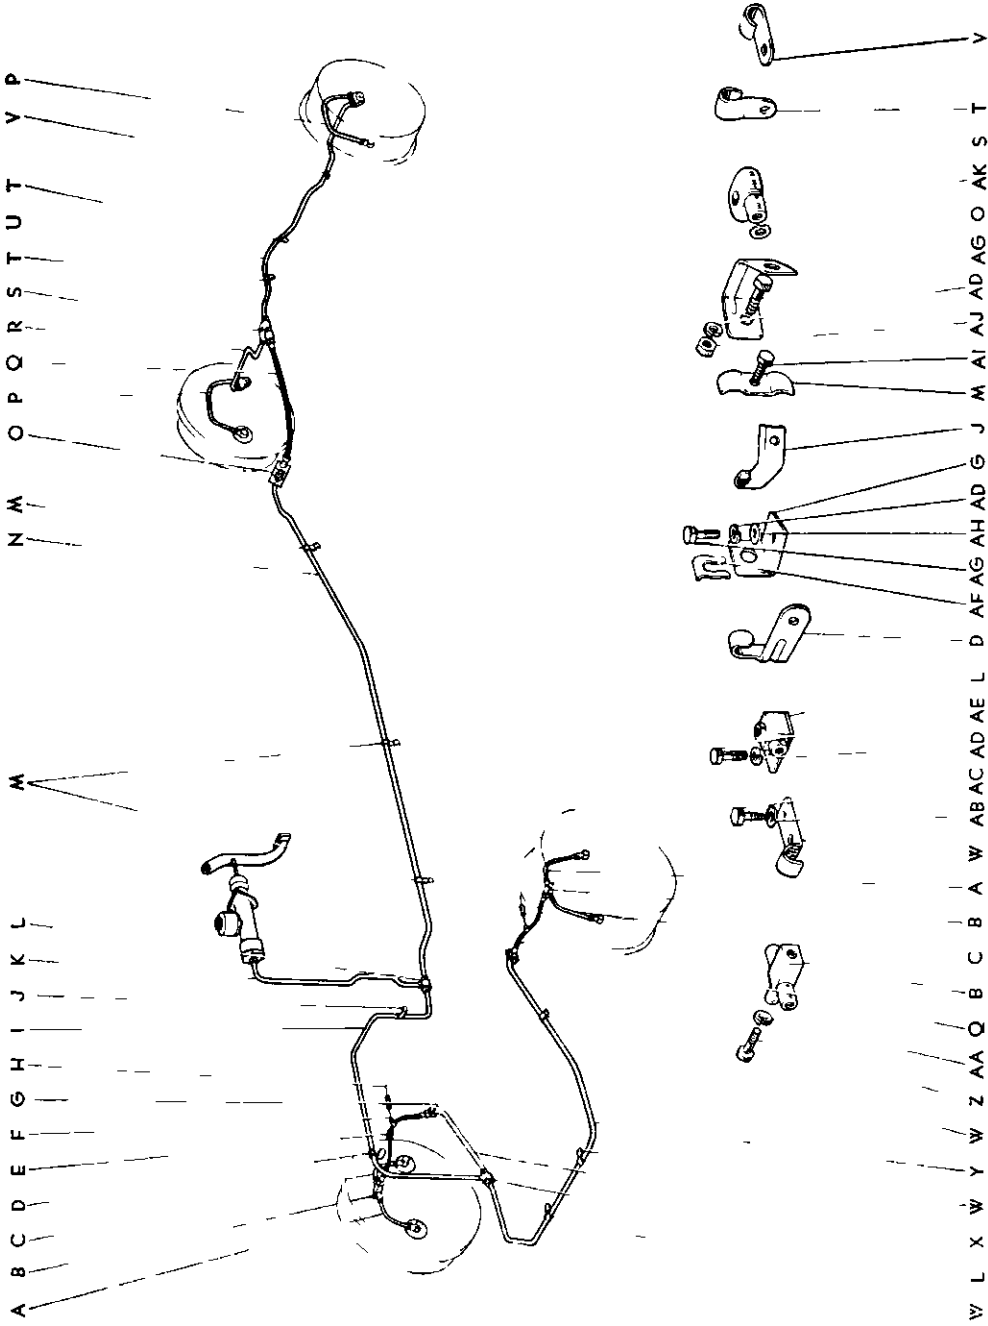


C 0487-A

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Oil Brake Tube & Clamp (FJ45V)				
(FIG 151)				
A	47332-60010	Tube, wheel cylinder, No 2	2	40V LV 45V LV
B	90413-09003	Way, 3	2	40V LV 45V LV
C	47331-60010	Tube, wheel cylinder, No 1	2	40V LV 45V LV
D	47361-60020	Clamp, tube, No 1	1	40V LV 45V LV
E	90385-12022	Bushing, front brake flexible hose tension spring	2	40V LV 45V LV
F	90461-06037	Clamp	2	40V LV 45V LV
G	47351-60020	Bracket, flexible hose, No 1	1	40V LV 45V LV
	47352-60020	Bracket, flexible hose, No 2	1	40V LV 45V LV
H	90506-09043	Spring	2	40V LV 45V LV
I	47312-60010	Tube, bridge, front 3 way	1	40V LV 45V LV
J	47362-60020	Clamp, tube, No 2	1	40V LV 45V LV
K	47311-60020	Tube, master cylinder to 3 way	1	40V 45V
L	90413-09015	Way, 3	2	40V LV 45V LV
M	90462-10034	Clamp	3	40V LV 45V LV
N	47316-60040	Tube, 3 way to rear flexible hose	1	45V LV
O	47353-60010	Bracket, flexible hose, No 3	1	40V LV 45V LV
P	47333-35010	Tube, wheel cylinder, rear	2	40V LV 45V LV
Q	90947-02027	Hose, flexible	3	40V LV 45V LV
R	47318-60030	Tube, 3 way to rear RH brake	1	45V LV
S	90413-09007	Way, 3	1	40V LV 45V LV
T	90461-04216	Clamp	2	40V LV 45V LV
U	47319-60030	Tube, 3 way to rear LH brake	1	45V LV
V	90461-04108	Clamp	1	40V LV 45V LV
W	90462-10021	Clamp	3	40V LV 45V LV
X	47313-60020	Tube, 3 way to front RH flexible hose	1	40V LV 45V LV
Y	47314-60020	Tube, 3 way to front LH flexible hose	1	40V 45V
Z	93180-16012	Screw (hex-hd 6 10p 12)	1	
AA	94512-00600	Washer, spring (6)	1	
AB	94613-10800	Washer, plate (8 16)	2	
	94512-00800	Washer, spring (8)	1	
AC	93580-17020	Screw, tapping	2	
	91111-40816	Bolt (hex-hd 8 125p 16)	1	
AD	94512-00800	Washer, spring (8)	4	
AE	91111-40816	Bolt (hex-hd 8 125p 16)	2	
AF	90468-08001	Clip	3	40V LV 45V LV

CHASSIS

FIG. -15 OIL BRAKE TUBE & CLAMP (FJ45V)

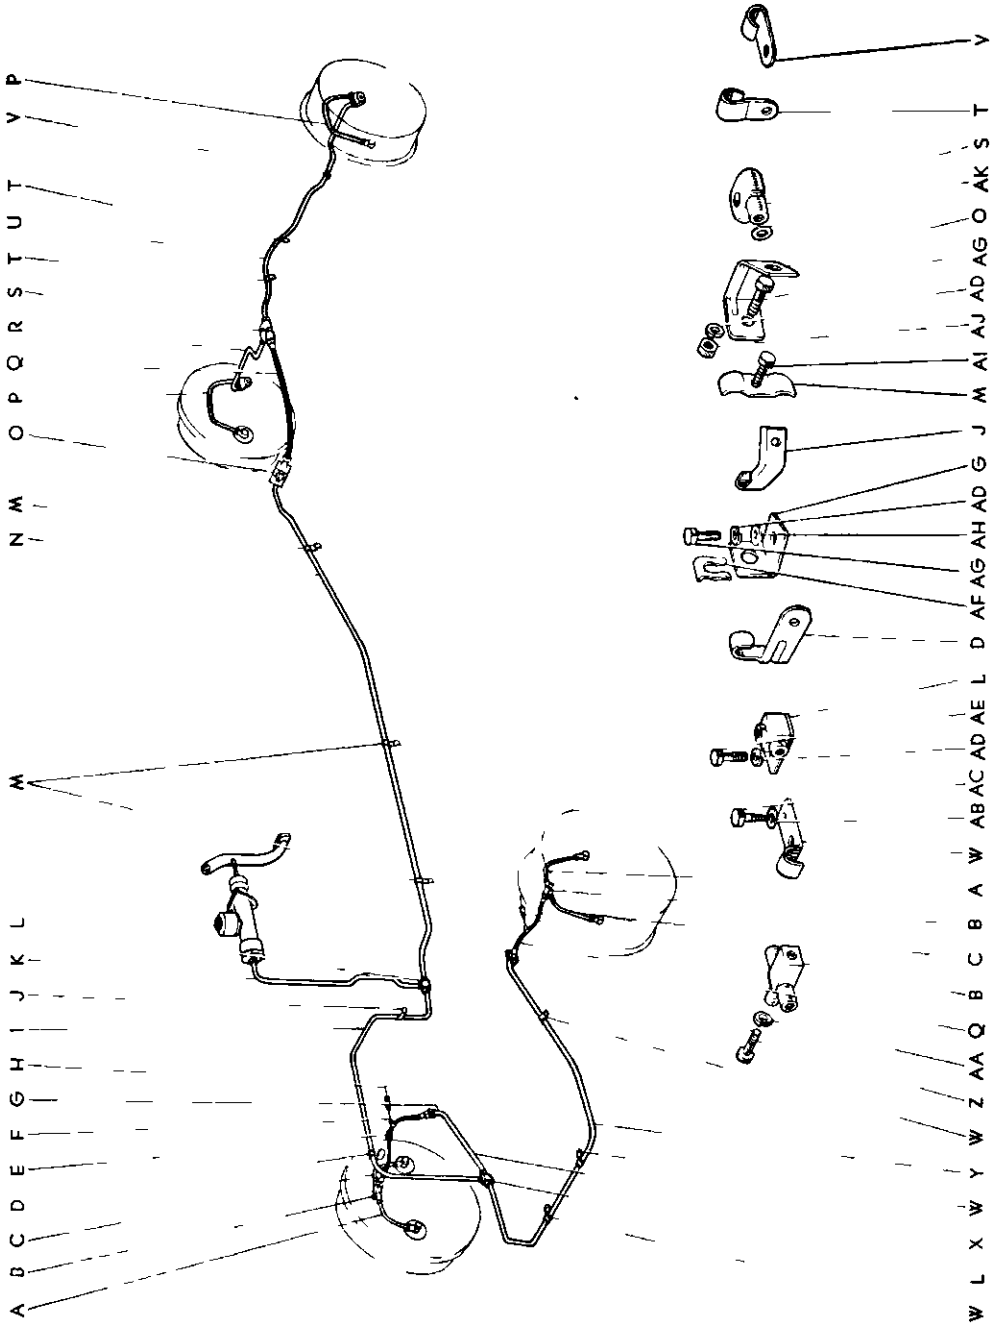


C 0687-A

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 15)				
AG	91111-40820	Bolt (hex-hd 8—1.25p 20)	2	
AH	94613-10800	Washer, plate (8 16)	2	
AI	93580-17020	Screw, tapping	3	
AJ	94110-40800	Nut (hex. 8 1.25p)	1	
AK	90430-11100	Gasket	3	40V LV 45V LV

CHASSIS

FIG. 16 OIL BRAKE TUBE & CLAMP (FJ45LV)

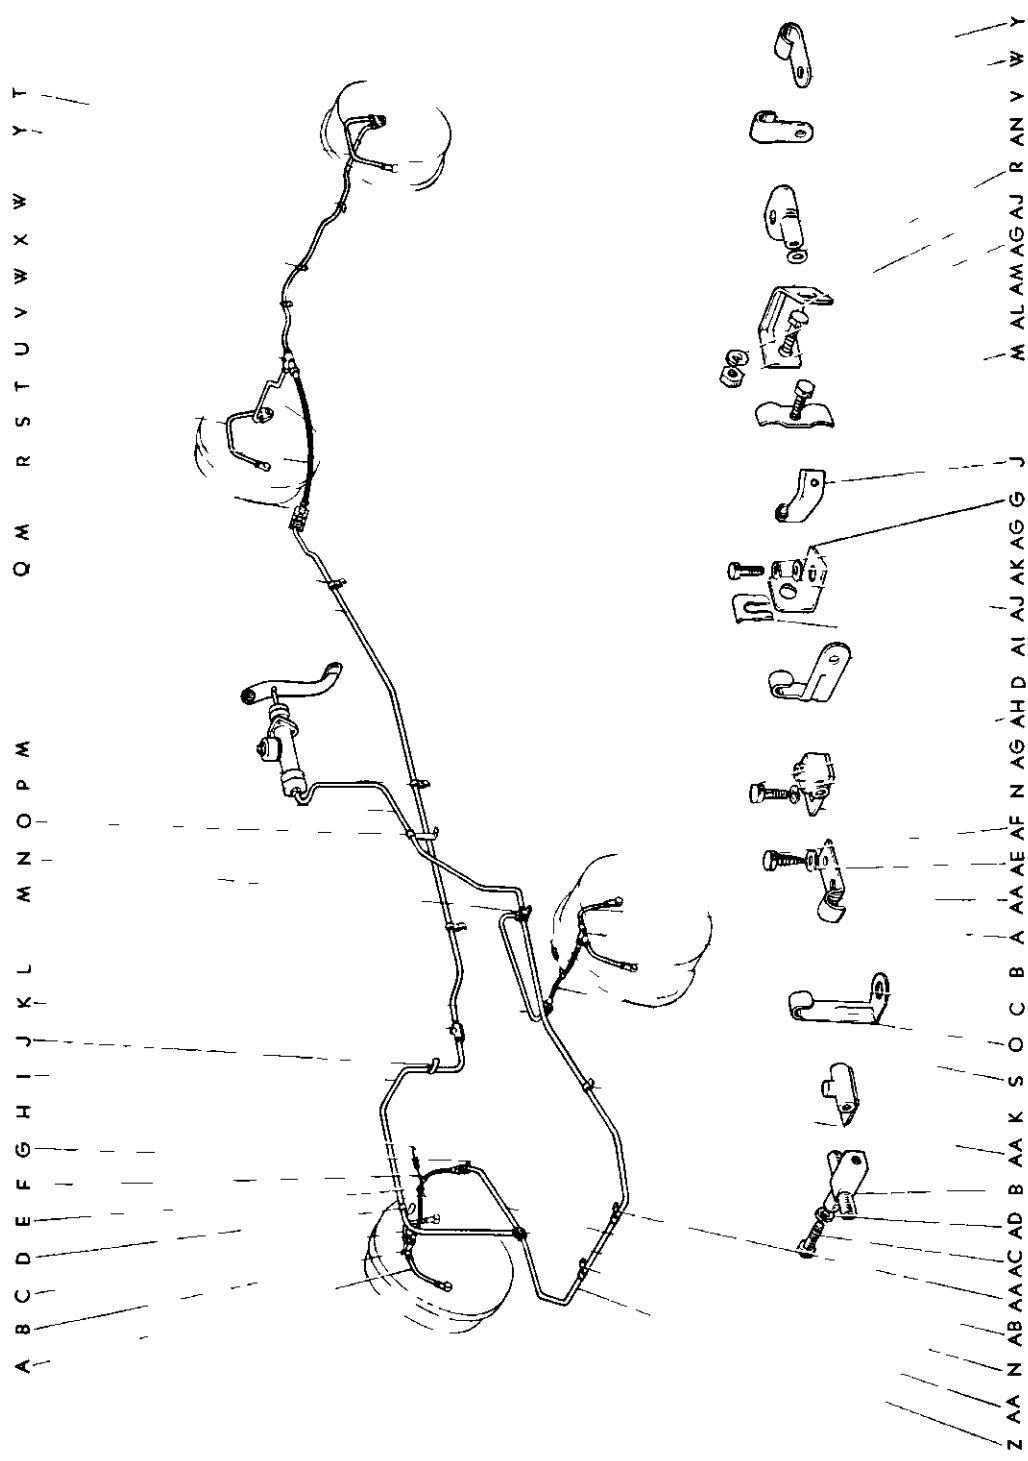

C 0677-B

Toyota Land Cruiser

61

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------


Oil Brake Tube & Clamp (FJ45LV)

(FIG 16)

A	47332-60010	Tube, wheel cylinder, No 2	2	40V LV 45V LV
B	90413-09003	Way, 3	2	40V LV 45V LV
C	47331-60010	Tube, wheel cylinder, No 1	2	40V LV 45V LV
D	47361-60020	Clamp, tube, No 1	1	40V LV 45V LV
E	90385-12022	Bushing, front brake flexible hose tension spring	2	40V LV 45V LV
F	90461-06037	Clamp	2	40V LV 45V LV
G	47351-60020	Bracket, flexible hose, No 1	1	40V LV 45V LV
	47352-60020	Bracket, flexible hose, No 2	1	40V LV 45V LV
H	90506-09043	Spring	2	40V LV 45V LV
I	47312-60010	Tube, bridge, front 3 way	1	40V LV 45V LV
J	47362-60020	Clamp, tube, No 2	1	40V LV 45V LV
K	90412-09004	Way, 2	1	LV LV
L	47314-60030	Tube, 3 way to front LH flexible hose	1	LV LV
M	90462-10034	Clamp	3	40V LV 45V LV
N	90413-09015	Way, 3	2	40V LV 45V LV
O	47361-60040	Clamp, tube	1	LV LV
P	47311-60030	Tube, master cylinder to 3 way	1	LV LV
Q	47316-60040	Tube, 3 way to rear flexible hose	1	45V LV
R	47353-60010	Bracket, flexible hose, No 3	1	40V LV 45V LV
S	90947-02027	Hose, flexible	3	40V LV 45V LV
T	47333-35010	Tube, wheel cylinder, rear	2	40V LV 45V LV
U	47318-60030	Tube, 3 way to rear RH brake	1	45V LV
V	90413-09007	Way, 3	1	40V LV 45V LV
W	90461-04216	Clamp	2	40V LV 45V LV
X	47319-60030	Tube, 3 way to rear LH brake	1	45V LV
Y	90461-04108	Clamp	1	40V LV 45V LV
Z	47312-60020	Tube, bridge, front 3 way	1	LV LV
AA	90462-10021	Clamp	3	40V LV 45V LV
AB	47313-60020	Tube, 3 way to front RH flexible hose	1	40V LV 45V LV
AC	93180-16012	Screw (hex-hd. 6 -1 0p 12)	1	
AD	94512-00600	Washer, spring (6)	1	
AE	94613-10800	Washer, plate (8 16)	2	
	94512-00800	Washer, spring (8)	1	
AF	93580-17020	Screw, tapping	2	
	91111-40816	Bolt (hex-hd. 8 1 25p 16)	1	

CHASSIS

FIG. 16 OIL BRAKE TUBE & CLAMP (FJ45LV)

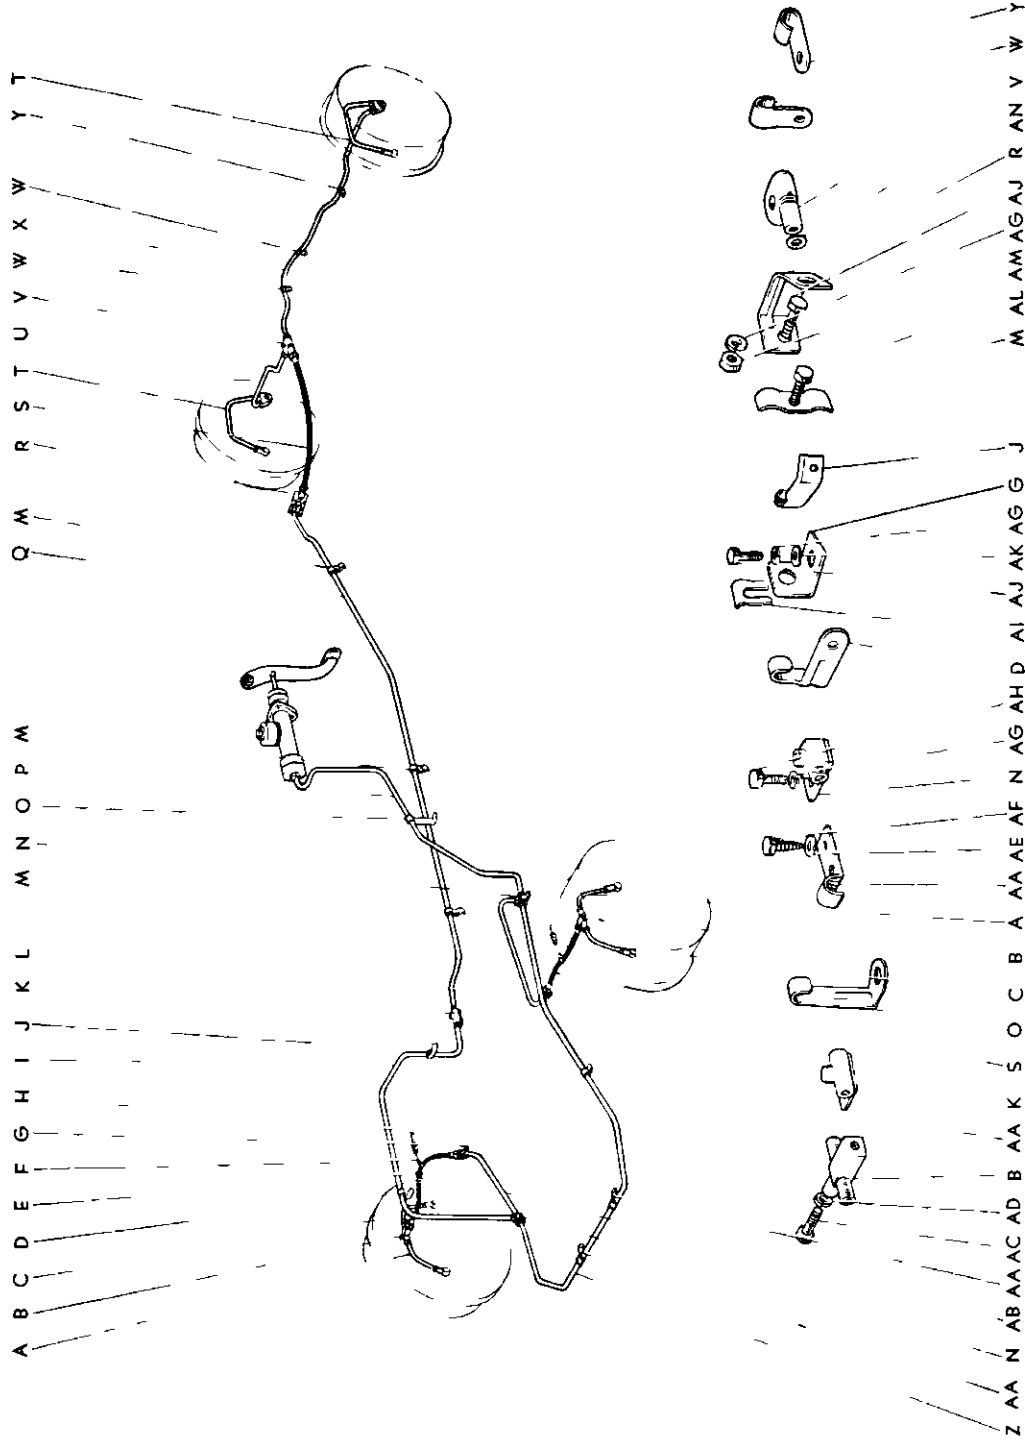

C 0677-B


Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 16)				
AG	94512-00800	Washer, spring (8)	4	
AH	91111-40816	Bolt (hex-hd 8 - 1.25p 16)	2	
AI	90468-08001	Clip	3	40V LV 45V LV
AJ	91111-40820	Bolt (hex-hd 8 - 1.25p 20)	2	
AK	94613-10800	Washer, plate (8 16)	2	
AL	93580-17020	Screw, tapping	3	
AM	94110-40800	Nut (hex. 8 1.25p)	1	
AN	90430-11100	Gasket	3	40V LV 45V LV

CHASSIS

Donated by Dominic Smith cruisercult.com

FIG.—17 REAR SPRING & SHOCK ABSORBER (FJ45V, 45LV)

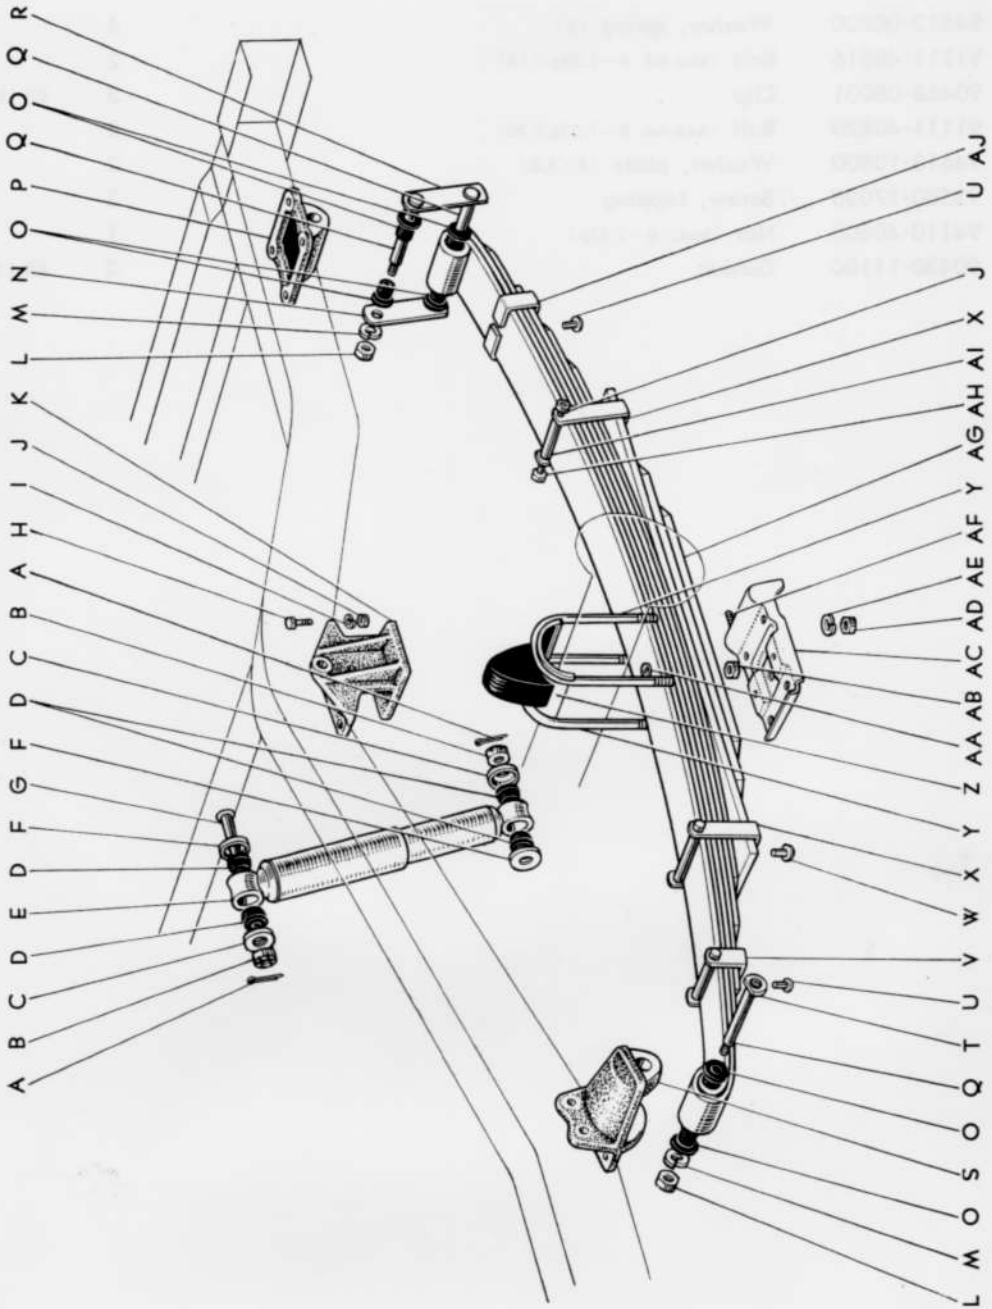


C 1489

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Spring & Shock Absorber (FJ45V, 45LV)				
(FIG 17)				
A	95381-03025	Pin, cotter	4	
B	94141-41200	Nut, castle (hex 12 15p)	4	
C	90948-03003	Washer, shock absorber cushion	4	40V LV 45V LV
D	90385-16007	Bushing	8	40V LV 45V LV
E	48531-60050	Absorber, shock, rear	2	45V LV
F	90948-03004	Washer, shock absorber cushion	4	40V LV 45V LV
G	48532-30010	Pin, rear shock absorber upper pivot	2	40V LV 45V LV
H	91111-40825	Bolt (hex-hd 8 125p 25)	6	
I	94512-00800	Washer, spring (8)	6	
J	94110-40800	Nut (hex 8 125p)	9	
K	48354-60040	Stopper, bumper, rear LH	1	45V LV
	48344-60040	Stopper, bumper, rear RH	1	45V LV
L	94110-41400	Nut (hex 14 -1.5p)	6	
M	94512-01400	Washer, spring (14)	6	
N	48444-35010	Plate, spring shackle, inner	2	40V LV 45V LV
O	90385-18025	Bushing	12	40V LV 45V LV
P	48416-35010	Bracket, spring, No 4	2	45V LV
Q	48323-35010	Pin, spring bracket	6	45V LV
R	48042-35010	Shackle sub-assy, spring, No 2 (includes illustration Q of Fig - 17)	2	45V LV
S	48415-35010	Bracket, spring, No 3 LH	1	45V LV
	48414-35010	Bracket, spring, No 3 RH	1	45V LV
T	48409-35010	Pin sub-assy, spring bracket (includes illustration Q of Fig 17)	2	45V LV
U	90260-10013	Rivet, round	4	45V LV
V	48241-60060	Clip, rear spring No 1	2	45V LV
W	95111-01022	Rivet, round	4	
X	48242-60060	Clip, rear spring No 2	4	45V LV
Y	90117-13036	Bolt, "U"	4	45V LV
Z	48306-60010	Bumper sub-assy, rear spring	2	45V LV
AA	48247-60020	Bolt, rear spring center	2	45V LV
AB	94110-41000	Nut (hex 10 125p)	2	
AC	48047-60020	Seat sub-assy, spring "U" bolt, LH (includes illustration—AF of Fig 17)	1	45V LV
	48046-60020	Seat sub-assy, spring "U" bolt, RH	1	45V LV

CHASSIS

FIG.—17 REAR SPRING & SHOCK ABSORBER (FJ45V, 45LV)

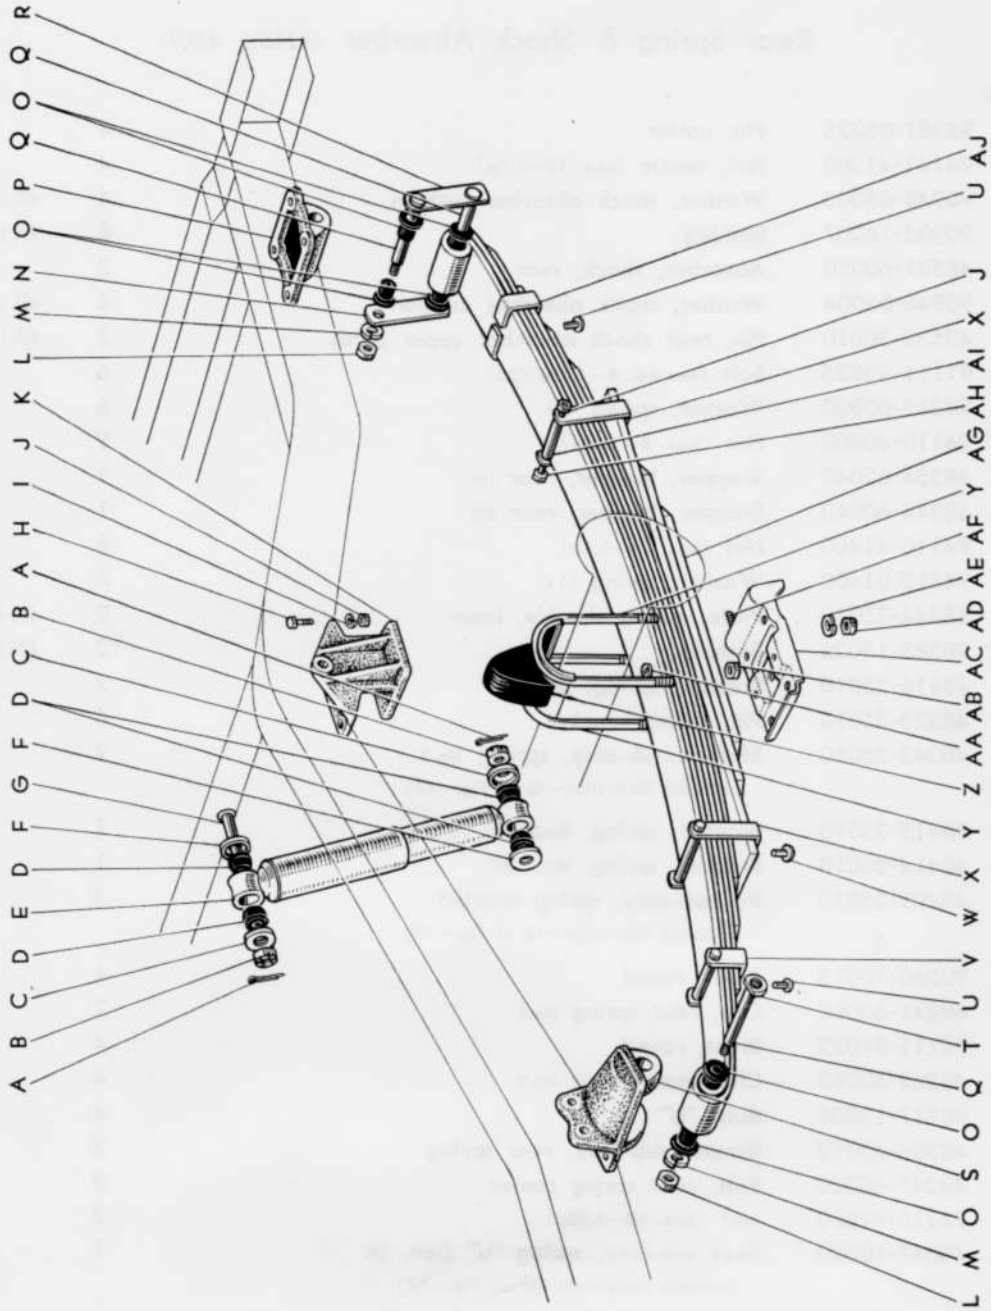

C 1489

Toyota Land Cruiser


ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 17)				
AD	90170-13028	Nut, hexagon	8	45V LV
AE	94512-01300	Washer, spring (13)	8	
AF	48533-35010	Pin, rear shock absorber lower pivot	2	45V LV
AG	48220-60030	Spring assy, rear, LH	1	45V LV
		(includes illustrations J, U~X, AA, AB, AH~AJ of Fig 17)		
	48210-60060	Spring assy, rear, RH	1	45V LV
	48211-60060	Leaf, rear, spring, No 1	2	45V LV
	48212-60060	Leaf, rear spring, No 2	2	45V LV
	48213-60060	Leaf, rear spring, No 3	2	45V LV
	48202-60060	Leaf sub-assy, rear spring, w clip	2	45V LV
		(includes illustrations U, AJ of Fig 17)		
	48215-60060	Leaf, rear spring, No 5	2	45V LV
	48216-60060	Leaf, rear spring, No 6	2	45V LV
	48203-60060	Leaf sub-assy, rear spring, w clip No 2	2	45V LV
		(includes illustrations W, X of Fig 17)		
	48218-60060	Leaf, rear spring, No 8	2	45V LV
	48219-60060	Leaf, rear spring, No 9	2	45V LV
AH	90101-08083	Bolt, hexagon	6	45V LV
AI	48146-60010	Case, front spring clip bolt	6	45V LV
AJ	48243-60060	Clip, rear spring, No 3	2	45V LV

CHASSIS

SPACE FOR MEMO

ELECTRICAL GROUP

FIG.—20 COMBINATION METER & SWITCH

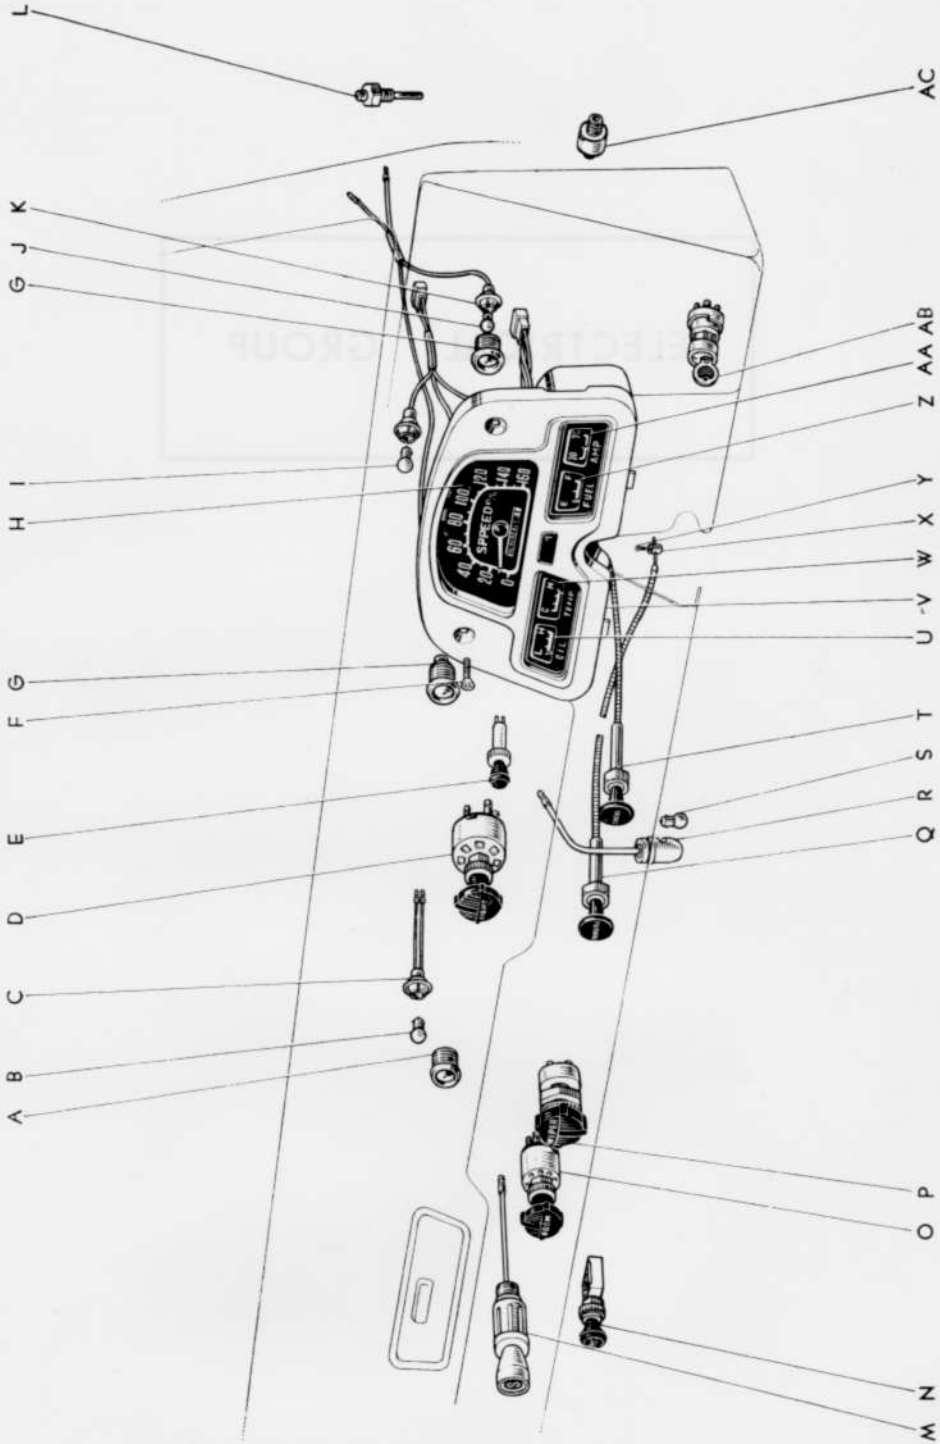


E 0802

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Combination Meter & Switch				
(FIG 20)				
A	81806-60010	Lamp, transfer indicator signal	1	40V LV 45V LV
B	99132-13015	Bulb (For transfer indicator lamp	1	40V LV 45V LV
	81860-60010	Lamp assy, front drive indicator (includes illustrations A~C of Fig 20)	1	40V LV 45V LV
C	81086-60010	Socket & wire sub-assy, front drive indicator lamp	1	40V LV 45V LV
D	84110-60010	Switch assy, light control	1	40V LV 45V LV
E	84270-60010	Switch assy, general use pull type	1	40V LV 45V LV
	64191-95211	Plug, hole (For U.S.A.)	1	LV
F	93230-26012	Screw (oval-hd. 6 10p 12)	2	
G	81801-55010	Housing sub-assy, turn indicator lamp	2	40V LV 45V LV
H	83110-60010	Speedometer assy (km) }	1	40V LV 45V LV
	83110-60020	Speedometer assy (Mile) }		
I	99132-13030	Bulb (12V 3WL)	5	40V LV 45V LV
J	99132-13030	Bulb (12V 3WL)	2	40V 45V
	90981-11002	Bulb (12V 3W)	2	LV LV
	81810-60010	Lamp assy, turn signal indicator (includes illustrations G, J, K of Fig 20)	2	40V 45V
	81810-60020	Lamp assy, turn signal indicator	2	LV LV
K	81081-60010	Socket & wire sub-assy, flasher indicator lamp	1	40V LV 45V LV
L	83420-20010	Gage assy, water temperature sender	1	40V LV 45V LV
M	85500-10011	Lighter assy, cigarette	1	40V LV 45V LV
	85500-10012	Lighter assy, cigarette (For U.S.A. (Effective from the end of December 64)	1	LV
N	84160-60020	Switch assy, fog lamp (OPT)	1	40V LV 45V LV
O	84170-59620	Switch assy, interior dome lamp	1	45V LV
P	84650-60010	Switch assy, windshield wiper	1	40V LV 45V LV
	84650-92170	Switch assy, windshield wiper (For U.S.A.)	1	LV
Q	78410-60010	Rod assy, throttle	1	40V LV 45V LV
R	81230-60010	Lamp assy, courtesy (Excludes U.S.A.) (includes illustration S of Fig 20)	1	40V LV 45V LV
S	90981-12001	Bulb (12V 8W (Excludes U.S.A.)	1	40V LV 45V LV
T	78310-60010	Rod assy, choke	1	40V LV 45V LV
U	83510-60010	Gage assy, oil pressure receiver	1	40V LV 45V LV

ELECT

FIG.—20 COMBINATION METER & SWITCH

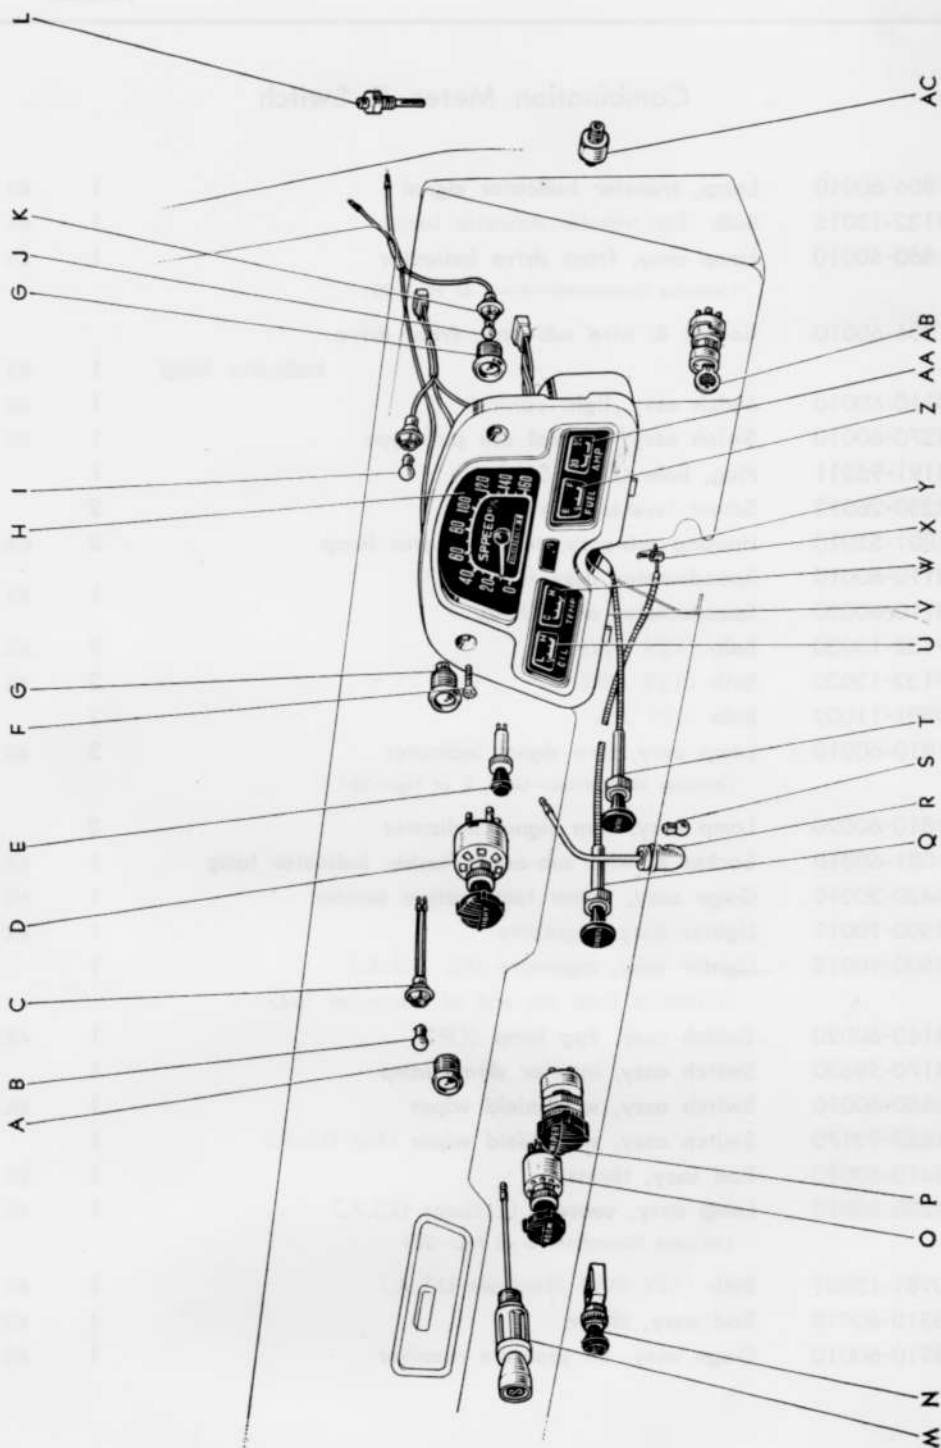


E 0802

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 20)				
V	83100-60011	Meter assy, combination (km)	1	40V LV 45V LV
	83100-60021	Meter assy, combination (Mile) (includes illustrations H, I, U, W, Z, AA of Fig 20)		
W	83410-60010	Gage assy, temperature receiver	1	40V LV 45V LV
X	78471-50010	Stopper, throttle wire	1	40V LV 45V LV
Y	93110-14010	Screw (rd-hd 4 075p 10)	1	
Z	83310-60010	Gage assy, fuel receiver	1	40V LV 45V LV
AA	83610-60020	Ammeter assy	1	40V LV 45V LV
	69500-60010	Cylinder & key set assy, door & ignition (includes illustration A of Fig - 35 on Model FJ40 Parat Catalog and illustration AB of Fig 20 and illustration AK of Fig 47)	1	40V LV
	69500-60060	Cylinder & key set assy, door & ignition (includes illustration C of Fig - 8, illustration AB of Fig 20 and illustrations H~J, R~Z of Fig 27)	1	45V LV
	69500-60070	Cylinder & key set assy (includes illustration AB of Fig 20 and illustration AK of Fig 47)	1	40V LV
	69500-60902	Primary key set assy (includes illustration C of Fig 8, illustration - AB of Fig 20 and illustration U of Fig -27)	1	45V LV
AB	84450-60020	Switch assy, ignition	1	40V LV 45V LV
AC	83520-55010	Gage assy, oil pressure sender	1	40V LV 45V LV

ELECT

FIG. 21 WIRING HARNESS & CLAMP (FJ45V) Old

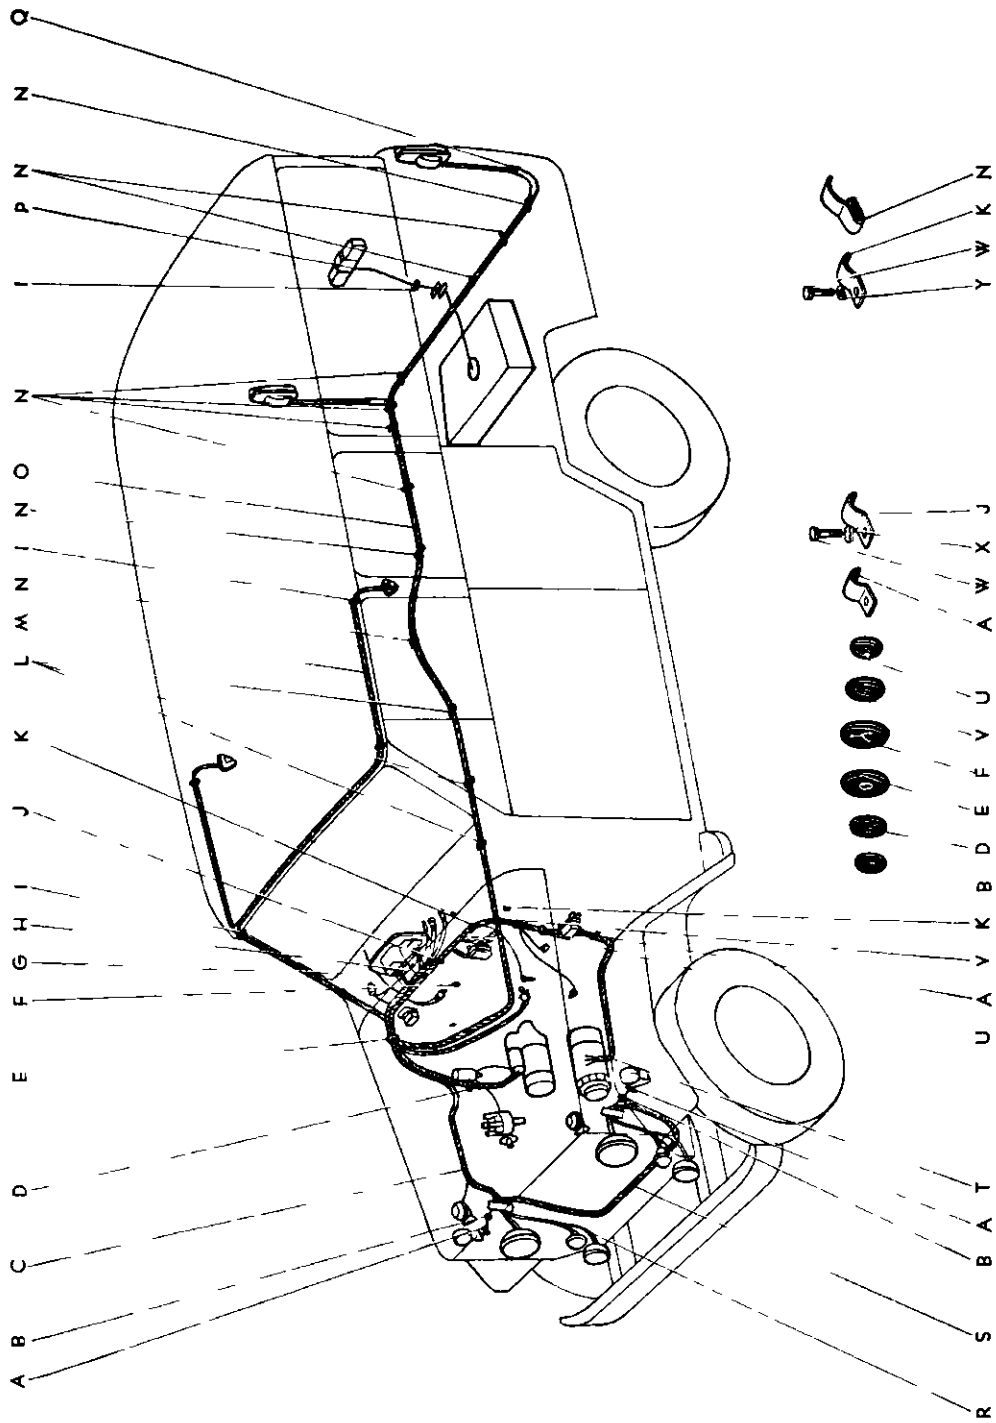

E 0297-D

Toyota Land Cruiser

85

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------


Wiring Harness & Clamp (FJ45V)-Old

(FIG 21)

A	90462-10006	Clamp	3	40V LV 45V LV
B	90480-15007	Grommet, cab wiring harness	2	40V LV 45V LV
C	82220-60071	Harness assy, wiring cowl	1	45V
	82220-60100	Harness assy, wiring cowl OPT	1	45V
D	90480-01051	Grommet	1	40V LV 45V LV
E	90480-46032	Grommet	1	40V LV 45V LV
F	90480-19048	Grommet For wiring harness	3	40V LV 45V LV
G	82730-92000	Harness assy, windshield wiper wire	1	45V LV
H	82211-60010	Wire, instrument panel lamp feed	1	40V LV 45V LV
	82811-92000	Rubber, license lamp wire harness bushing	5	45V LV
J	90462-10004	Clamp, cable large	1	40V LV 45V LV
K	90462-10008	Clamp, wiring harness	2	40V 45V
L	90462-10034	Clamp	3	45V LV
M	82510-92000	Harness assy, room lamp wire	1	45V LV
N	90463-08030	Clamp	9	40V LV 45V LV
O	82420-60070	Wiring assy, chassis	1	45V LV
P	82470-92000	Harness assy, license lamp wire	1	45V LV
	82407-92050	Harness sub-assy, license lamp wire OPT	1	45V LV
	82047-92000	Harness sub-assy, license lamp connecting wire OPT	1	45V LV
Q	80248-92000	Pipe, wire harness guide	2	45V LV
R	82024-60010	Wire sub-assy, fog lamp feed OPT)	1	40V 45V
S	82240-60040	Wiring assy, headlamp junction	1	45V
T	82250-60010	Wiring assy, to generator	1	40V LV 45V LV
U	90480-20023	Grommet	1	40V LV 45V LV
V	90480-46033	Grommet	1	40V LV 45V LV
W	91111-40816	Bolt (hex-hd 8 1.25p 16	3	
X	94524-00800	Washer, toothed 8)	1	
Y	94512-00800	Washer, spring 8	2	

ELECT

FIG. 22 WIRING HARNESS & CLAMP (FJ45V)
(Effective from September '64)

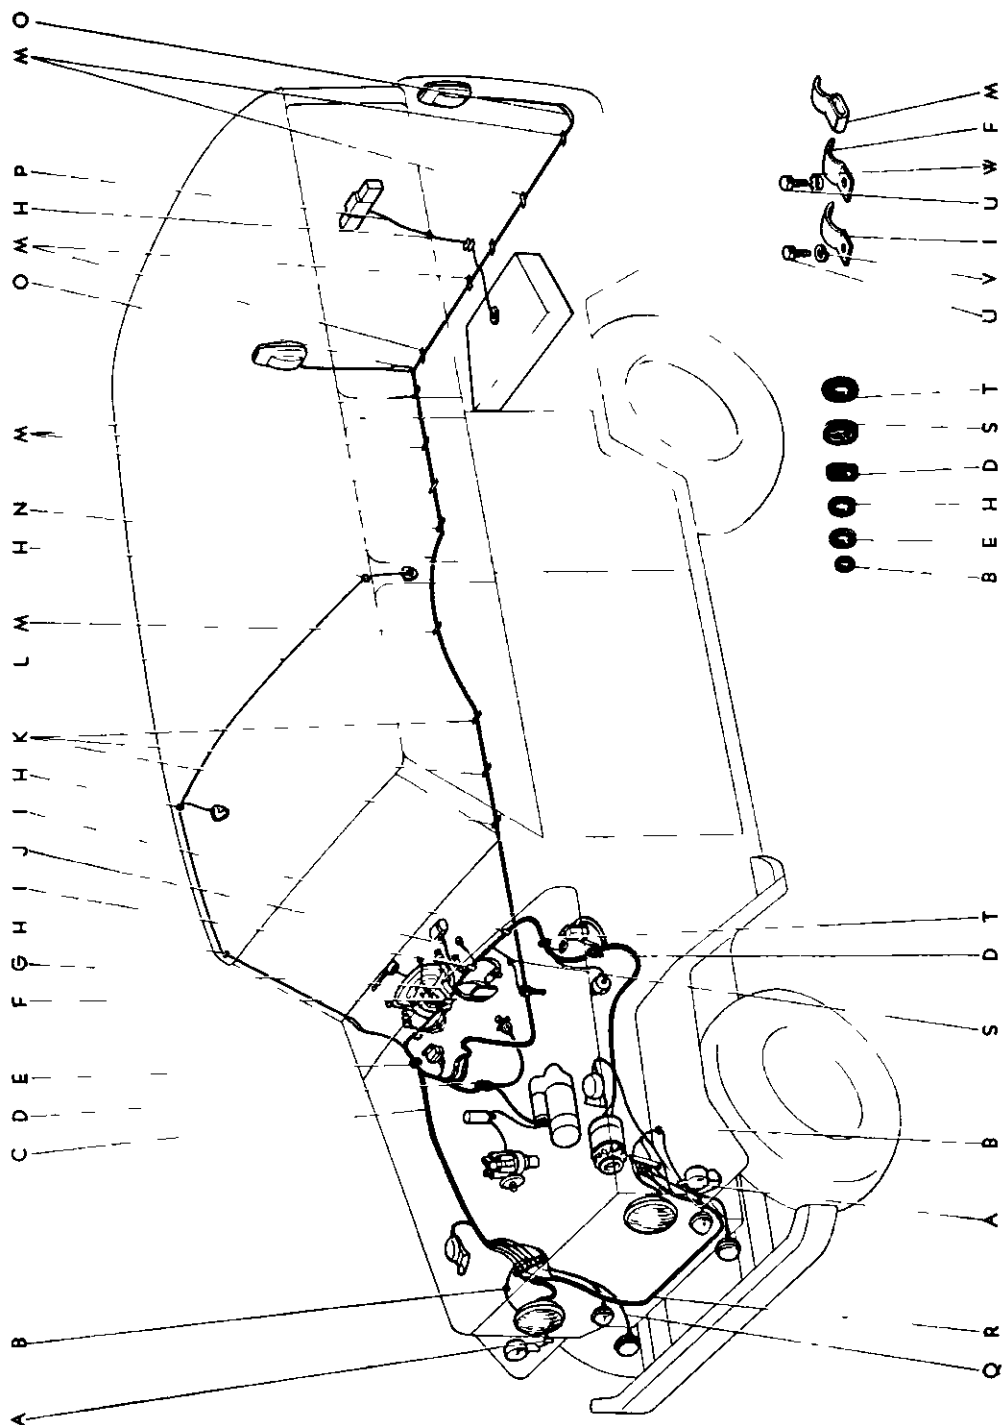

E 0803

Toyota Land Cruiser

87

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------

Wiring Harness & Clamp (FJ45V)

(Effective from September 64)


(FIG.22)

A	90462-10006	Clamp	2	40V LV 45V LV
B	90480-15007	Grommet, cab wiring harness	2	40V LV 45V LV
C	82220-60072	Harness assy, wiring cowl	1	45V
	82220-60100	Harness assy, wiring cowl (OPT)	1	45V
D	90480-01050	Grommet	2	40V LV 45V LV
E	90480-46032	Grommet	1	40V LV 45V LV
F	90462-10004	Clamp, cable large	1	40V LV 45V LV
G	82211-60010	Wire, instrument panel lamp feed	1	40V LV 45V LV
H	82811-92000	Rubber, license lamp wire harness bushing	5	45V LV
I	90462-10008	Clamp, wiring harness	2	40V 45V
J	82730-92000	Harness assy, windshield wiper wire	1	45V LV
K	90462-10034	Clamp	3	45V LV
L	82510-92000	Harness assy, room lamp wire	1	45V LV
M	90463-08030	Clamp	9	40V LV 45V LV
N	82420-60070	Harness assy, chassis wire	1	45V LV
O	80248-92000	Pipe, wire harness guide	2	45V LV
P	82470-92000	Harness assy, license lamp wire	1	45V LV
	82407-92050	Harness sub-assy, license lamp wire (OPT)	1	45V LV
	82047-92000	Harness sub-assy, license lamp connecting wire (OPT)	1	45V LV
Q	82024-60010	Wire sub-assy, fog lamp feed (OPT)	1	40V 45V
R	82240-60040	Wiring assy, headlamp junction	1	45V
S	90480-19048	Grommet (For wiring harness)	3	40V LV 45V LV
T	90480-46033	Grommet	1	40V LV 45V LV
U	91111-40816	Bolt (hex-hd 8 1 25p 16)	3	
V	94512-00800	Washer, spring (8)	2	
W	94524-00800	Washer, toothed (8)	1	

ELECT

Donated by Dominic Smith cruisercult.com

FIG. 23 WIRING HARNESS & CLAMP (FJ45V) Old

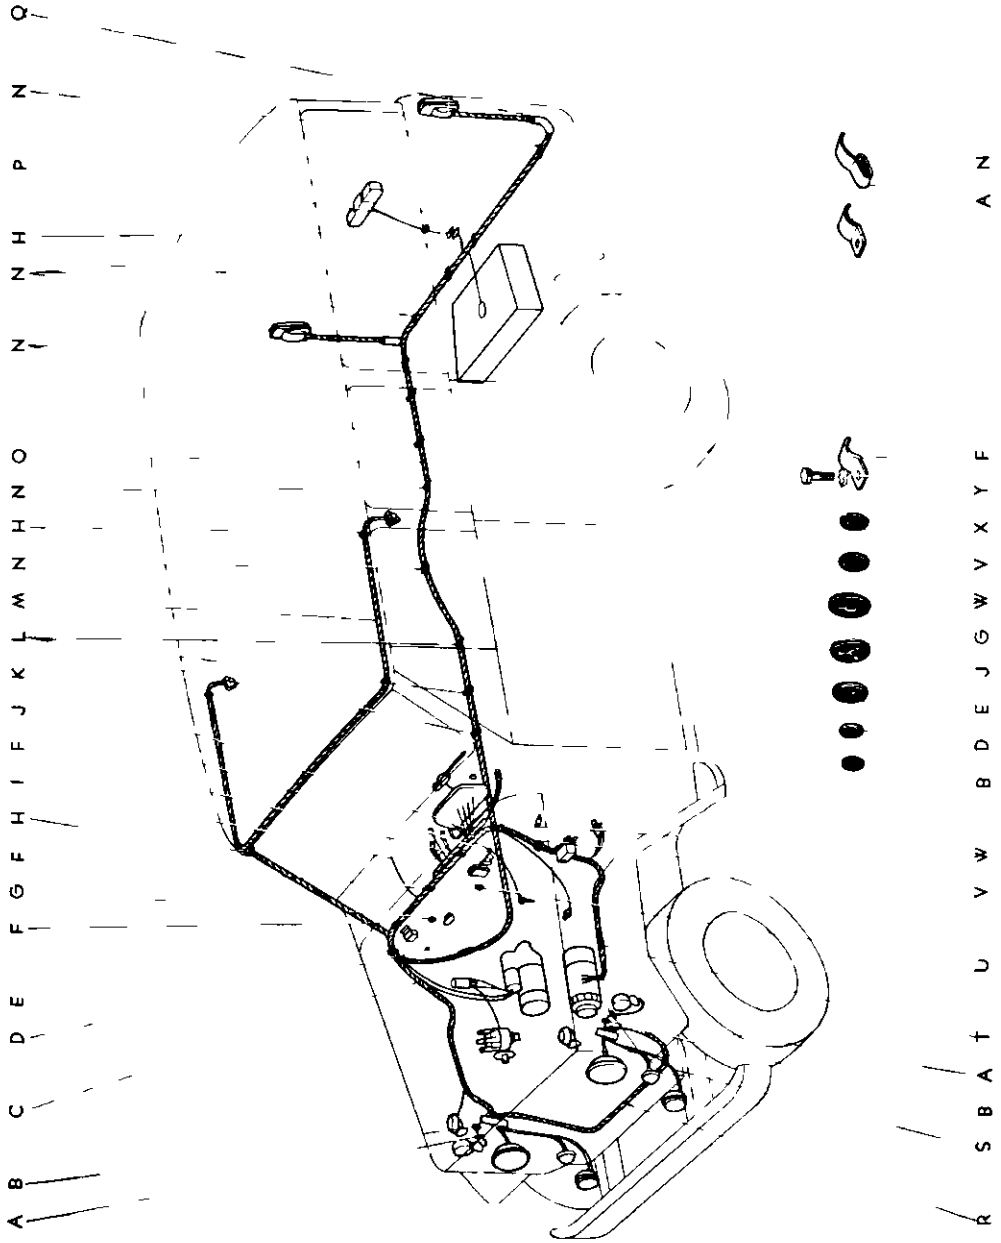

E 0298-D


Toyota Land Cruiser

89

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Wiring Harness & Clamp (FJ45LV -Old)				
(FIG 23				
A	90462-10006	Clamp	2	40V LV 45V LV
B	90480-15007	Grommet, cab wiring harness	2	40V LV 45V LV
C	82220-60041	Harness assy, wiring cowl	1	LV
	82220-60110	Harness assy, wiring cowl OPT	1	LV
D	90480-01051	Grommet	1	40V LV 45V LV
E	90480-46032	Grommet	1	40V LV 45V LV
F	90462-10004	Clamp, cable large	1	40V LV 45V LV
G	90480-46033	Grommet	1	40V LV 45V LV
H	82811-92000	Rubber, license lamp wire harness bushing	5	45V LV
I	82730-92000	Harness assy, windshield wiper wire	1	45V LV
J	90480-19048	Grommet For wiring harness	3	40V LV 45V LV
K	82211-60010	Wire, instrument panel lamp feed	1	40V LV 45V LV
L	90462-10034	Clamp	3	45V LV
M	82510-92000	Harness assy, room lamp wire	1	45V LV
N	90463-08030	Clamp	9	40V LV 45V LV
O	82420-60070	Harness assy, chassis wire	1	45V LV
P	82470-92000	Harness assy, license lamp wire	1	45V LV
	82407-92050	Harness sub-assy, license lamp wire OPT	1	45V LV
	82047-92000	Harness sub-assy, license lamp connecting wire OPT	1	45V LV
Q	80248-92000	Pipe, wire harness guide	2	45V LV
R	82240-60010	Wiring assy, headlamp junction	1	LV
S	82024-60020	Wire sub-assy, fog lamp feed OPT	1	LV LV
T	82250-60010	Wiring assy, to generator	1	40V LV 45V LV
U	90480-26043	Grommet	1	LV
V	90480-20023	Grommet	1	40V LV 45V LV
W	90480-46041	Grommet	1	LV LV
X	91111-40816	Bolt (hex-hd 8 1.25p 16	3	
Y	94524-00800	Washer, toothed 8	1	

ELECT

FIG. 24 WIRING HARNESS & CLAMP (FJ45LV)
(Effective from September '64)

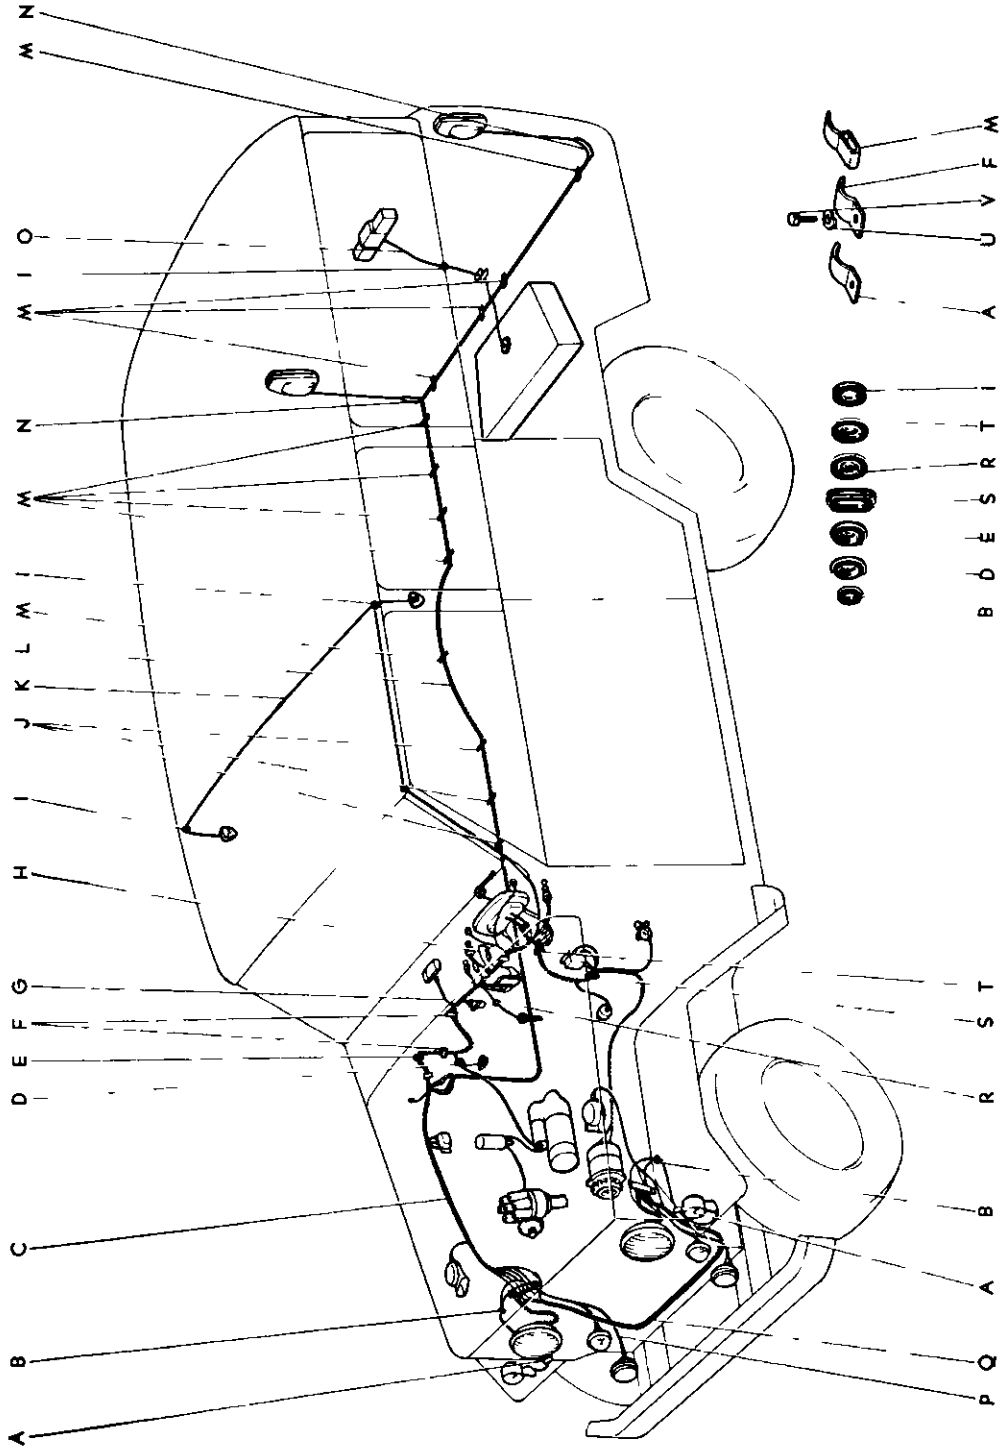


E 0804

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Wiring Harness & Clamp (FJ45LV)				
(Effective from September 64)				
(FIG 24)				
A	90462-10006	Clamp	2	40V LV 45V LV
B	90480-15007	Grommet, cab wiring harness	2	40V LV 45V LV
C	82220-60120	Harness assy, wiring cowl	1	LV
	82220-60110	Harness assy, wiring cowl (OPT)	1	LV
D	90480-46033	Grommet	1	40V LV 45V LV
E	90480-46032	Grommet	1	40V LV 45V LV
F	90462-10004	Clamp, cable large	3	40V LV 45V LV
G	82730-92000	Harness assy, windshield wiper wire	1	45V LV
H	82211-60010	Wire, instrument panel lamp feed	1	40V LV 45V LV
I	82811-92000	Rubber, license lamp wire harness bushing	5	45V LV
J	90462-10034	Clamp	3	45V LV
K	82510-92000	Harness assy, room lamp wire	1	45V LV
	82510-92170	Harness assy, room lamp wire (For U.S.A.)	1	LV
L	82420-60070	Harness assy, chassis wire	1	45V LV
	82420-60050	Harness assy, chassis wire	1	LV
M	90463-08030	Clamp	9	40V LV 45V LV
N	80248-92000	Pipe, wire harness guide	2	45V LV
O	82470-92000	Harness assy, license lamp wire	1	45V LV
	82407-92050	Harness sub-assy, license lamp wire (OPT)	1	45V LV
	82047-92000	Harness sub-assy, license lamp connecting wire (OPT)	1	45V LV
P	82024-60020	Wire sub-assy, fog lamp feed (OPT)	1	LV
Q	82240-60010	Wiring assy, headlamp junction	1	LV
R	90480-19048	Grommet (For wiring harness)	1	40V LV 45V LV
S	90480-01050	Grommet	1	40V LV 45V LV
T	90480-46041	Grommet	1	LV LV
U	94512-00800	Washer, spring (8)	3	
V	91111-40816	Bolt (hex-hd 8 1.25p 16)	3	

ELECT

FIG. 25 LAMP & SWITCH FJ45V, 45LV

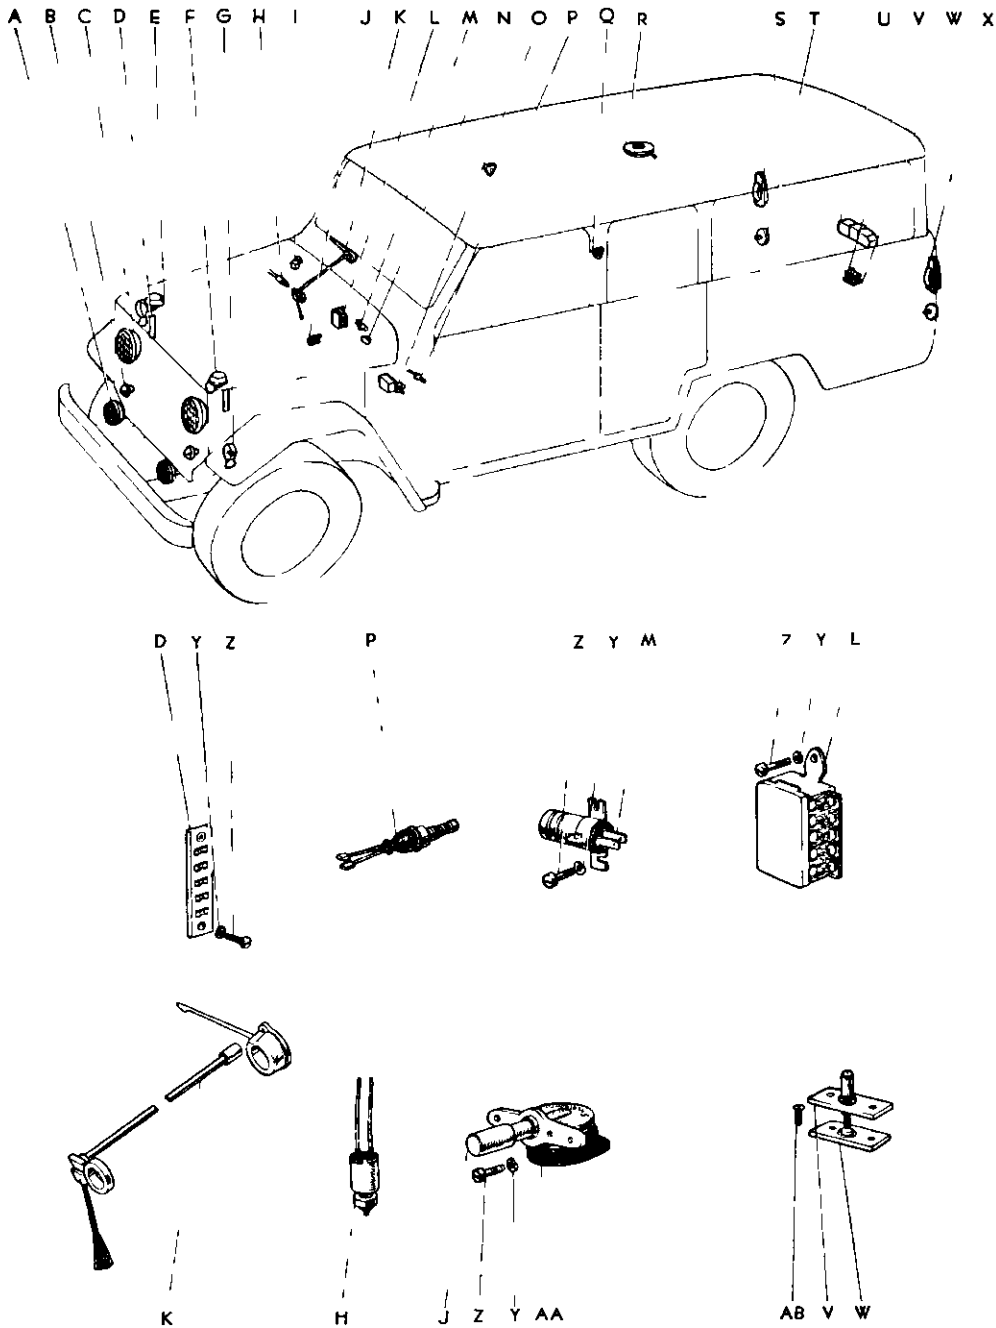

E 0300-D


Toyota Land Cruiser

93

ILLUS- TRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
Lamp & Switch FJ45V, 45LV				
(FIG 25				
A	81210-60010	Lamp assy, fog 12V 35W OPT Refer Fig 115 of Parts Catalog Model FJ40	2	40V LV 45V LV
B	81510-60010	Lamp assy For parking 12V 25 8W 32 4CP (Refer Fig 113 of Parts Catalog Model FJ40	2	40V LV 45V LV
C	81110-60010	Headlamp assy 12V 50 40W	2	40V 45V
	81110-60020	Headlamp assy 12V 50 40W Refer Fig 113 of Parts Catalog Model FJ40	2	LV LV
D	82670-30020	Block assy, junction	1	40V LV 45V LV
E	86510-30030	Horn assy, high pitched 1	1	40V LV 45V LV
	86510-30020	Horn assy, high pitched 1 (Refer Fig 116 & 117 of Parts Catalog Model FJ40	1	40V LV 45V LV
F	86520-30030	Horn assy, low pitched	1	40V LV 45V LV
	86520-30020	Horn assy, low pitched 1 Refer Fig 116 & 117 of Parts Catalog Model FJ40	1	40V LV 45V LV
G	81510-60070	Lamp assy, front turn signal Refer Fig —26	2	45V
	81510-60040	Lamp assy, front turn signal	2	LV
H	84340-30010	Switch assy, stop lamp	1	40V LV 45V LV
I	86530-20040	Relay assy, horn 1	1	40V LV 45V LV
	86530-20030	Relay assy, horn 1 (Refer Fig 116 & 117 of Parts Catalog Model FJ40	1	40V LV 45V LV
J	84140-59620	Switch assy, headlamp dimmer includes Illustration AA of Fig 25	1	40V LV 45V LV
K	84310-60010	Switch assy, turn signal	1	40V 45V
	84310-60020	Switch assy, turn signal	1	LV LV
L	82610-60021	Block assy, fuse	1	40V 45V
	82610-60031	Block assy, fuse	1	LV LV
	82610-20011	Block assy, fuse For U.S.A. (Effective from the end of September 64	1	LV
	99118-62930	Fuse (30 amp	2	40V LV 45V LV
	99118-62915	Fuse (15 amp	2	40V LV 45V LV
	99118-62905	Fuse (5 amp	1	40V LV 45V LV
M	81980-35010	Flasher assy, turn signal	1	40V 45V
	81980-20020	Flasher assy, turn signal	1	LV LV
N	81420-35010	Consent assy, inspection lamp Refer Fig 27)	1	40V LV 45V LV

ELECT

FIG. 25 LAMP & SWITCH (FJ45V, 45LV)

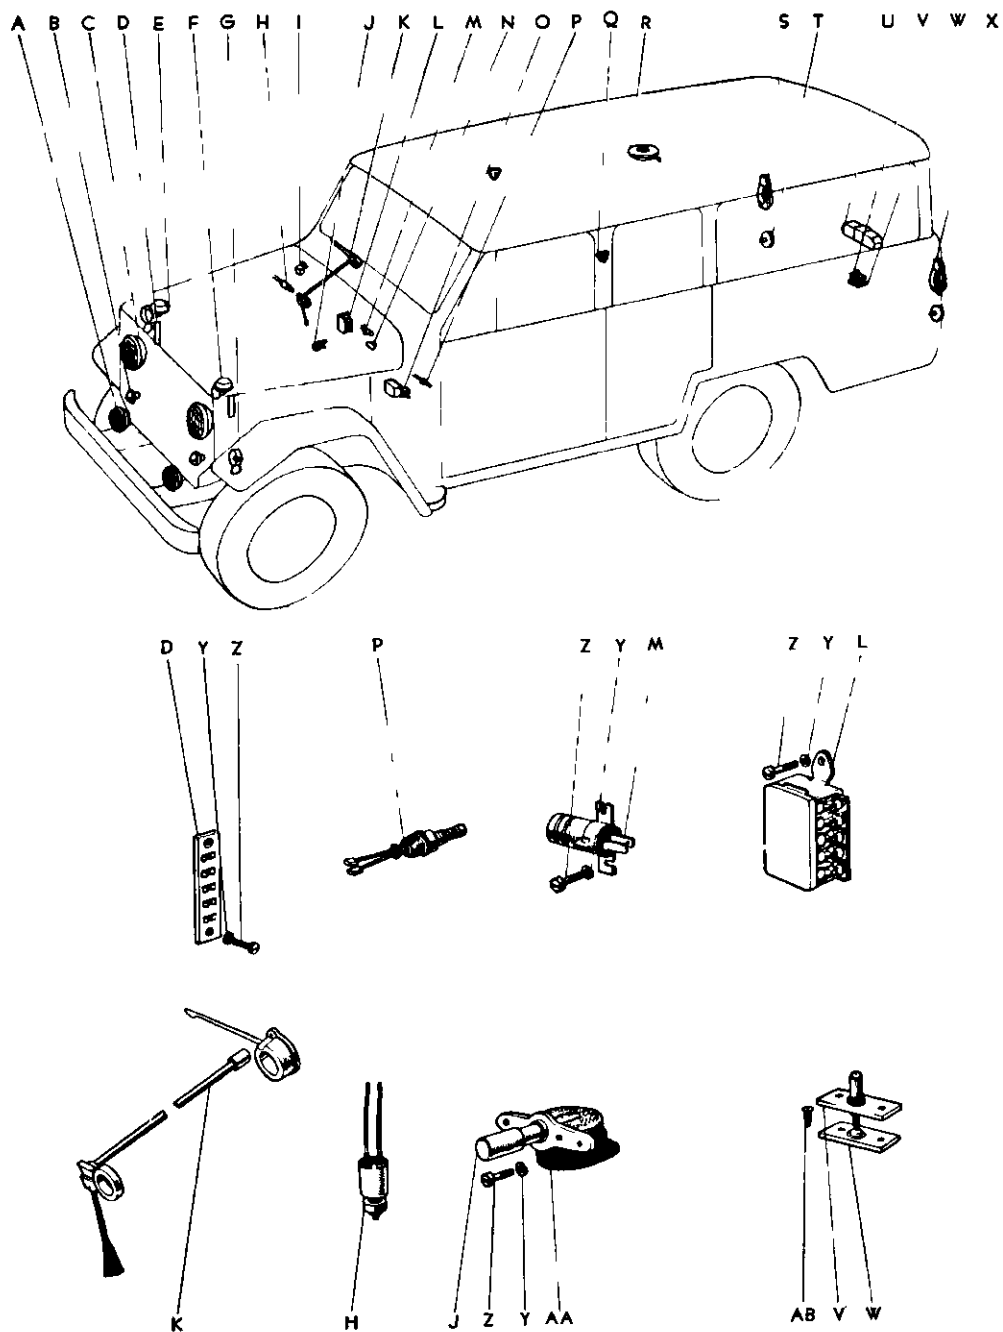


E 0300-D

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 25)				
O	27700-40010	Regulator assy, generator	1	40V LV 45V LV
P	84610-30010	Switch assy, over drive lock out		
		For front drive indicator	1	40V LV 45V LV
Q	81240-30010	Lamp assy, pillar	2	45V LV
		Refer Fig —26)		
R	81240-61010	Lamp assy, dome (For U.S.A.)	1	LV
S	81550-60040	Lamp assy, rear combination, RH	1	45V LV
		Refer Fig — 27)		
T	81910-25010	Reflector assy, reflex	1	45V LV
		(Refer Fig — 53)		
U	81270-60050	Lamp assy, license w tail gate handle	1	45V LV
		Refer Fig —27)		
V	84804-92000	Switch sub-assy, license lamp connecting female	1	45V LV
W	84803-92000	Switch sub-assy, license lamp connecting male	1	45V LV
X	81560-60010	Lamp assy, rear combination, LH	1	45V LV
		(Refer Fig — 27)		
Y	94512-00600	Washer, spring (6)	8	
Z	93180-16016	Screw (hex-hd 6 10p 16)	10	
AA	84141-59610	Cover, headlamp dimmer switch	1	40V LV 45V LV
AB	93220-14016	Screw (bind-hd 4 075p 16)	4	

ELECT

FIG.—26 FRONT TURN SIGNAL LAMP & PILLAR LAMP (FJ45V, 45LV)

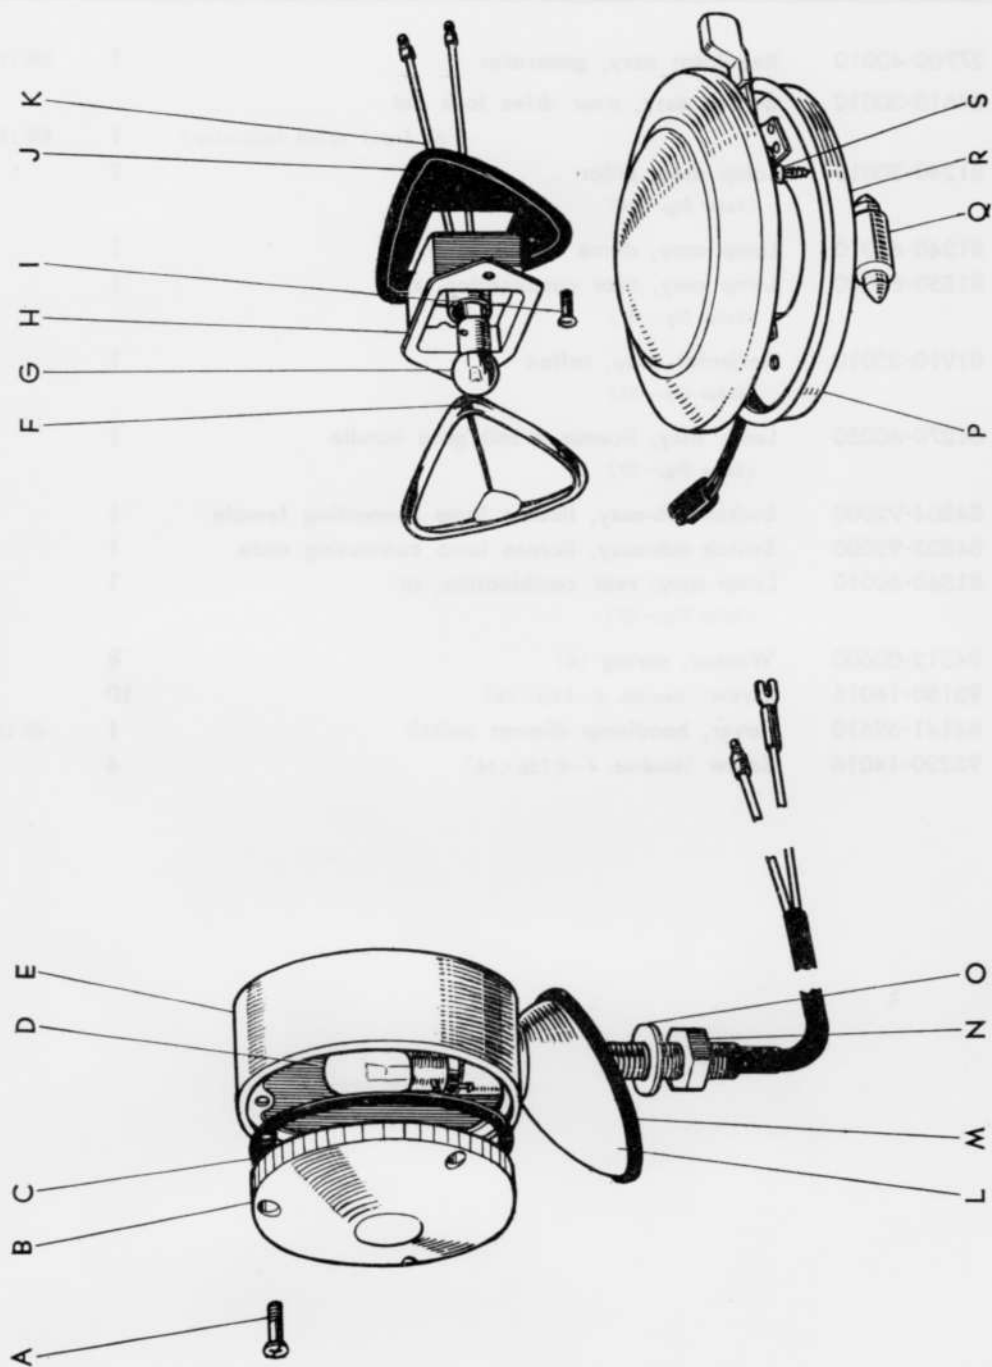


E 0301-A

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Front Turn Signal Lamp & Pillar Lamp FJ45V, 45LV				
(FIG 26)	81510-60070	Lamp assy, front turn signal (includes Illustrations—A~E, L~O of Fig 26)	2	45V
	81510-60040	Lamp assy, front turn signal	2	LV
A	90999-90014	Screw	6	45V LV
B	81511-55010	Lens, front turn signal lamp	2	45V LV
C	81512-55010	Packing, front turn signal lamp	2	45V LV
D	99132-22250	Bulb (12V 25 8W)	2	45V
	99132-12250	Bulb (12V 32cp)	2	LV
E	81513-60070	Body & cord sub-assy, front turn signal lamp	2	45V
	81513-60030	Body, front turn signal lamp	2	LV
	81240-30010	Lamp assy, pillar (includes Illustrations F~K of Fig 26)	2	45V LV
F	81241-39420	Lens, pillar lamp	2	45V LV
G	99132-13060	Bulb (12V 6W)	2	45V LV
H	81243-39410	Body, pillar lamp	2	45V LV
I	93520-16020	Screw, tapping	4	
J	81244-39410	Packing, pillar lamp body	2	45V LV
K	81245-39410	Cord, pillar lamp	2	45V LV
L	81518-60030	Bracket, front turn signal lamp	2	45V LV
M	81514-60030	Packing, front turn signal lamp body	2	45V
	81514-60040	Packing, front turn signal lamp body	2	LV
N	94110-41200	Nut (hex 12 1.5p)	2	
O	94522-01200	Washer, toothed (12)	2	
	94612-11200	Washer, plate (12 23)	2	
	94511-11200	Washer, spring (12)	2	
	81240-61010	Lamp assy, dome (For U.S.A) (includes Illustrations P~R of Fig—26)	1	LV
P	81241-30020	Lens, dome lamp (For U.S.A)	1	LV
Q	90981-11004	Bulb (12V 10W) (For U.S.A)	1	LV
R	81243-61010	Body, dome lamp (For U.S.A)	1	LV
S	93510-13512	Screw, tapping	3	

FIG.—27 REAR COMBINATION LAMP & INSPECTION LAMP
(FJ45V, 45LV)

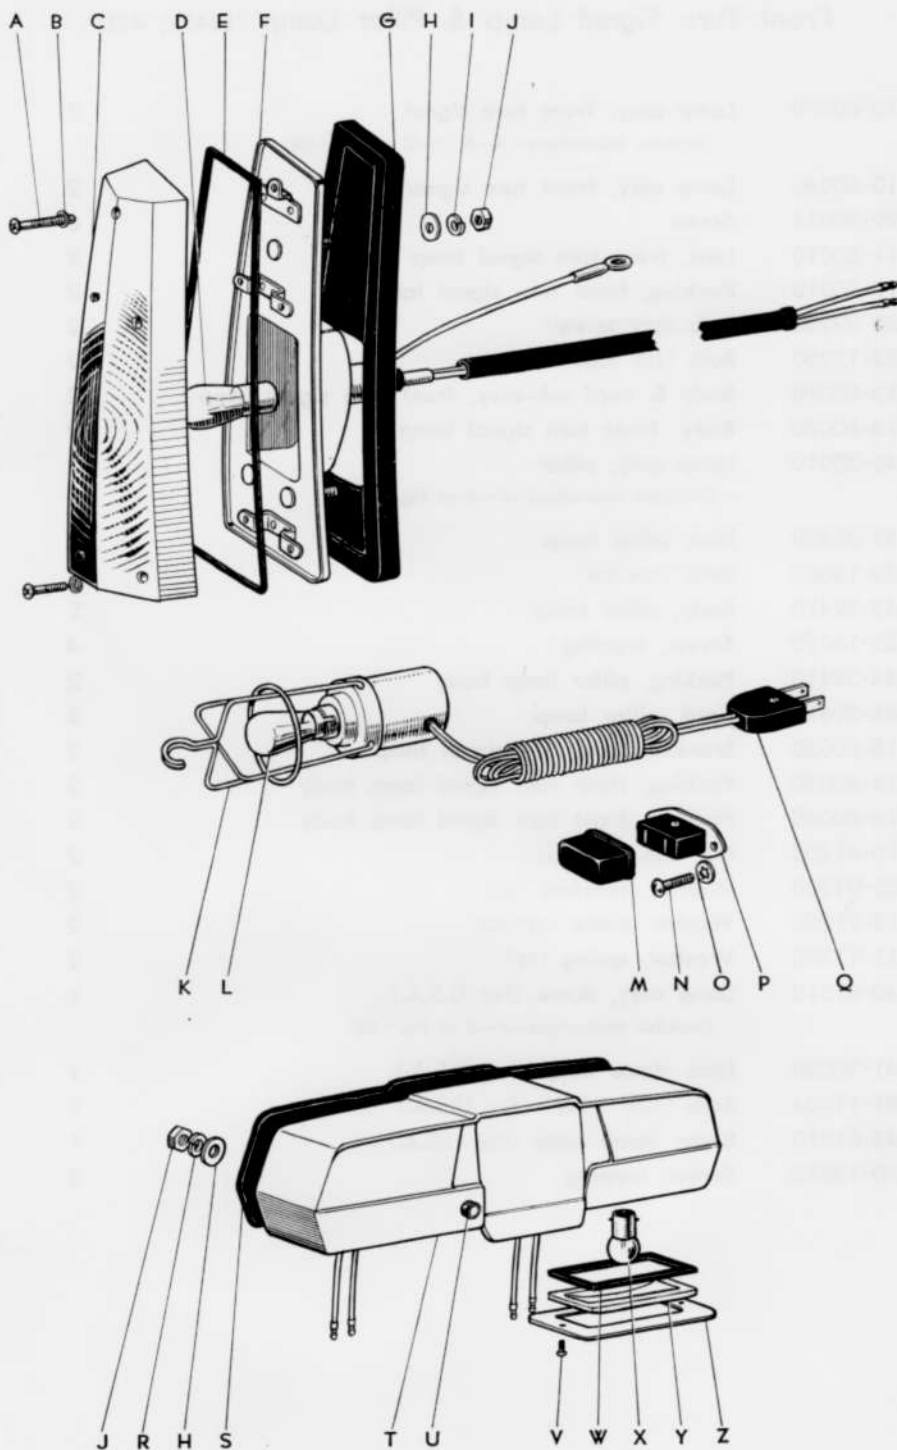

E 0302-B


Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Combination Lamp & Inspection Lamp (FJ45V, 45LV)				
(FIG 27)				
	81550-60040	Lamp assy, rear combination, RH (includes illustrations A~J of Fig 27)	1	45V LV
	81560-60010	Lamp assy, rear combination, LH	1	45V LV
A	81557-31010	Screw, rear combination lamp, long	6	45V LV
	81559-31010	Screw, rear combination lamp, short	4	45V LV
B	81558-31010	Washer, rear combination lamp, leather	10	45V LV
C	81551-60040	Lens, rear combination lamp, RH	1	45V LV
	81561-60010	Lens, rear combination lamp, LH	1	45V LV
D	99132-22250	Bulb (12V 25 8W)	2	45V LV
E	81552-31010	Packing, rear combination lamp lens, RH	1	45V LV
	81562-31010	Packing, rear combination lamp lens, LH	1	45V LV
F	81553-60040	Body, rear combination lamp, RH	1	45V LV
	81563-60010	Body, rear combination lamp, LH	1	45V LV
G	81554-31010	Packing, rear combination lamp body, RH	1	45V LV
	81564-31010	Packing, rear combination lamp body, LH	1	45V LV
H	94612-10600	Washer, plate (6 10)	12	
I	94512-00600	Washer, spring (6)	6	
J	94110-40600	Nut (hex 6 10p)	12	
K	81370-60010	Lamp assy, inspection (includes illustrations L, Q of Fig —27)	1	40V LV 45V LV
L	90981-12003	Bulb (12V 24W)	1	40V LV 45V LV
M	81431-39610	Cover, inspection lamp consent	1	40V LV 45V LV
N	93110-14010	Screw (rd-hd. 4—0.75p 10)	2	
O	94521-00400	Washer, toothed (4)	2	
P	81420-35010	Socket assy, inspection lamp (includes illustration M of Fig 27)	1	40V LV 45V LV
Q	81401-35010	Plug sub-assy, inspection lamp	1	40V LV 45V LV
	81270-60050	Lamp assy, license, w tail gate handle (includes illustrations H, J, R~Z of Fig —27)	1	45V LV
R	94511-00600	Washer, spring (6)	6	
S	81274-39410	Packing, body	1	45V LV
T	81273-31010	Body, license lamp w tail gate handle	1	45V LV
U	69540-31010	Cylinder assy, back door lock	1	45V LV
V	81279-39410	Screw, license lamp rim set	4	45V LV

ELECT

Donated by Dominic Smith cruisercult.com

FIG.—27 REAR COMBINATION LAMP & INSPECTION LAMP
(FJ45V, 45LV)

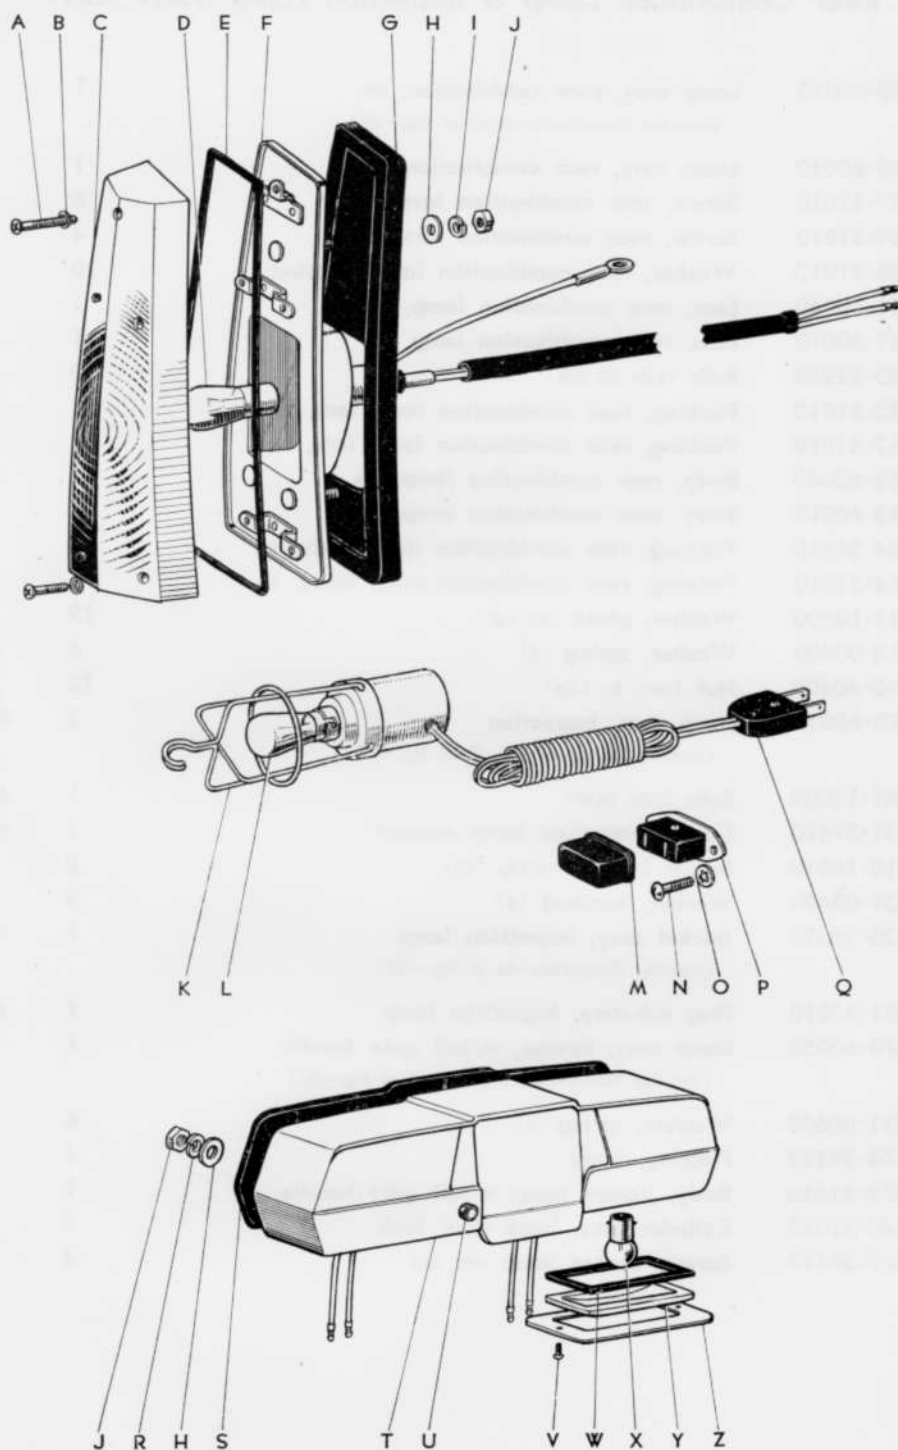


E 0302-B

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 27)				
W	81272-39410	Packing, lens	2	45V LV
X	90981-12001	Bulb (12V 8W)	2	45V LV
Y	81271-39410	Lens, license lamp	2	45V LV
Z	81276-39410	Rim, lamp	2	45V LV

ELECT

FIG.—28 WINDSHIELD WIPER (FJ45V, 45LV)

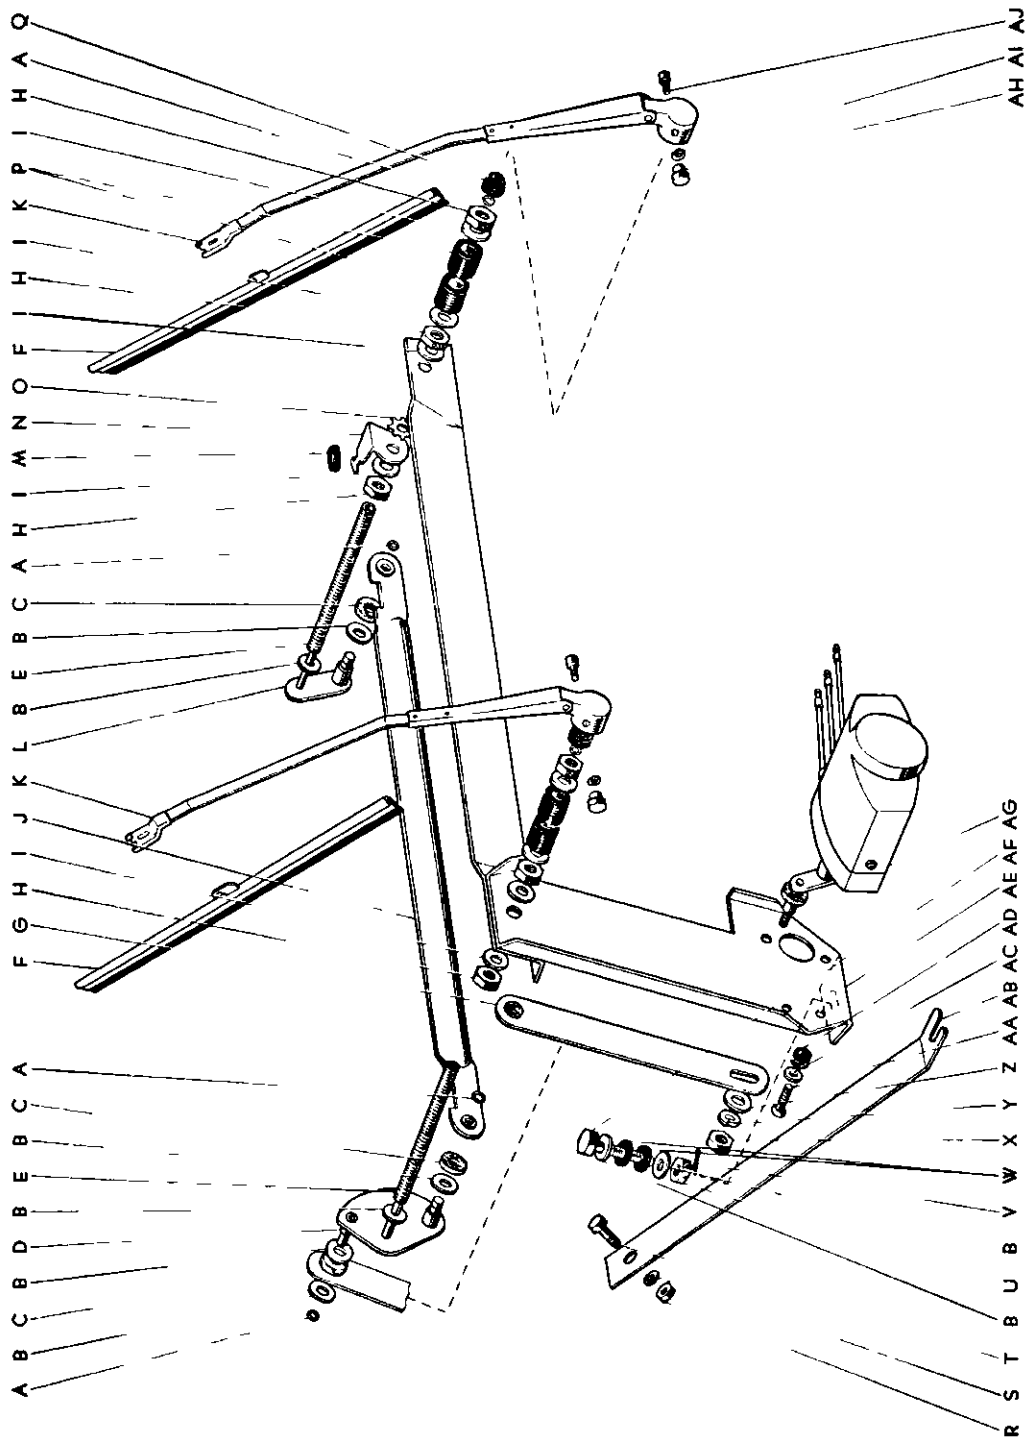

E 0303


Toyota Land Cruiser

103

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Windshield Wiper (FJ45V, 45LV)				
(FIG 28)				
	85110-92000	Wiper assy, windshield (includes illustrations A~Q, X~AA, AC~AE, AG~AJ of Fig 28)	1	45V
	85120-92000	Wiper assy, windshield	1	LV
	85160-35010	Link assy, windshield wiper (includes illustrations A~E, G, J, L of Fig 28)	1	45V LV
A	59217-91101	Washer, ring	5	45V LV
B	94612-10600	Washer, plate (6 10)	8	
C	59216-91101	Packing, windshield wiper connecting rod felt	3	45V LV
D	59202-91101	Shaft sub-assy, windshield wiper arm, RH	1	45V LV
E	59215-91101	Pipe, wiper arm shaft	2	45V LV
F	85220-55010	Blade assy, windshield wiper	2	45V LV
G	59204-91101	Rod sub-assy, wiper motor	1	45V LV
H	59223-91101	Nut, wiper arm shaft pipe	6	45V LV
I	59224-91101	Washer, windshield wiper arm shaft	8	45V LV
J	59205-91101	Rod sub-assy, wiper motor connecting	1	45V LV
K	85190-35010	Arm assy, windshield wiper	2	45V
	85190-35020	Arm assy, windshield wiper	2	LV
L	59203-91101	Shaft sub-assy, windshield wiper arm, LH	1	45V LV
M	59228-91101	Stopper, wiper arm shaft	1	45V LV
N	59227-91101	Stopper, wiper arm shaft	1	45V LV
O	59226-91101	Washer, wiper arm shaft, LH	1	45V LV
P	59225-91101	Packing, windshield wiper arm shaft	4	45V LV
Q	59222-91101	Cap, windshield wiper arm	2	45V LV
R	94110-40600	Nut (hex 6 10p)	1	
S	94511-00600	Washer, spring (6)	1	
T	91111-40616	Bolt (hex-hd 6 10p 16)	1	
U	94110-40600	Nut (hex 6 10p)	1	
V	95381-01620	Pin, cotter	1	
W	59214-91101	Cushion, windshield wiper frame	2	45V LV
X	94110-40500	Nut (hex 5 09p)	1	
Y	94511-00500	Washer, spring (5)	1	
Z	94612-10500	Washer, plate (5 10)	1	
AA	59211-91101	Screw, wiper motor set	4	45V LV
AB	85231-92000	Bracket, windshield wiper	1	45V LV

ELECT

FIG. 28 WINDSHIELD WIPER (FJ45V, 45LV)

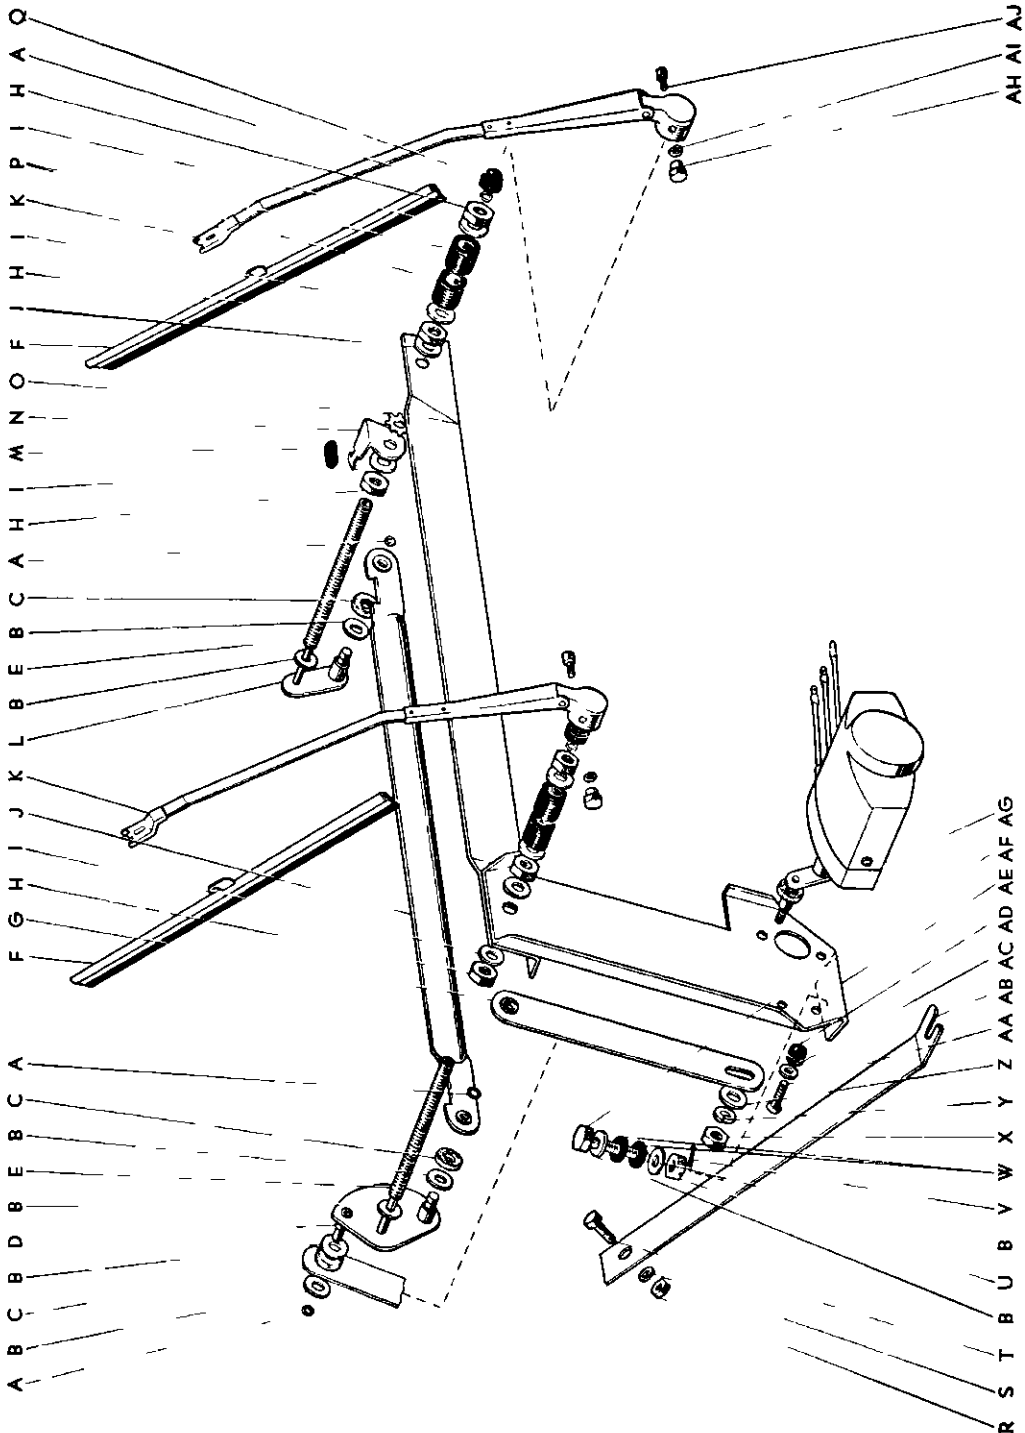

E 0303


Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 28)				
AC	59212-91101	Washer, wiper motor set	4	45V LV
AD	59213-91101	Bushing, windshield wiper motor	4	45V LV
AE	85230-39410	Bracket assy, windshield wiper	1	45V LV
AF	91111-40616	Bolt (hex-hd 6-10p 16)	1	
AG	85110-35010	Motor assy, windshield wiper	1	45V LV
AH	59221-91101	Nut, windshield wiper arm lock	2	45V LV
AI	59219-91101	Washer, windshield wiper arm spring	2	45V LV
AJ	59218-91101	Bolt, windshield wiper arm lock	2	45V LV

ELECT

Donated by Dominic Smith cruisercult.com

FIG.—29 WINDSHIELD WIPER (F145LV, For U.S.A.)

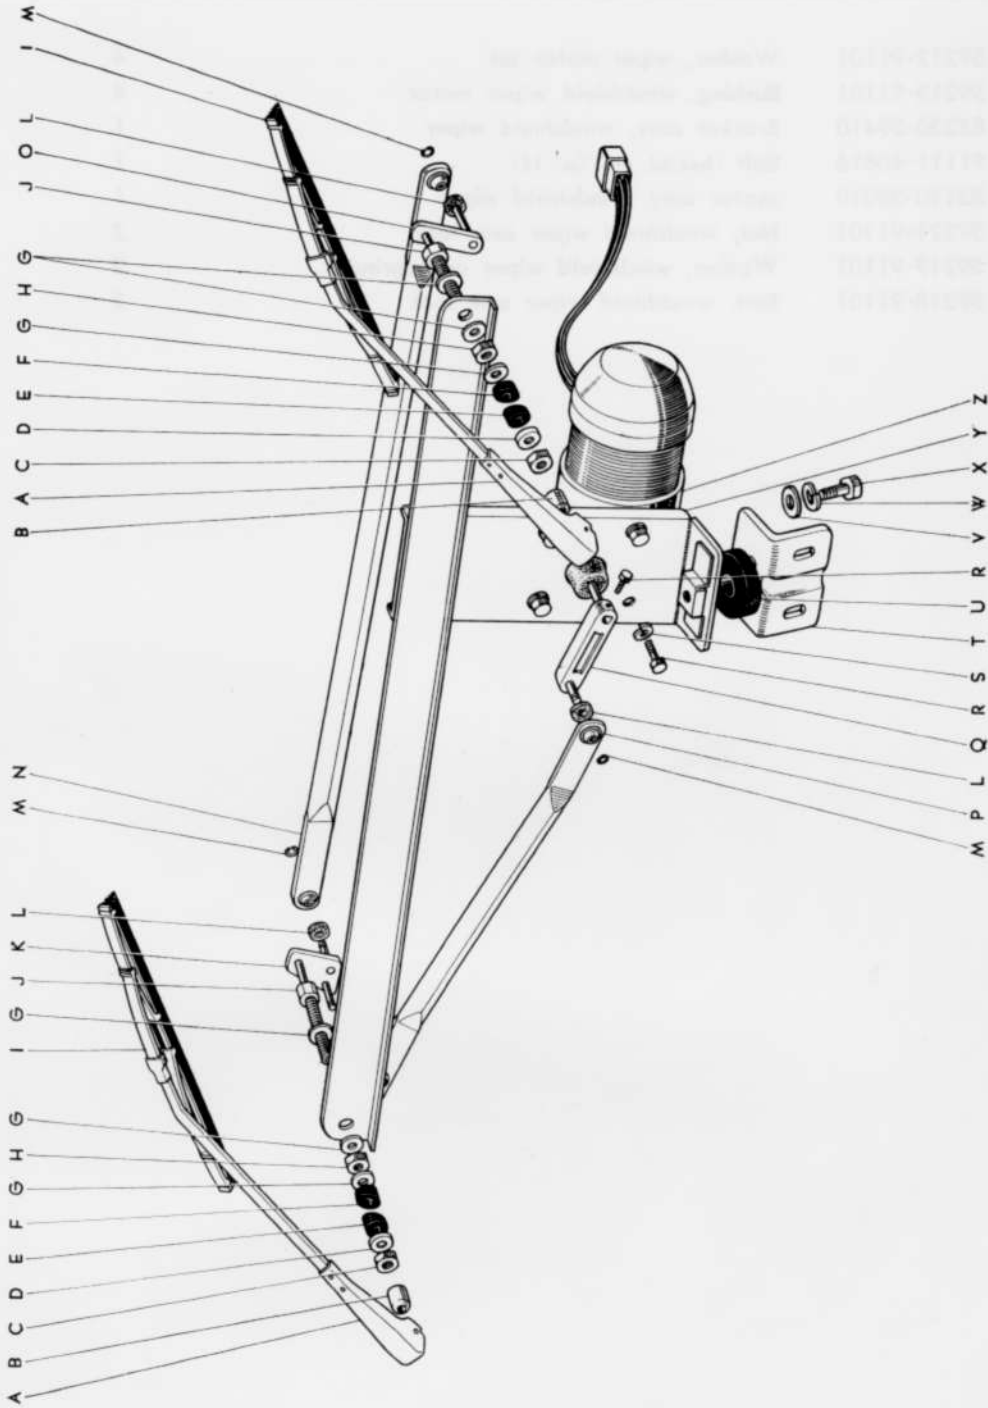


E 0805

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Windshield Wiper (FJ45LV, For U.S.A.)				
(FIG 29)				
	85110-60020	Wiper assy, windshield (includes illustrations A~Y of Fig 29 and illustrations A~AL of Fig 30)	1	LV
	85010-60020	Motor & link assy, windshield (includes illustrations B~H, J~Y of Fig 29 and illustrations A~AL of Fig 30)	1	LV
	85160-60010	Link assy, windshield wiper (includes illustrations B~H, J~Y of Fig 29)	1	LV
A	85190-92170-1	Arm assy, windshield wiper, RH	1	LV
	85190-92170-2	Arm assy, windshield wiper, LH	1	LV
B	85135-55010	Cap, wiper arm drive shaft	2	LV
C	85168-55010	Nut, windshield wiper	2	LV
D	85169-55010	Washer, windshield wiper link	2	LV
E	85185-92170	Packing, windshield wiper, A	2	LV
F	85186-92170	Packing, windshield wiper, B	2	LV
G	85167-90010	Washer, windshield wiper	6	LV
H	85182-55030	Nut, windshield wiper	2	LV
I	85220-10010	Blade assy, windshield wiper	2	LV
J	85171-91336	Bearing, windshield wiper	2	LV
K	85162-91336	Pivot, windshield wiper link (includes illustrations C~H, J, L, M of Fig 29)	1	LV
L	85173-25040	Washer, windshield wiper link felt	4	LV
M	85163-55010	Ring, windshield wiper link	4	LV
N	85165-91336	Rod, windshield wiper link	1	LV
O	85161-91336	Pivot, windshield wiper link (includes illustrations C~H, J, L, M of Fig 29)	1	LV
P	85164-91336	Rod, windshield wiper link	1	LV
Q	85017-55010	Crank sub-assy, windshield wiper link	1	LV
R	91111-40612	Bolt (hex-hd. 6-10p 12)	5	
S	94511-00600	Washer, spring (6)	4	
T	85233-92170	Bracket, wiper motor set	1	LV
U	85234-92170	Cushion, wiper motor bracket	1	LV
V	94612-10600	Washer, plate (6 10)	1	
W	94512-00600	Washer, spring (6)	1	

ELECT

FIG.—29 WINDSHIELD WIPER (FJ45LV, For U.S.A.)

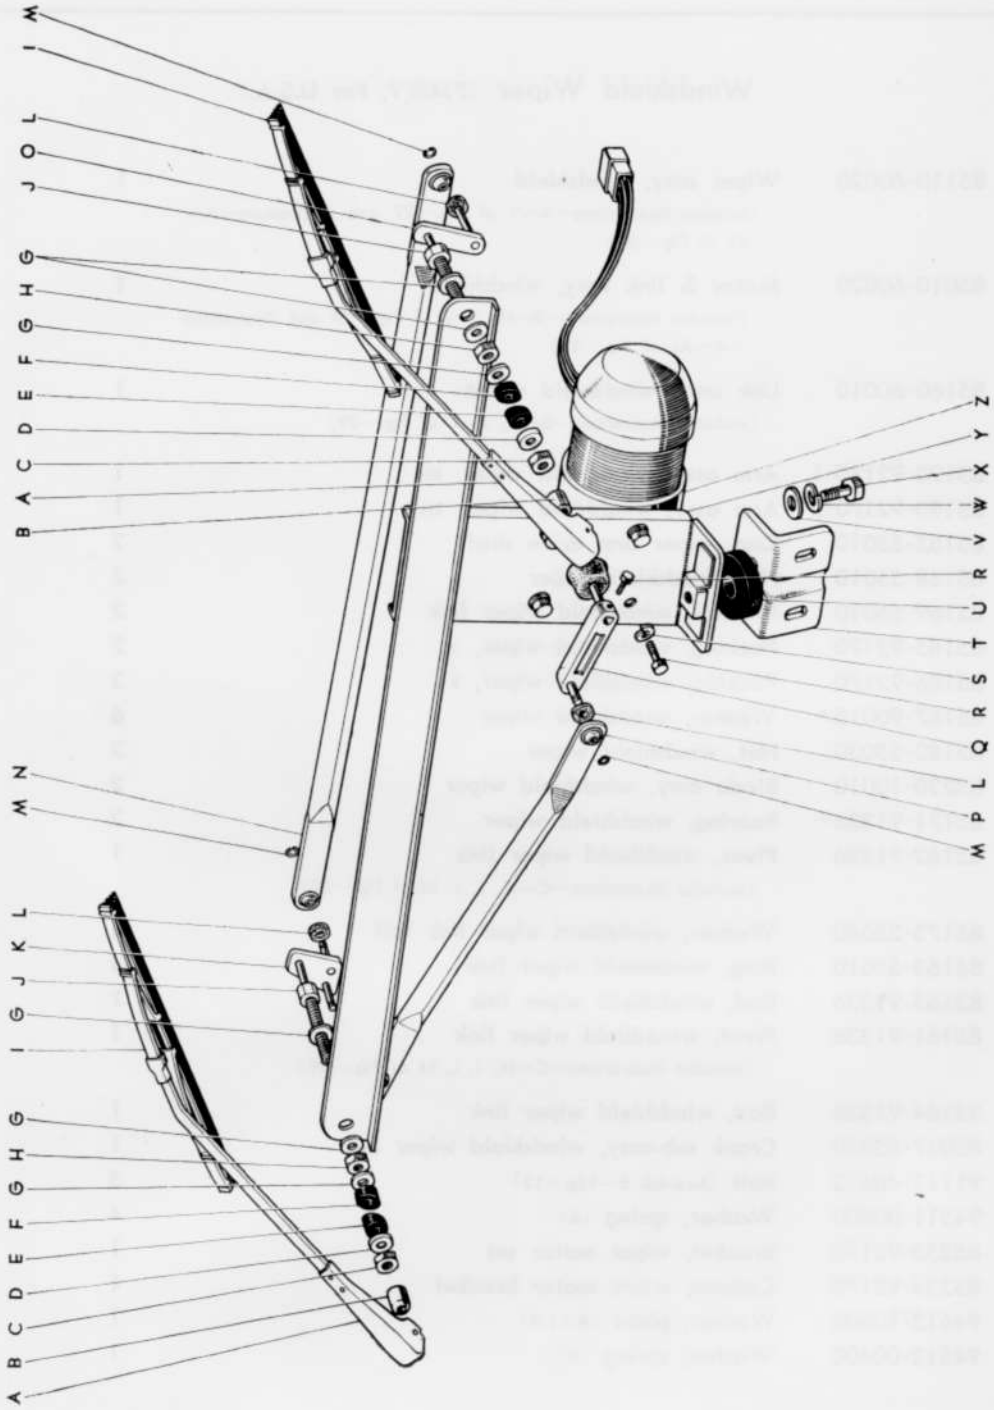

E 0805

Toyota Land Cruiser


109

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 29)				
X	91111-40620	Bolt (hex-hd. 6 10p 20)	1	
Y	85203-92170	Bracket assy, wiper motor	1	LV
Z	85110-91336	Motor assy, windshield wiper	1	LV

ELECT

Donated by Dominic Smith cruisercult.com

FIG.--30 WINDSHIELD WIPER MOTOR (FJ45LV, For U.S.A.)

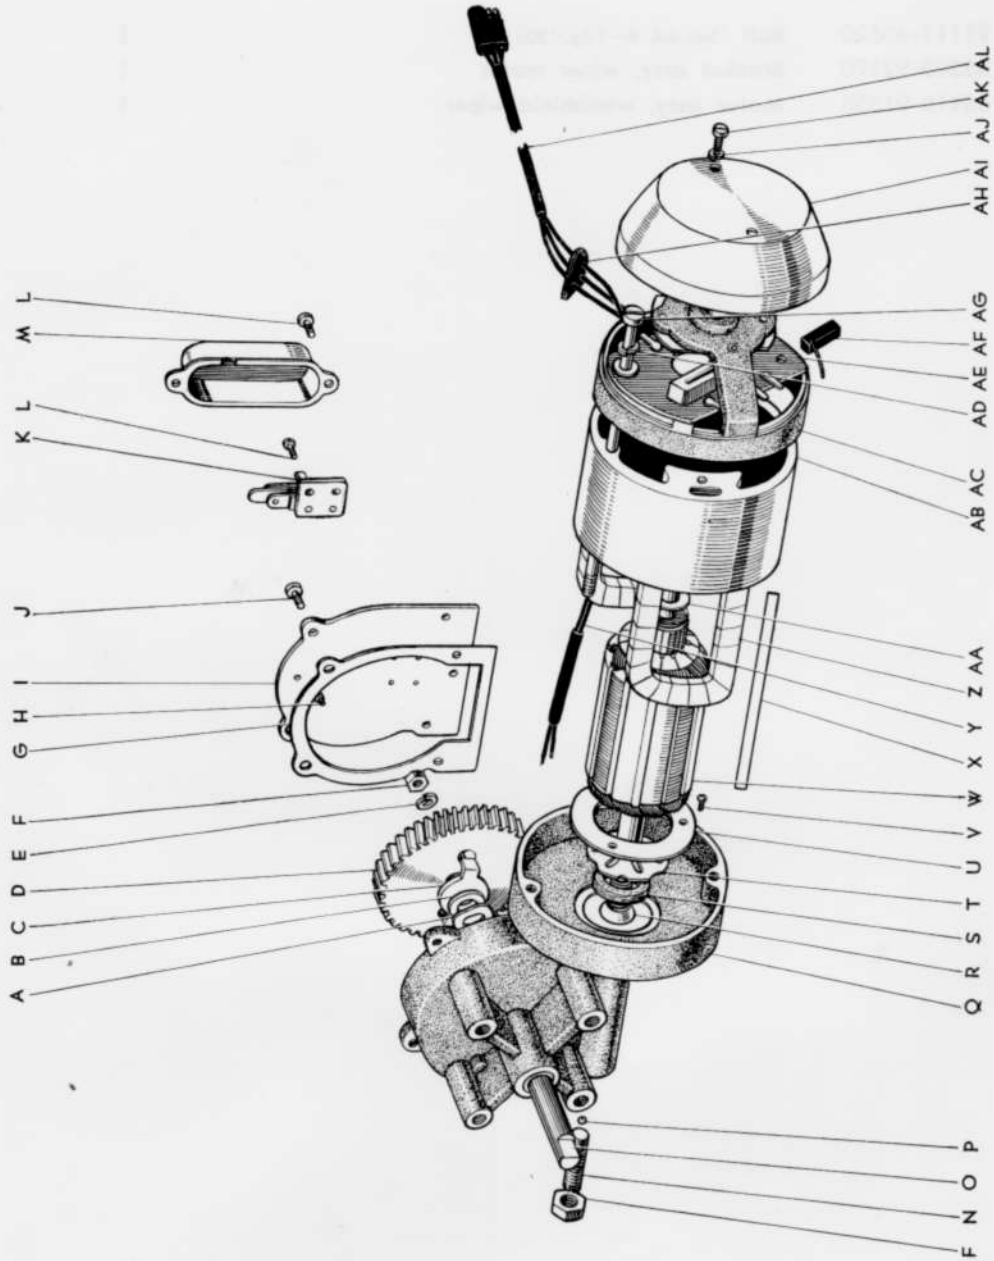

E 0417-C

Toyota Land Cruiser

111

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------


Windshield Wiper Motor (FJ45LV, For U.S.A.)

(FIG 30)

	85110-91336	Motor assy, windshield wiper (includes illustrations A~AL of Fig —30)	1	LV
A	85155-55020	Washer, windshield wiper motor	1	LV
B	85131-55020×	Washer, windshield wiper motor	1	LV
C	85123-55020 +	Support, windshield wiper motor	1	LV
	85014-91336	Shaft sub-assy, wiper drive (includes illustrations B~F, O of Fig —30)	1	LV
D	85116-55020+	Gear, windshield wiper motor	1	LV
E	85128-55020 *	Washer, windshield wiper motor	1	LV
F	85127-55020 ~	Nut, windshield wiper motor	2	LV
G	85134-55020	Packing, wiper motor crank housing cover	1	LV
H	85125-55020	Pin, windshield wiper motor	1	LV
I	85133-55020	Plate, wiper motor crank housing cover	1	LV
J	85152-55020	Screw, windshield wiper motor	4	LV
K	85013-55020	Switch sub-assy, wiper motor	1	LV
L	95119-25040	Screw, windshield wiper motor	4	LV
M	85146-55020	Cover, windshield wiper motor	1	LV
N	85118-55020	Screw, windshield wiper motor	1	LV
O	85126-91336 +	Shaft, windshield wiper motor	1	LV
P	85117-55020	Ball, windshield wiper motor	1	LV
Q	85115-55020	Body sub-assy, wiper motor (includes illustrations R~V of Fig —30)	1	LV
R	85119-55020 +	Bearing, windshield wiper motor	1	LV
S	85139-55020 +	Ring, windshield wiper motor	1	LV
T	85121-55020 ✓	Spring, windshield wiper motor	1	LV
U	85144-55020 *	Cover, windshield wiper motor	1	LV
V	85145-55020 †	Screw, windshield wiper motor	3	LV
W	85111-55020	Armature, wiper motor	1	LV
X	85141-55020	Support, windshield wiper motor	2	LV
Y	85154-55020	Wire, windshield wiper motor	1	LV
Z	85129-55020	Stator coil sub-assy, windshield wiper motor	1	LV
AA	85132-55020	Washer, windshield wiper motor	1	LV
AB	85011-55020	Stator sub-assy, wiper motor	1	LV
AC	85113-55020	Frame, windshield wiper motor	1	LV

ELECT

FIG.—30 WINDSHIELD WIPER MOTOR (FJ45LV, For U.S.A.)

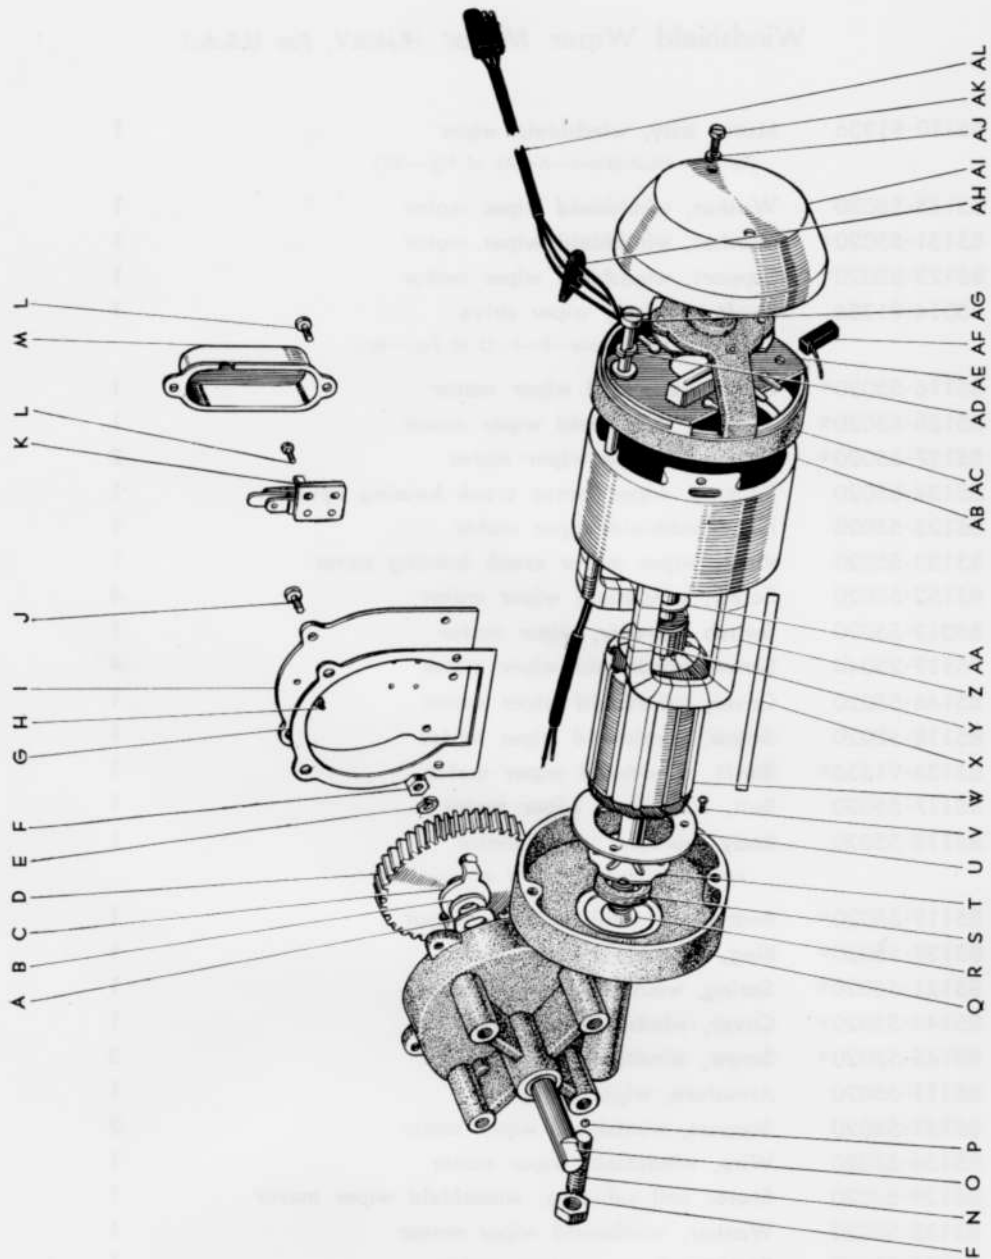

E 0417-C

Toyota Land Cruiser


113

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 30)				
AD	94511-00600	Washer, spring (6)	2	
AE	85012-55020	Holder sub-assy, wiper motor	1	LV
AF	85114-55020	Brush, wiper motor carbone	2	LV
AG	85137-55020	Screw, windshield wiper motor	2	LV
AH	85136-55020	Packing, windshield wiper motor	1	LV
AI	85147-55020	Cover, windshield wiper motor	1	LV
AJ	94511-00400	Washer, spring (4	2	
AK	93110-14008	Screw (rd-hd 4—0.75p 8)	2	
AL	85143-91336	Wire, windshield wiper motor lead	1	LV

ELECT

Donated by Dominic Smith cruisercult.com

FIG.—31 HEATER & ACCESSORY (FJ45V, OPT)

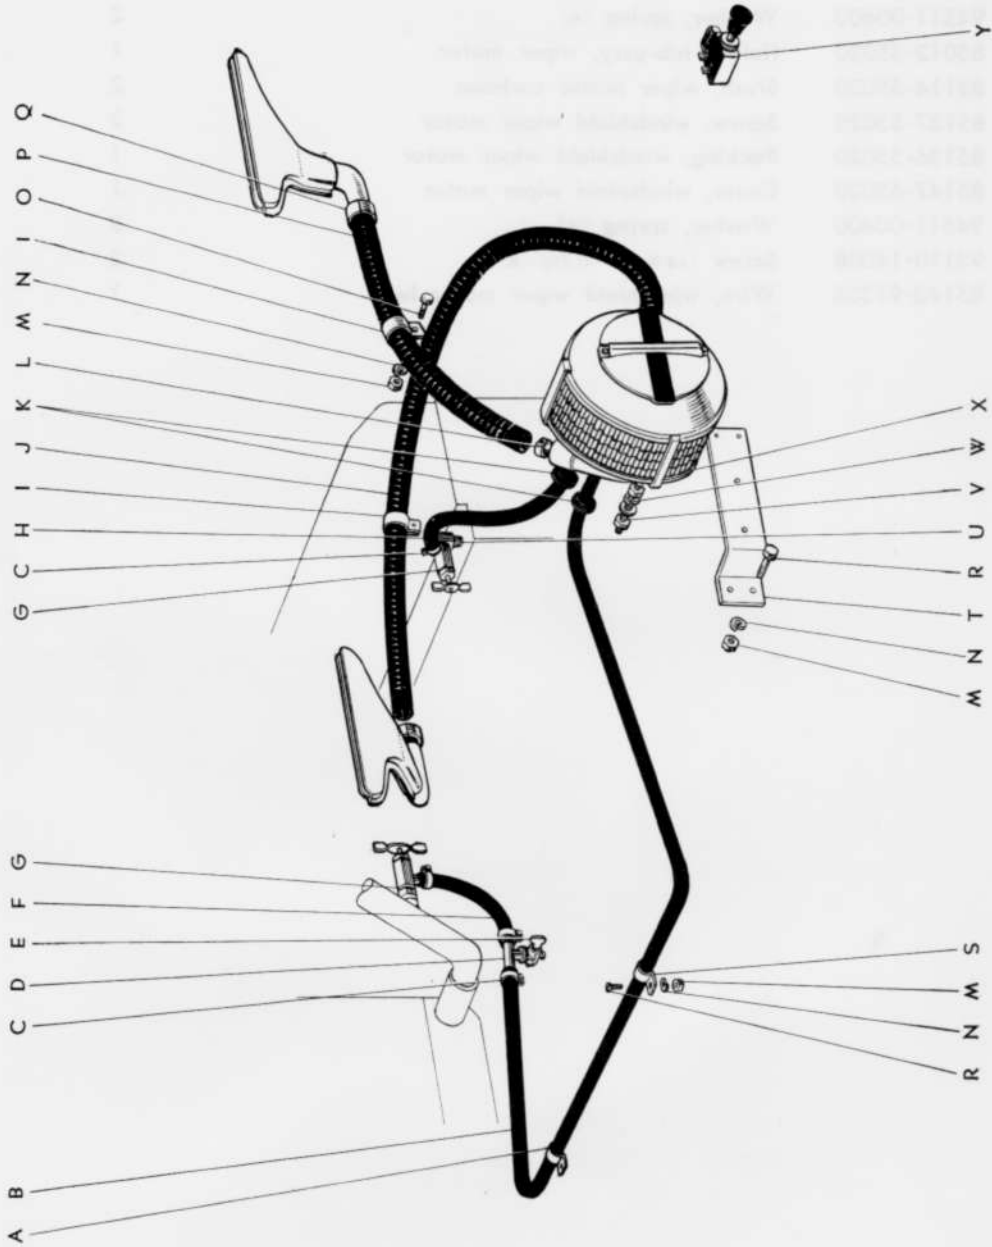

E 0350


Toyota Land Cruiser

115

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Heater & Accessory (FJ45V, OPT)				
(FIG 31)				
	87100-60020	Heater & accessory assy (includes illustrations A~Y of Fig 31)	1	45V
	87200-60020	Accessory, car heater (includes illustrations A~W of Fig 31)	1	45V
A	87267-60020	Retainer, water hose	1	45V
B	87241-60020	Hose, water	1	45V
C	90460-67201	Clamp, hose	6	45V
D	87253-60020	Joint, water hose drain	1	45V
E	87254-60020	Cock, water hose drain	1	45V
F	87242-60020	Hose, water	1	45V
G	87205-25010	Joint sub-assy, water hose valve	2	45V
H	87243-60020	Hose, water	1	45V
I	87238-25010	Retainer, defroster hose	2	45V
J	87231-60020	Hose, defroster	1	45V
K	90099-32009	Bushing, cord	2	45V
L	87237-61020	Collar	2	45V
M	90092-10605	Nut	6	
N	90094-00602	Washer	6	
O	90090-00603	Screw	1	
P	87232-60020	Hose, defroster	1	45V
Q	87236-25010	Clip, defroster hose	2	45V
R	90091-00609	Bolt	5	
S	90461-08061	Clamp	1	45V
T	87274-60020	Bracket, heater	1	45V
U	87251-60020	Joint, water hose through	1	45V
V	90099-04072	Bolt	2	45V
W	90094-01001	Washer	2	
X	87110-60020	Heater assy (includes illustration— Y of Fig 31)	1	45V
Y	84730-55020	Switch, car heater control	1	45V

ELECT

FIG.—32 HEATER & ACCESSORY (For Front Seat)(FJ40LV, 45LV, OPT)

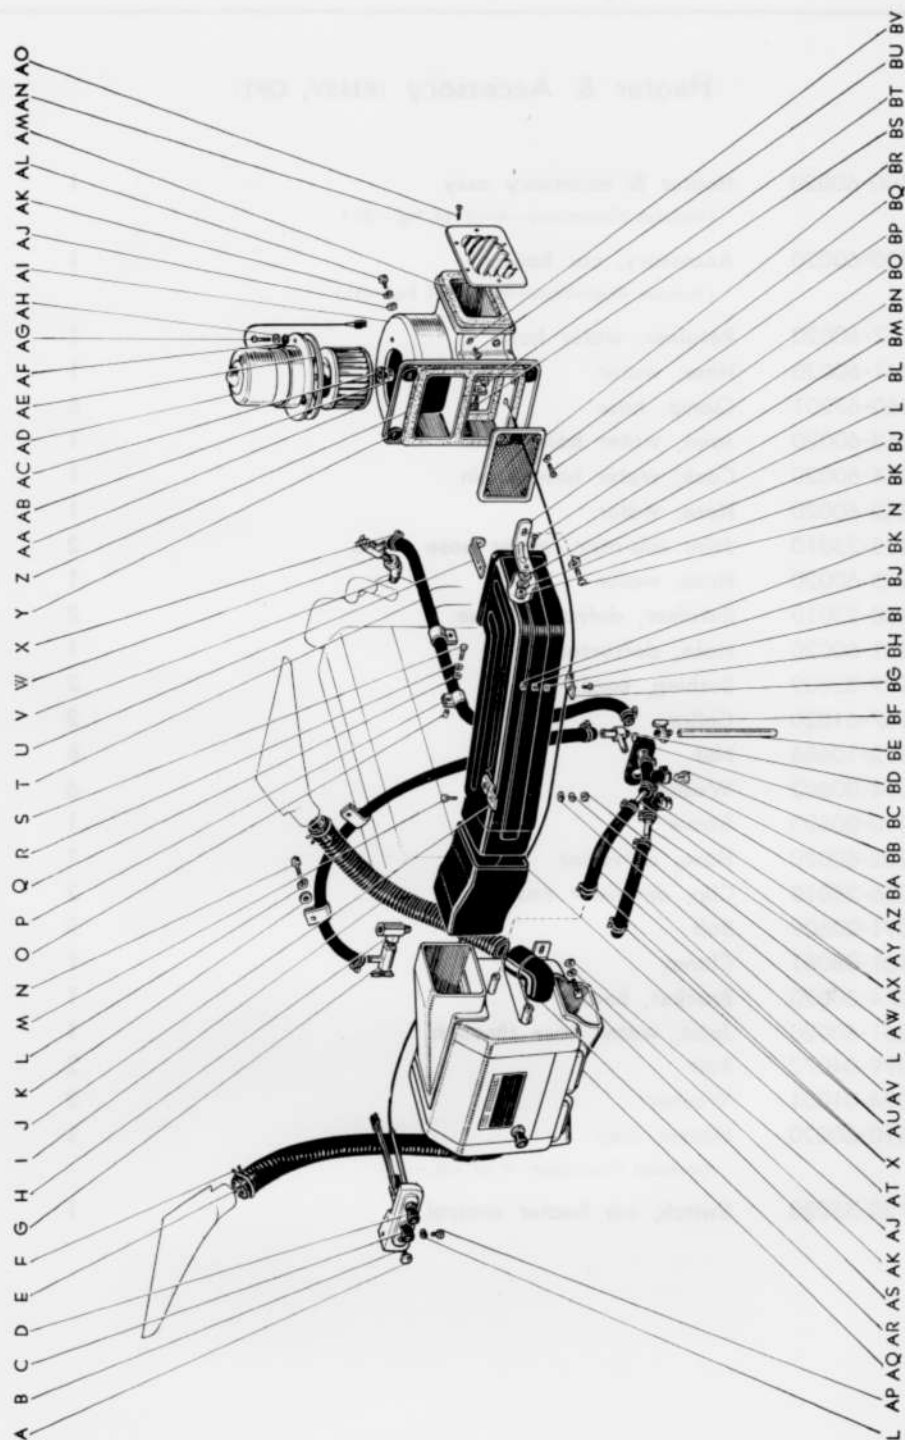


E 0737

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Heater & Accessory (FJ40LV, 45LV, OPT) (For Front Seat)				
(FIG 32)				
	87100-60030	Heater & accessory assy (includes illustrations A~J, O~AI, AM, AQ, AR, AT, AU, AX~BV of Fig 32)	1	LV LV
	87200-60030	Accessory assy, car heater (includes illustrations A~J, O~X, AT, AU, AX~BR of Fig 32)	1	LV LV
A	55405-20020	Cover sub-assy, hole	1	LV LV
B	87295-60030	Panel, control	1	LV LV
C	87290-60030	Switch assy, heater	1	LV LV
D	87296-60030	Cable, control	1	LV LV
E	87232-60030	Hose, defroster	1	LV LV
F	90467-44033	Clip	2	LV LV
G	87206-60030	Joint sub-assy, water hose valve	1	LV LV
H	87256-55010	Adaptor, water hose joint	1	LV LV
I	87231-60030	Hose, defroster	1	LV LV
J	87297-60030	Stay, air duct	1	LV LV
K	94612-10600	Washer, plate (6 10)	2	
L	94511-00600	Washer, spring (6)	7	
M	91111-40612	Bolt (hex-hd 6-10p 12)	1	
N	93180-16016	Screw (hex-hd. 6 1.0p 16)	4	
O	90560-08094	Spacer	2	LV LV
P	90461-08060	Clamp	4	LV LV
Q	90093-00602	Washer	2	
R	90094-00602	Washer	2	
S	90099-04162	Bolt	2	LV LV
T	90445-24060	Hose (Outlet)	1	LV LV
	90445-24088	Hose (Inlet)	1	LV LV
U	87293-60030	Stay, air duct	1	LV LV
V	90407-54016	Elbow	1	LV LV
W	87204-60030	Joint sub-assy, water hose valve	1	LV LV
X	90460-27002	Clamp, hose	12	LV LV
Y	87148-60030	Gasket, blower case	4	LV LV
Z	87142-60030	Gasket, blower case	1	LV LV
AA	88371-20010	Fan, blower	1	LV LV

ELECT

FIG.—32 HEATER & ACCESSORY (For Front Seat) (FJ40LV, 45LV, OPT)

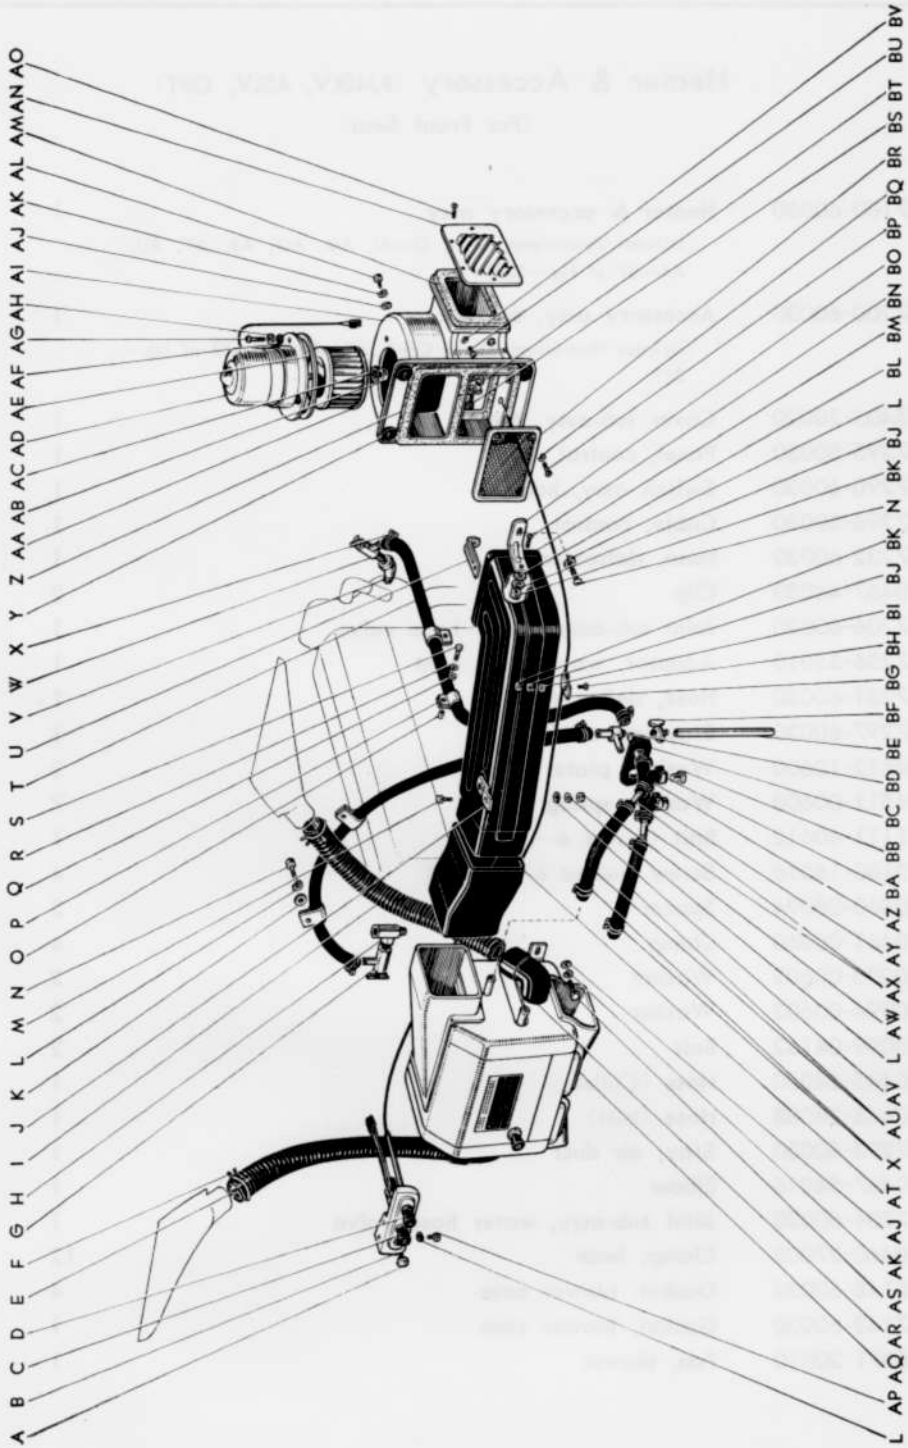


E 0737

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL	
(FIG.32)					
AB	87114-39020	Nut	1	LV	LV
AC	90099-01225	Washer	1	LV	LV
AD	87104-60030	Motor sub-assy, blower	1	LV	LV
AE	87298-60030	Gasket, blower motor	1	LV	LV
AF	90099-32029	Bush, cord	3	LV	LV
AG	90090-50615	Screw	3		
AH	90099-02302	Washer	3	LV	LV
	87130-60030	Blower assy, heater	1	LV	LV
(includes illustrations—Y~AI, AM, BS~BV of Fig 32)					
AI	87103-60030	Case sub-assy, blower	1	LV	LV
AJ	94613-10800	Washer, plate (8 1 6)	4		
AK	94512-00800	Washer, spring (8)	4		
AL	91111-40832	Bolt (hex-hd 8—1.25p 32)	4		
AM	87141-60030	Gasket, blower case	1	LV	LV
AN	53206-60010	Cover sub-assy, cowl side air guide	1	LV	LV
AO	93230-15014	Screw (oval-hd. 5 0 9p 14)	4		
AP	93180-16014	Screw (hex-hd 6 1 0p 14)	2		
AQ	87150-60030	Radiator assy, heater	1	LV	LV
(includes illustration AR of Fig 32)					
AR	87117-55040	Adaptor, defroster hole	2	LV	LV
AS	91111-40820	Bolt (hex-hd. 8—1 25p 20)	4		
AT	87212-60030	Duct, air	1	LV	LV
AU	90445-24087	Hose	2	LV	LV
AV	94611-10600	Washer, plate (6 1 0)	1		
AW	94110-40600	Nut (hex 6—1 0p)	1		
AX	87265-60030	Connector, water hose	3	LV	LV
AY	87245-60030	Hose, water	1	LV	LV
AZ	87246-60030	Hose, water	1	LV	LV
BA	90460-23032	Clamp, hose	2	LV	LV
BB	87292-60030	Plug, water hose	2	LV	LV
BC	90480-01109	Grommet	1	LV	LV
BD	87266-60030	Connector, water hose	1	LV	LV
BE	90446-08106	Hose	1	LV	LV
BF	87254-60020	Cock, water hose drain	1	LV	LV
BG	90099-35218	Clamp	1	LV	LV
BH	90090-50512	Screw	1		
BI	90093-00501	Washer	1		

FIG.—32 HEATER & ACCESSORY (For Front Seat) (FJ40LV, 45LV, OPT)

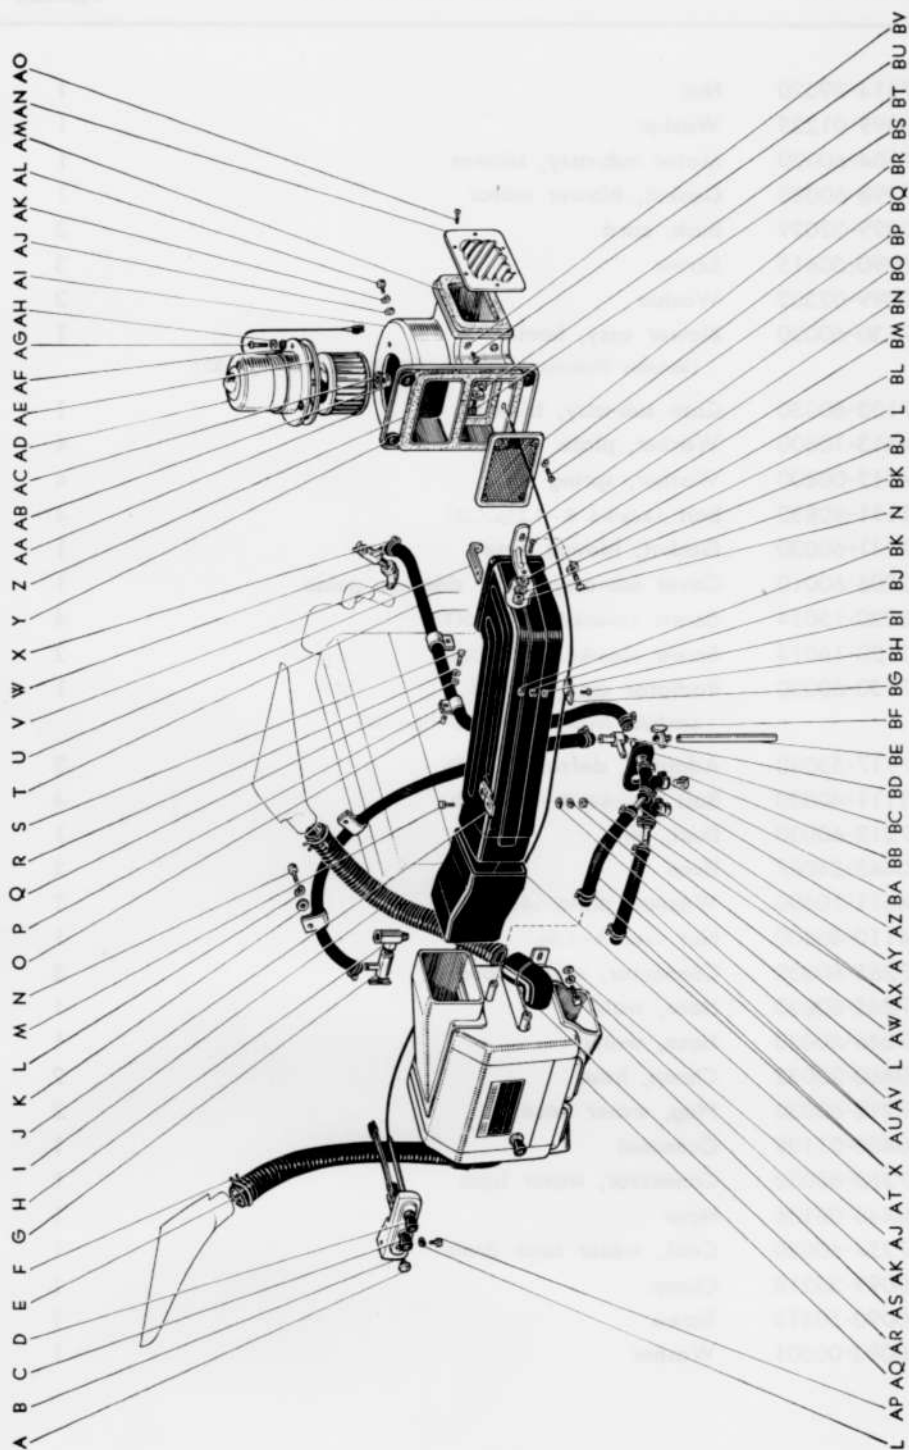

E 0737

Toyota Land Cruiser


121

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL	
(FIG.32)					
BJ	90094-00502	Washer	4		
BK	90092-10504	Nut	4		
BL	90093-00505	Washer	3		
BM	87211-60030	Duct, air	1	LV	LV
(includes illustrations—J, U, BG~BL, BN, BO of Fig 32)					
BN	90090-50512	Screw	3		
BO	87291-60030	Stay, air duct	1	LV	LV
BP	90099-00004	Screw, tapping	4	LV	LV
BQ	90093-00402	Washer	1		
BR	87294-60030	Net, air duct	1	LV	LV
BS	90091-00504	Bolt	1		
BT	87134-60030	Dumper, air	1	LV	LV
BU	90090-50401	Screw	2		
BV	90094-00402	Washer	2		

ELECT.

Donated by Dominic Smith cruisercult.com

FIG.—33 HEATER & ACCESSORY (For Rear Seat) (FJ40LV, 45LV, OPT)

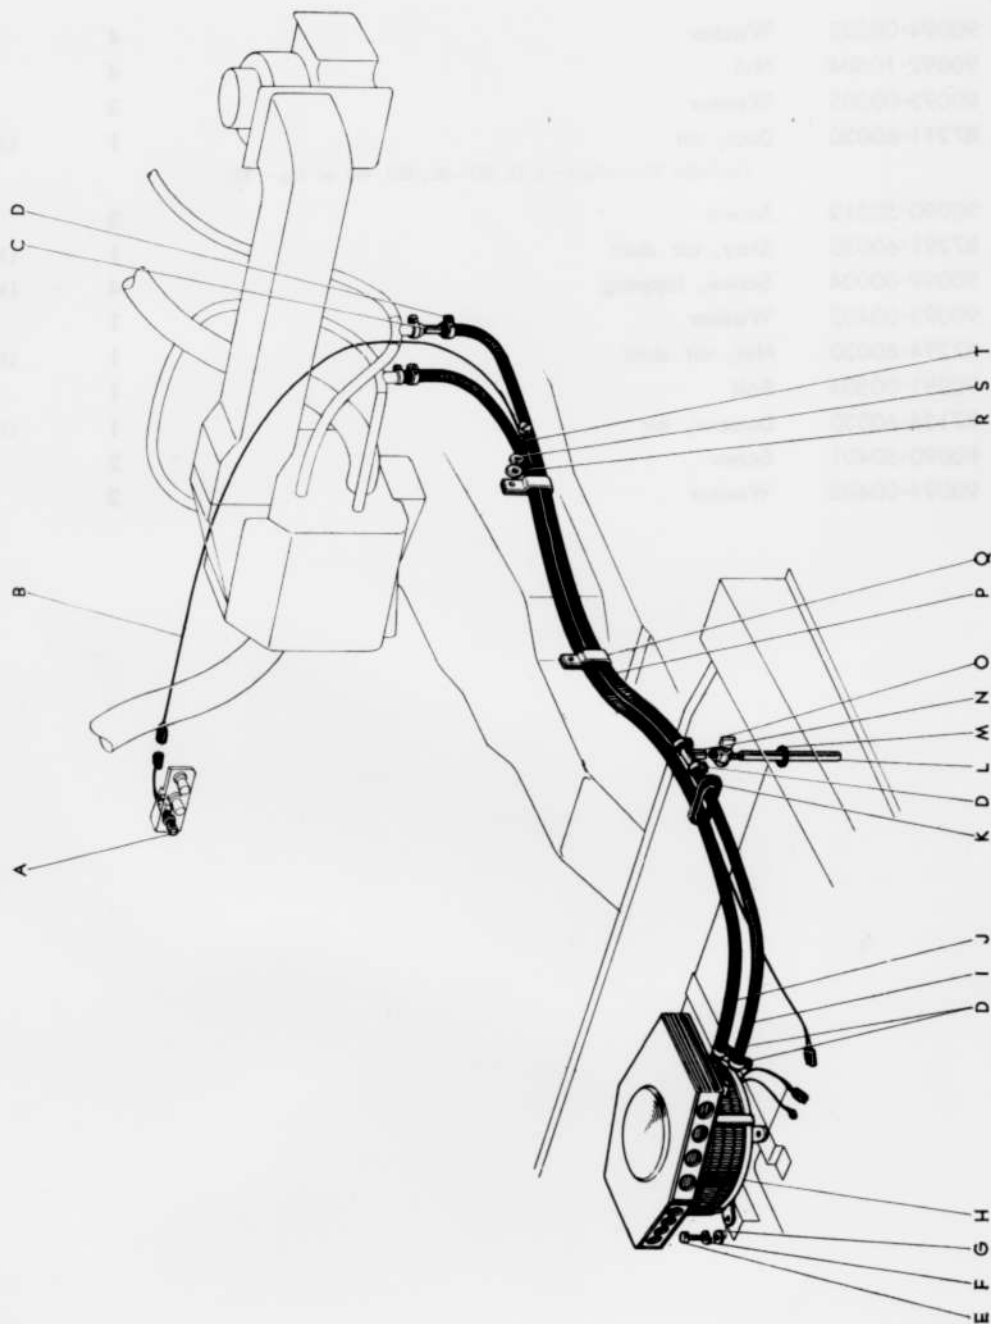

E 0806

Toyota Land Cruiser

123

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Heater & Accessory (For Rear Seat) (FJ40LV, 45LV, OPT)				
(FIG 33)				
	87100-60040	Heater & accessory assy (includes illustrations—A~D, H~Q of Fig 33)	1	LV LV
	87200-60040	Accessory assy, heater (includes illustrations A~D, I~Q of Fig 33)	1	LV LV
A	87290-60030	Switch assy, heater blower	1	LV LV
B	87291-60040	Wire, heater switch to blower	1	LV LV
C	87265-60040	Connector, water hose	2	LV LV
D	90460-23032	Clamp, hose	6	LV LV
E	91111-40818	Bolt (hex-hd 8 1.25p x 18)	4	
F	94512-00800	Washer, spring (8)	4	
G	94612-10800	Washer, plate (8 x 1.6)	4	
H	87110-60040	Heater assy	1	LV LV
I	90445-21093	Hose	1	LV LV
J	90445-21092	Hose	1	LV LV
K	90480-01109	Grommet	1	LV LV
L	90446-09107	Hose	1	LV LV
M	90480-13110	Grommet	1	LV LV
N	87266-60040	Connector, water hose	1	LV LV
O	87254-60020	Cock, water hose drain	1	LV LV
P	90445-21094	Hose	1	LV LV
Q	90461-08199	Clamp	2	LV LV
R	94612-10600	Washer, plate (6 x 1.0)	2	
S	94511-00600	Washer, spring (6)	2	
T	93180-16016	Screw (hex-hd 6 1.0p 16)	2	


ELECT

Donated by Dominic Smith cruisercult.com

SPACE FOR MEMO

B O D Y G R O U P

FIG.—35 FRAME & BUMPER (FJ45V, 45LV)

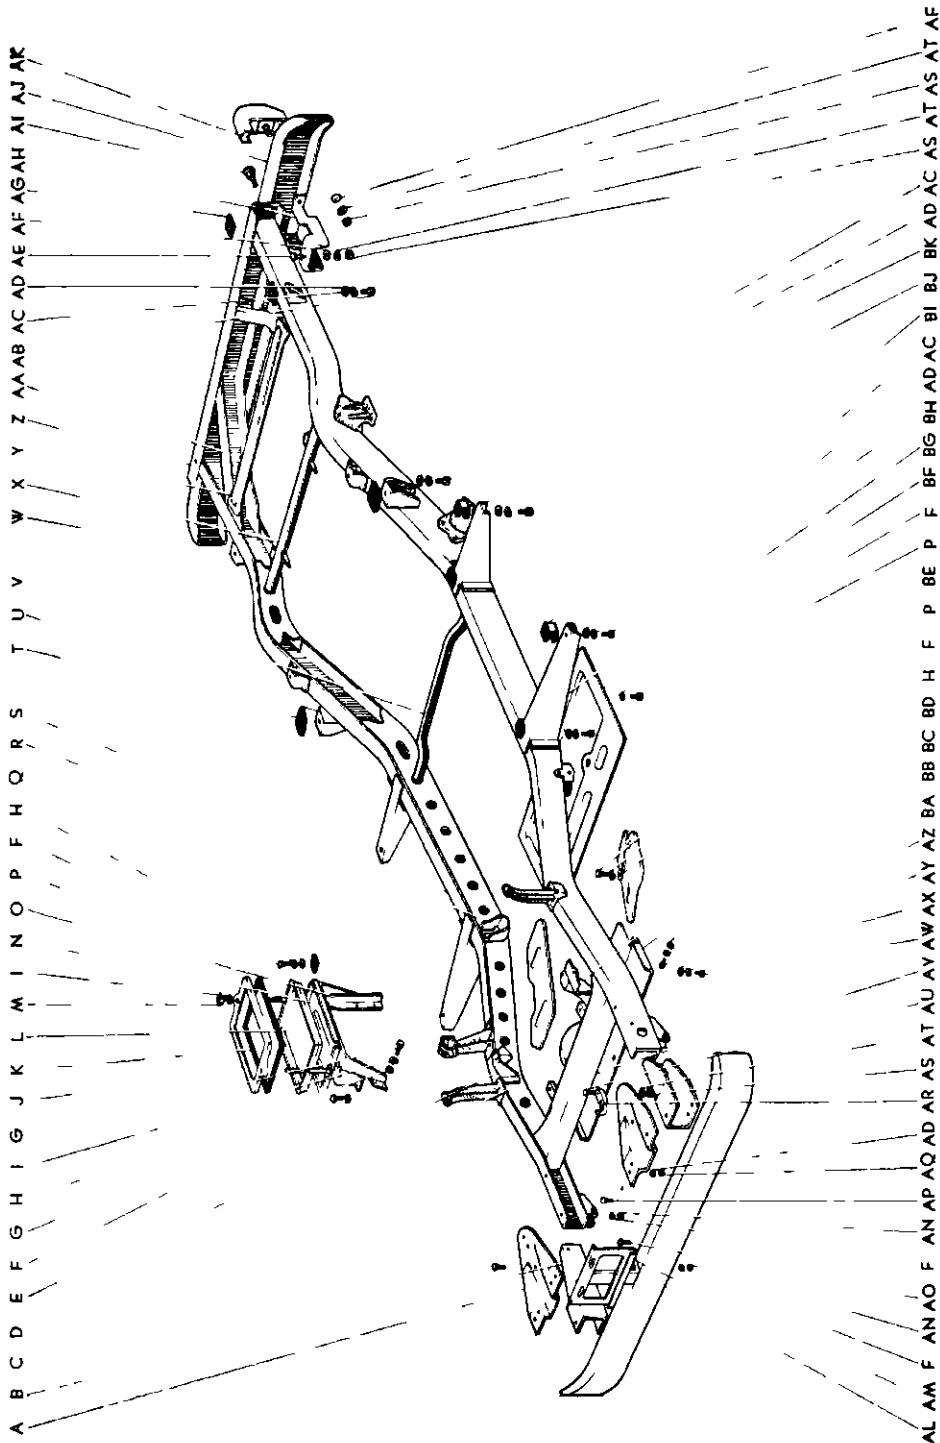


B 0610-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Frame & Bumper (FJ45V, 45LV)				
(FIG 35)				
	51001-60010	Frame sub-assy (includes illustrations A, AT, AU of Fig 79, illustration—T of Fig—82, illustrations A, G, O of Fig—90 on Model FJ40 Parts Catalog and illustrations G~K, P S of Fig 17 and illustrations B, D, E, R, S U~AA, AV, BG of Fig 35)	1	45V
	51001-60020	Frame sub-assy	1	LV
A	52116-60010	Gusset, front bumper, upper	2	40V LV 45V LV
B	52141-60010	Gusset, front bumper, RH	1	40V LV 45V LV
	52142-60010	Gusset, front bumper, LH	1	40V LV 45V LV
C	91111-40818	Bolt (hex-hd 8-125p-18)	6	
D	51131-60010	Channel, side rail inner, RH	1	45V LV
	51132-60010	Channel, side rail inner, LH	1	45V LV
E	51421-60010	Bracket, engine front mounting, RH	1	40V LV 45V LV
	51422-60010	Bracket, engine front mounting, LH	1	40V LV 45V LV
F	94512-00800	Washer, spring (8)	26	
G	91111-40825	Bolt (hex-hd 8-125p-25)	6	
H	94612-10800	Washer, plate (8x16)	14	
I	94511-00800	Washer, spring (8)	8	
J	74451-60010	Plate, battery set	1	40V LV 45V LV
K	74471-60010	Packing, battery set plate	1	40V LV 45V LV
L	74431-60010	Tray, battery	1	40V LV 45V LV
M	90175-08003	Nut, wing	2	40V LV 45V LV
N	74403-60010	Hanger sub-assy, battery	1	40V LV 45V LV
O	74401-60010	Bracket sub-assy, battery	1	40V LV 45V LV
P	91111-40820	Bolt (hex-hd. 8-125p-20)	18	
Q	52321-55010	Shim (For battery bracket)	4	40V LV 45V LV
R	51431-60020	Bracket, engine rear mounting, RH	1	45V LV
	51434-60010	Bracket, engine rear mounting, LH	1	45V LV
S	51111-60010	Rail, frame side, RH	1	45V LV
	51121-60010	Rail, frame side, LH	1	45V LV
T	52215-92000	Shim, mounting	2	45V LV
U	51743-92001	Bracket, rear body mounting, rear	2	45V LV
V	51221-60030	Crossmember, frame, No 2	1	45V LV
W	51743-60010	Bracket, rear body rear mounting	2	45V LV
X	51203-60020	Member sub-assy, rear shock absorber		
		upper support	1	45V LV
		(includes illustration G of Fig 17)		

BODY

FIG.—35 FRAME & BUMPER (FJ45V, 45LV)

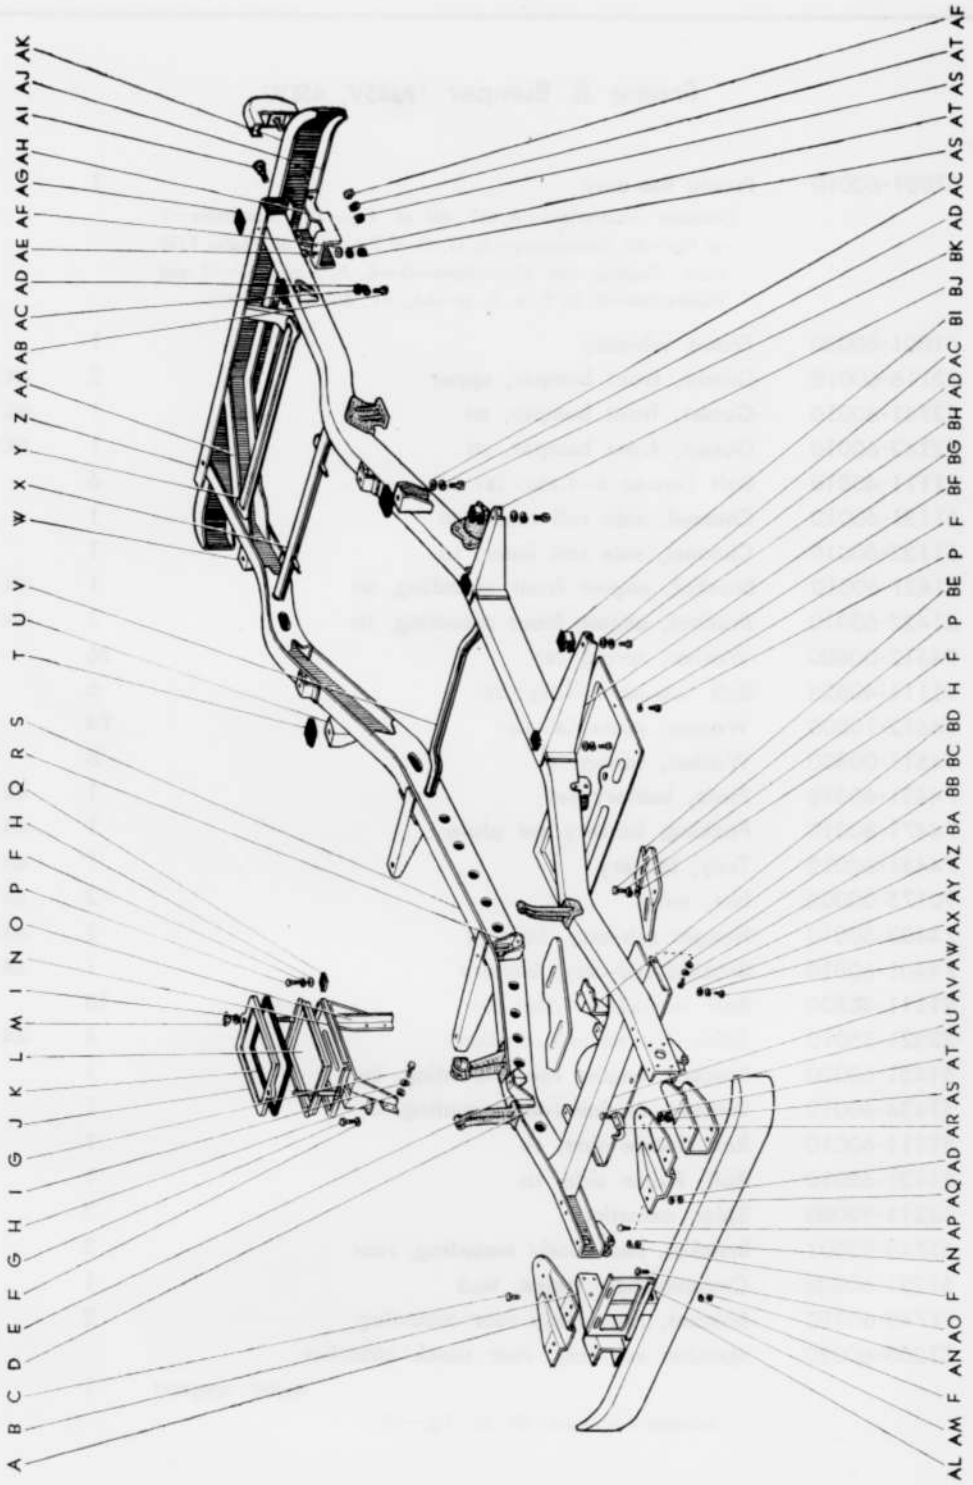

B 0610-C


Toyota Land Cruiser

139

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.35)				
Y	51241-60010	Member, spare wheel set	1	45V LV
Z	51291-60020	Crossmember, frame rear	1	45V LV
AA	51281-60030	Member, rear diagonal, RH	1	45V LV
	51282-60020	Member, rear diagonal, LH	1	45V LV
AB	91111-51036	Bolt (hex-hd. 10 125p 36)	6	
AC	94612-11000	Washer, plate (10 16)	18	
AD	94512-01000	Washer, spring (10)	16	
AE	91111-41232	Bolt (hex-hd. 12 15p 32)	6	
AF	94612-11200	Washer, plate (12 23)	10	
AG	52214-92000	Shim	12	45V LV
AH	52163-92001	Bracket, rear bumper	2	45V LV
AI	52152-92000	Bolt, rear bumper set	2	45V LV
AJ	52151-92002	Bar, rear bumper	1	45V LV
	52151-92050	Bumper, rear (OPT)	1	45V LV
AK	52107-92000	Guard sub-assy, rear bumper	2	45V LV
AL	52111-60030	Bar, front bumper	1	40V LV 45V LV
AM	75101-60010	Bracket sub-assy, front license plate	1	40V LV 45V LV
AN	94110-40800	Nut (hex 8 125p)	12	
AO	91111-40816	Bolt (hex-hd 8 125p 16)	2	
AP	90112-10004	Bolt, round head square neck	6	40V LV 45V LV
AQ	94110-41000	Nut (hex 10 125p)	20	
AR	51961-60010	Hook	2	40V LV 45V LV
AS	94110-41200	Nut (hex 12 1.5p)	14	
AT	94512-01200	Washer, spring (12)	10	
AU	91111-51250	Bolt (hex-hd. 12 15p 50)	4	
AV	51201-60020	Crossmember sub-assy, frame, front	1	45V
	51201-60010	Crossmember sub-assy, frame, front	1	LV
AW	93540-15014	Screw, tapping	4	
AX	94511-00500	Washer, spring (5)	4	
AY	94612-10500	Washer, plate (5 10)	4	
AZ	91111-40616	Bolt (hex-hd 6 10p 16)	2	
BA	94512-00600	Washer, spring (6)	2	
BB	94613-10600	Washer, plate (6 10)	2	
BC	51408-60010	Cover sub-assy, engine front under (includes illustrations AW~AY, BD of Fig 35)	1	40V LV 45V LV
BD	51405-60010	Plate sub-assy, engine front under cover hole	1	40V LV 45V LV
BE	51454-60010	Cover, engine room under, LH	1	40V LV 45V LV
	51453-60010	Cover, engine room under, RH	1	40V LV 45V LV

BODY

FIG.—35 FRAME & BUMPER (FJ45V, 45LV)

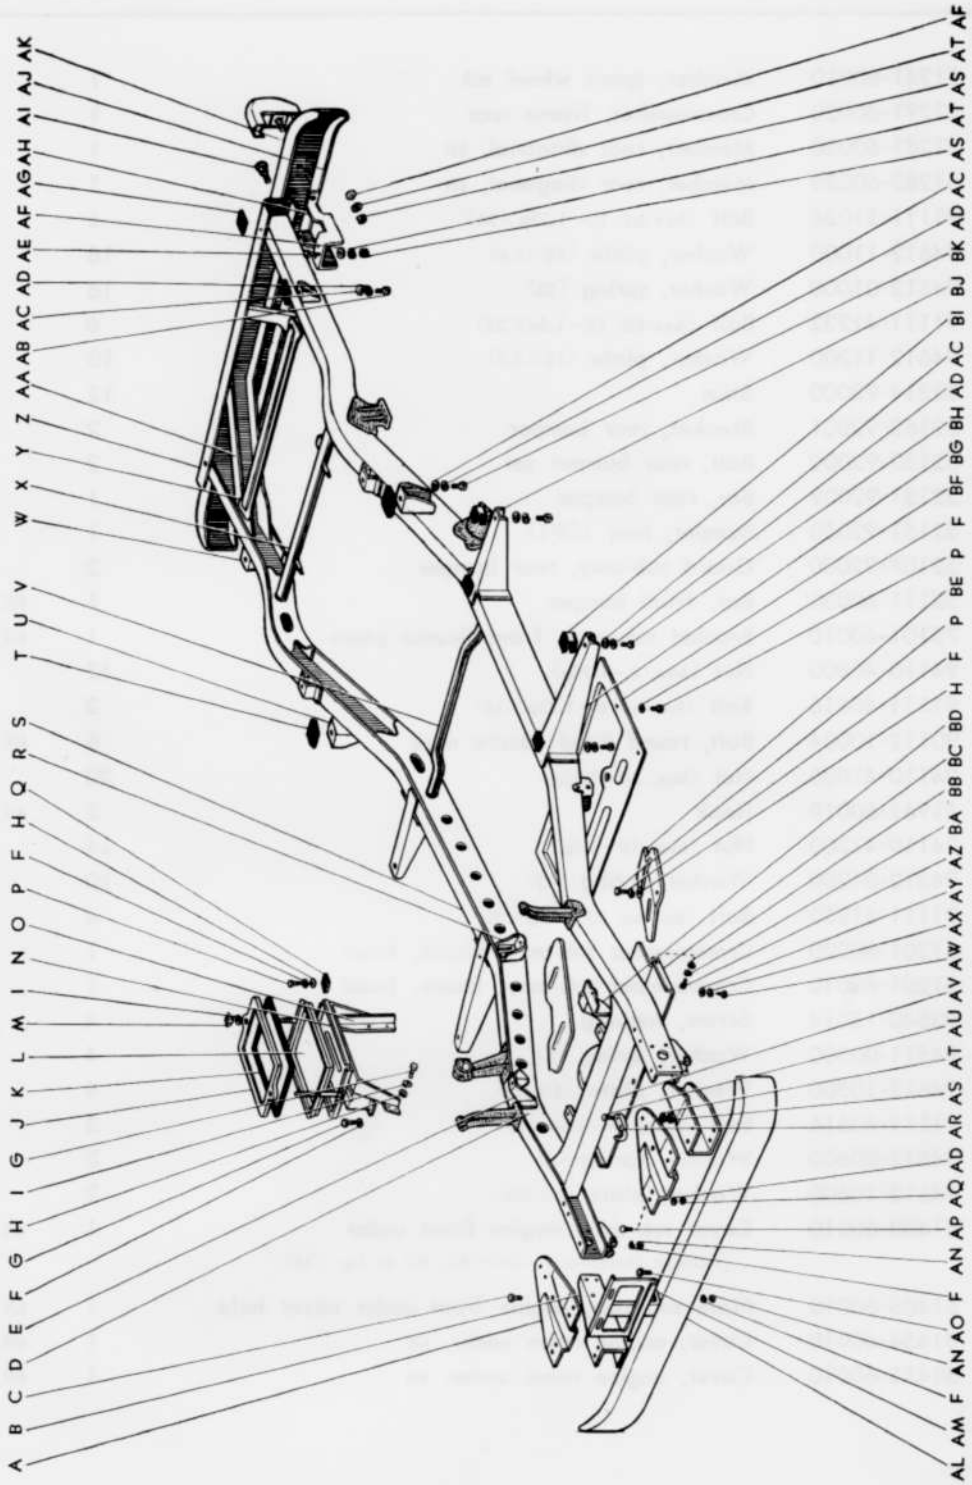

B 0610-C

Toyota Land Cruiser


141

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.35)				
BF	51495-60010	Cover, transmission under	1	40V LV 45V LV
BG	51712-60010	Bracket, front body rear mounting	1	45V LV
	51711-60020	Bracket, front body rear mounting	1	45V LV
BH	91111-51045	Bolt (hex-hd. 10 1.25p $\times$ 45)	4	
BI	52033-30010	Plate sub-assy, body mounting shim	4	40V LV 45V LV
BJ	51742-92000	Bracket, front floor, LH	1	45V LV
	51741-92000	Bracket, front floor, RH	1	45V LV
BK	91111-51040	Bolt (hex-hd. 10—1.25p $\times$ 40)	4	

BODY

Donated by Dominic Smith cruisercult.com

FIG.—36 FRAME & BUMPER (FJ45V, 45LV, OPT)

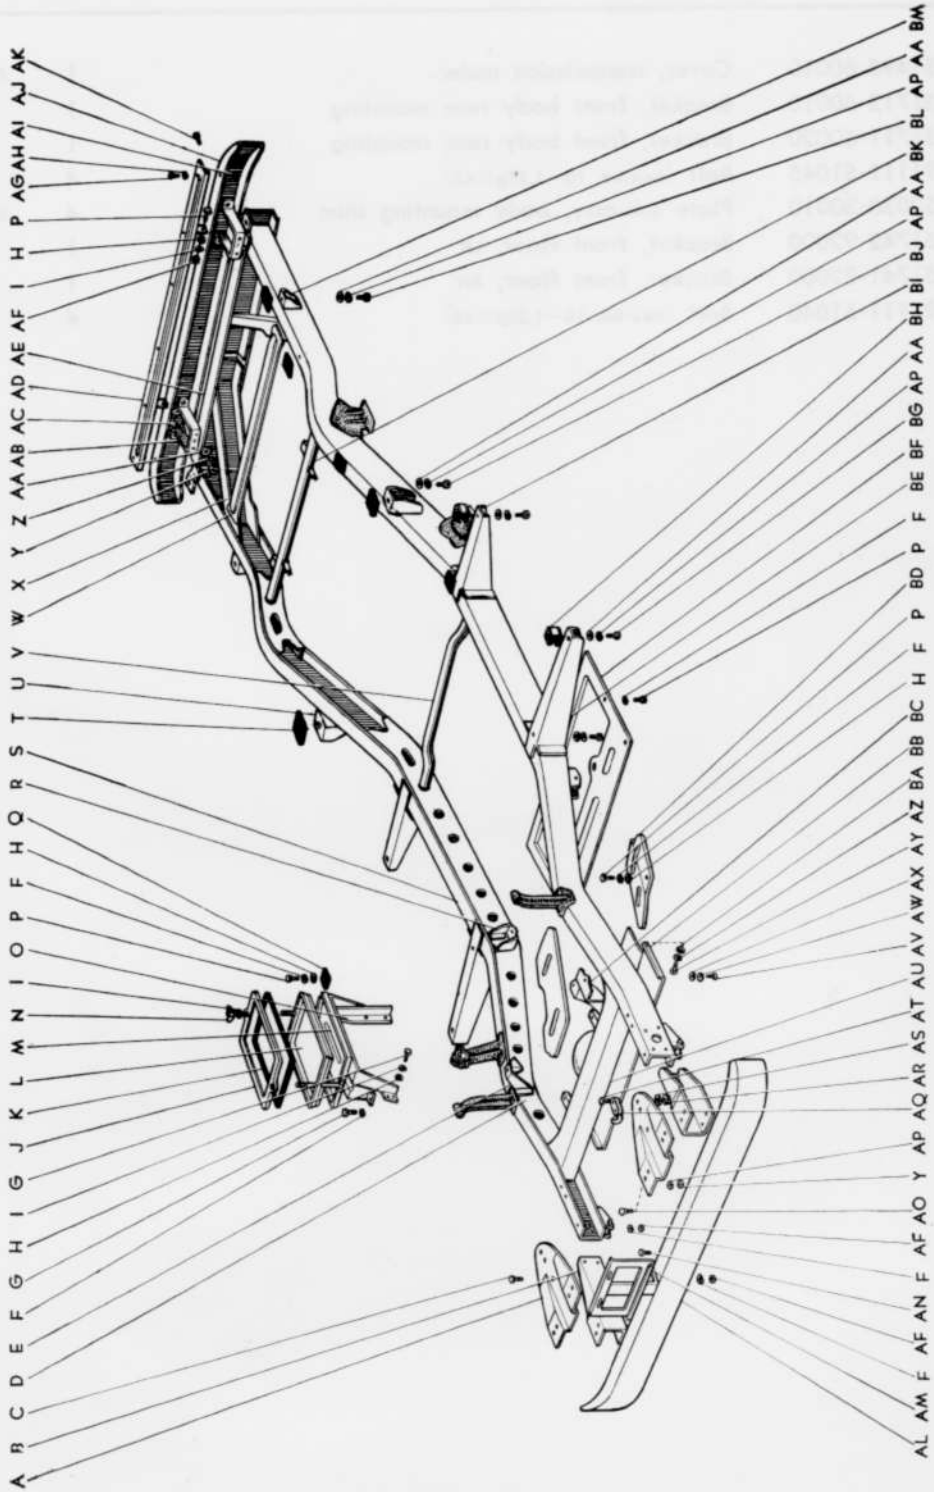

B 0611-C

Toyota Land Cruiser

143

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------

Frame & Bumper (FJ45V, 45LV, OPT)


(FIG 36)

	51001-60010	Frame sub-assy	1	45V
		(includes Illustrations AT, AU Fig 79 illustration T of Fig 82, illustrations A, G O of Fig 90 on Model FJ40 Parts Catalog and Illustrations G~K P S of Fig 17 and illustrations B, D, E, R S, U~X AE, AU BE, BK, BM of Fig 36)		
	51001-60020	Frame sub-assy	1	LV
A	52116-60010	Gusset, front bumper, upper	2	40V LV 45V LV
B	52141-60010	Gusset, front bumper, RH	1	40V LV 45V LV
	52142-60010	Gusset, front bumper, LH	1	40V LV 45V LV
C	91111-40818	Bolt (hex-hd 8-125p 18)	6	
D	51131-60010	Channel, side rail inner, RH	1	45V LV
	51132-60010	Channel, side rail inner, LH	1	45V LV
E	51421-60010	Bracket, engine front mounting, RH	1	40V LV 45V LV
	51422-60010	Bracket, engine front mounting, LH	1	40V LV 45V LV
F	94512-00800	Washer, spring 8)	26	
G	91111-40825	Bolt (hex-hd 8-125p 25)	6	
H	94612-10800	Washer, plate (8-16)	14	
I	94511-00800	Washer, spring 8)	8	
J	74451-60010	Plate, battery set	1	40V LV 45V LV
K	74471-60010	Packing, battery set plate	1	40V LV 45V LV
L	74431-60010	Tray, battery	1	40V LV 45V LV
M	74403-60010	Hanger sub-assy, battery	1	40V LV 45V LV
N	90175-08003	Nut, wing	2	40V LV 45V LV
O	74401-60010	Bracket sub-assy, battery	1	40V LV 45V LV
P	91111-40820	Bolt (hex-hd 8-125p 20)	18	
Q	52321-55010	Shim For battery bracket	4	40V LV 45V LV
R	51431-60020	Bracket, engine rear mounting, RH	1	45V LV
	51434-60010	Bracket, engine rear mounting, LH	1	45V LV
S	51111-60010	Rail, frame side, RH	1	45V LV
	51121-60010	Rail, frame side, LH	1	45V LV
T	52215-92000	Shim, mounting	2	45V LV
U	51743-92001	Bracket, rear body mounting, rear	2	45V LV
V	51221-60030	Crossmember, frame, No 2	1	45V LV
W	51241-60010	Member, spare wheel set	1	45V LV

BODY

Donated by Dominic Smith cruisercult.com

FIG.—36 FRAME & BUMPER (FJ45V, 45LV, OPT)

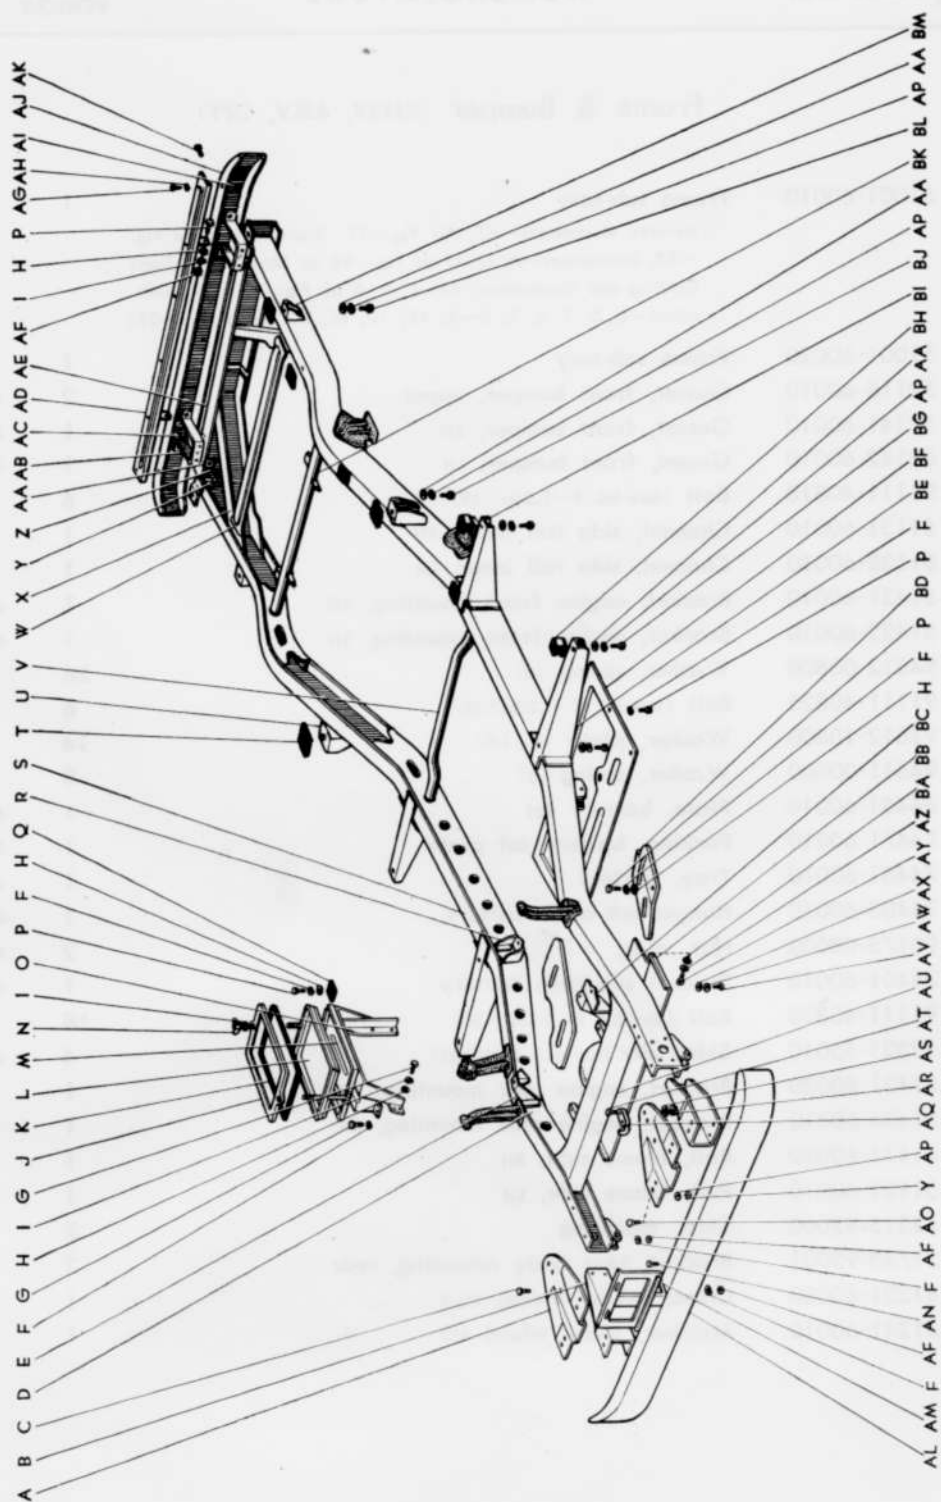


B 0611-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 36)				
X	51281-60030	Member, rear diagonal, RH	1	45V LV
	51282-60020	Member, rear diagonal, LH	1	45V LV
Y	94110-41000	Nut (hex 10 125p)	24	
Z	94511-01000	Washer, spring (10)	4	
AA	94612-11000	Washer, plate (10 16)	22	
AB	52153-92050	Bracket, rear bumper OPT	2	45V LV
AC	91111-41032	Bolt (hex-hd 10—125p 32)	4	
AD	52106-92050	Plate sub-assy, rear bumper bracket (OPT)	1	45V LV
AE	51291-60020	Crossmember, frame rear	1	45V LV
AF	94110-40800	Nut (hex. 8 125p)	12	
AG	93210-16016	Screw (rd-hd 6 10p 16)	6	
AH	94511-00600	Washer, spring (6)	6	
AI	94110-40600	Nut (hex 6 10p)	6	
AJ	52151-92050	Bumper, rear (OPT)	1	45V LV
AK	52152-92000	Bolt, rear bumper set	2	45V LV
AL	52111-60030	Bar, front bumper	1	40V LV 45V LV
AM	75101-60010	Bracket sub-assy, front license plate	1	40V LV 45V LV
AN	91111-40816	Bolt (hex-hd 8 125p 16)	2	
AO	90112-10004	Bolt, round head square neck	6	40V LV 45V LV
AP	94512-01000	Washer, spring (10)	16	
AQ	51961-60010	Hook	2	40V LV 45V LV
AR	94110-41200	Nut (hex 12 15p)	14	
AS	94512-01200	Washer, spring (12)	10	
AT	91111-51250	Bolt (hex-hd 12 15p 50)	4	
AU	51201-60020	Crossmember sub-assy, frame, front	1	45V
	51201-60010	Crossmember sub-assy, frame, front	1	LV
AV	93540-15014	Screw, tapping	4	
AW	94511-00500	Washer, spring (5)	4	
AX	94612-10500	Washer, plate (5 10)	4	
AY	91111-40616	Bolt (hex-hd 6 10p 16)	2	
AZ	94512-00600	Washer, spring (6)	2	
BA	94613-10600	Washer, plate (6 10)	2	
BB	51408-60010	Cover sub-assy, engine front under (includes illustrations AV~AX, BC of Fig 36)	1	40V LV 45V LV
BC	51405-60010	Plate sub-assy, engine front under cover hole	1	40V LV 45V LV
BD	51454-60010	Cover, engine room under, LH	1	40V LV 45V LV
	51453-60010	Cover, engine room under, RH	1	40V LV 45V LV
BE	51712-60010	Bracket, front body rear mounting	1	45V LV
	51711-60020	Bracket, front body rear mounting	1	45V LV

FIG.—36 FRAME & BUMPER (FJ45V, 45LV, OPT)

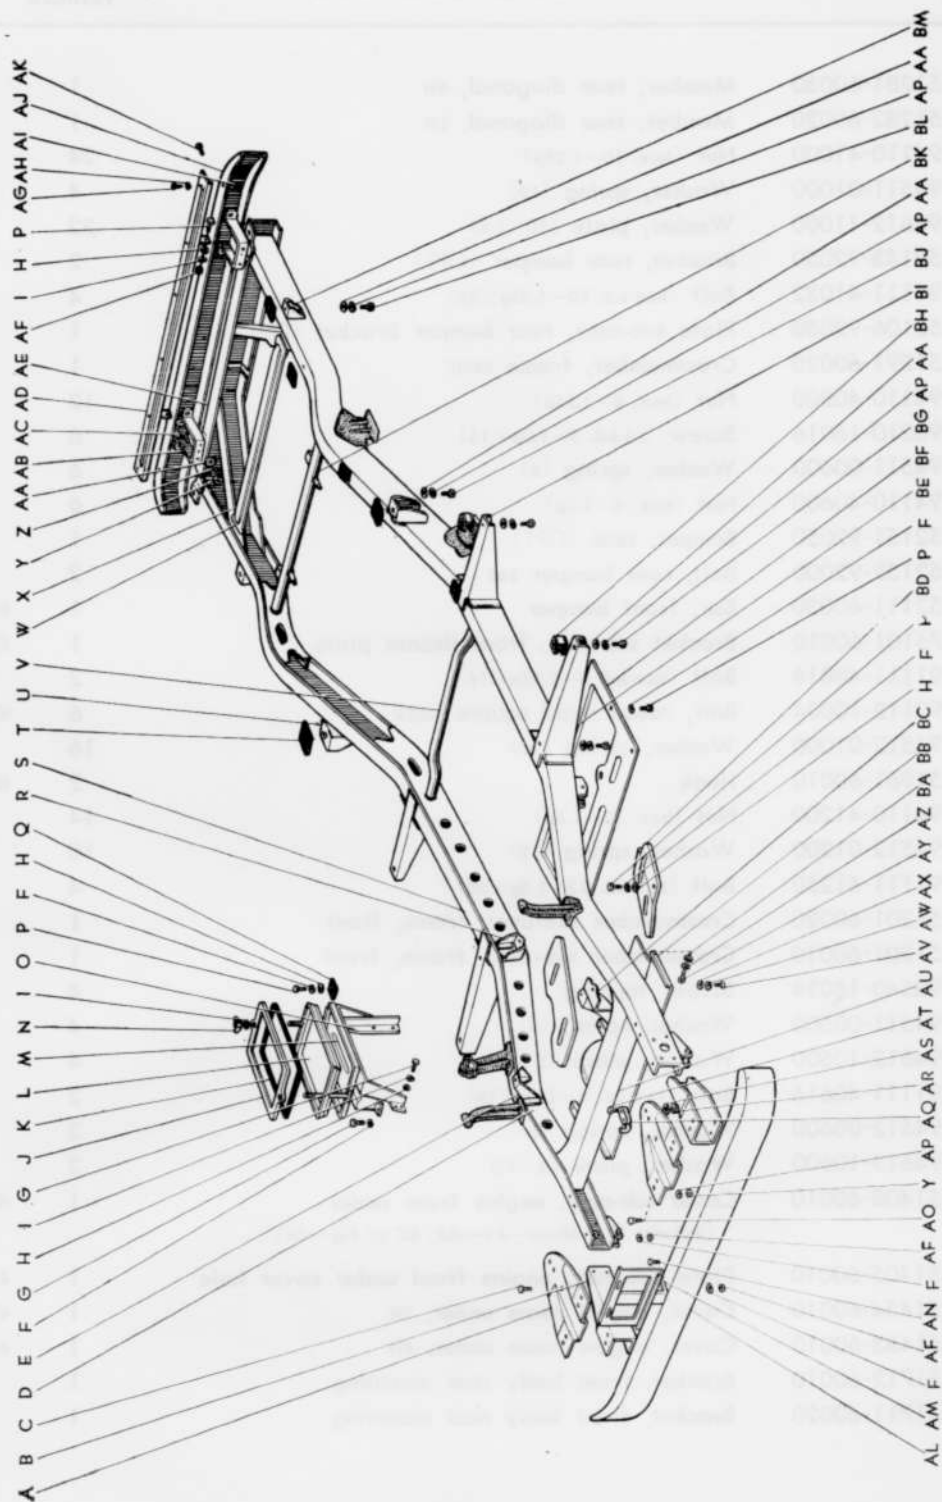

B 0611-C

Toyota Land Cruiser


147

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 36)				
BF	51495-60010	Cover, transmission under	1	40V LV 45V LV
BG	91111-51045	Bolt (hex-hd 10 -1.25p 45)	4	
BH	52033-30010	Plate sub-assy, body mounting shim	4	40V LV, 45V LV
BI	51742-92000	Bracket, front floor, LH	1	45V LV
	51741-92000	Bracket, front floor, RH	1	45V LV
BJ	91111-51040	Bolt (hex-hd 10 1.25p 40)	4	
BK	51203-60020	Member sub-assy, rear shock absorber		
		upper support	1	45V LV
		(includes illustration G of Fig 17)		
BL	91111-51036	Bolt (hex-hd 10 1.25p 36)	6	
BM	51743-60010	Bracket, rear body rear mounting	2	45V LV

BODY

Donated by Dominic Smith cruisercult.com

FIG.—37 HOOD & RADIATOR GRILLE

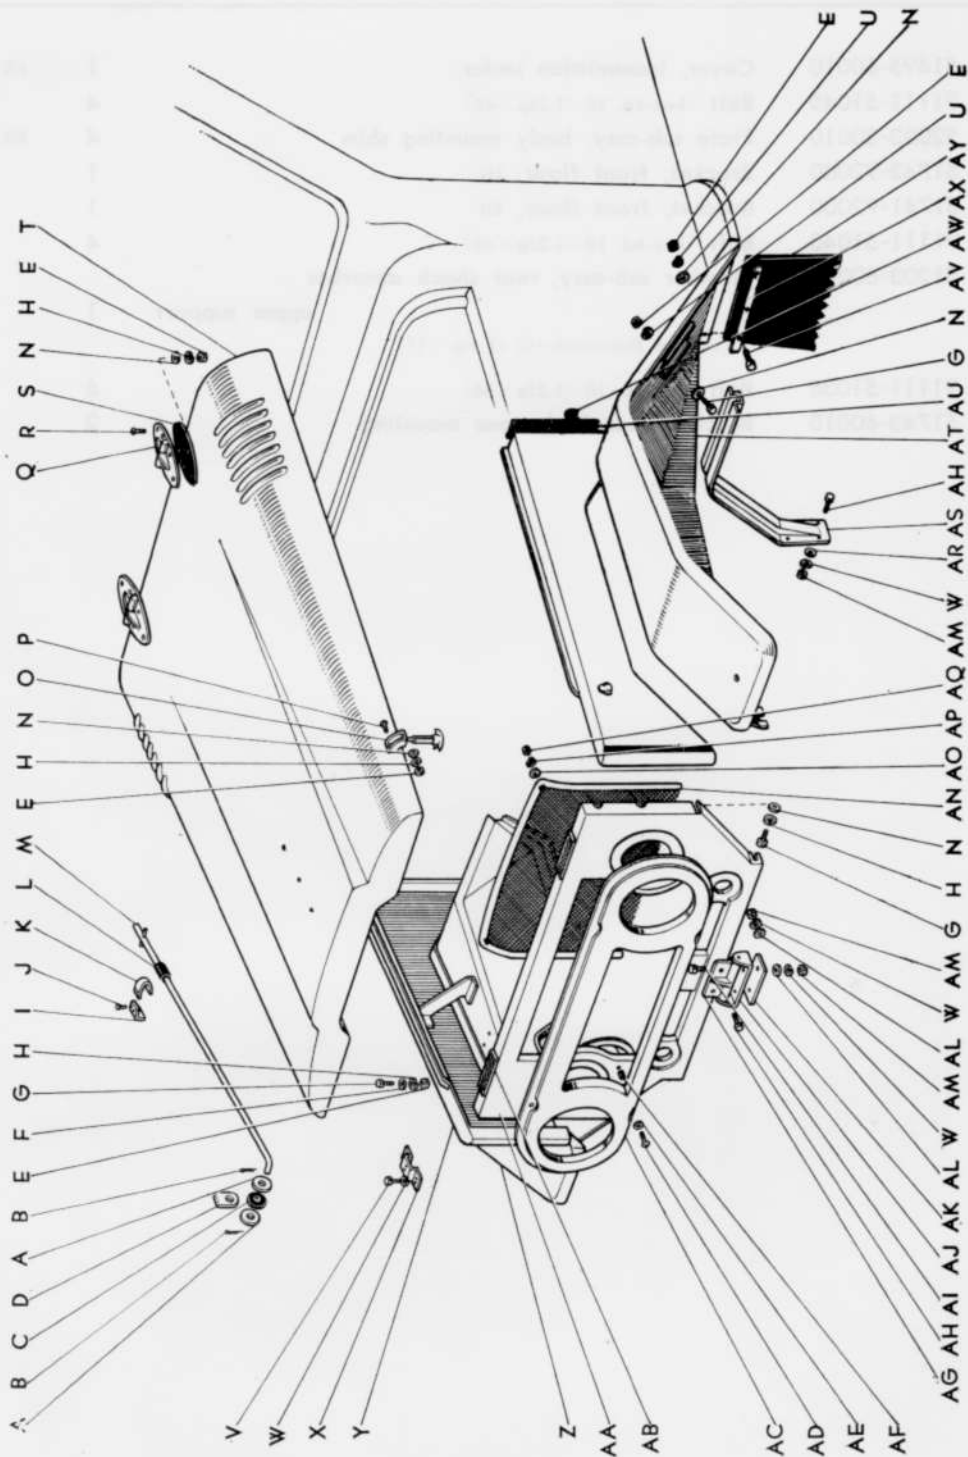


B 1286

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
		Hood, Hood Catch, Radiator Cover, Grille, Front Fender & Apron		
(FIG 37)				
A	94612-11000	Washer, plate (10 16)	2	
B	95381-02025	Pin, cotter	2	
C	90480-20023	Grommet	1	40V LV 45V LV
D	53433-60010	Plate, hood stay hinge	1	40V LV 45V LV
E	94110-40600	Nut (hex 6-10p)	16 (FJ45V, 45LV - 22)	
F	90201-06028	Washer, plate	12	40V LV 45V LV
G	91111-40616	Bolt (hex-hd. 6-10p 16)	23	
H	94511-00600	Washer, spring (6)	20	
I	53432-60010	Bracket, hood stay clamp spring	1	40V LV 45V LV
J	95112-00305	Rivet	3	
K	53431-60010	Spring, hood stay clamp	1	40V LV 45V LV
L	90540-09007	Cushion	1	40V LV 45V LV
M	53403-60010	Stay sub-assy, hood (includes illustration L of Fig 37)	1	40V LV 45V LV
N	94613-10600	Washer, plate (6 10)	29 (FJ45V, 45LV 35)	
O	53506-60010	Catch sub-assy, hood	2	40V LV 45V LV
P	93210-16016	Screw (rd-hd 6-10p 16)	4	
Q	53401-60010	Hinge sub-assy, hood	2	40V LV 45V LV
R	93230-16012	Screw (oval-hd. 6 10p 12)	12	
S	53412-60010	Cushion, hood hinge seat	4	40V LV 45V LV
	53310-60020	Hood assy (includes illustrations L, N~Q of Fig - 163 on Model FJ40 Parts Catalog and illustrations A~E, H~S of Fig 37)	1	40V LV
	53310-60050	Hood assy (OPT)	1	40V LV
	53310-92000	Cover assy, hood (includes illustrations A~E, H~T of Fig - 37 and illustrations A~C, Z, X of Fig - 63)	1	45V LV
T	53301-60020	Hood sub-assy	1	40V LV
	53301-60050	Hood sub-assy (OPT)	1	40V LV
	53301-92000	Cover sub-assy, hood	1	45V LV

FIG.—37 HOOD & RADIATOR GRILLE

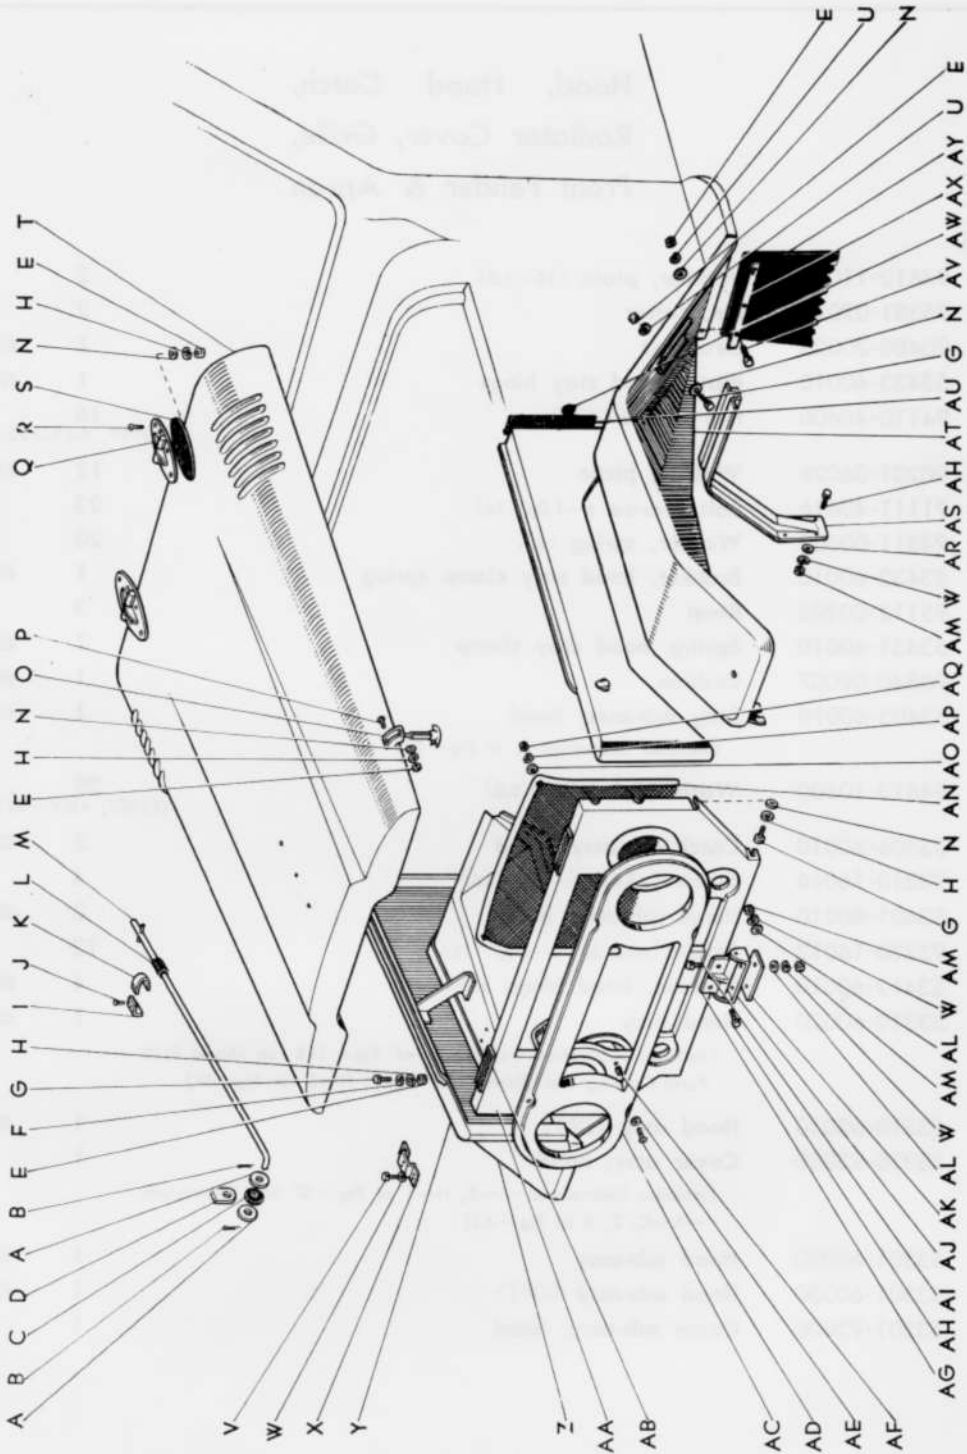


B 1286

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 37)				
U	94512-00600	Washer, spring (6)	4 (FJ45V, 45LV 10)	
V	91111-40816	Bolt (hex hd. 8 1 25p 16)	12	
W	94512-00800	Washer, spring (8)	19	
X	86508-60010	Bracket sub-assy, horn, RH	1	40V LV 45V LV
	86509-60010	Bracket sub-assy, horn, LH	1	40V LV 45V LV
	53350-60010	Panel assy, hood side, RH (includes illustration Y of Fig 37 and Illustration AB of Fig 64)	1	40V LV 45V LV
	53360-60010	Panel assy, hood side, LH	1	40V LV 45V LV
Y	53303-60010	Panel sub-assy, hood side, RH	1	40V LV 45V LV
	53304-60010	Panel sub-assy, hood side, LH	1	40V LV 45V LV
	53810-60010	Fender assy, front, RH (includes illustration Z, AS, AT of Fig 37)	1	40V
	53810-60040	Fender assy, front, RH	1	LV
	53810-92000	Fender assy, front, RH	1	45V
	53810-92100	Fender assy, front, RH	1	LV
	53820-60010	Fender assy, front, LH	1	40V
	53820-60020	Fender assy, front, LH	1	LV
	53820-92000	Fender assy, front, LH	1	45V
	53820-92100	Fender assy, front, LH	1	LV
	53820-92170	Fender assy, front, LH (For U S A)	1	LV
Z	53801-60010	Fender sub-assy, front, RH	1	40V LV
	53801-92000	Fender sub-assy, front, RH	1	45V
	53801-92100	Fender sub-assy, front, RH	1	LV
	53802-60010	Fender sub-assy, front, LH	1	40V LV
	53802-92000	Fender sub-assy, front, LH	1	45V
	53802-92100	Fender sub-assy, front, LH	1	LV
	53802-92170	Fender sub-assy, front, LH (For U S A)	1	LV
AA	53106-60010	Cover sub-assy, radiator	1	40V LV 45V LV
AB	53149-60010	Shim, radiator cover cushion	2	40V LV 45V LV
AC	53111-60010	Grille, radiator	1	40V LV 45V LV
AD	93210-16025	Screw (rd-hd. 6—1 0p 25)	4	
AE	94521-00600	Washer, toothed (6)	4	
AF	53112-60010	Piece, radiator grille distance	4	40V LV 45V LV
AG	53152-60010	Hinge, radiator cover support	1	40V LV 45V LV
AH	91111-50825	Bolt (hex-hd 8—1 25p 25)	11	
AI	91111-50832	Bolt (hex-hd 8—1 25p 32)	2	
AJ	53107-60010	Bracket sub-assy, radiator cover support hinge	1	40V LV 45V LV

FIG.—37 HOOD & RADIATOR GRILLE

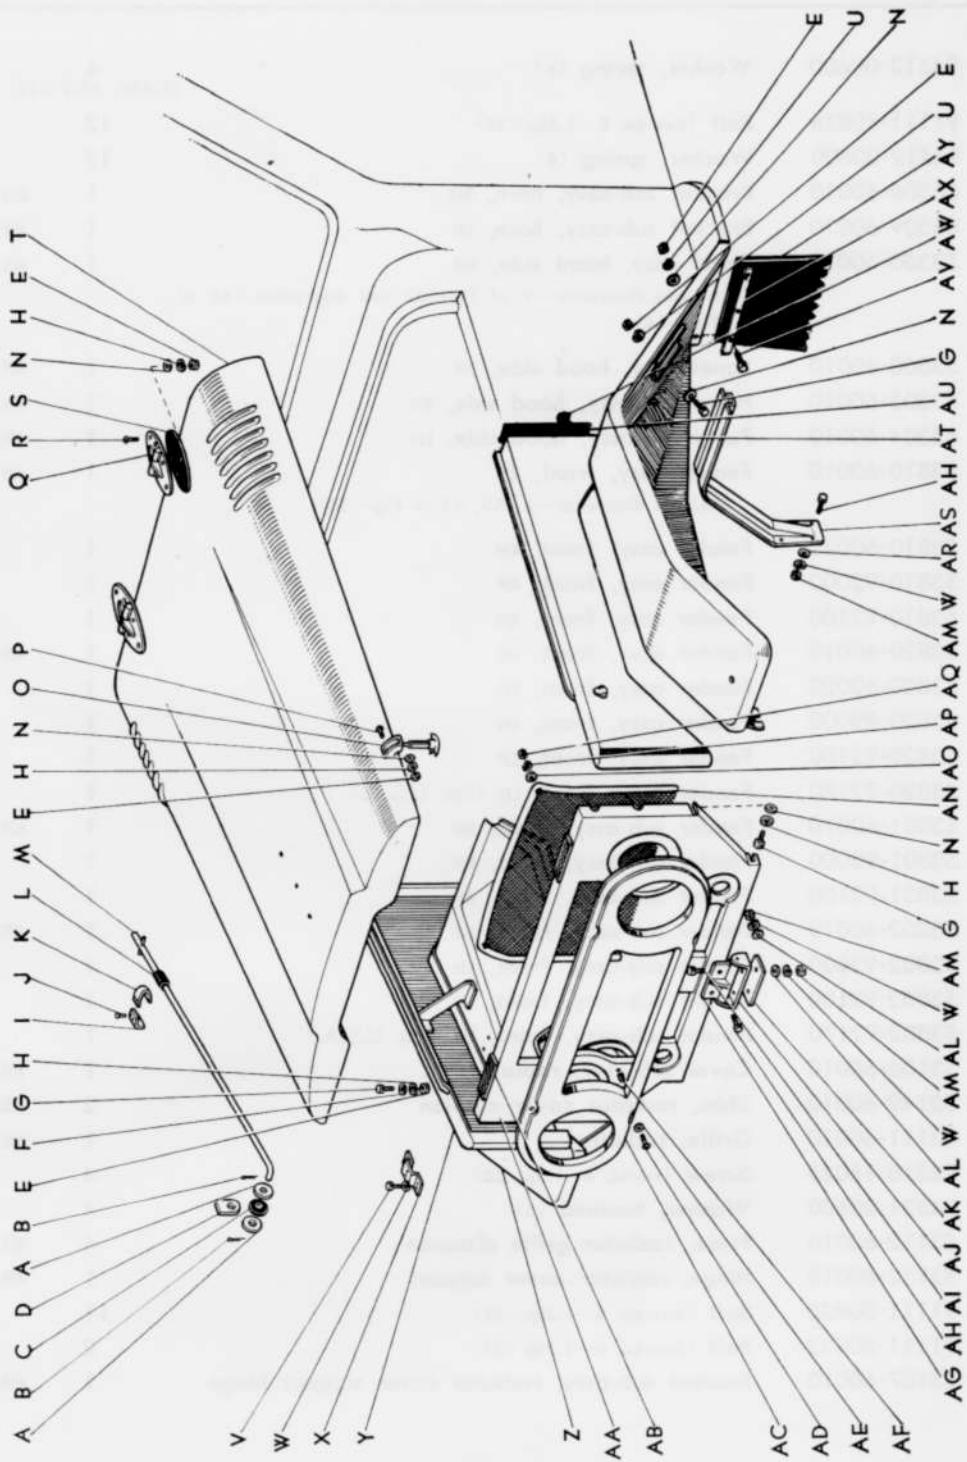


B 1286

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.37)				
AK	53154-60010	Shim, radiator cover support hinge bracket	1	40V LV 45V LV
AL	94613-10800	Washer, plate (8 16)	5	
AM	94110-40800	Nut (hex 8 125p)	23	
AN	53011-60010	Ornament sub-assy, radiator grille	1	40V LV 45V LV
AO	94612-10500	Washer, plate (5 10)	4	
AP	94511-00500	Washer, spring (5)	4	
AQ	94110-40500	Nut (hex. 5 09p)	4	
AR	94612-10800	Washer, plate (8 16)	14	
AS	53852-60010	Stay, front fender, LH	1	40V LV 45V LV
	53851-60010	Stay, front fender, RH	1	40V LV 45V LV
AT	53712-60010	Apron, fender, LH	1	40V 45V
	53702-60010	Apron sub-assy, fender, LH	1	LV LV
	53701-60010	Apron sub-assy, fender, RH	1	40V 45V
	53711-60050	Apron, fender, RH	1	LV LV
AU	53359-60010	Shim, hood side panel cushion	2	40V LV 45V LV
AV	91111-40620	Bolt (hex-hd. 6 10p 20)	6	(FJ45V, LV only)
AW	77653-35010	Clamp (For hood side panel cushion shim)	6	40V LV 45V LV
AX	53882-92000	Plate, mudguard set retainer (Excludes U.S.A.)	2	45V LV
AY	53881-92000	Rubber, mudguard (Excludes U.S.A.)	2	45V LV

BODY

FIG.—38 RADIATOR SUPPORT, COWL & STEP (FJ40V, 40LV)

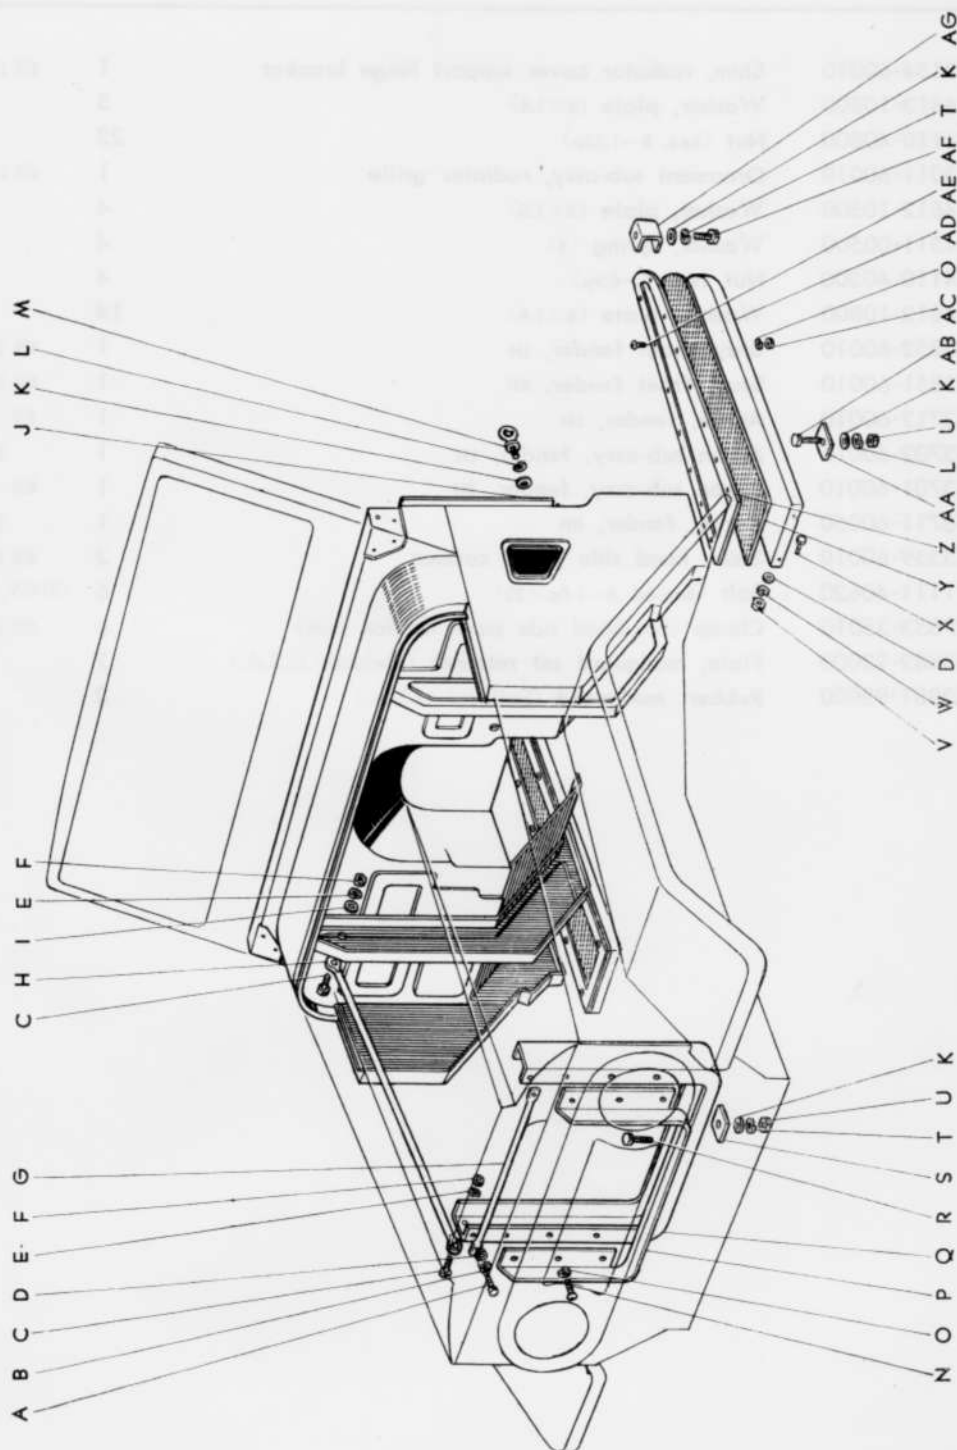


B 1267

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Radiator Support, Cowl & Step (FJ40V, 40LV)				
(FIG 38)				
A	91111-40820	Bolt hex-hd 8 125p 20 ¹	2	
B	94512-00800	Washer, spring (8	2	
C	91111-40616	Bolt hex-hd 6 10p 16 ¹	2	
D	94612-10800	Washer, plate (8 16 ¹	26	
E	94511-00600	Washer, spring (6 ¹	2	
F	94110-40600	Nut hex 6 10p ¹	2	
G	53163-60010	Bar, radiator support	1	40V LV 45V LV
H	53167-60010	Rod, radiator brace	1	40V LV 45V LV
I	94613-10600	Washer, plate (6 10 ¹	1	
	55700-60020	Cowl assy	1	40V
		(includes illustrations A, J, L, O of Fig 43, illustrations I~M of Fig 82, illustrations K, N, O, V of Fig 85, illustrations D, N~Q of Fig 141 and illustrations V~AD of Fig 149 on Model FJ40 Parts Catalog and illustration J of Fig 38 illustrations A, C~L, Q~AD of Fig 40 and illustrations D, X, AI, AJ of Fig 41)		
	55700-60050	Cowl assy	1	LV
		(includes illustrations A, J, L of Fig 43 illustrations K, N, O, V of Fig 85 and illustrations V~AD of Fig 149 on Model FJ40 Parts Catalog and illustrations M, N, AM, AN, AP of Fig 14, illustration J of Fig 38 illustrations A, C~L, Q~AD of Fig 40 and illustrations N, Y, Z, AB of Fig 42)		
	55700-60060	Cowl assy OPT ¹	1	LV
J	55701-60030	Cowl sub-assy	1	40V
		(includes illustrations A, J, O of Fig 43 on Model FJ40 Parts Catalog and illustration W of Fig 40)		
	55701-60060	Cowl sub-assy	1	LV
	55701-60070	Cowl sub-assy OPT	1	LV
K	94612-11000	Washer, plate (10 16	8	
L	94511-01000	Washer, spring (10 ¹	4	
M	55191-60010	Bolt, safety strap ring	2	40V LV
N	93110-15010	Screw rd-hd 5 09p 10	6	
O	94511-00500	Washer, spring (5 ¹	34	
P	53164-60010	Plate, radiator shroud	1	40V LV 45V LV

BODY

FIG.—38 RADIATOR SUPPORT, COWL & STEP (FJ40V, 40LV)

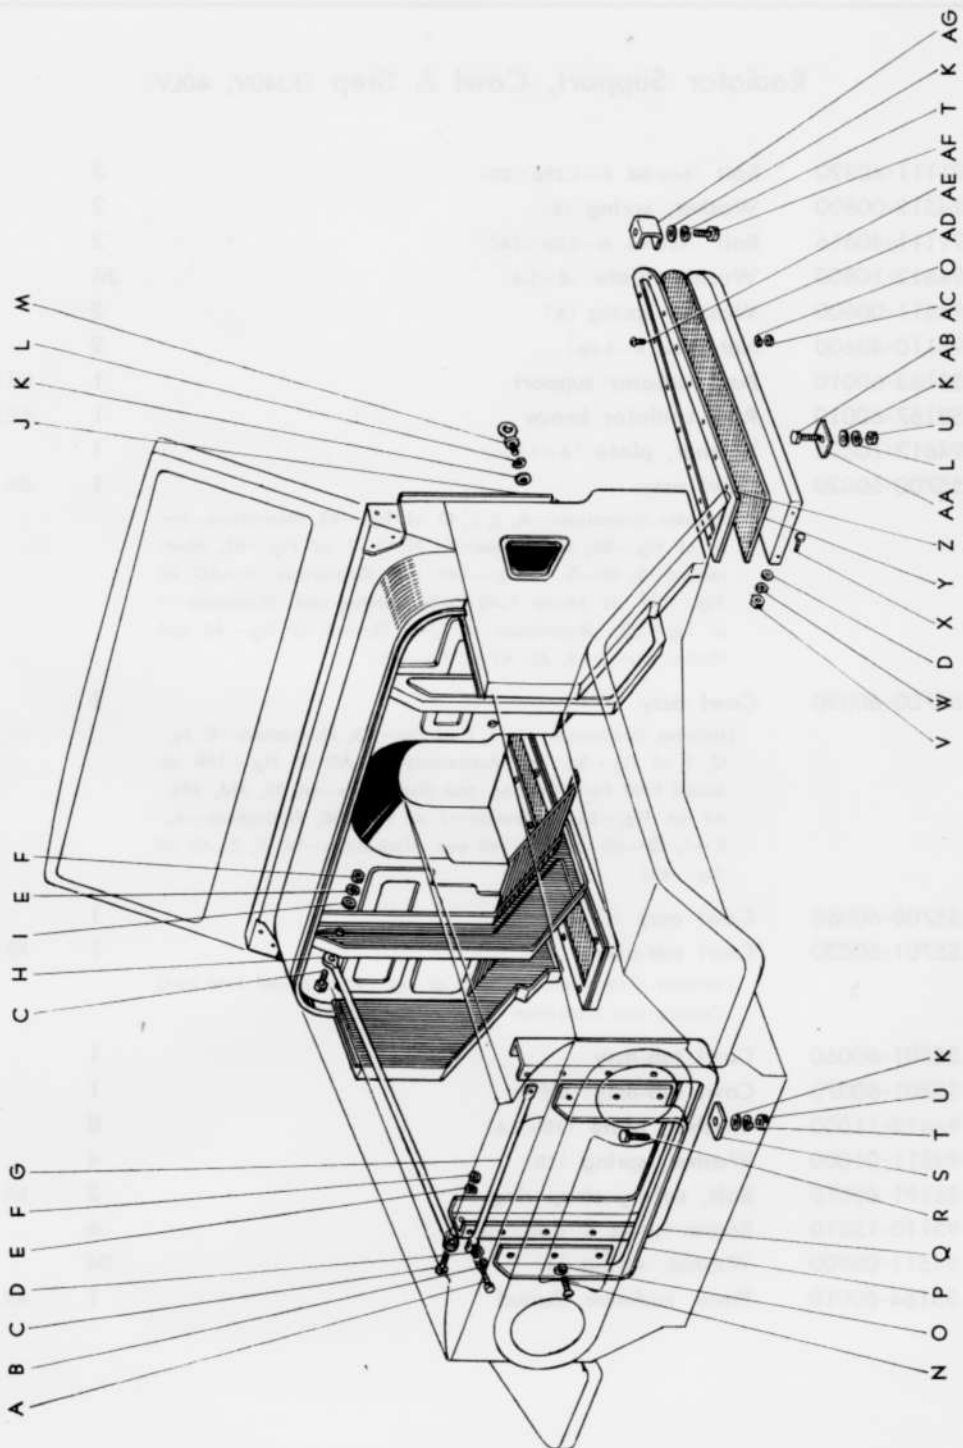


B 1267

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 38)				
Q	53108-60010	Support sub-assy, radiator	1	40V LV 45V LV
R	91111-41028	Bolt (hex-hd. 10 1.25p 28)	2	
S	52321-55010	Shim (For radiator support)	2	40V LV 45V LV
T	94512-01000	Washer, spring (10)	4	
U	94110-41000	Nut (hex 10 1.25p)	6	
V	94110-40800	Nut (hex 8 1.25p)	10	
W	94511-00800	Washer, spring (8)	14	
X	91111-40816	Bolt (hex-hd 8 1.25p 16)	14	
Y	51787-60010	Mat, step, LH	1	40V LV
	51786-60010	Mat, step, RH	1	40V LV
Z	51794-60010	Retainer, step mat, LH	1	40V LV
	51793-60010	Retainer, step mat, RH	1	40V LV
AA	52213-90310	Shim, step	2	40V LV
AB	90112-10007	Bolt, round head square neck	2	40V LV
AC	94110-15016	Nut (hex 5 0.9p)	28	
	51790-60010	Step assy, LH	1	40V LV
		(includes illustrations O, Y, Z, AC~AE of Fig 38)		
	51780-60010	Step assy, RH	1	40V LV
AD	51708-60010	Step sub-assy, LH	1	40V LV
	51707-60010	Step sub-assy, RH	1	40V LV
AE	93110-15016	Screw (rd-hd 5 0.9p 16)	28	
AF	91111-51056	Bolt (hex-hd 10 1.25p 56)	2	
AG	52032-30010	Shim sub-assy, cowl body mounting	2	40V LV

BODY

FIG.—39 RADIATOR SUPPORT, COWL & STEP (F145V, 45LV)

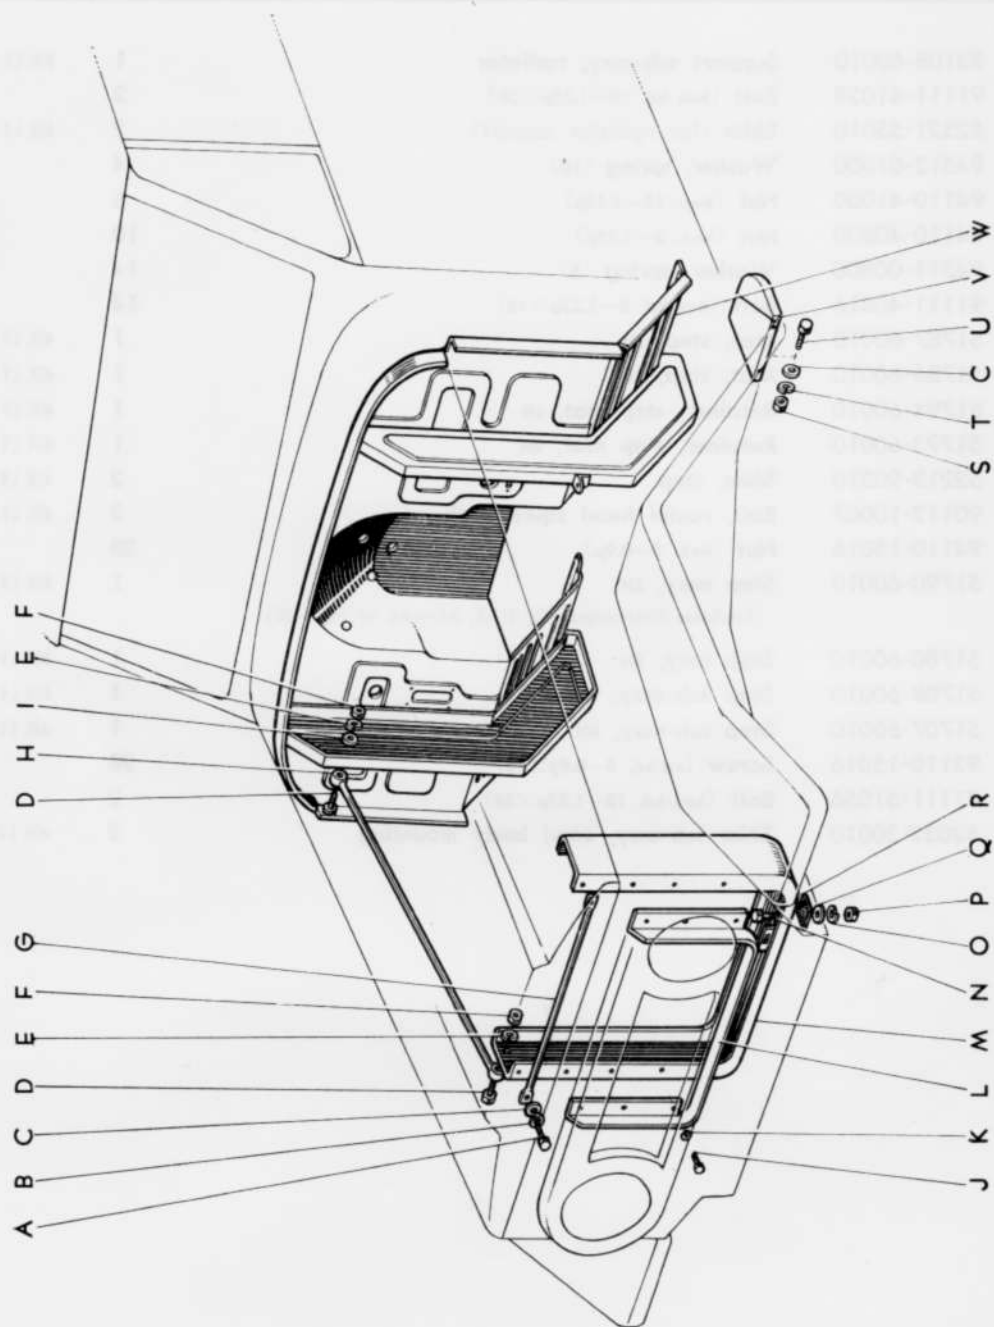


B 1287

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Radiator Support, Cowl & Step (FJ45V, 45LV)				
(FIG 39)				
A	91111-40820	Bolt (hex-hd 8—1.25p × 20)	2	
B	94512-00800	Washer, spring (8)	2	
C	94612-10800	Washer, plate (8 × 1.6)	10	
D	91111-40616	Bolt (hex-hd 6—1.0p × 16)	2	
E	94511-00600	Washer, spring (6)	2	
F	94110-40600	Nut (hex 6—1.0p)	2	
G	53163-60010	Bar, radiator support	1	40V LV, 45V LV
H	53167-60010	Rod, radiator brace	1	40V LV, 45V LV
I	94613-10600	Washer, plate (8 × 1.6)	1	
J	93110-15010	Screw (rd-hd 5—0.9p 10)	6	
K	94511-00500	Washer, spring (5)	6	
L	53164-60010	Plate, radiator shroud	1	40V LV, 45V LV
M	53108-60010	Support sub-assy, radiator	1	40V LV, 45V LV
N	91111-41028	Bolt (hex-hd. 10 1.25p/28)	2	
O	94512-01000	Washer, spring (10)	2	
P	94110-41000	Nut (hex. 10—1.25p)	2	
Q	94612-11000	Washer, plate (10 × 1.6)	2	
R	52321-55010	Shim (For radiator support)	2	40V LV, 45V LV
S	94110-40800	Nut (hex. 8 1.25p)	8	
T	94511-00800	Washer, spring (8)	8	
U	91111-40816	Bolt (hex-hd. 8 1.25p/16)	8	
V	53872-92000	Panel, step outer, LH	1	45V LV
	53871-92000	Panel, step outer, RH	1	45V LV
	53874-92000	Panel, step inner, LH	1	45V LV
	53873-92000	Panel, step inner, RH	1	45V LV
W	55101-92000	Panel sub-assy, dash (includes illustrations A, P of Fig 11)	1	45V
	55101-92100	Panel sub-assy, dash	1	LV
	55101-92170	Panel sub-assy, dash (For U.S.A.) (Effective from the end of December '64)	1	LV
	55101-92060	Panel sub-assy, dash (OPT)	1	45V LV
	55101-92160	Panel sub-assy, dash (OPT)	1	LV

BODY


FIG.—40 INSTRUMENT PANEL & GLOVE COMPARTMENT

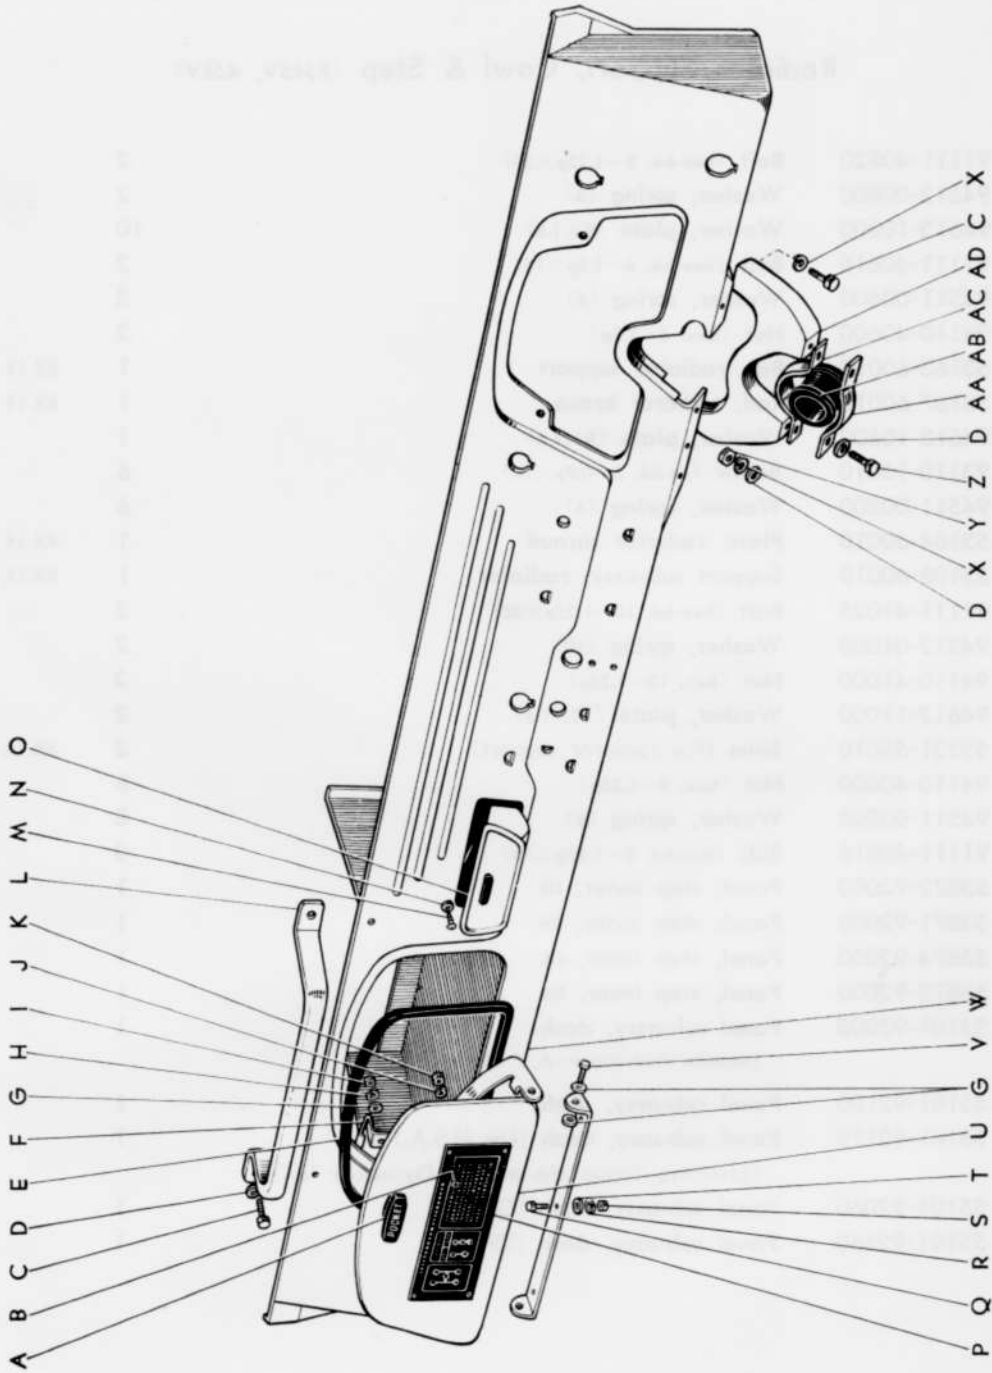

B 1288

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Instrument Panel & Glove Compartment				
(FIG 40)				
A	55521-60010	Knob, glove compartment	1	40V LV 45V LV
B	93210-13008	Screw (rd-hd 3-0.6p 8)	4	
C	91111-40816	Bolt (hex-hd 8 1.25p 16)	4	
D	94612-10800	Washer, plate (8 1.6)	6	
E	55549-60010	Packing, glove compartment door	1	40V LV 45V LV
F	55544-55010	Spring, instrument panel pocket cover lock	1	40V LV 45V LV
G	94612-10400	Washer, plate (4 0.6)	3	
H	94511-00400	Washer, spring (4)	1	
I	94110-40400	Nut (hex 4-0.75p)	1	
J	94511-00300	Washer, spring (3)	1	
K	94110-40300	Nut (hex 3-0.6p)	1	
L	55351-60010	Grip, instrument panel safety hand	1	40V LV 45V LV
M	93530-23512	Screw, tapping	2	
N	90207-05001	Washer, finish	2	40V LV 45V LV
O	74110-60010	Receptacle assy, instrument panel ash	1	40V LV 45V LV
P	74531-60030	Plate, instrument panel caution (Mark English)	1	40V LV 45V LV
	74531-60040	Plate, instrument panel caution (Mark Spanish)		
	74531-60050	Plate, instrument panel caution (Mark Portuguese)		
	74531-60060	Plate, instrument panel caution (Mark English)		
	74531-60070	Plate, instrument panel caution (Mark Spanish)		
	74531-60080	Plate, instrument panel caution (Mark Portuguese)	(OPT) 1	40V LV 45V LV
Q	91111-40612	Bolt (hex hd 6 1.0p 12)	3	
R	94511-00600	Washer, spring (6)	3	
S	94110-40600	Nut (hex 6 1.0p)	3	
T	94613-10600	Washer, plate (6 1.0)	3	
U	55501-60010	Door sub-assy, glove compartment (includes illustrations G, V of Fig 40)	1	40V 45V
	55501-60030	Door sub-assy, glove compartment	1	LV LV
V	55531-35010	Pin, glove door stopper	2	40V LV 45V LV
W	55301-60010	Panel sub-assy, instrument	1	40V
	55301-60040	Panel sub-assy, instrument	1	LV

FIG.—40 INSTRUMENT PANEL & GLOVE COMPARTMENT

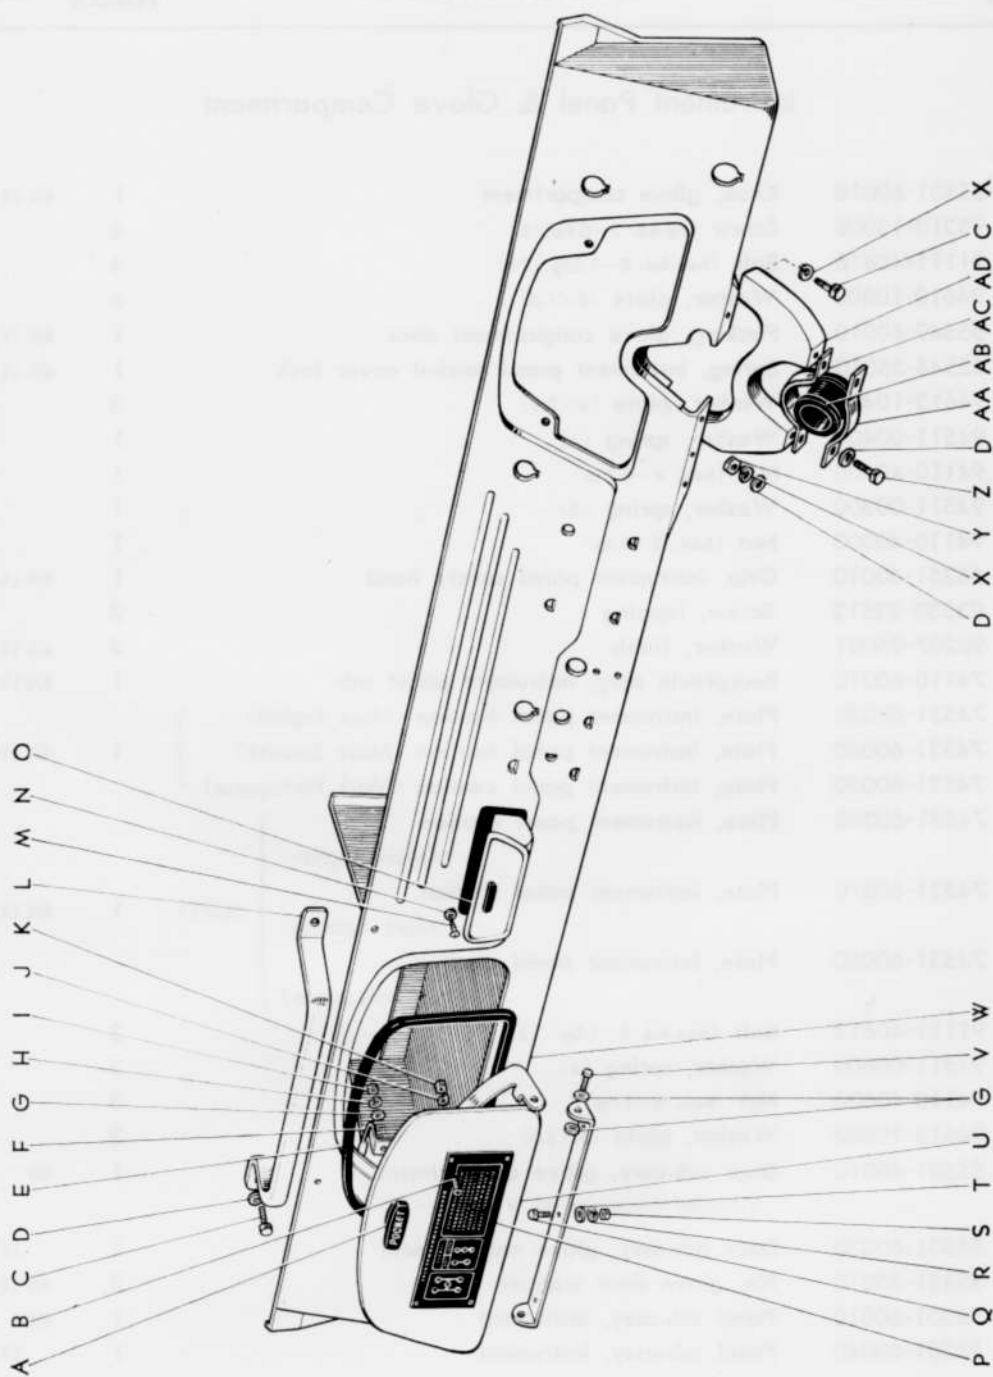


B 1288

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 40)				
	55301-92000	Panel sub-assy, instrument	1	45V
	55301-92060	Panel sub-assy, instrument (OPT)	1	45V
	55301-92100	Panel sub-assy, instrument	1	LV
	55301-92160	Panel sub-assy, instrument (OPT)	1	LV
	55301 92171	Panel sub-assy, instrument (For U.S.A.)	1	LV
	55301-92172	Panel sub-assy, instrument (For U.S.A.) (Effective from the end of December '64)	1	LV
X	94511-00800	Washr, spring (8)	4	
Y	94110-40800	Nut (hex 8 1.25p)	2	
Z	91111-40820	Bolt (hex-hd 8-1.25p x 20)	2	
AA	55662-60010	Clamp, steering column, lower	1	40V LV 45V LV
	55662-92171	Clamp, steering column, lower (For U.S.A.)	1	LV
AB	90480-45005	Grommet	1	40V LV 45V LV
AC	55661-60010	Clamp, steering column, upper	1	40V LV 45V LV
	55661-92171	Clamp, steering column, upper (For U.S.A.)	1	LV
AD	55672-60010	Stay, steering column	1	40V 45V
	55672-60020	Stay, steering column	1	LV LV
	55672-92170	Stay, steering column (For U.S.A.)	1	LV

BODY

FIG. 41 FRONT WINDOW & WINDSHIELD WIPER (FJ40V)

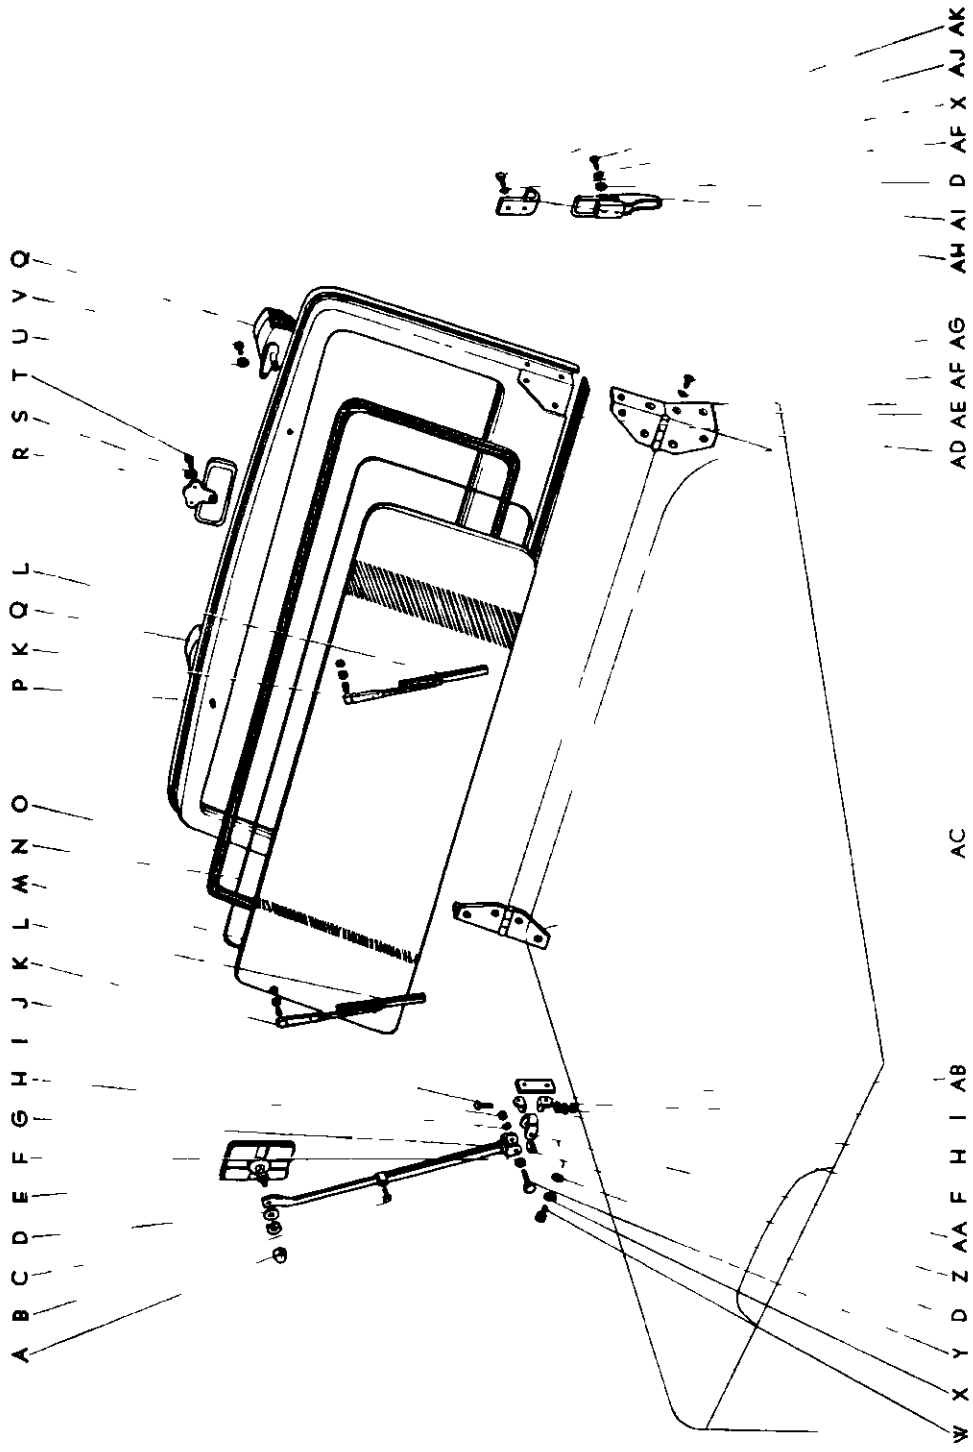


B 0680-D

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Front Window & Windshield Wiper (FJ40V)				
(FIG 41)				
A	94171-10800	Nut	1	
B	93180-16012	Screw (hex-hd. 6—1.0p × 12)	1	
C	94512-00800	Washer, spring (8)	1	
D	94612-10800	Washer, plate (8 16)	7	
	87910-60031	Mirror assy, rear view outside (includes illustrations A~J, Y~AB of Fig - 41)	1	40V LV
E	87901-60011	Mirror sub-assy, outer rear view (includes illustrations A, C, D of Fig - 41)	1	40V LV
F	94612-11000	Washer, spring (10 × 1.6)	12	
G	87902-60030	Arm sub-assy, outer rear view mirror (includes illustrations B, F, H, I, Y~AB of Fig - 41)	1	40V LV
H	94512-01000	Washer, spring (10)	2	
I	94110-41000	Nut (hex 10 -1 25p)	2	
J	91111-41056	Bolt (hex-hd 10—1 25p 56)	1	
	85060-60010	Arm & blade assy, windshield wiper (includes illustrations K, L of Fig - 41)	2	40V LV
K	85190-60010	Arm assy, windshield wiper	2	40V LV
L	85220-55010	Blade assy, windshield wiper	2	40V LV
M	56111-60010	Glass, windshield	1	40V LV
N	56122-60010	Weatherstrip, windshield outer	1	40V LV
O	56121-60010	Weatherstrip, windshield	1	40V LV
	56300-60020	Windshield assy (includes illustrations A~U of Fig -149 on Model FJ40 Parts Catalog and illustrations M~V, AC, AE~AH, AK of Fig 41)	1	40V LV
P	56301-60020	Frame sub-assy, windshield	1	40V LV
Q	85110-60010	Motor assy, windshield wiper	2	40V LV
R	87810-60011	Mirror assy, inner rear view	1	40V LV
S	94511-00600	Washer, spring (6)	2	
T	93210-16010	Screw (rd-hd 6 10p × 10)	2	
U	94613-10600	Washer, plate (6 10)	2	
V	93210-16016	Screw (rd-hd. 6—1 0p × 16)	2	
W	91111-40816	Bolt (hex-hd 8 1 25p 16)	2	

BODY

FIG.- 41 FRONT WINDOW & WINDSHIELD WIPER (FJ40V)

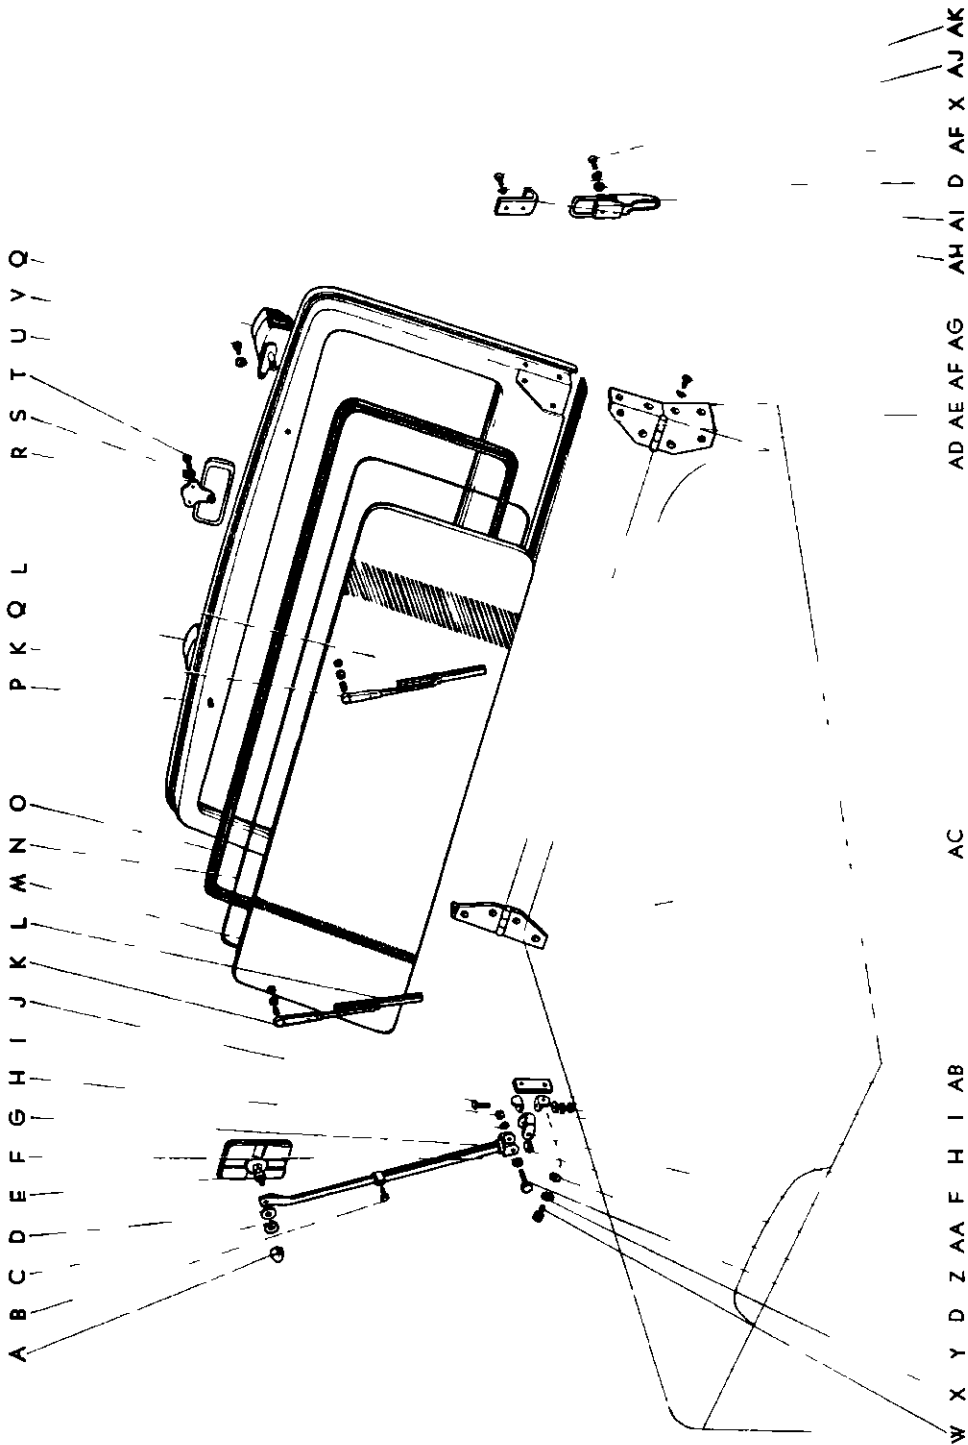


B 0680-D

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 41)				
X	94511-00800	Washer, spring (8)	10	
Y	91111-41045	Bolt (hex-hd 10—1 25p 45)	1	
Z	90560-10028	Ring, outside rear view mirror stay inside joint	1	40V LV
AA	87926-60010	Clamp, outside rear view mirror arm inside	1	40V LV
AB	87927-60010	Bracket, outer rear view mirror arm	2	40V LV
AC	56306-60010	Hinge sub-assy, windshield support, RH	1	40V LV
AD	56211-60020	Spacer, windshield	1	40V LV
AE	56307-60010	Hinge sub-assy, windshield support, LH	1	40V LV
AF	94524-00800	Washer, toothed (8)	20	
AG	93230-18020	Screw (oval-hd. 8—1 25p 20)	16	
AH	56456-60020	Hook, front window catch upper	2	40V LV
AI	56450-60010	Catch assy, windshield	2	40V LV
AJ	93210-18016	Screw (rd-hd 8—1 25p 16)	4	
AK	93230-18016	Screw (oval-hd 8 1 25p 16)	4	

BODY

FIG. 42 FRONT WINDOW & WINDSHIELD WIPER (FJ40LV)

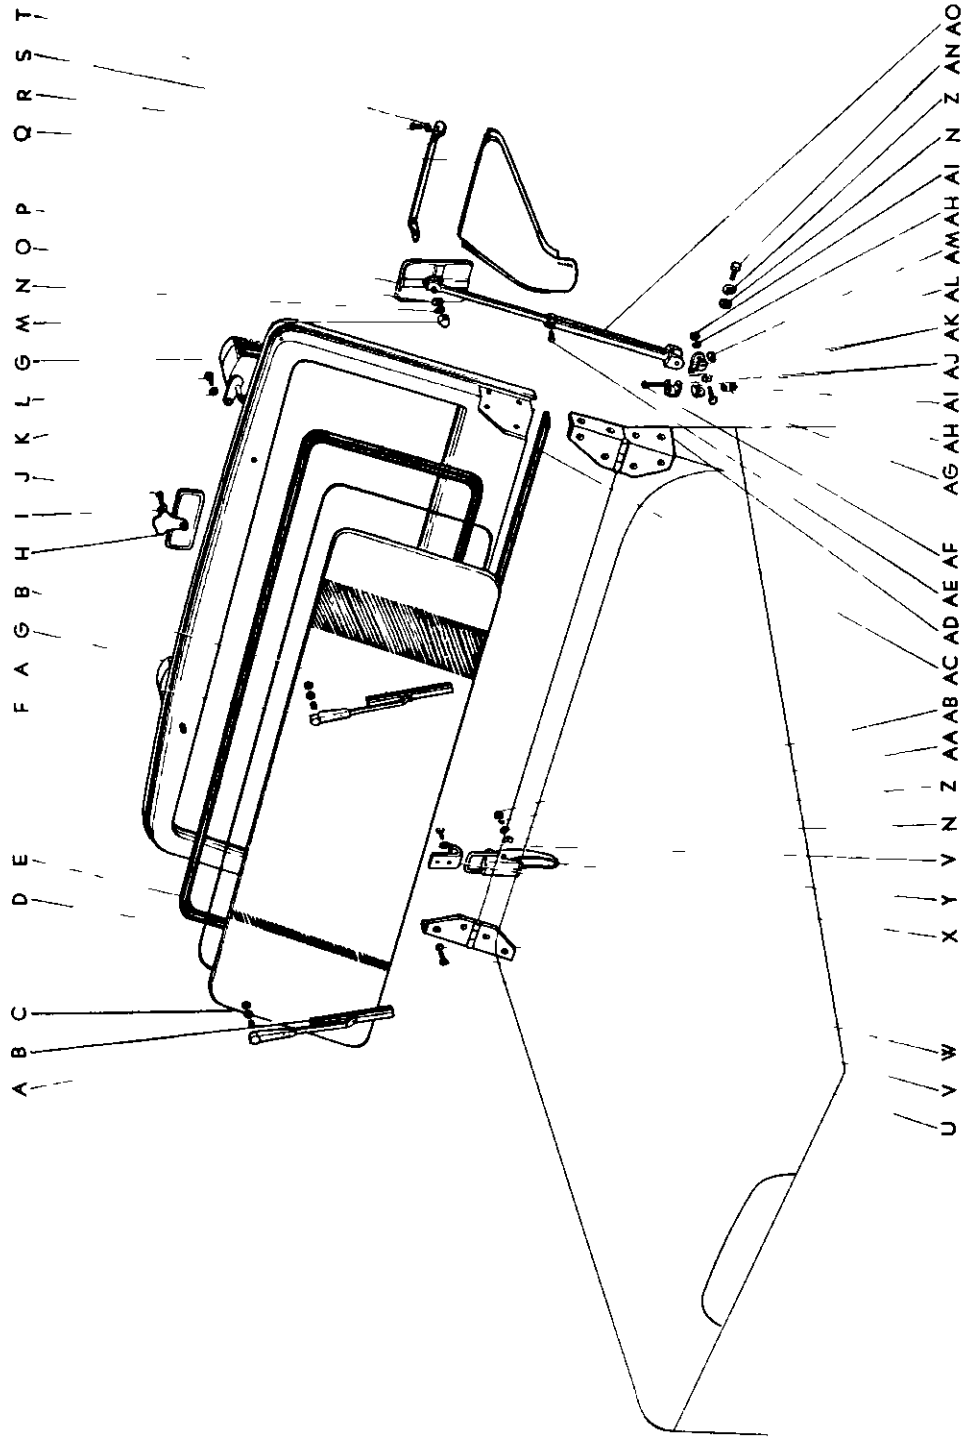

B 0682-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
-------------------	----------	--------------	------------------	-------


Front Window & Windshield Wiper (FJ40LV)

(FIG 42)

	85060-60010	Arm & blade assy, windshield wiper (includes illustrations A B of Fig 42)	2	40V LV
A	85190-60010	Arm assy, windshield wiper	2	40V LV
B	85220-55010	Blade assy, windshield wiper	2	40V LV
C	56111-60010	Glass, windshield	1	40V LV
D	56122-60010	Weatherstrip, windshield outer	1	40V LV
E	56121-60010	Weatherstrip, windshield	1	40V LV
	56300-60020	Windshield assy (includes illustrations A~U of Fig 149 on Model FJ40 Parts Catalog and illustrations C~L, U~W, X AA, AD of Fig 42)	1	40V LV
	56300-60060	Windshield assy (OPT)	1	LV
F	56301-60020	Frame sub-assy, windshield	1	40V LV
	56301-60050	Frame sub-assy, windshield (OPT)	1	LV
G	85110-60030	Motor assy, windshield wiper	2	LV
H	87810-60011	Mirror assy, inner rear view	1	40V LV
I	94511-00600	Washer, spring (6)	2	
J	93210-16010	Screw (rd-hd 6 10p 10)	2	
K	94611-10600	Washer, plate (6 10)	2	
L	93210-16016	Screw (rd-hd 6 10p 16)	2	
M	94171-10800	Nut (hex 8 1.25p)	1	
N	94512-00800	Washer, spring (6)	1	
O	94612-10800	Washer, plate (8 1.6)	7	
	87910-60031	Mirror assy, outer rear view (includes illustrations M~P, AE~AM of Fig 42)	1	40V LV
P	87901-60011	Mirror sub-assy, outer rear view (includes illustrations M~O of Fig 42)	1	40V LV
Q	55906-60010	Nozzle sub-assy, defroster, LH (OPT)	1	LV
	55905-60010	Nozzle sub-assy, defroster, RH (OPT)	1	LV
R	55955-60010	Guide, defroster (OPT)	2	LV
S	93210-14010	Screw (rd-hd 4 0.75p 10) (OPT)	6	
T	94511-00400	Washer, spring 4) (OPT)	6	
U	93230-18020	Screw (oval-hd 8 1.25p 20)	16	

BODY

FIG.—42 FRONT WINDOW & WINDSHIELD WIPER (FJ40LV)

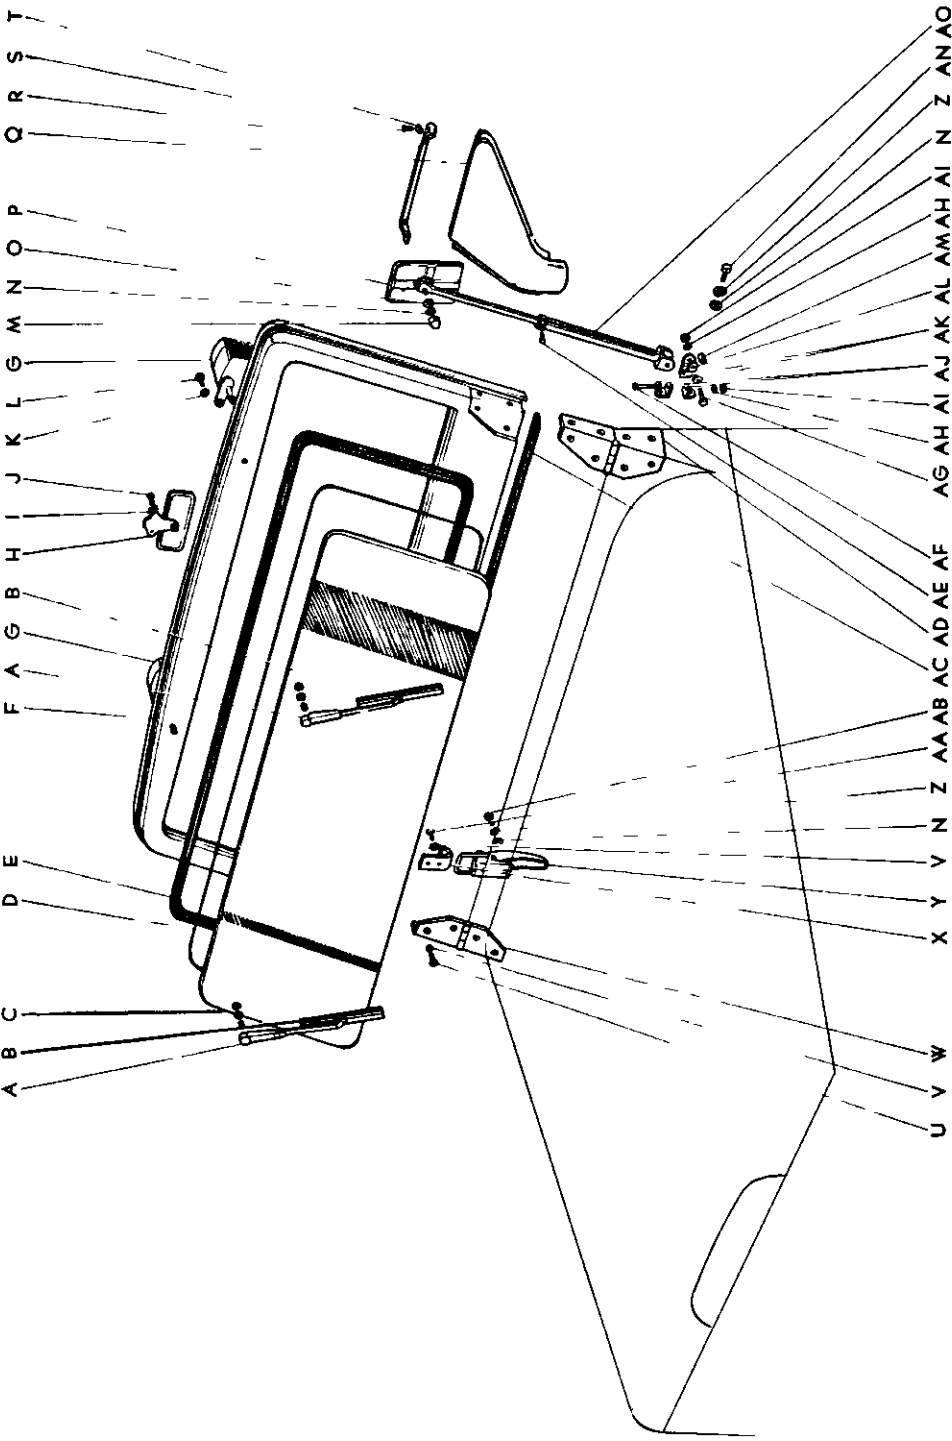


B 0682-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 42)				
V	94524-00800	Washer, toothed (8)	20	
W	56306-60010	Hinge sub-assy, windshield support, RH	1	40V LV
X	56456-60020	Hook, front window catch upper	2	40V LV
Y	56450-60010	Catch assy, windshield	2	40V LV
Z	94511-00800	Washer, spring (8)	10	
AA	93230-18016	Screw (oval-hd. 8—1 25p × 16)	4	
AB	93210-18016	Screw (rd-hd. 8—1 25p 16)	4	
AC	56211-60020	Spacer, windshield	1	40V LV
	56211-60030	Spacer, windshield (OPT)	1	LV
AD	56307-60010	Hinge sub-assy, windshield support, LH	1	40V LV
AE	93180-16012	Screw (hex-hd. 6 1 0p 12)	1	
AF	91111-41056	Bolt (hex-hd. 10 1.25p 56)	1	
AG	91111-41045	Bolt (hex-hd 10 1 25p 45)	1	
AH	94512-01000	Washer, spring (10)	2	
AI	94110-41000	Nut (hex 10 —1 25p)	2	
AJ	87927-60010	Bracket, outer rear view mirror arm	2	40V LV
AK	94612-11000	Washer, plate (10 16)	12	
AL	87926-60010	Clamp, outside rear view mirror arm inside	1	40V LV
AM	90560-10028	Ring, outside rear view mirror stay inside joint	1	40V LV
AN	91111-40816	Bolt (hex-hd 8—1 25p 16)	2	
AO	87902-60030	Arm sub-assy, outer rear view mirror	1	LV
(includes illustrations—AE, AG, AU~AM of Fig 42)				

BODY

FIG.—43 REAR BODY LOWER (FJ40V, 40LV)

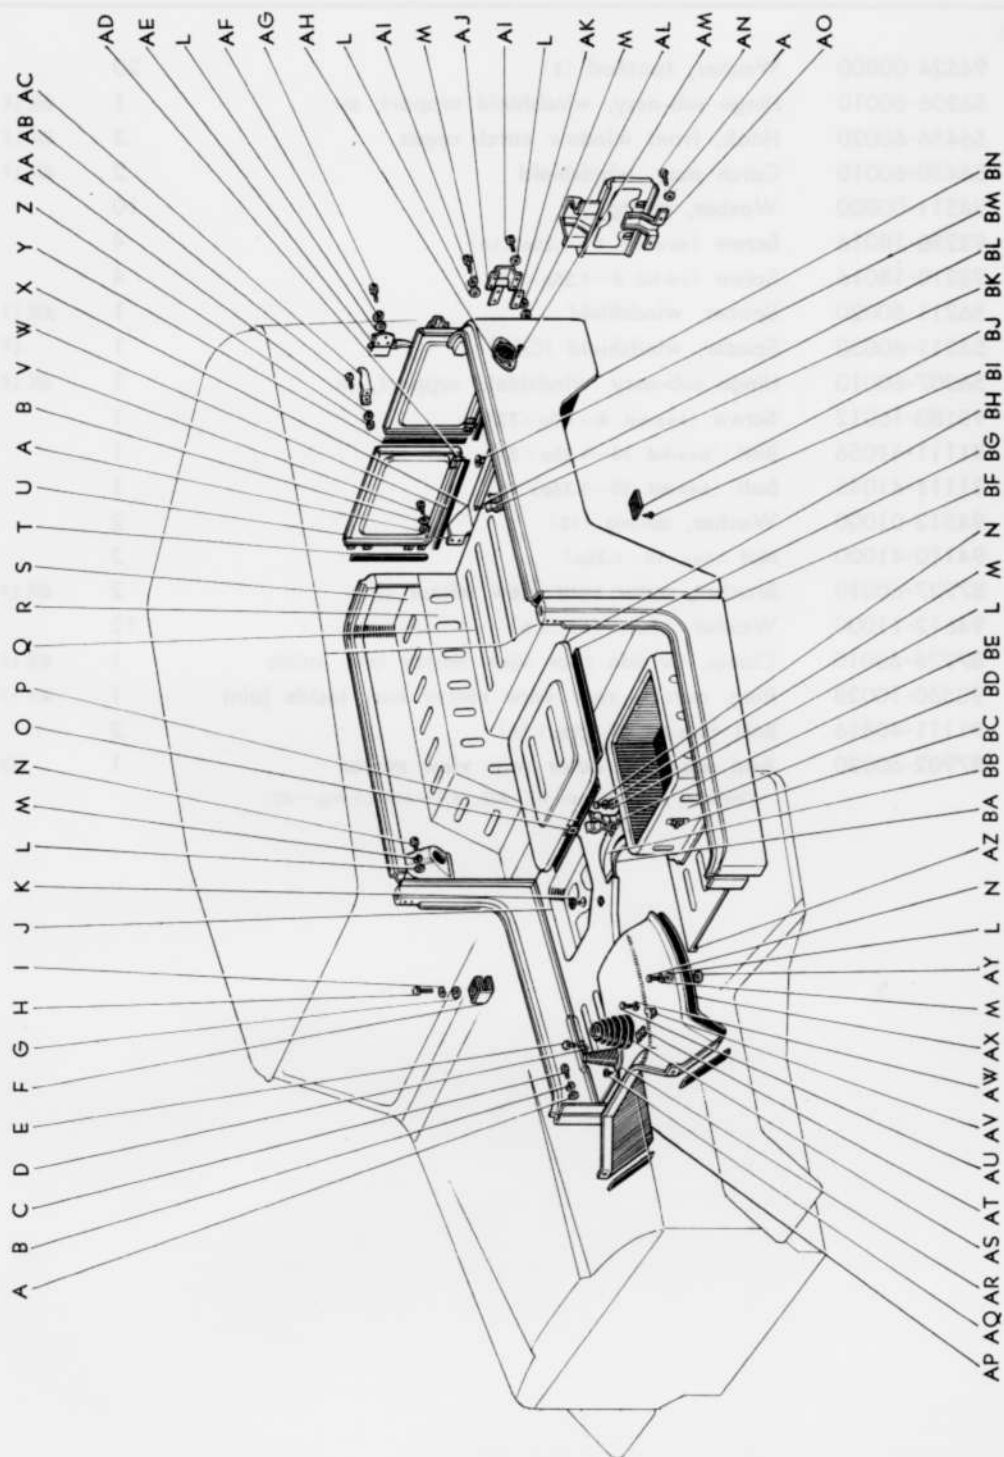


B 1289

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Body Lower (FJ40V, 40LV)				
(FIG 43)				
	56100-60020	Body assy, rear, front (includes illustrations J, K~N AP, AQ, AX~BH of Fig 43)	1	40V LV
	56200-60030	Body assy, rear, rear (includes illustrations—L, M, Q~U, W, Y~AG, AI~AL, BI~BN of Fig 43)	1	40V
	56200-60080	Body assy, rear, rear	1	LV
	56200-90330	Body assy, rear, rear For U.S.A.)	1	LV
	58003-60020	Body sub-assy, rear, front (includes illustrations J, AZ~BD BF of Fig 43)	1	40V LV
	58004-60030	Body sub-assy, rear, rear (includes illustrations Q~S, BN of Fig 43)	1	40V
	58004-60080	Body sub-assy, rear, rear	1	LV
	58004-90330	Body sub-assy, rear, rear (For U.S.A.)	1	LV
A	94612-10800	Washer, plate (8 16)	10	
B	94511-00800	Washer, spring (8)	8	
C	91111-40816	Bolt (hex-hd 8 125p 16)	4	
D	94612-10500	Washer, plate (5 10)	3	
E	93210-15012	Screw (rd-hd 5 09p 12)	3	
F	52033-30010	Plate sub-assy, body mounting shim	10	40V LV
G	94612-11000	Washer, plate (10 16)	10	
H	91111-51045	Bolt (hex-hd 10 125p 45)	10	
I	94512-01000	Washer, spring (10)	10	
J	58201-60010	Floor sub-assy, front, RH	1	40V LV
K	57455-59010	Gum, bushing (For front floor panel hole)	1	40V LV
L	94613-10600	Washer, plate (6 10)	62	
M	94511-00600	Washer, spring (6)	29	
N	91111-40616	Bolt (hex-hd 6 10p 16)	27	
O	75203-60010	Hinge sub-assy, tool box lock	1	40V LV
P	75233-60010	Cushion, tool box, A	2	40V LV
Q	58301-60030	Floor sub-assy, rear floor	1	40V
	58301-60040	Floor sub-assy, rear floor	1	LV
	58301-90330	Floor sub-assy, rear floor For U.S.A.)	1	LV
R	61643-60010	Panel, rear floor side, RH	1	40V LV
	61644-60010	Panel, rear floor side, LH	1	40V LV

BODY

FIG.—43 REAR BODY LOWER (FJ40V, 40LV)

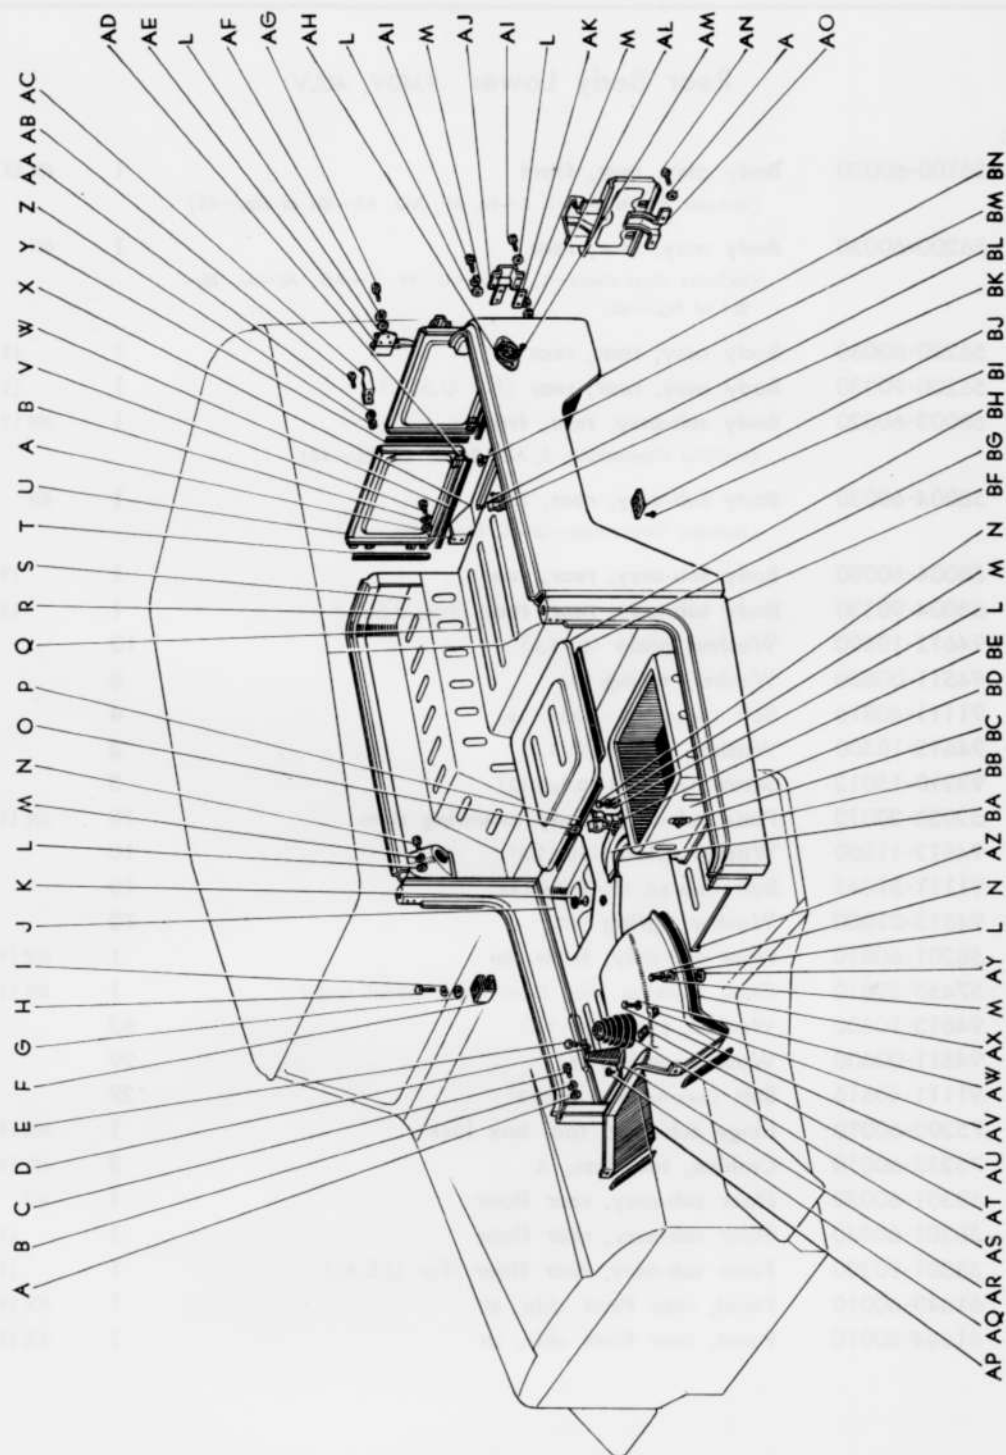


B 1289

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.43)				
S	61641-60020	Apron, rear fender, RH	1	40V LV
	61603-90330	Apron sub-assy, fender, RH (For U.S.A.) (includes illustration—R of Fig 43)	1	LV
	61642-60020	Apron, rear fender, LH	1	40V LV
	61604-90330	Apron sub-assy, fender, LH (For U.S.A.) (includes illustration—R of Fig—43)	1	LV
T	64963-60010	Cushion, rear swing gate, side	2	40V LV
	64950-60010	Gate assy, rear swing, RH (includes illustrations L, M, T, U, W, Y, AD, AI~AL of Fig 43)	1	40V
	64950-60070	Gate assy, rear swing, RH	1	LV
	64960-60010	Gate assy, rear swing, LH	1	40V
	64960-60080	Gate assy, rear swing, LH	1	LV
U	64905-60010	Gate sub-assy, rear swing, RH (includes illustration AD of Fig 43)	1	40V
	64905-60040	Gate sub-assy, rear swing, RH	1	LV
	64906-60010	Gate sub-assy, rear swing, LH	1	40V
	64906-60050	Gate sub-assy, rear swing, LH	1	LV
V	91111-40820	Bolt (hex-hd 8—1.25p 20)	4	
W	64964-60010	Cushion, rear swing gate, lower RH	1	40V LV
	64965-60010	Cushion, rear swing gate, lower LH	1	40V LV
X	62641-60010	Step, rear	1	40V LV
	62641-60020	Step, rear (OPT)	1	40V LV
Y	64962-60010	Cushion, rear swing gate, center	1	40V LV
Z	94110-40800	Nut (hex. 8 1.25p)	2	
AA	94512-00800	Washer, spring (8)	2	
AB	93210-18020	Screw (rd-hd. 8 1.25p/20)	2	
AC	69363-60010	Latch, rear swing gate lock	1	40V
	69363-60020	Latch, rear swing gate lock	1	LV
AD	68950-60010	Stopper assy, rear swing gate open	2	40V LV
AE	69360-60010	Lock assy, rear drop gate	1	40V
	69370-60010	Lock assy, rear drop gate	1	LV
AF	94512-00600	Washer, spring (6)	3	
AG	93210-16016	Screw (rd-hd. 6 1.0p△16)	3	
AH	81910-60010	Reflector assy, reflex (Excludes U.S.A.)	2	40V LV
AI	93210-16010	Screw (rd-hd. 6 1.0p 10)	32	
AJ	68906-60010	Hinge sub-assy, rear swing gate, LH	1	40V LV
	68908-90301	Hinge sub-assy, rear swing gate, LH	1	40V LV
	68905-60020	Hinge sub-assy, rear swing gate, RH	1	40V LV
	68907-90301	Hinge sub-assy, rear swing gate, RH	1	40V LV

FIG.—43 REAR BODY LOWER (FJ40V, 40LV)

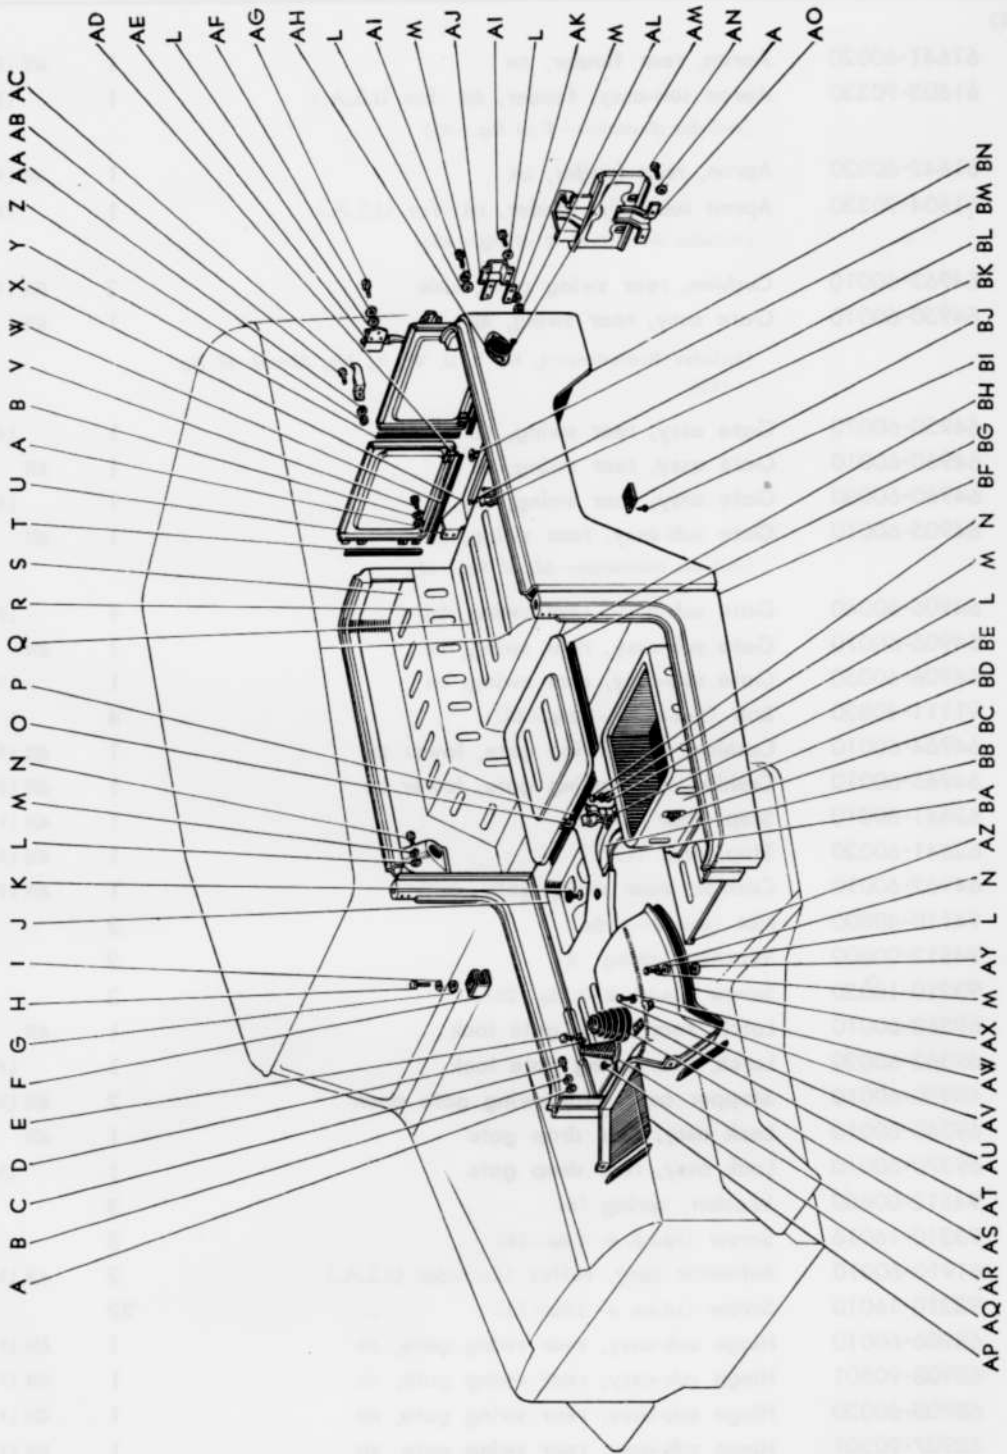


Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 43)				
AK	64961-60010	Spacer, rear swing gate hinge female	8	40V LV
	64961-90312	Spacer, rear swing gate hinge female	8	40V LV
AL	94110-40600	Nut (hex. 6 10p)	4	
AM	93210-16010	Screw (rd-hd. 6—10p 10)	4	
	94512-00600	Washer, spring (6)	4	
	94110-40600	Nut (hex 6 10p)	4	
AN	93210-18014	Screw (rd-hd. 8 125p 14)	2	
AO	75102-60020	Bracket sub-assy, rear license plate	1	40V LV
AP	58206-60070	Cover sub-assy, transmission	1	40V LV
	58206-60120	Cover sub-assy, transmission (OPT, For change lever & transfer control lever	1	40V LV
	58206-60110	Cover sub-assy, transmission (OPT, For change lever transfer control lever & power take off control lever A)	1	40V LV
	58206-60100	Cover sub-assy, transmission (OPT, For change lever, transfer control lever & power take off control lever A, B)	1	40V LV
	58206-60080	Cover sub-assy, transmission (OPT, For power take off control lever A, B)	1	40V LV
	58206-60090	Cover sub-assy, transmission (OPT, For power take off control lever A)	1	40V LV
AO	90950-01019	Plug, hole	3	40V LV
AR	58280-60020	Dust-proof assy, shifting lever hole (OPT)	1	40V LV
AS	58273-60010	Cover, shifting lever OPT	1	40V LV
AT	58208-60011	Cover sub-assy, power take-off control lever (OPT)	1	40V LV
AU	91111-40610	Bolt (hex-hd 6 10p 10)	2	
AV	58209-60010	Cover sub-assy, power take-off control lever, B (OPT)	1	40V LV
AW	94521-00600	Washer, toothed (6)	2	
AX	58263-60010	Packing, transmission cover, A	1	40V LV
	58264-60010	Packing, transmission cover, B	1	40V LV
	58265-60020	Packing, transmission cover, C	1	40V LV
AY	58279-60010	Plate, transmission set	16	40V LV
AZ	58202-60010	Floor sub-assy, front, LH	1	40V LV
BA	58132-60010	Panel, front floor center	1	40V LV
BB	58103-60010	Channel sub-assy, front floor center	1	40V LV

BODY

FIG.—43 REAR BODY LOWER (FJ40V, 40LV)

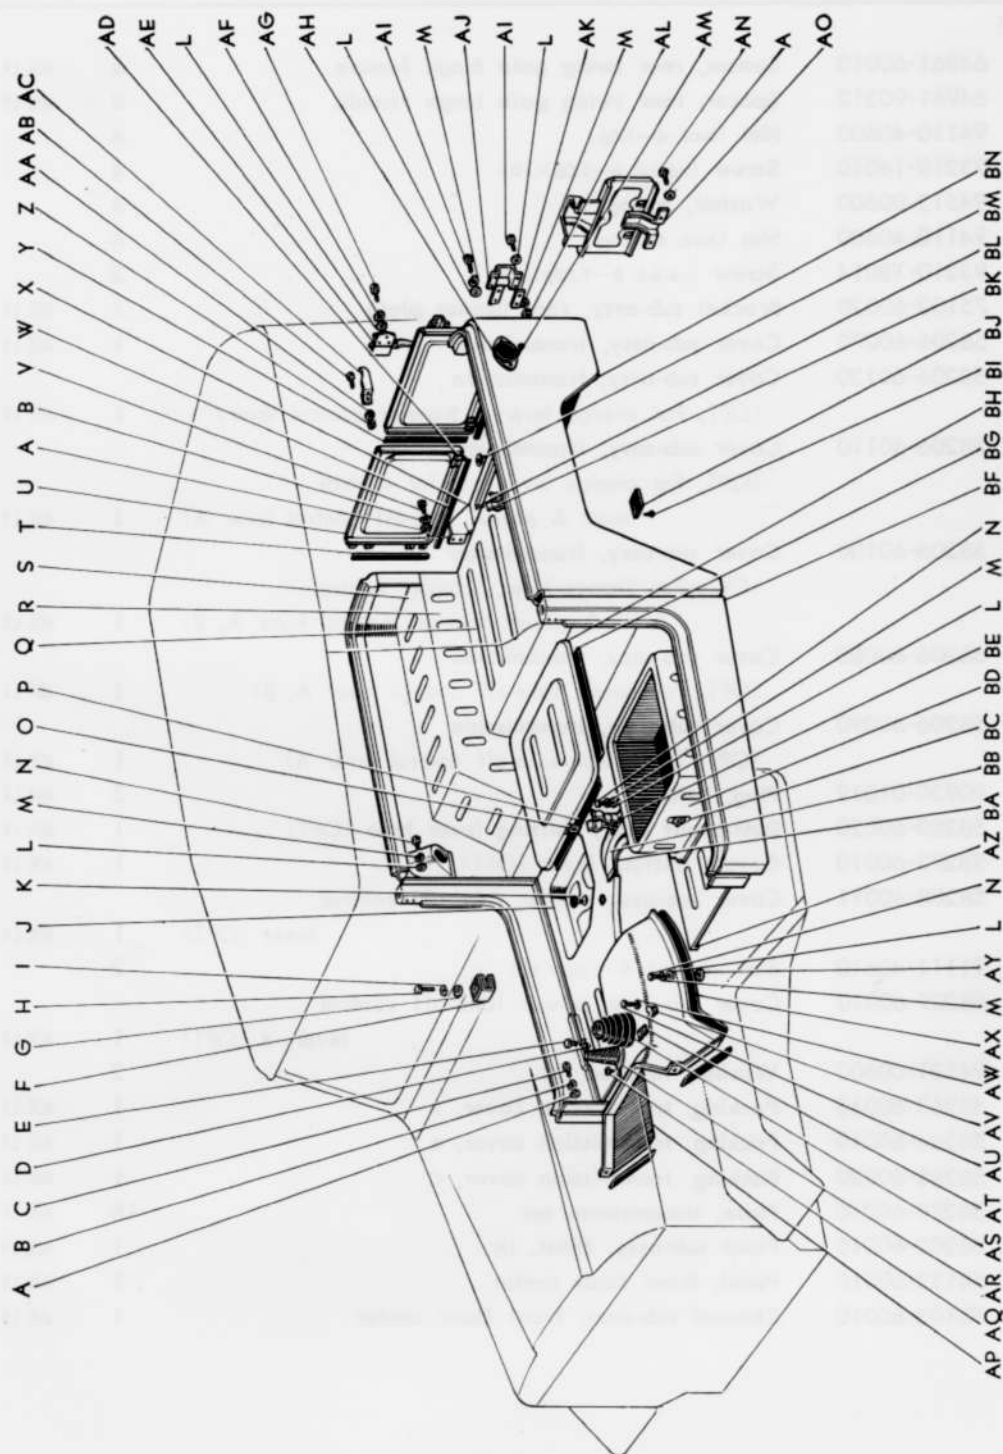


Toyota Land Cruiser

179

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 43)				
BC	75204-60010	Stopper sub-assy, tool box lock	1	40V LV
BD	75201-60020	Box sub-assy, tool	1	40V LV
BE	58031-60010	Bracket sub-assy, jack, upper	1	40V LV
	61320-60010	Panel assy, rear body front side, LH (includes illustration BF of Fig 43)	1	40V LV
	61310-60010	Panel assy, rear body front side, RH	1	40V LV
BF	61302-60030	Panel sub-assy, rear body front outside, LH	1	40V LV
	61301-60030	Panel sub-assy, rear body front outside, RH	1	40V LV
	61308-60040	Panel sub-assy, rear body front inside, LH	1	40V LV
	61307-60020	Panel sub-assy, rear body front inside, RH	1	40V LV
BG	75234-60010	Cushion, tool box, B	2	40V LV
BH	75202-60030	Cover sub-assy, tool box	1	40V LV
BI	90467-11003	Clip	4	40V LV
BJ	52241-60010	Shim, floor rear stiffener	2	40V LV
BK	58363-60010	Clamp, jack handle	6	40V LV
	74741-95110	Spring, starting handle support (For U.S.A.)	3	LV
BL	93210-13013	Screw (rd-hd. 3 - 0.6p x 10)	8	
	94511-00300	Washer, spring (3)	8	
	94110-40300	Nut (hex. 3 0.6p)	8	
	93210-14010	Screw (rd-hd 4 0.75p x 10) (For U.S.A.)	6	
	94612-10400	Washer, plate (4 x 0.6) (For U.S.A.)	6	
	94511-00400	Washer, spring (4) (For U.S.A.)	6	
	94110-40400	Nut (hex. 4 - 0.75p) (For U.S.A.)	6	
BM	68955-60010	Stopper, rear swing gate open, female	2	40V LV
BN	61602-60020	Panel sub-assy, rear body rear side, LH (includes illustrations—R, S of Fig 43)	1	40V LV
	61602-90330	Panel sub-assy, rear body rear side, LH (For U.S.A.)	1	LV
	61601-60020	Panel sub-assy, rear body rear side, RH	1	40V LV
	61601-90330	Panel sub-assy, rear body rear side, RH (For U.S.A.)	1	LV

BODY

FIG.—44 REAR BODY UPPER (FJ40V, 40LV)

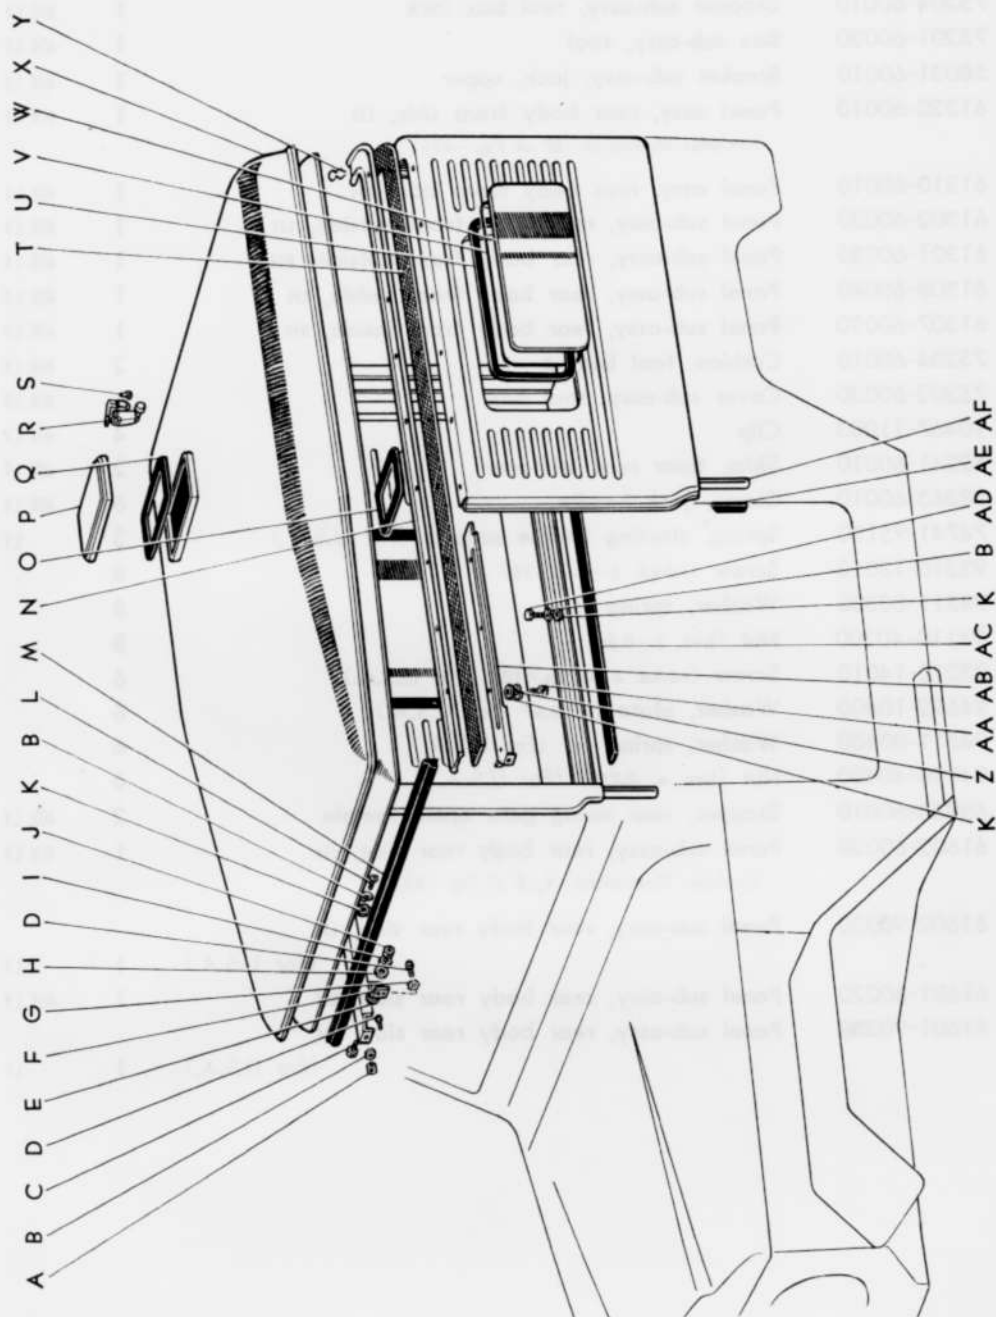


B 1290

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Body Upper (FJ40V, 40LV)				
(FIG.44)				
A	94110-40600	Nut (hex 6-10p)	2	
B	94521-00600	Washer, spring (6)	18	
C	93230-18020	Screw (oval-hd 8 1.25p <20)	2	
D	93230-16016	Screw (oval-hd 6-10p 16)	8	
E	90560-09025	Spacer	2	40V LV
F	65815-60020	Bracket, front side cover tarpaulin bow, RH	1	40V LV
	65816-60020	Bracket, front side cover tarpaulin bow, LH	1	40V LV
G	94524-00600	Washer, toothed (6)	4	
H	94612-10800	Washer, plate (8 16)	2	
I	94511-00800	Washer, spring (8)	2	
J	94110-40800	Nut (hex. 8-1.25p)	2	
K	94613-10600	Washer, plate (6/10)	38	
L	93210-16010	Screw (rd-hd 6 1.0p 10)	2	
M	63161-60010	Weatherstrip, roof	1	40V LV
N	63182-60010	Packing, roof shield, A	1	40V LV
O	63175-60010	Garnish, roof ventilator opening flange	1	40V LV
P	63107-60010	Cover sub-assy, roof ventilator (Excludes U.S.A.)	1	40V LV
Q	63159-60010	Packing, roof ventilator (Excludes U.S.A.)	1	40V LV
R	67570-60010	Stopper assy, front ventilating window open, LH (Excludes U.S.A.)	1	40V LV
S	95112-00305	Rivet (Excludes U.S.A.)	3	
T	63183-60010	Packing, roof shield, B	2	40V LV
U	62741-60010	Weatherstrip, side window, outer	2	40V LV
V	62742-60010	Weatherstrip, side window, inner	2	40V LV
W	62711-60010	Glass, side window	2	40V LV
	62711-60020	Glass, side window (For U.S.A.)	2	LV
X	63100-60010	Panel assy, roof (includes illustrations O~S of Fig -44 and illustrations H, K~O of Fig 45)	1	40V LV
	63100-90330	Panel assy, roof (For U.S.A.)	1	LV
Y	90053-60501	Clip, spring	4	40V LV
Z	94512-00600	Washer, spring (6)	22	
AA	93180-16020	Screw (rd-hd 6-10p <20)	22	
	65820-60030	Bow assy, front side cover tarpaulin, LH (includes illustrations C, E, F, H~J, AB of Fig 44)	1	40V LV
	65810-60010	Bow assy, front side cover tarpaulin, RH	1	40V LV

BODY

FIG.—44 REAR BODY UPPER (FJ40V, 40LV)

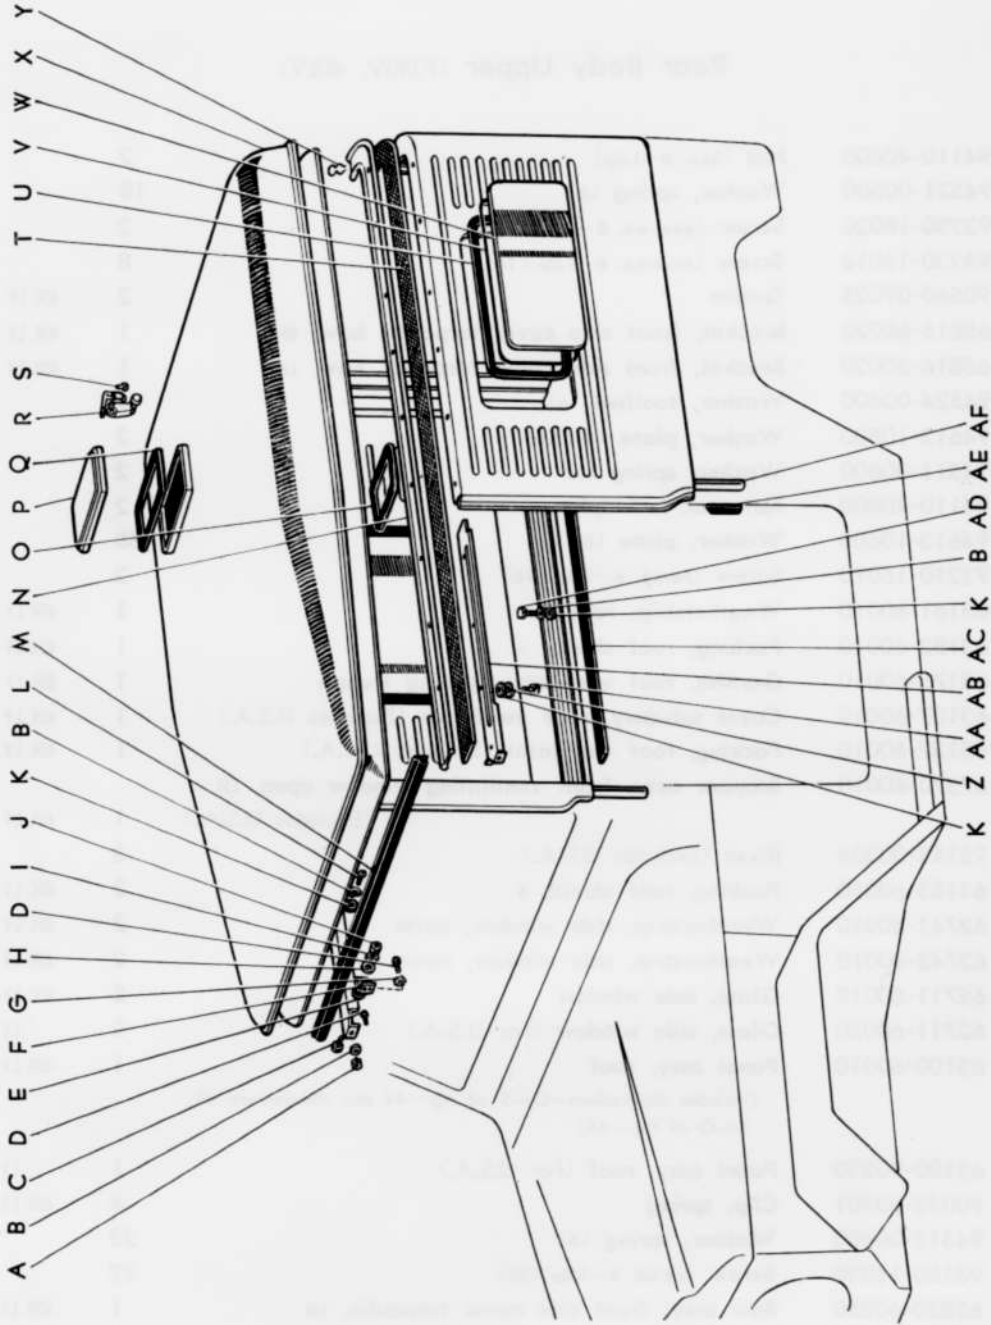


B 1290

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.44)				
AB	65802-60020	Bow sub-assy, front side tarpaulin, LH	1	40V LV
	65801-60020	Bow sub-assy, front side tarpaulin, RH	1	40V LV
AC	61534-60010	Packing, rear upper side panel set	2	40V LV
AD	91111-40616	Bolt (hex-hd. 6—1.0p×16)	14	
AE	62743-60010	Weatherstrip, rear upper side panel	2	40V LV
	61530-60010	Panel assy, rear upper side, LH	1	40V LV
		(includes illustrations U~W, AF of Fig 44 and illustrations M, N, T~W, AQ, AR of Fig -45)		
	61520-60010	Panel assy, rear upper side, RH	1	40V LV
AF	61502-60010	Panel assy, rear upper side, LH	1	40V LV
	61501-60010	Panel assy, rear upper side, RH	1	40V LV

BODY

FIG.—45 REAR UPPER DOOR (FJ40V, 40LV)

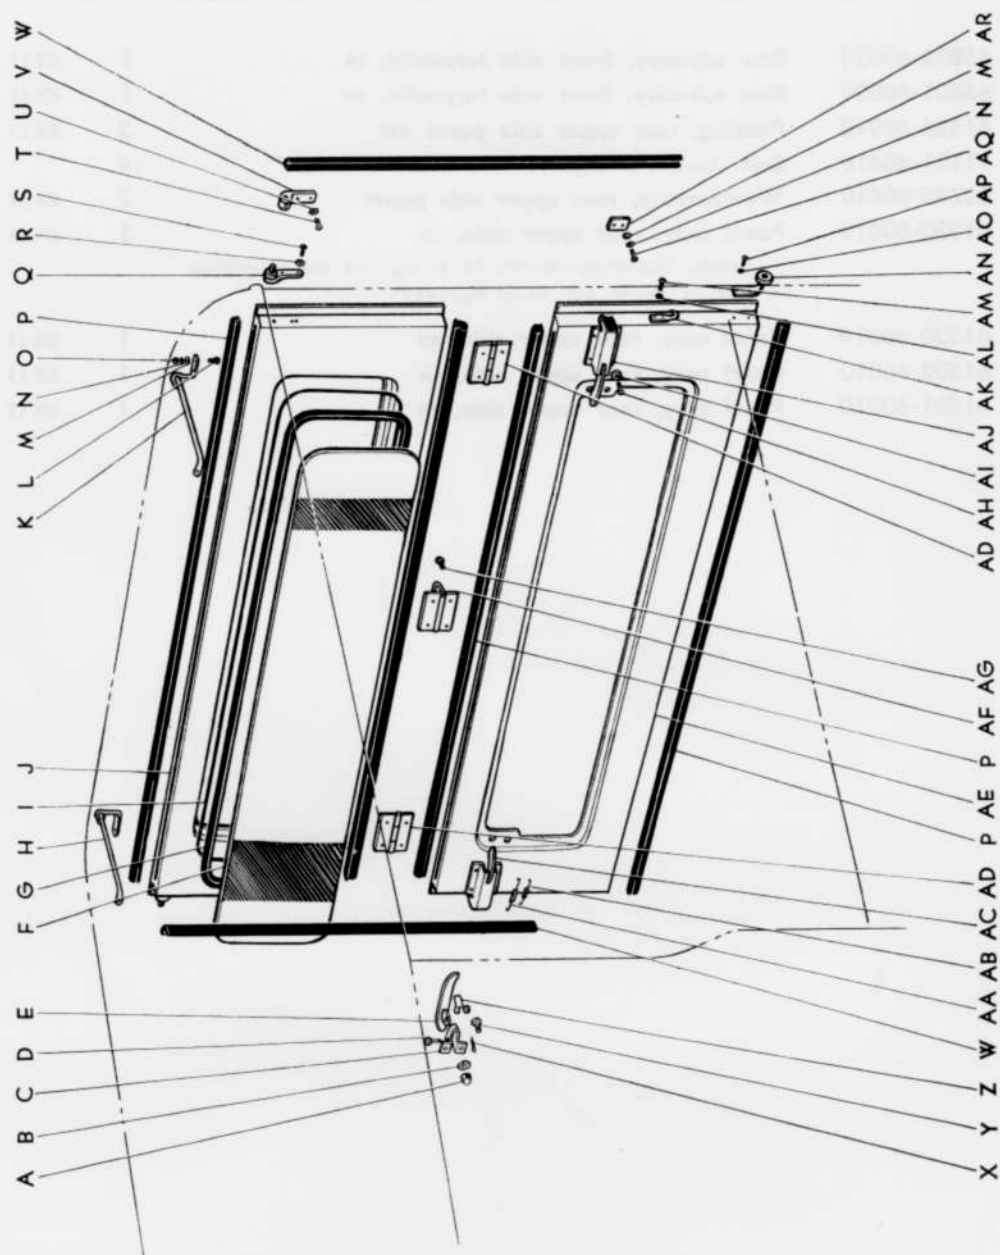


B 0492-B

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
Rear Upper Door (FJ40V, 40LV)				
(FIG 45)				
	67500-60010	Door assy, back (includes illustrations A~G, I, J, Q~S, X~AP of Fig 45)	1	40V LV
A	94171-20600	Nut, cap	4	
B	94511-00600	Washer, spring (6)	4	
C	69583-60010	Bracket, rear upper door lock outer	2	40V LV
D	90240-06065	Pin, w hole	2	40V LV
	69550-60010	Lever assy, rear upper door lock outer, RH (includes illustrations C~E, X, Z of Fig —45)	1	40V LV
	69560-60010	Lever assy, rear upper door lock outer, LH	1	40V LV
E	69508-60010	Lever sub-assy, rear upper door lock outer	2	40V LV
F	68131-60010	Glass, rear upper door	1	40V LV
	68131-60020	Glass, rear upper door (For U.S.A.)	1	LV
G	68291-60010	Weatherstrip, rear upper door window, outer	1	40V LV
H	67201-60010	Stay sub-assy, rear upper door, RH	1	40V LV
I	68292-60010	Weatherstrip, rear upper door window, inner	1	40V LV
J	67005-60010	Panel sub-assy, back door, upper	1	40V LV
K	67202-60010	Stay sub-assy, back door, LH	1	40V LV
L	93110-15016	Screw (rd-hd. 5 09p 16)	4	
M	94612-10500	Washer, plate (5 10)	8	
N	94512-00500	Washer, spring (5)	8	
O	94110-40500	Nut (hex 5 09p)	4	
P	68829-60010	Weatherstrip, rear upper door	4	40V LV
Q	68802-60010	Hinge male sub-assy, rear upper door, LH	1	40V LV
	68801-60010	Hinge male sub-assy, rear upper door, RH	1	40V LV
R	94524-00800	Washer, toothed (8)	4	
S	93230-18020	Screw (oval-hd. 8 1 25p 20)	4	
T	93220-18020	Screw (fl-hd. 8 1 25p 20)	4	
U	94525-00800	Washer, toothed (8)	4	
V	61571-60010	Hinge, rear upper door, female	2	40V LV
W	62744-60010	Weatherstrip, back window guide	2	40V LV
X	95381-02012	Pin, cotter	2	
Y	93210-16014	Screw (rd-hd 6 10p 14)	4	
Z	90508-12062	Spring, torsion	1	40V LV
	90508-12063	Spring, torsion	1	40V LV

BODY

FIG.—45 REAR UPPER DOOR (FJ40V, 40LV)

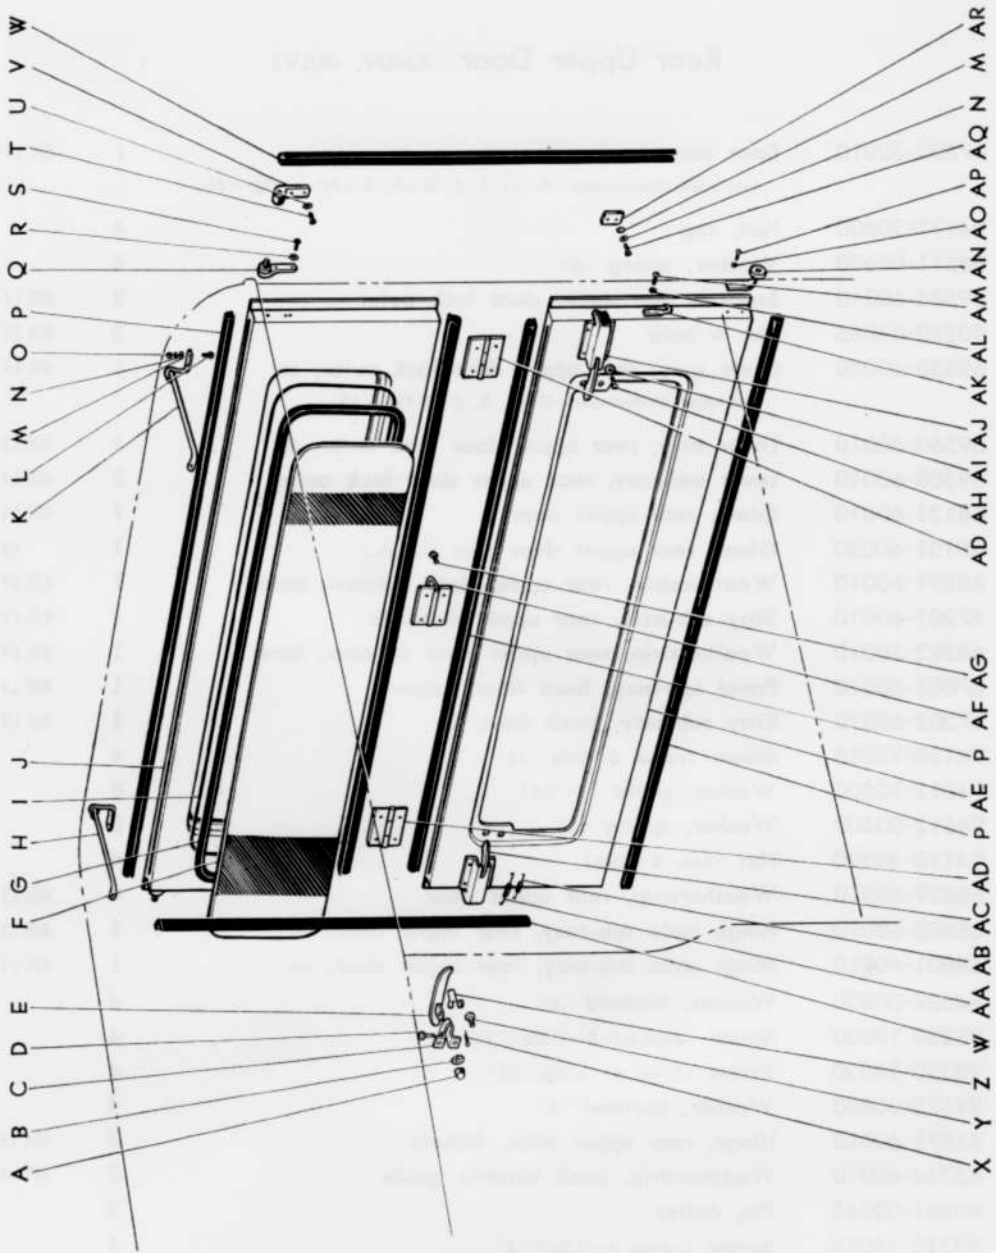


B 0492-B

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 45)				
AA	90506-09015	Spring, tension	2	40V LV
AB	90506-05014	Spring, tension	2	40V LV
AC	69380-60010	Lock assy, rear upper door, RH (includes illustrations AA, AB of Fig 45)	1	40V LV
AD	68804-60010	Hinge sub-assy, rear upper door center, B	2	40V LV
AE	67006-60010	Panel sub-assy, back door, lower	1	40V LV
AF	68803-60010	Hinge sub-assy, rear upper door center, A	1	40V LV
AG	93230-16016	Screw (oval-hd 6—1.0p×16)	12	
AH	93210-15010	Screw (rd-hd 5 0.9p×10)	8	
AI	94511-00500	Washer, spring (5)	8	
AJ	69390-60010	Lock assy, rear upper door, LH (includes illustrations AA, AB of Fig 45)	1	40V LV
AK	67181-60010	Hook, rear upper door stay	2	40V LV
AL	94512-00400	Washer, spring (4)	4	
AM	93210-14014	Screw (rd-hd. 4 0.75p×14)	4	
AN	67109-60010	Roller sub-assy, rear upper door	2	40V LV
AO	94512-00600	Washer, spring (6)	4	
AP	93210-16020	Screw (rd-hd 6 1.0p×20)	4	
AQ	93210-15012	Screw (rd-hd. 5 0.9p×12)	4	
AR	61572-60010	Check, rear upper door lock	2	40V LV

BODY

FIG.—46 DOOR & DOOR WINDOW GLASS (FJ40V, 40LV)

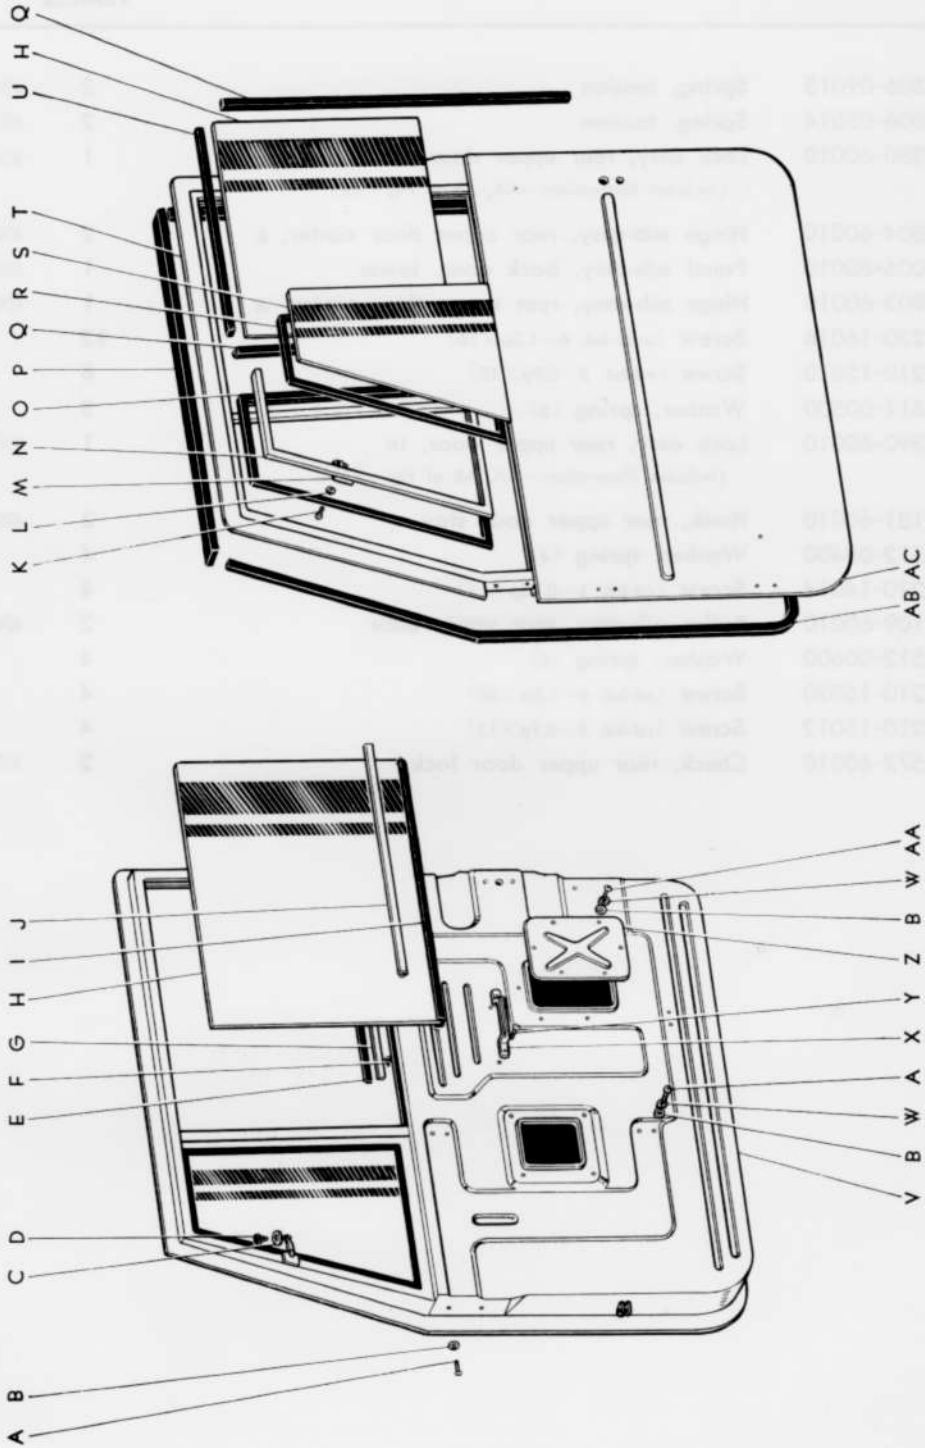


B 1291

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Door & Door Window Glass				
(FIG.46)				
	67100-60030	Door assy, RH (includes illustrations A~O, Q~AB of Fig 46 and illustrations A~H, J~Z, AD, AE, AG~AL of Fig 47)	1	40V
	67100-60020	Door assy, RH (includes illustrations A~O, Q~AB, of Fig 46 and illustrations A~H, J~Z, AD, AE, AG, AJ, AL of Fig 47)	1	LV
	67200-60030	Door assy, LH (includes illustrations A~O, Q~U, W~AC of Fig 46 and illustrations B~H, J~W, Y, Z, AD~AG, AJ, AL of Fig 47)	1	40V
	67200-60020	Door assy, LH (includes illustrations A~O, Q~U, W~AC of Fig 46 and illustrations B~H, J~W, Y, Z, AD~AL of Fig 47)	1	LV
A	93210-16010	Screw (rd hd 6 10p 10)	24	
B	94613-10600	Washer, plate (6 10)	36	
C	67566-60010	Washer, front ventilating window open wave	2	40V LV
D	67565-60010	Knob, front ventilating window open stopper	2	40V LV
E	68161-60010	Weatherstrip, front door window outer	2	40V LV
F	90467-06004	Clip, door glass weatherstrip	20	40V LV
G	68221-60020	Plate, front door glass outer weatherstrip set	2	40V LV
H	68111-60010	Glass, front door	2	40V LV
	68111-60030	Glass, door window (For U.S.A.)	2	LV
I	68211-60011	Weatherstrip, door glass channel	2	40V LV
J	68170-60010	Weatherstrip assy, front door window, inner	2	40V LV
K	93210-14008	Screw (rd-hd. 4 0.75p <8)	6	
L	94521-00400	Washer, toothed (4)	6	
M	67570-60010	Stopper assy, front ventilator window open, LH	1	40V LV
	67560-60010	Stopper assy, front ventilator window open, RH	1	40V LV
N	67502-60010	Frame sub-assy, ventilator window glass, LH B	1	40V LV
	67501-60010	Frame sub-assy, ventilator window glass, RH B	1	40V LV
	67511-60010	Frame, front ventilating window glass, A	2	40V LV
O	67518-60010	Weatherstrip, front ventilating window, LH	1	40V LV
	67517-60010	Weatherstrip, front ventilating window, RH	1	40V LV
P	68162-60010	Weatherstrip, front door, upper LH	1	40V LV
	68161-60030	Weatherstrip, front door, upper RH	1	40V LV
Q	68213-60010	Retainer, front door glass, front	4	40V LV

BODY

FIG.—46 DOOR & DOOR WINDOW GLASS (FJ40V, 40LV)

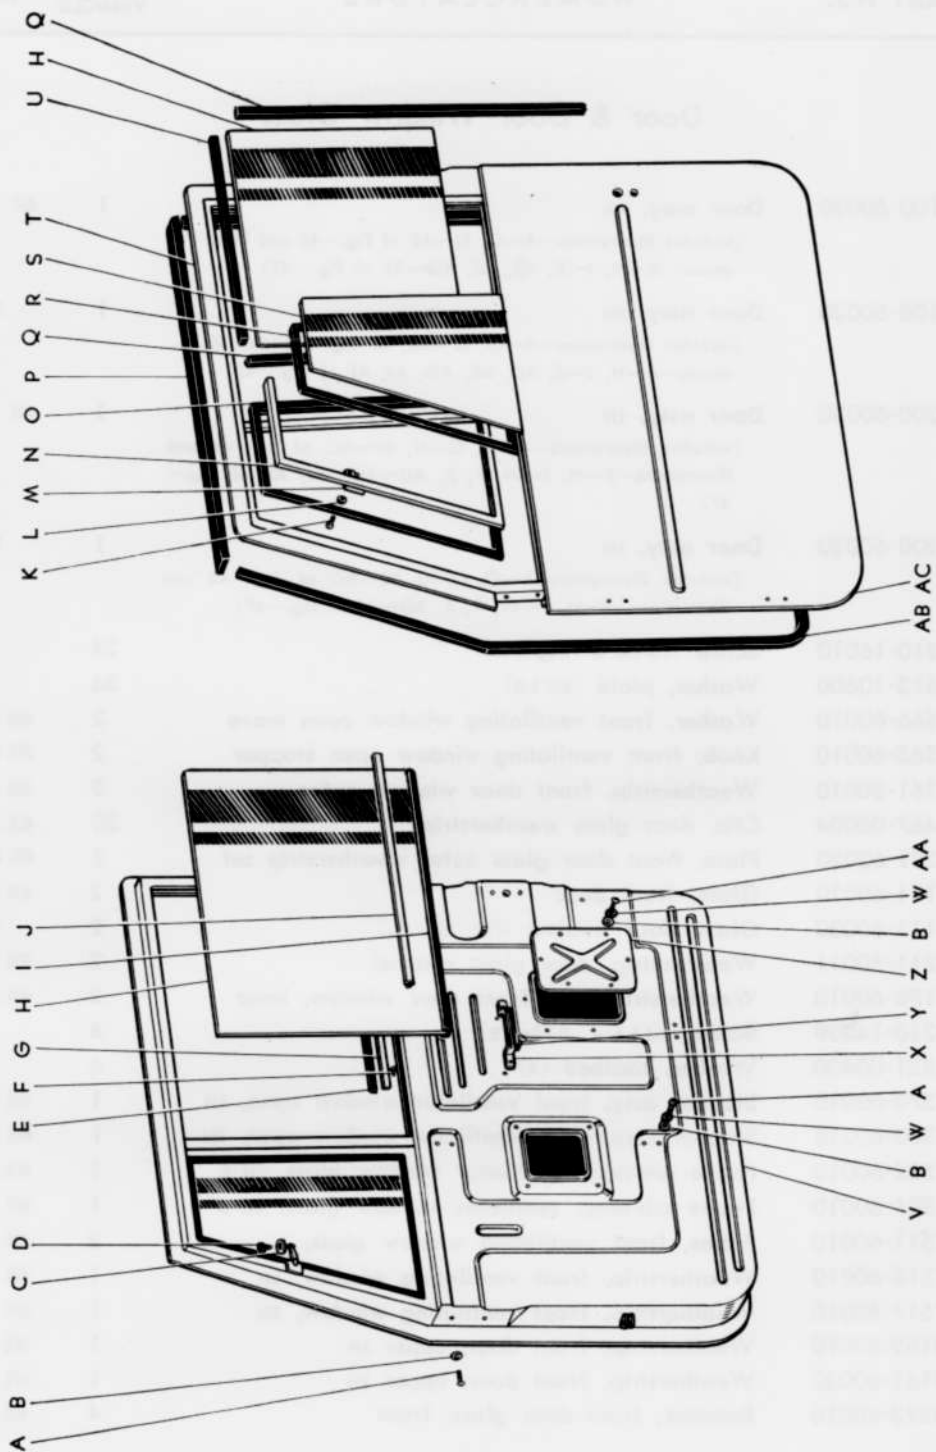


B 1291

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.46)				
R	67516-60010	Insert, front ventilating window glass	2	40V LV
S	68121-60010	Glass, front ventilator window	2	40V LV
	68121-60030	Glass, front ventilator window For U.S.A.)	2	LV
T	67042-60010	Frame sub-assy, front door window, LH	1	40V LV
	67041-60010	Frame sub-assy, front door window, RH	1	40V LV
U	68212-60010	Retainer, front door glass, upper	2	40V LV
V	67001-60030	Panel sub-assy, front door, RH	1	40V
	67001-60020	Panel sub-assy, front door, RH	1	LV
W	94511-00600	Washer, spring 6 ¹)	32	
X	67811-60010	Grip, door	2	40V LV
Y	93230-24012	Screw (oval hd 4 075p 12 ¹)	4	
Z	69881-60020	Cover, front door window regulator hole	2	40V LV
AA	93210-16012	Screw rd-hd 6 10p 12 ¹)	12	
AB	68109-60010	Weatherstrip sub-assy, front door, LH	1	40V LV
	68108-60010	Weatherstrip sub-assy, front door, RH	1	40V LV
AC	67002-60030	Panel sub-assy, front door, LH	1	40V
	67002-60020	Panel sub-assy, front door, LH	1	LV

BODY

FIG. 47 DOOR LOCK & WINDOW REGULATOR (FJ40V, 40LV)

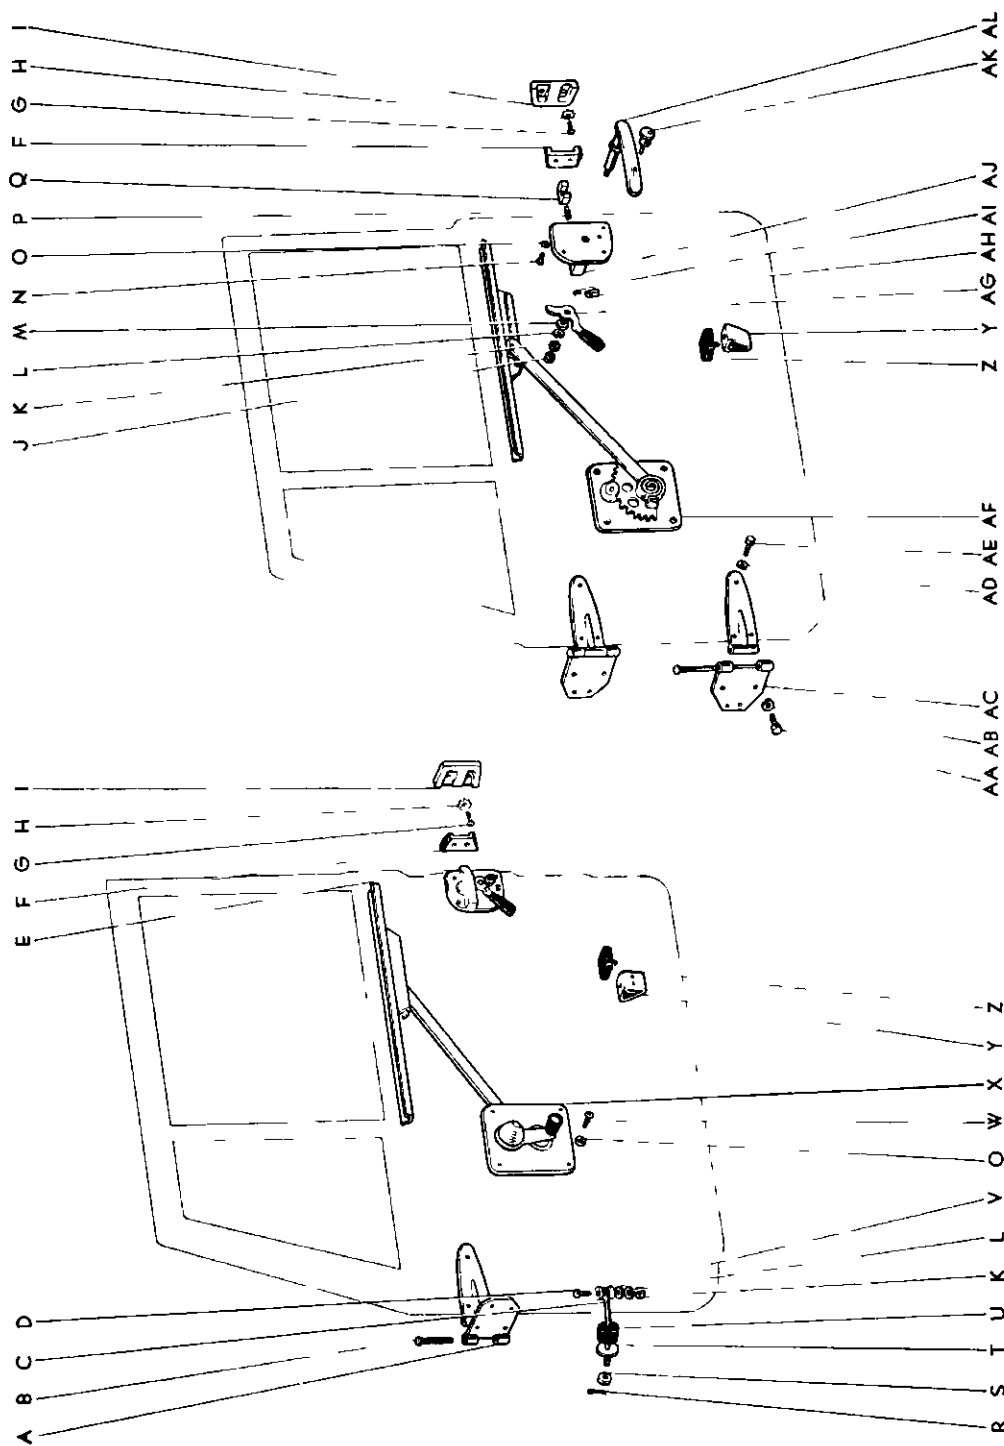

B 1292


Toyota Land Cruiser

193

ILLUSTRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Door Lock & Window Regulator (FJ40V, 40LV)				
(FIG 47)				
A	68710-60010	Hinge assy, front door, RH (includes illustration B of Fig 47)	2	40V LV
B	90245-08011	Pin, w serration	4	40V LV
C	68957-60010	Stopper, front door open	2	40V LV
D	68898-60010	Pin, front door open stopper hinge	2	40V LV
E	69901-69810	Channel sub-assy, front door glass, RH	1	40V LV
	69902-69810	Channel sub-assy, front door glass, LH	1	40V LV
F	69405-95010	Stop sub-assy, door down	2	40V LV
G	93220-18016	Screw (fl-hd 8 1 25p 16)	8	
H	94524-00800	Washer, toothed (8)	8	
I	67451-60020	Plate, door lock striker	2	40V LV
J	94350-10600	Nut, stamped	2	
K	94110-40600	Nut (hex 6-10p)	4	
L	94511-00600	Washer, spring (6)	4	
M	94613-10600	Washer, plate (6 10)	2	
N	93230-16012	Screw (oval-hd 6 10p 12)	8	
O	94524-00600	Washer, toothed (6)	16	
P	69323-95010	Spring, door lock	2	40V LV
Q	69302-95000	Stopper sub-assy, door lock	2	40V LV
R	95381-02020	Pin, cotter	2	
S	94141-40800	Nut (hex 8 1 25p)	2	
T	94613-10800	Washer, plate (8 16)	2	
U	90540-08008	Cushion	2	40V LV
V	94611-10600	Washer, plate (6 10)	2	
W	93230-16016	Screw (oval-hd 6 10p 16)	8	
X	69810-60011	Regulator assy, door window, RH	1	40V LV
Y	67404-60010	Stop sub-assy, front door glass down	2	40V LV
Z	68191-30010	Cushion, door glass down stopper	2	40V LV
AA	91111-40816	Bolt (hex-hd 8 1 25p 16)	16	
AB	94512-00800	Washer, spring (8)	16	
AC	68720-60010	Hinge assy, front door, LH (includes illustration-B of Fig-47)	2	40V LV
AD	94521-00800	Washer, toothed (8)	12	
AE	91111-50820	Bolt (hex-hd 8 1 25p 20)	12	
AF	69820-60011	Regulator assy, door window, LH	1	40V LV

BODY

FIG. 47 DOOR LOCK & WINDOW REGULATOR (FJ40V, 40LV)

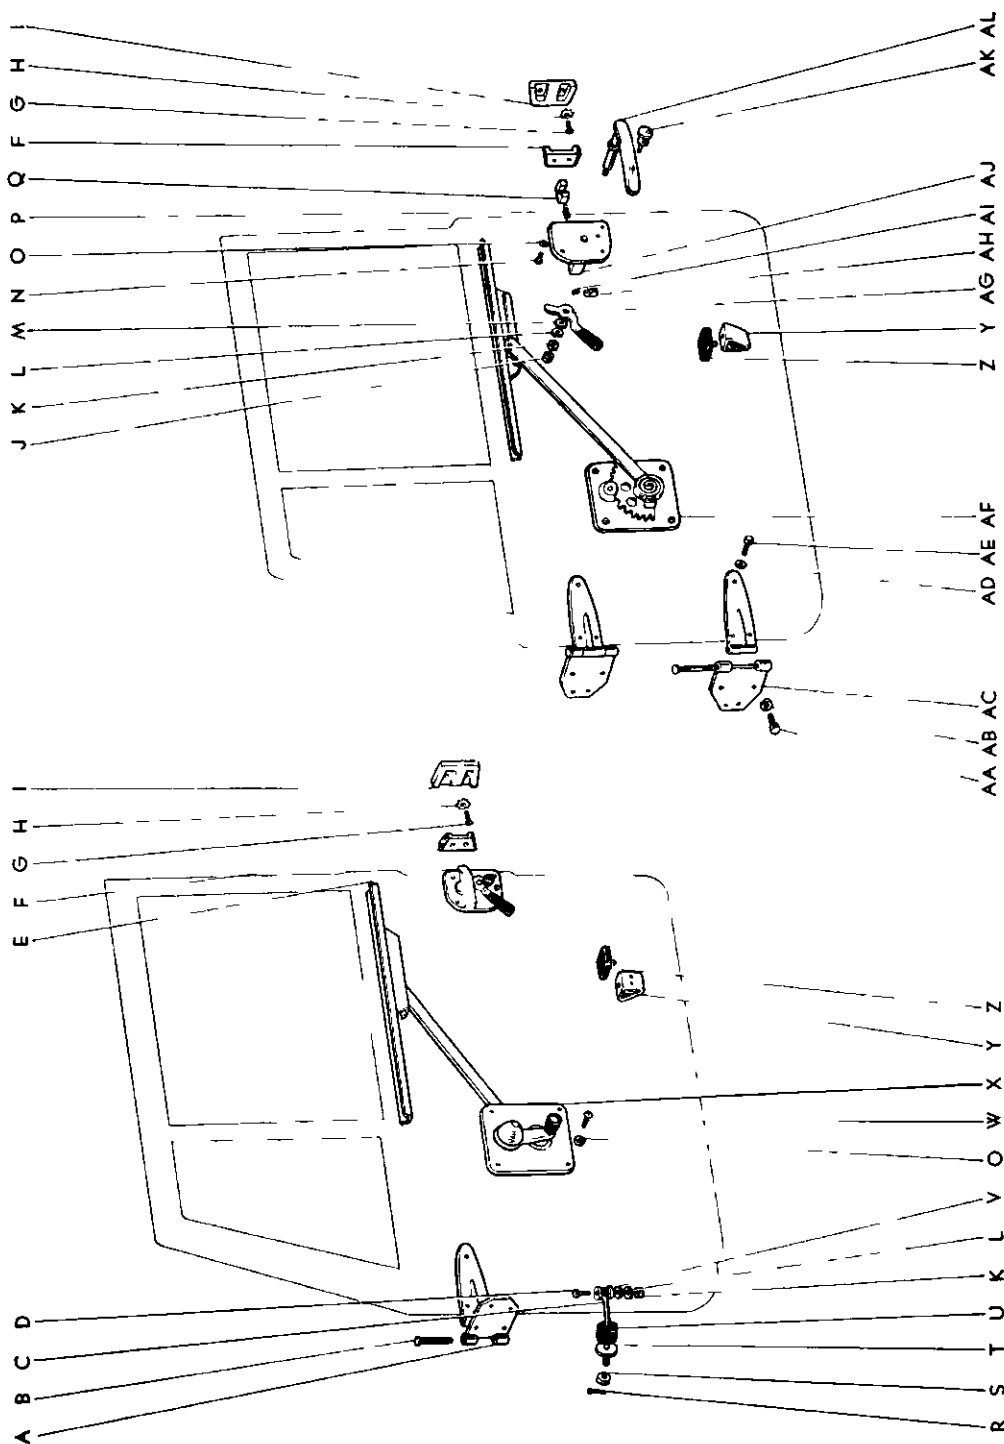


B 1292

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FIG 47				
AG	69208-95010	Handle sub-assy, door inside, RH	1	40V LV
	69207-95010	Handle sub-assy, door inside, RH	1	40V LV
AH	69388-95010	Knob, door lock key		
		40V LH door, 40LV RH door	1	40V LV
AI	93230-13010	Screw rd hd 3 0 6p 10'		
		40V LH door, 40LV RH door)	1	40V LV
	69320-60010	Handle assy, door lock, LH (includes illustrations J~M, P, Q AG~AJ, AL of Fig 47)	1	40V
	69310-60020	Handle assy, door lock, RH	1	LV
	69320-60020	Handle assy, door lock, LH (includes illustrations J~M, P, Q AG~AL of Fig 47)	1	LV
	69310-60010	Handle assy, door lock, RH	1	40V
AJ	69320-95010	Lock assy, door, LH (includes illustrations P, Q AG~AJ of Fig 47)	1	40V
	69330-95010	Lock assy, rear door, RH	1	LV
	69320-95011	Lock assy, rear door, LH (includes illustrations P, Q AG~AK of Fig 47)	1	LV
	69310-95010	Lock assy, door, RH	1	40V
AK	69510-60010	Key assy, front door lock (40V RH door, 40LV LH door)	1	40V LV
AL	69201-60020	Handle sub-assy, door outside	2	40V LV

BODY

FIG.—48 MAIN BODY (FJ45V, 45LV)

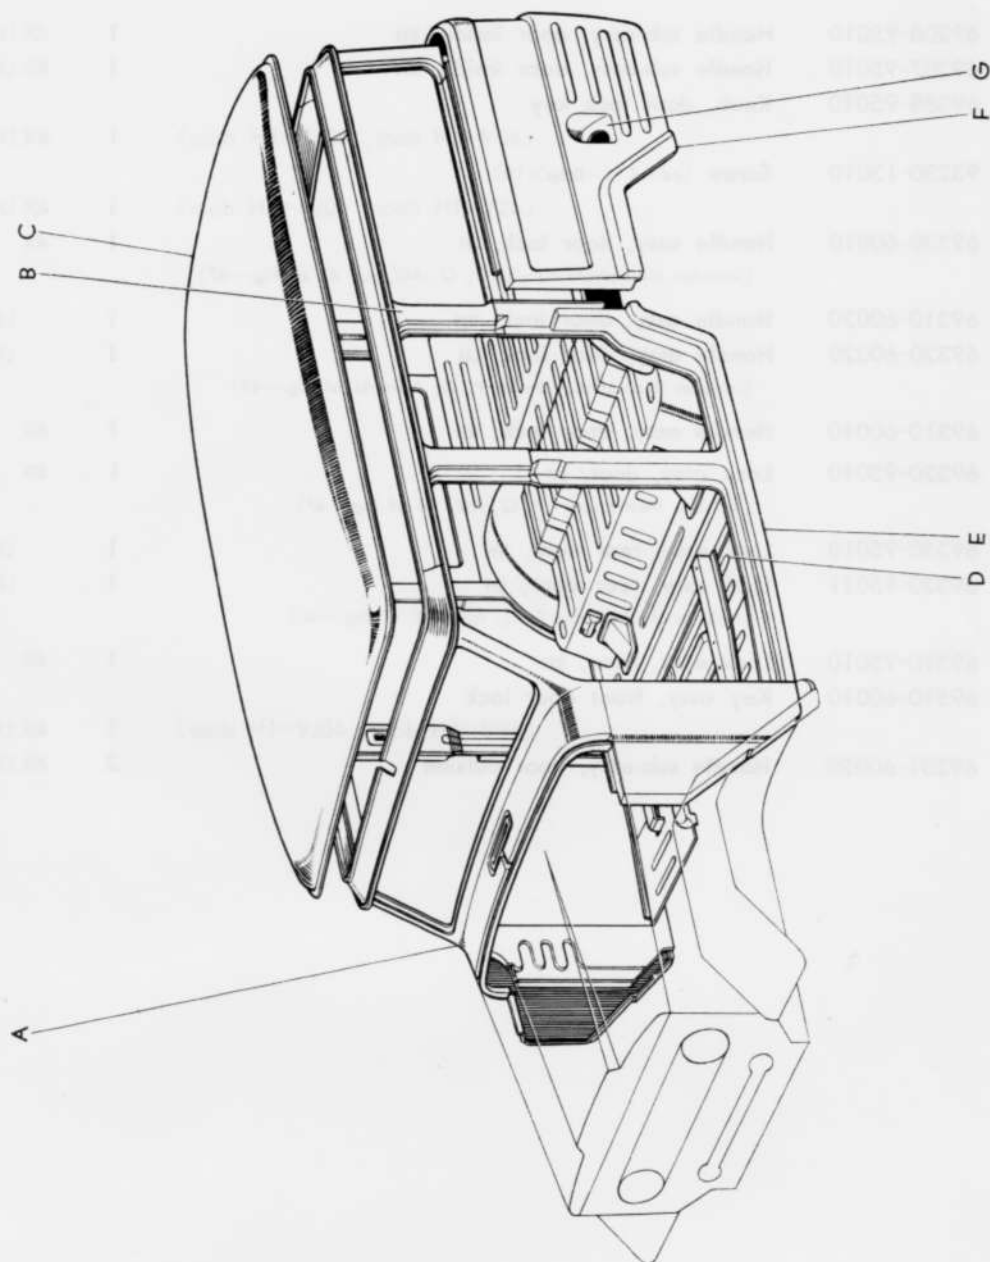

B 0949-A


Toyota Land Cruiser

197

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Main Body (FJ45V, 45LV)				
FIG 48)				
A	55100-92000	Cowl assy (includes illustrations I~M of Fig 82, illustrations K, N, O, V of Fig 85 and illustrations D, N~Q of Fig 141 on Model FJ40 Parts Catalog and illustrations A, J, L, O of Fig 11, illustrations A, C~L, Q~AD of Fig 40, illustrations H~X of Fig 49 and illustrations A, D, AJ~AN of Fig 52)	1	45V
	55100-92100	Cowl assy	1	LV
	55100-92001	Cowl assy For U.S.A.) (Effective from the end December 64)	1	LV
B	61420-92000	Side assy, outer, LH (includes illustrations F, G of Fig 48 and illustrations Q, U, W, AF, AI, AT of Fig 53)	1	LV
	61410-92000	Side assy, outer, RH (includes illustration F of Fig 48 and illustrations Q, U, W, AF, AI, AT of Fig 53)	1	45V LV
	63110-92000	Roof assy (includes illustration C of Fig 48 and illustrations C, F, G, P~S of Fig 62)	1	45V LV
C	63101-92000	Panel sub-assy, roof	1	45V LV
D	58200-92001	Floor assy (includes illustrations A~O, U~X, AK~AO, AQ~AT, AV of Fig 51)	1	45V LV
E	61500-92000	Side assy, LH (includes illustrations B, F, G of Fig 48 and illustrations N, P, R, T, AG, AO~AS, AX, AY, BA, BC of Fig 52)	1	45V LV
	61400-92000	Side assy, RH (includes illustrations B, F of Fig 48 and illustrations I, N, P, T, V, AO~AS, AX, AY, BA, BC of Fig 52)	1	45V LV
F	61406-92000	Panel sub-assy, lower, LH	1	45V LV
	61406-92050	Panel sub-assy, lower, LH (OPT)	1	45V LV
	61405-92000	Panel sub-assy, lower, RH	1	45V LV
	61405-92050	Panel sub-assy, lower, RH (OPT)	1	45V LV
G	61456-92001	Cover, gasoline tank inlet pipe set	1	45V LV

BODY

FIG. 49 VENTILATOR FJ45V, 45LV

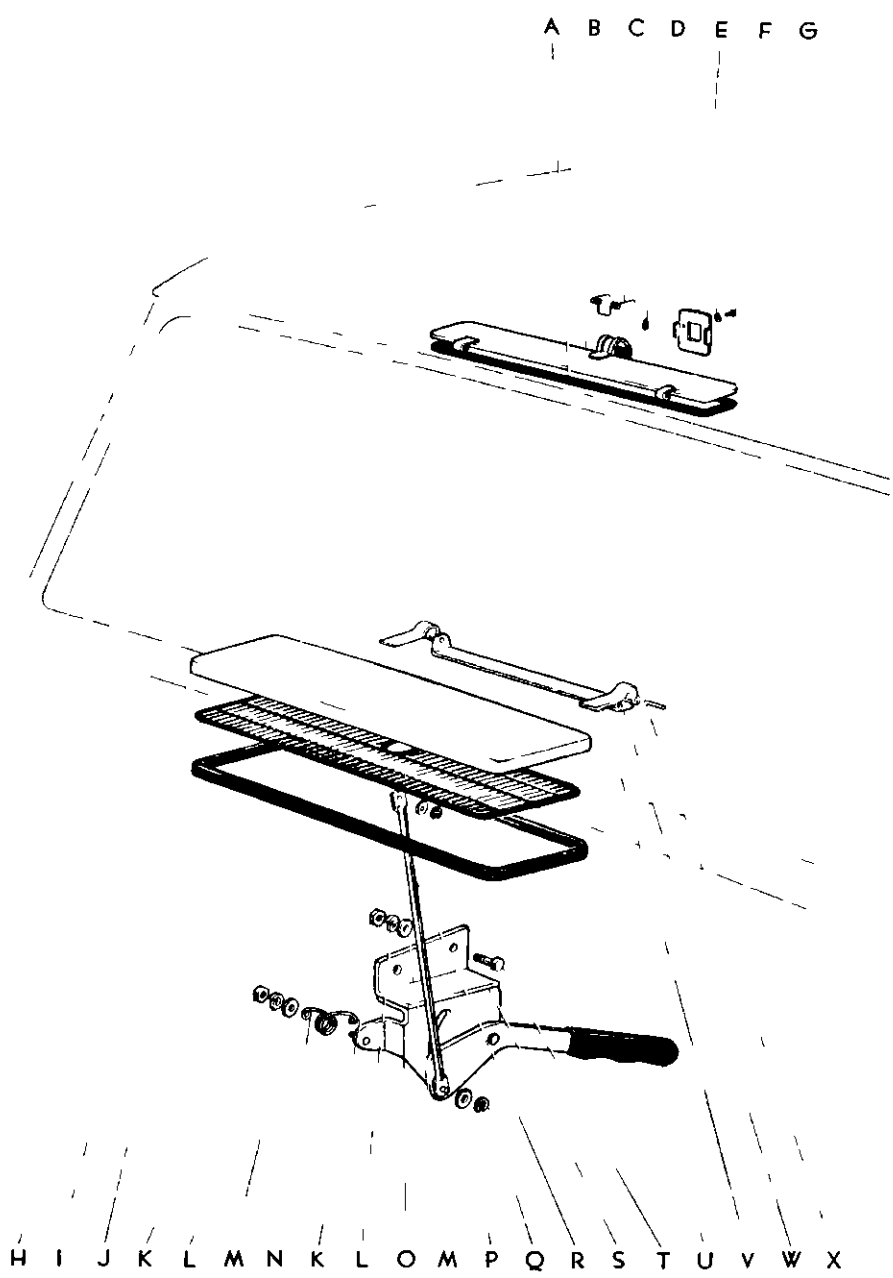


B 0615-B

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Ventilator (FJ45V, 45LV)				
(FIG 49				
A	53835-92000	Packing, roof ventilator Excludes U.S.A	1	45V LV
B	55803-92000	Lid sub-assy, roof ventilator (Excludes U.S.A.	1	45V LV
C	63418-95000	Spring, pentroof ventilator (Excludes U.S.A	1	45V LV
D	90053-00500	Cushion, rubber Excludes U.S.A	1	45V LV
E	53836-92000	Holder, roof ventilator spring (Excludes U.S.A.	1	45V LV
F	94511-00400	Washer, spring 4) (Excludes U.S.A.	2	
G	93210-14012	Screw rd-hd 4 075p 12 Excludes U.S.A.	2	
H	55801-95210	Door sub-assy, cowl ventilator	1	45V LV
I	55861-95210	Screen, cowl ventilator	1	45V LV
J	55881-95210	Weatherstrip, cowl ventilator	1	45V LV
K	94110-40600	Nut (hex 6 10p)	4	
L	94511-00600	Washer, spring 6	4	
M	94613-10600	Washer, plate 6 10	4	
N	55824-95210	Spring, cowl ventilator handle	1	45V LV
O	55822-95210	Bracket, cowl ventilator handle	1	45V LV
P	94612-10500	Washer, plate 5 10	2	
Q	90053-80400	Ring, retaining	2	45V LV
R	55835-92000	Rod, front ventilator	1	45V LV
S	55825-92000	Bracket, front ventilator handle	1	45V LV
T	91111-40616	Bolt hex-hd 6 10p 16)	2	
U	55802-95210	Handle sub-assy, cowl ventilator	1	45V LV
V	55852-95210	Hinge, cowl ventilator door, LH	1	45V LV
	55851-95210	Hinge, cowl ventilator door, RH	1	45V LV
W	55853-95210	Hinge, cowl ventilator, female	1	45V LV
X	55855-95210	Pin, cowl ventilator door hinge	1	45V LV

BODY

FIG.—50 VENTILATOR (FJ45LV, For U.S.A.)

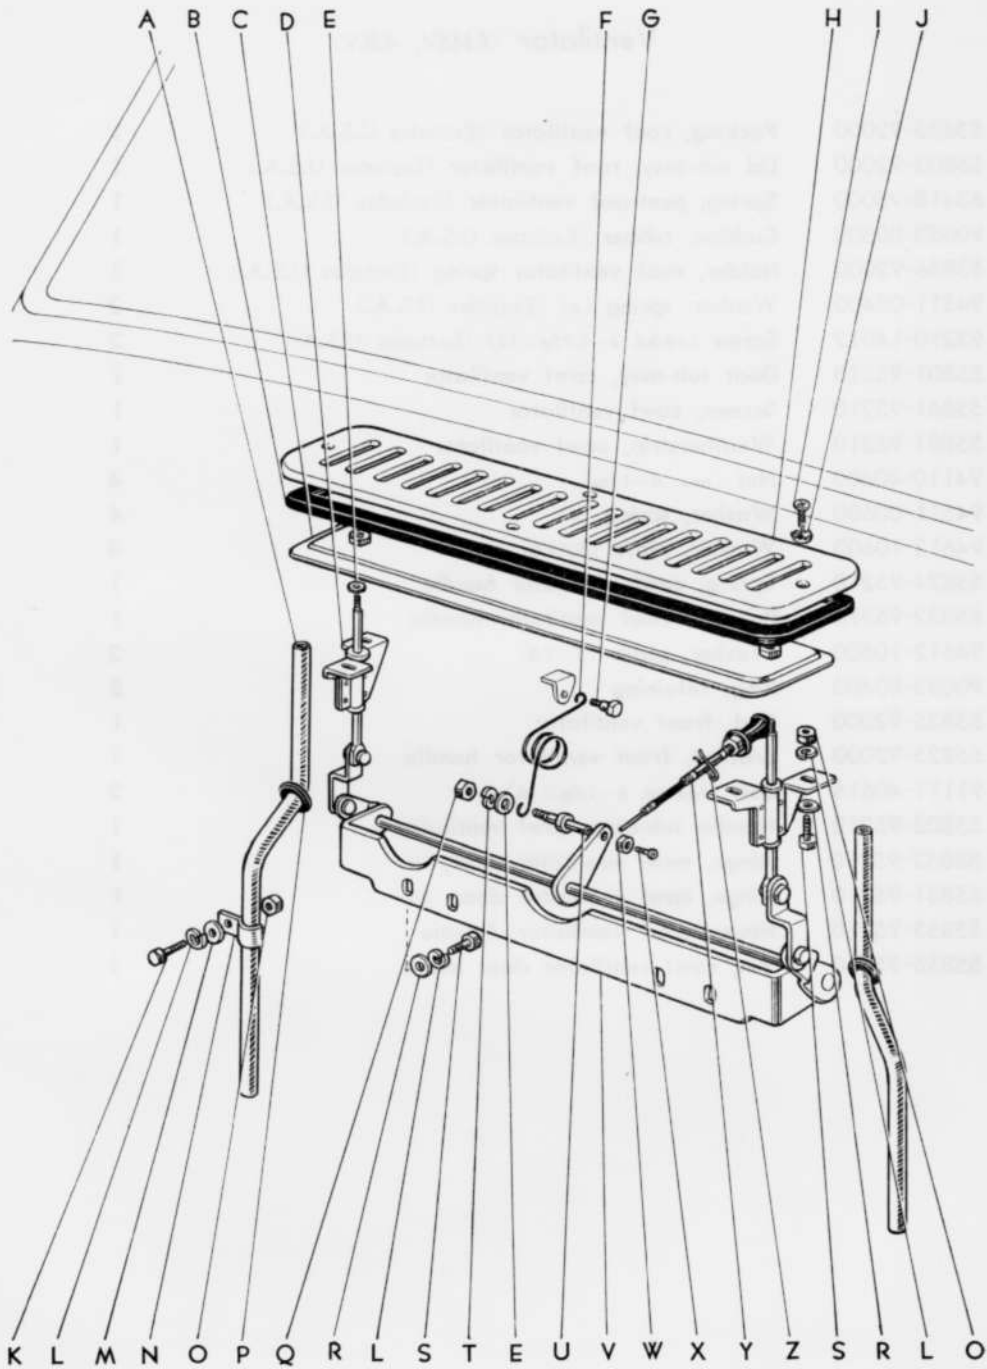


B 1293

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Ventilator (FJ45LV, For U.S.A)				
(Effective from the end of December '64)				
FIG 50)				
	55810-92170	Damper assy, cowl ventilator includes illustrations—D~G, I, O Q~Z of Fig 50	1	LV
A	55755-92170	Hose, rain leader	2	LV
B	55843-92170	Weatherstrip, cowl ventilator	1	LV
C	55819-92170	Damper, cowl ventilator	1	LV
D	55803-92170	Bracket sub-assy, cowl ventilator damper	2	LV
E	94612-10400	Washer, plate (4 06)	4	
F	55841-92170	Spring, cowl ventilator damper	1	LV
G	55842-92170	Pin, cowl ventilator damper spring	1	LV
H	55712-92170	Ornament, cowl ventilator	1	LV
I	93230-14010	Screw (oval-hd 4 075p 10)	4	
J	94524-00400	Washer 4	4	
K	91111-40625	Bolt hex-hd 6 10p 25	2	
L	94511-00600	Washer, spring (6)	10	
M	94612-10600	Washer, plate (6 10)	2	
N	90462-10004	Clamp, cable large	2	LV
O	94110-40600	Nut (hex 6 10p)	6	
P	90480-19048	Grommet (For rain leader hose)	2	LV
Q	94110-40400	Nut (hex 4 075p)	2	
R	94613-10600	Washer, plate 10 16)	8	
S	91111-40616	Bolt (hex-hd 6 10p 16)	8	
T	94511-00400	Washer, spring (4)	2	
U	55814-92170	Pin, cowl ventilator control wire	1	LV
V	55801-92170	Link sub-assy, cowl venti damper	1	LV
W	94110-40300	Nut (hex 3 06)	1	
X	93210-13010	Screw (rd-hd 3 06p 10)	1	
Y	55820-92170	Wire assy, cowl ventilator control	1	LV
Z	55845-92170	Ring, shaft snap	1	LV

BODY

FIG.—51 FLOOR & SPARE WHEEL CARRIER (FJ45V, 45LV)

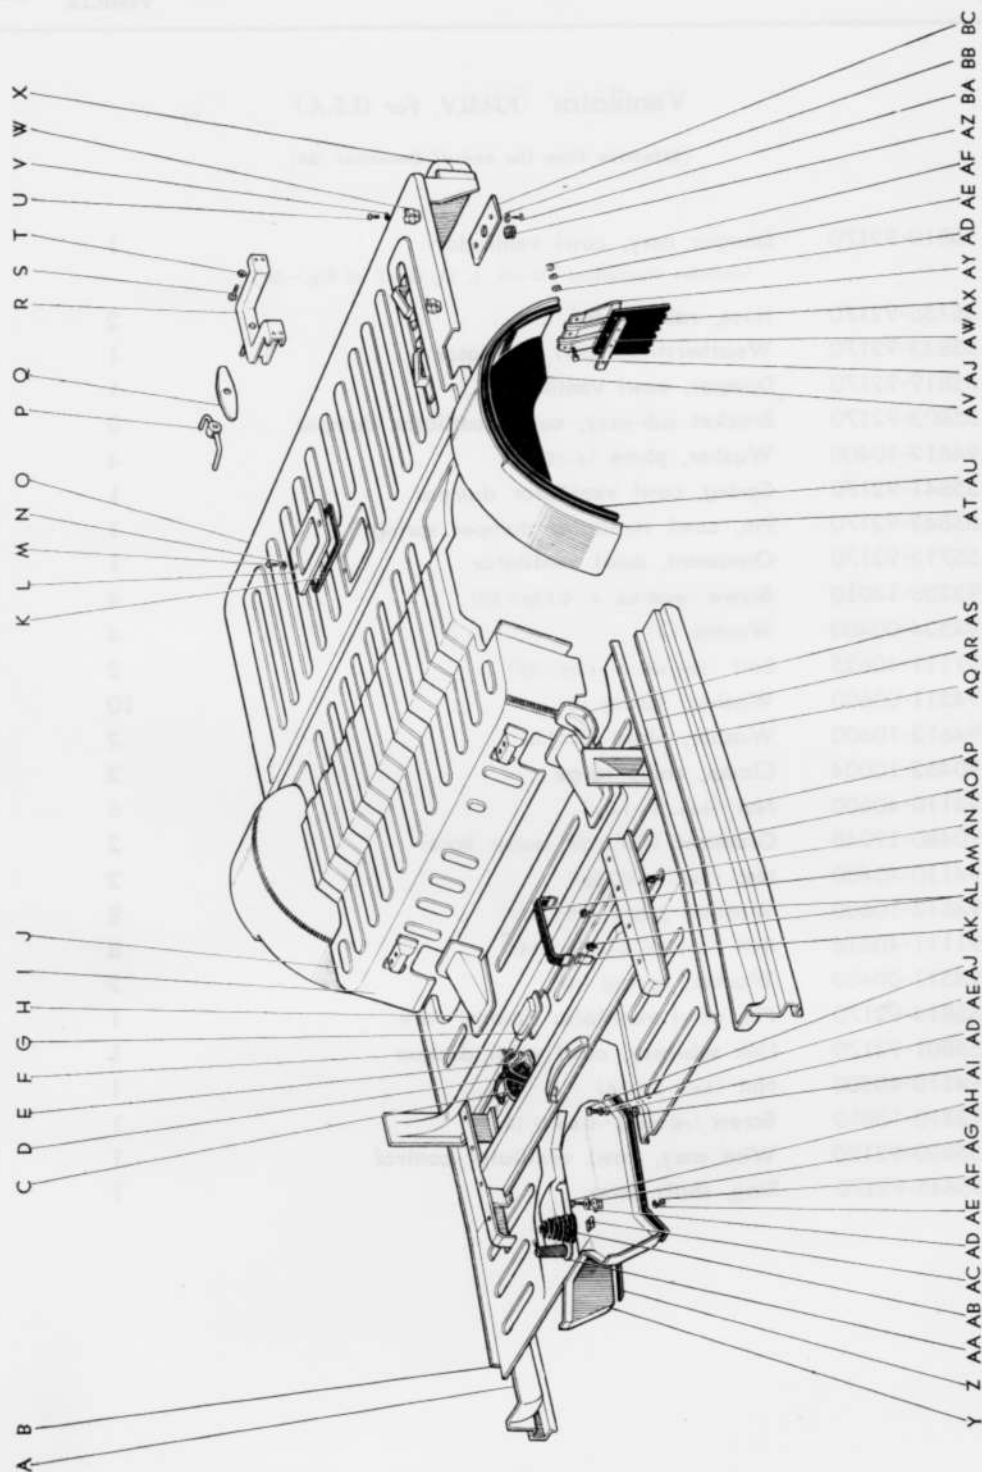


B 0950-A

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Floor & Spare Wheel Carrier (FJ45V, 45LV)				
FIG 51				
A	57401-92000	Rail sub-assy, side, RH	1	45V LV
	58210-92001	Floor assy, front	1	45V LV
		(includes illustrations - A, B, H, I, AK, AO~AS of Fig 51)		
	58210-92170	Floor assy, front (For U.S.A.)	1	LV
B	58211-92000	Floor, front, front RH	1	45V LV
	58211-92170	Floor, front, front RH (For U.S.A.)	1	LV
C	74713-95010	Cushion, jack holder	1	45V LV
D	74714-95010	Band, jack holder	1	45V LV
E	74701-95010	Holder sub-assy, jack	1	45V LV
F	90053-60500	Clip, spring (For jack holder cushion)	3	45V LV
G	58217-92001	Cover, front floor 2nd crossmember	1	45V LV
	58217-92170-1	Cover, front floor 2nd crossmember (For U.S.A.)	1	LV
H	58215-92001	Cover, frame	2	45V LV
I	58237-92001	Strength, rear floor front end	1	45V LV
	58237-92170	Strength, rear floor front end (For U.S.A.)	1	LV
	58310-92001	Floor assy, rear	1	45V LV
		(includes illustrations - J, O, X, AT, AV of Fig 51)		
	58310-92170	Floor assy, rear (For U.S.A.)	1	LV
J	58301-92001	Floor sub-assy, rear front	1	45V LV
	58301-92170	Floor sub-assy, rear front (For U.S.A.)	1	LV
K	58732-92000	Rubber, fuel tank inspection hole cover	1	45V LV
L	58731-92000	Cover, fuel tank inspection hole	1	45V LV
M	93210-16018	Screw (rd-hd 6 10p 18)	2	
N	94512-00600	Washer, spring (6)	8	
O	58302-92000	Floor sub-assy, rear, rear	1	45V LV
	58302-92050	Floor sub-assy, rear, rear (OPT)	1	45V LV
P	51902-92300	Nut sub-assy, spare tire set	1	45V LV
Q	51923-92000	Plate, spare wheel	1	45V LV
R	51901-92001	Bracket sub-assy, spare tire set	1	45V LV
S	91111-40825	Bolt (hex-hd 8-1 25p 25)	4	
T	94512-00800	Washer, spring (8)	4	
U	93210-14010	Screw (rd-hd 4 075p 10)	4	
V	94512-00400	Washer, spring (4)	4	
W	58355-92000	Spring, jack handle set	2	45V LV

BODY

FIG.—51 FLOOR & SPARE WHEEL CARRIER (FJ45V, 45LV)

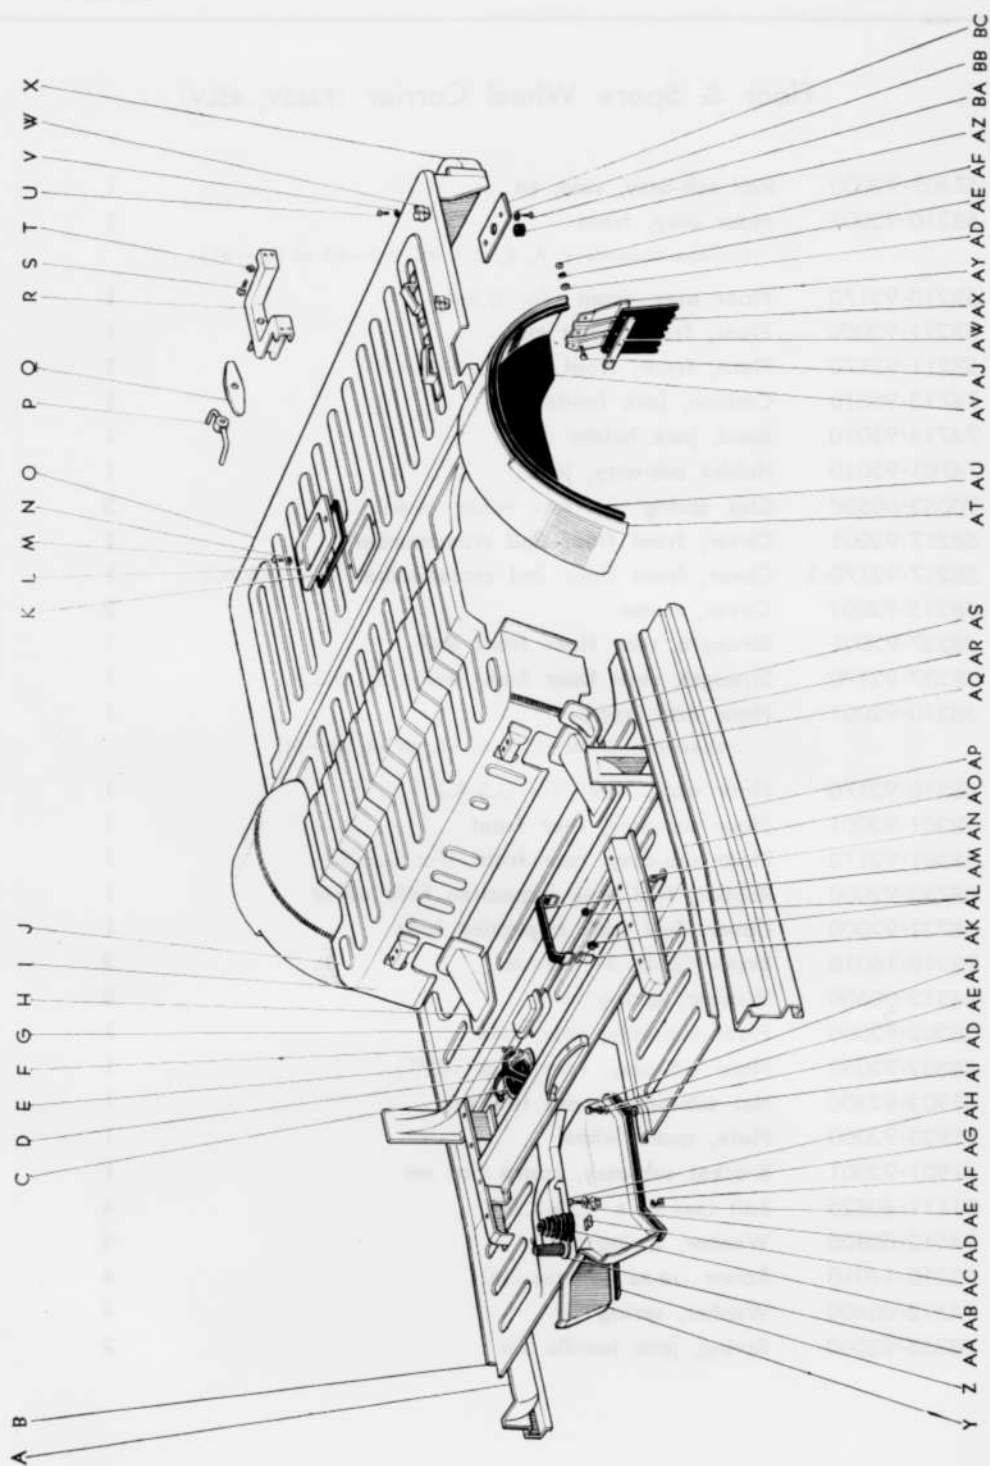


B 0950-A

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 51)				
X	58306-92000	Step sub-assy, rear	1	45V LV
	58307-92050	Panel sub-assy, rear skirt (OPT)	1	45V LV
Y	58206-60070	Cover sub-assy, transmission	1	40V LV 45V LV
	58206-92170	Cover sub-assy, transmission (For U.S.A.) (Effective from the end of December '64)	1	LV
	58206-60110	Cover sub-assy, transmission (OPT) (For change lever, transfer control lever & power take off control lever A)	1	40V LV 45V LV
	58206-60120	Cover sub-assy, transmission (OPT) (For change lever & transfer control lever)	1	40V LV 45V LV
	58206-60100	Cover sub-assy, transmission (OPT) (For change lever, transfer control lever & power take off control lever A, B)	1	40V LV 45V LV
	58206-60080	Cover sub-assy, transmission (OPT) (For power take off control lever A, B)	1	40V LV 45V LV
	58206-60090	Cover sub-assy, transmission (OPT) (For power take off control lever A)	1	40V LV 45V LV
Z	58263-60010	Packing, transmission cover, A	1	40V LV 45V LV
	58264-60010	Packing, transmission cover, B	1	40V LV 45V LV
	58265-60020	Packing, transmission cover, C	1	40V LV 45V LV
AA	58280-60020	Dust-proof assy, shifting lever hole (OPT)	1	40V LV 45V LV
AB	58273-60010	Cover, shifting lever (OPT)	1	40V LV 45V LV
AC	58208-60011	Cover sub-assy, power take-off control lever, A (OPT)	1	40V LV 45V LV
AD	94612-10600	Washer, plate (6-10)	22	
AE	94511-00600	Washer, spring (6)	20	
AF	94110-40600	Nut (hex 6-10p)	12	
AG	58209-60010	Cover sub-assy, power take-off control lever, B (OPT)	1	40V LV 45V LV
AH	91111-40610	Bolt (hex-hd 6-10p 10)	2	
AI	58279-60010	Plate, transmission set	16	40V LV 45V LV
AJ	91111-40616	Bolt (hex-hd 6-10p 16)	25	
AK	58214-92000	Catch, tool case rear	2	45V LV
AL	90541-10009	Cushion (Excludes U.S.A.)	4	45V LV
AM	75207-92000	Set band sub-assy, tool case	1	45V LV
AN	58761-95110	Plug, floor dust	4	45V LV
AO	58212-92000	Floor, front, front, LH	1	45V LV
AP	57402-92000	Rail sub-assy, side, LH	1	45V LV

BODY

FIG.—51 FLOOR & SPARE WHEEL CARRIER (FJ45V, 45LV)

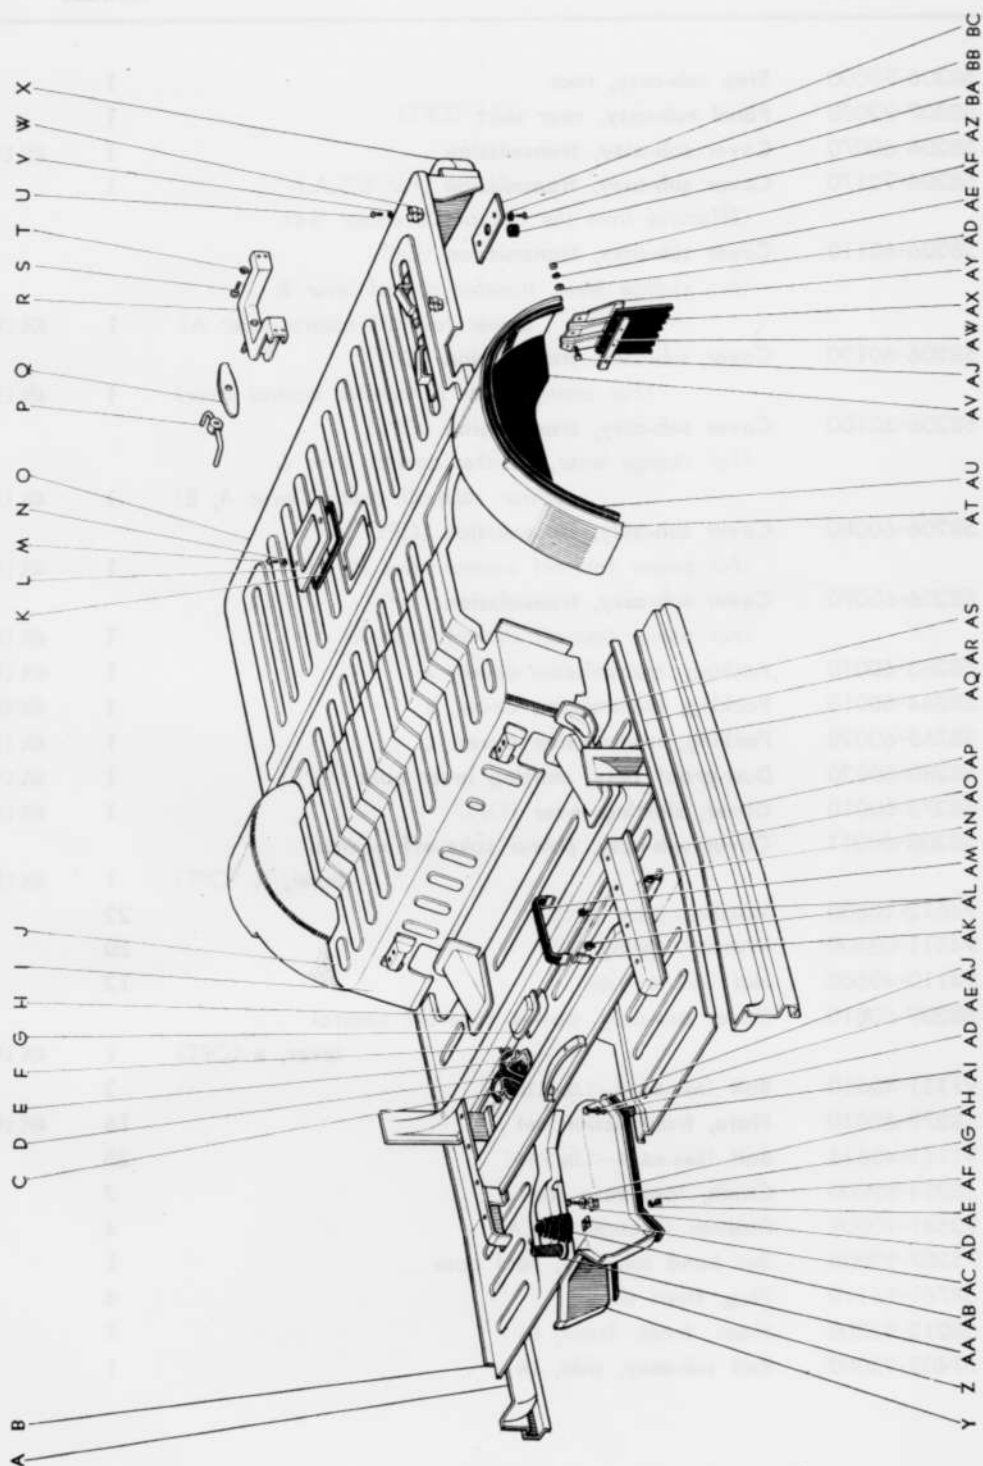

B 0950-A

Toyota Land Cruiser


207

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FIG 51)				
AQ	58022-92001	Strength sub-assy, front floor	1	45V LV
	58022-92170	Strength sub-assy, front floor For U S A	1	LV
AR	58213-92001	Floor, front floor rear	1	45V LV
AS	58216-92001	Bracket, seat riser	2	45V LV
AT	58332-92000	Apron, rear tire outer, LH	1	45V LV
	58331-92000	Apron, rear tire outer, RH	1	45V LV
AU	58333-92000	Duster rubber, rear tire outer apron	2	45V LV
AV	58313-92000	Apron, rear tire inner, LH	1	45V LV
	58312-92000	Apron, rear tire inner, RH	1	45V LV
AW	66242-92000	Plate, mudguard set retainer rear	2	45V LV
AX	66241-92000	Rubber, mudguard, rear	2	45V LV
AY	66243-92000	Bracket, mudguard set	2	45V LV
AZ	58379-92000	Grommet	1	45V LV
BA	93540-14016	Screw, tapping	2	
BB	94524-00400	Washer, toothed (4)	2	
BC	58376-92000	Cover, switch	1	45V LV

BODY

Donated by Dominic Smith cruisercult.com

FIG. 52 SIDE MEMBER (FJ45V, 45LV)

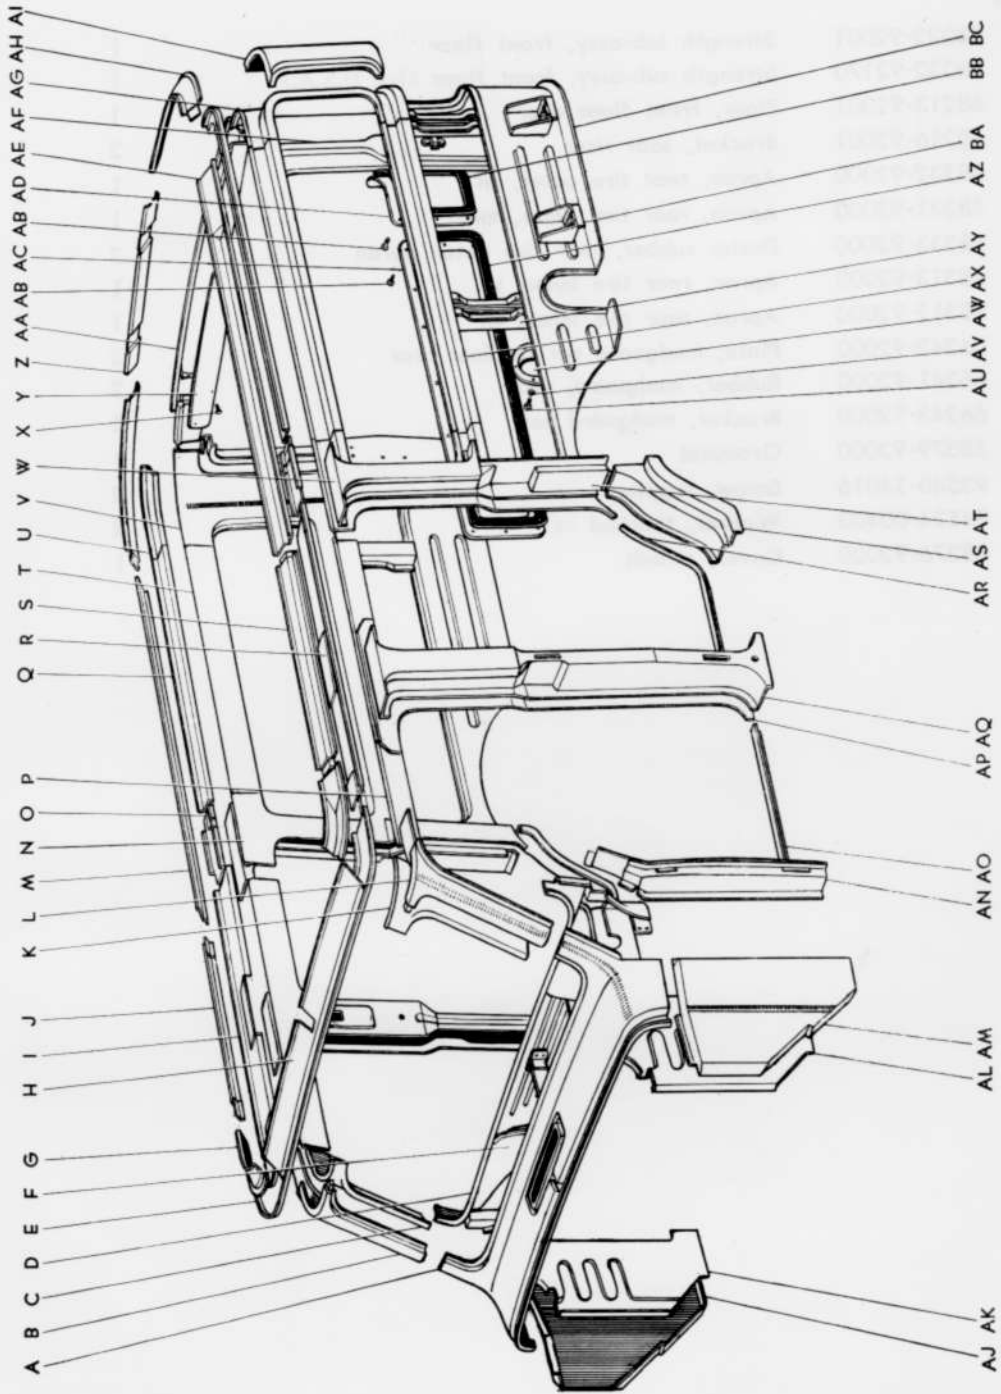


B 0500-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Side Member (FJ45V, 45LV)				
(FIG 52)				
A	55701-92000	Panel sub-assy, cowl upper	1	45V
	55701-92100	Panel sub-assy, cowl upper	1	LV
	55701 92170 1	Panel sub-assy, cowl upper (For U.S.A.)	1	LV
	55701-92170	Panel sub-assy, cowl upper (For U.S.A.) (Effective from the end of December 64)	1	LV
B	56141-92000	Pillar, front window side upper, RH	1	45V LV
C	56134-92001	Pillar, front window side inner, RH	1	45V LV
D	55301-92000	Panel sub-assy, instrument	1	45V
	55301-92100	Panel sub-assy, instrument	1	LV
	55301 92171	Panel sub-assy, instrument (For U.S.A.)	1	LV
	55301-92172	Panel sub-assy, instrument (For U.S.A.) (Effective from the end of December 64)	1	LV
E	56103-92000	Window sub-assy, front upper (includes illustrations B, C, G, H, K, L of Fig -52)	1	45V
	56103-92100	Window sub-assy, front upper	1	LV
	56103-92170	Window sub-assy, front upper (For U.S.A.)	1	LV
F	55905-92000	Nozzle sub-assy, defroster, RH	1	45V LV
	55905 92101	Nozzle sub-assy, defroster, RH (For U.S.A.)	1	LV
	55905-92170	Nozzle sub-assy, defroster, RH (For U.S.A.) (Effective from the end of December 64)	1	LV
	55906-92000	Nozzle sub-assy, defroster, LH	1	45V
	55906 92101	Nozzle sub-assy, defroster, LH (For U.S.A.)	1	LV
	55906-92170	Nozzle sub-assy, defroster, LH (For U.S.A.) (Effective from the end of December 64)	1	LV
G	56145-92000	Strength, front upper, RH	1	45V LV
	56146-92000	Strength, front upper, LH	1	45V LV
H	56144-92000	Strength, front upper	1	45V LV
	56144-92170	Strength, front upper (For U.S.A.)	1	LV
	61201-92000	Frame sub-assy, side front, RH (includes illustrations—I, O of Fig 52)	1	45V LV
	61201-92170	Frame sub-assy, side front, RH (For U.S.A.)	1	LV
I	61211-92000	Frame, side outer front, RH	1	45V LV
J	61251-92000	Frame, side upper front, RH	1	45V LV
	61251-92170	Frame, side upper front, RH (For U.S.A.)	1	LV
K	56135-92001	Pillar, front window side inner, LH	1	45V LV

BODY

FIG.—52 SIDE MEMBER (FJ45V, 45LV)

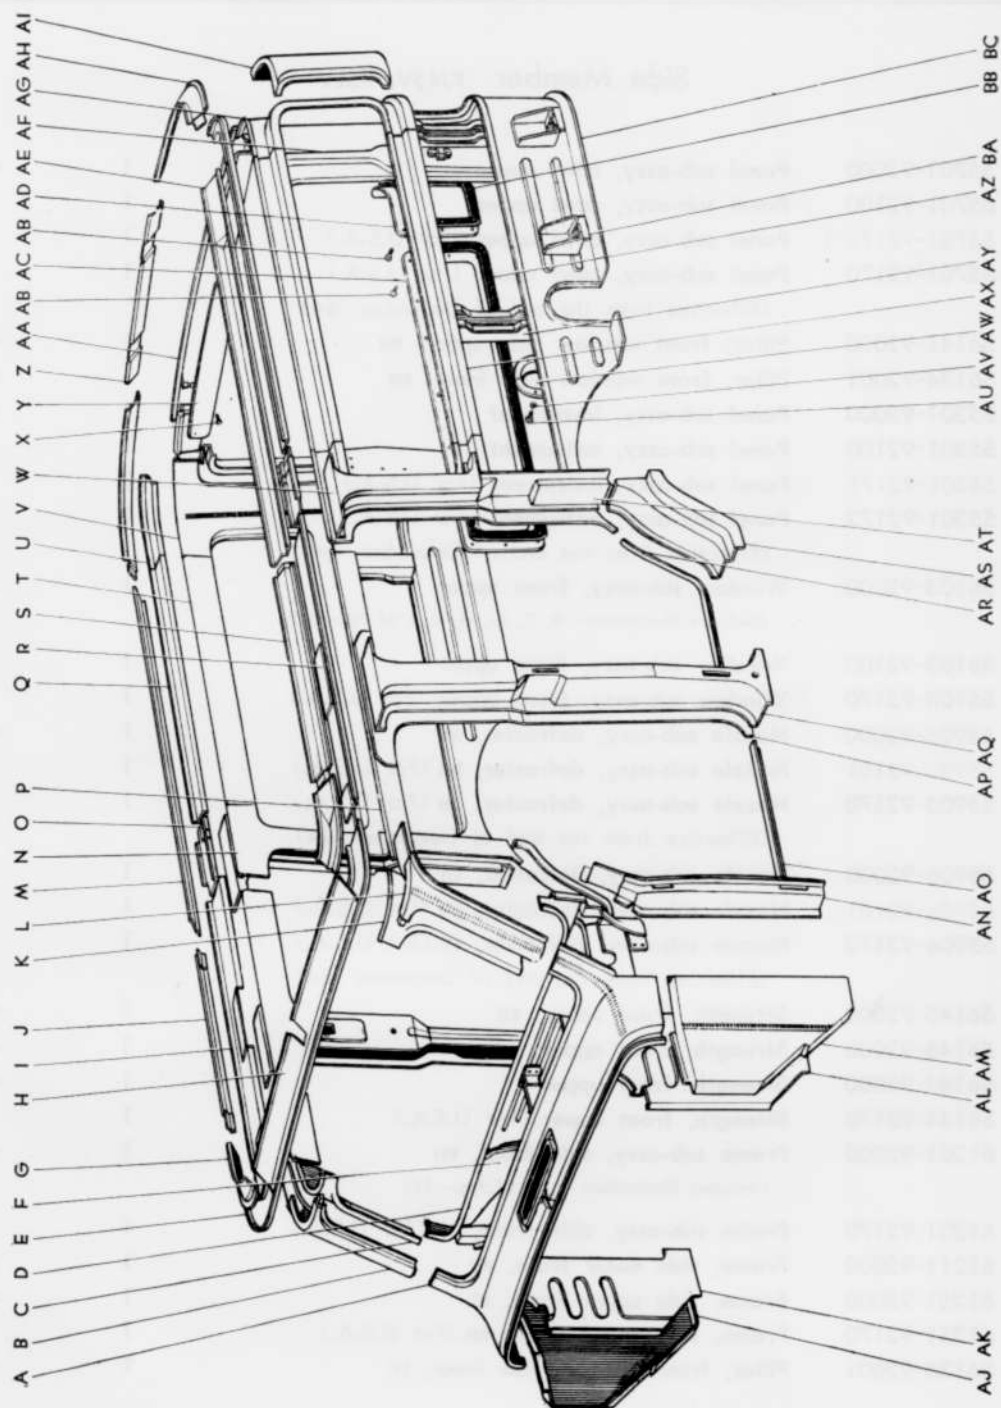

B 0500-C

Toyota Land Cruiser


211

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 52)				
L	56142-92000	Pillar, front window side upper, LH	1	45V LV
M	61255-92000	Frame, side upper center, RH	1	45V LV
	61255-92170	Frame, side upper center, RH (For U.S.A.)	1	LV
	61510-92000	Inner assy, side, RH includes illustrations N T V AX AY BA BC of Fig - 52)	1	45V LV
	61510-92170	Inner assy, side, RH (For U.S.A.)	1	LV
	61520-92000	Inner assy, side, LH includes illustrations N T AG AX AY BA, BC of Fig - 52)	1	45V LV
	61520-92170	Inner assy, side, LH (For U.S.A.)	1	LV
N	61502-92000	Panel sub-assy, inside front, LH	1	45V LV
	61502-92170	Panel sub-assy, inside front, LH (For U.S.A.)	1	LV
	61501-92000	Panel sub-assy, inside front, RH	1	45V LV
	61501-92170	Panel sub-assy, inside front, RH (For U.S.A.)	1	LV
O	61215-92000	Frame, side outer center, RH	1	45V LV
	61215-92170	Frame, side outer center, RH (For U.S.A.)	1	LV
	61216-92000	Frame, side outer center, LH	1	45V LV
	61216-92170	Frame, side outer center, LH (For U.S.A.)	1	LV
	61202-92000	Frame sub-assy, side front, LH includes illustrations P R of Fig - 52)	1	45V LV
	61202-92170	Frame sub-assy, side front, LH (For U.S.A.)	1	LV
P	61232-92000	Frame, side inner front, LH	1	45V LV
	61232-92170	Frame, side inner front, LH (For U.S.A.)	1	LV
	61231-92000	Frame, side inner front, RH	1	45V LV
	61231-92170	Frame, side inner front, RH (For U.S.A.)	1	LV
Q	61217-92000	Frame, side outside	2	45V LV
R	61212-92000	Frame, side outer front, LH	1	45V LV
S	61252-92000	Frame, side upper front, LH	1	45V LV
	61252-92170	Frame, side upper front, LH (For U.S.A.)	1	LV
T	61234-92000	Frame, side inner rear, LH	1	45V LV
	61234-92170	Frame, side inner rear, LH (For U.S.A.)	1	LV
	61233-92000	Frame, side inner rear, RH	1	45V LV
	61233-92170	Frame, side inner rear, RH (For U.S.A.)	1	LV
U	61218-92000	Frame, side outside rear, RH	1	45V LV
	61219-92000	Frame, side outside rear, LH	1	45V LV
V	61505-92000	Panel sub-assy, inside rear, RH	1	45V LV
	61505-92170	Panel sub-assy, inside rear, RH (For U.S.A.)	1	LV
	61505-92050	Panel sub-assy, inside rear, RH (OPT)	1	45V LV

BODY

Donated by Dominic Smith cruisercult.com

FIG.—52 SIDE MEMBER (FJ45V, 45LV)

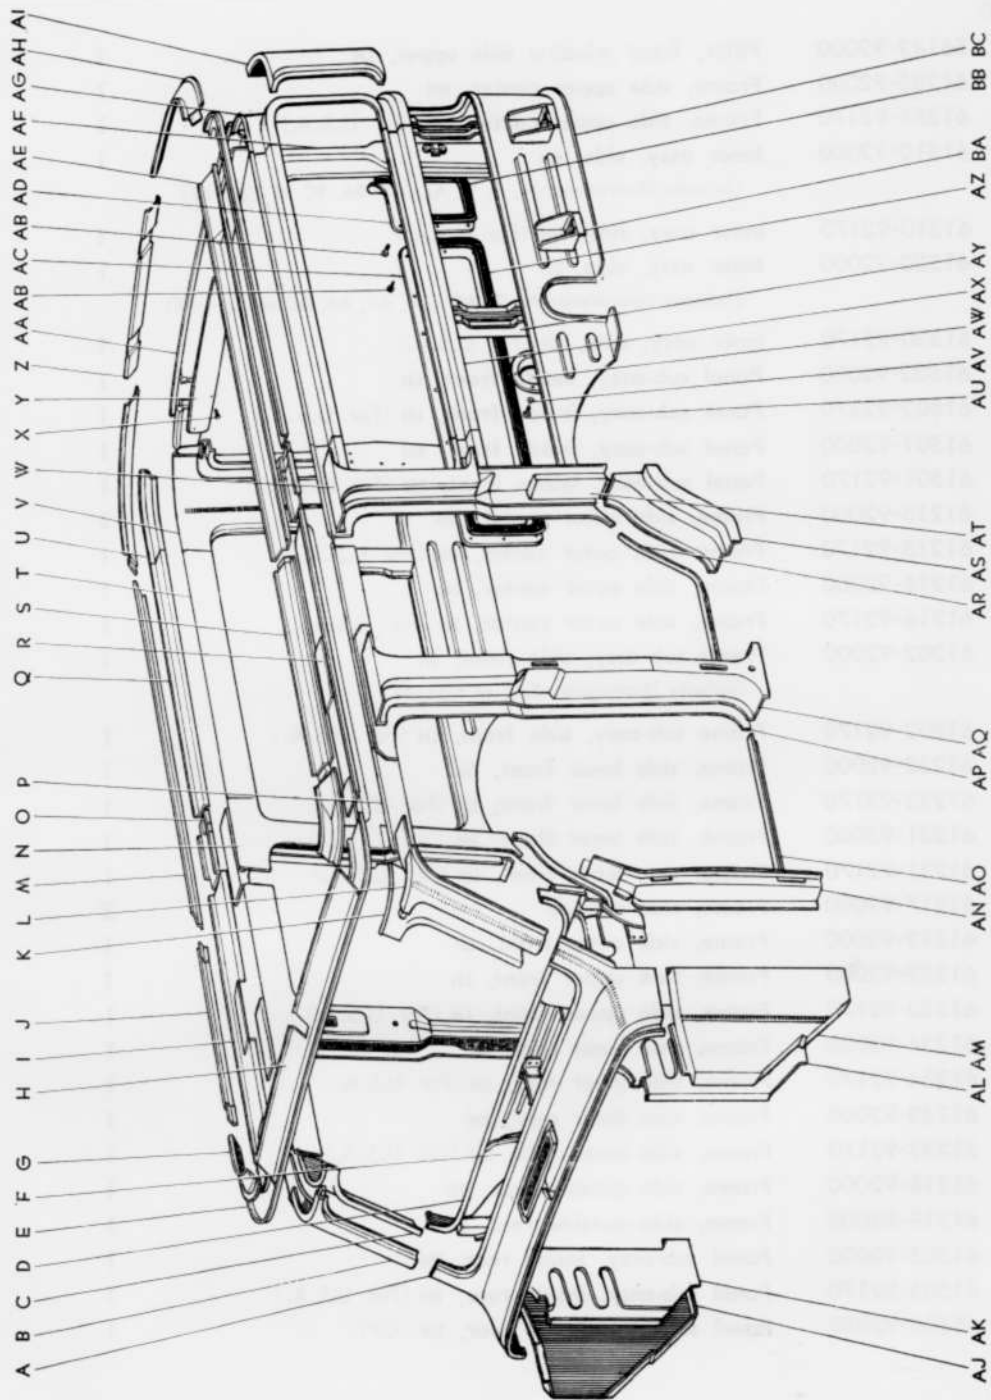


B 0500-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.52)				
W	61458-92000	Panel, side upper front, LH	1	45V LV
	61457-92000	Panel, side upper front, RH	1	45V LV
X	93540-13510	Screw, tapping	9	
Y	64143-92000	Cover, lift gate hinge outer	1	45V LV
Z	64144-92000	Strength, rear shield upper	1	45V LV
AA	64100-92000	Shield assy, rear	1	45V LV
		(Includes illustrations—X, Y of Fig 52 and illustrations— Q~U, V~X of Fig 60)		
	64100-92050	Shield assy, rear (OPT)	1	45V LV
AB	93540-14016	Screw, tapping	48	
AC	62512-92000	Cover, inside panel front, LH	1	45V LV
	62511-92000	Cover, inside panel front, RH	1	45V LV
AD	61516-92000	Cover, inside panel rear, LH	1	45V LV
	61515-92000	Cover, inside panel rear, RH	1	45V LV
AE	61256-92000	Frame, side upper center, LH	1	45V LV
	61256-92170	Frame, side upper center, LH (For U.S.A.)	1	LV
AF	61404-92000	Pillar sub-assy, rear, LH	1	45V LV
	61404-92050	Pillar sub-assy, rear, LH (OPT)	1	45V LV
	61403-92000	Pillar sub-assy, rear, RH	1	45V LV
	61403-92050	Pillar sub-assy, rear, RH (OPT)	1	45V LV
AG	61506-92000	Panel sub-assy, inside rear, LH	1	45V LV
	61506-92170	Panel sub-assy, inside rear, LH (For U.S.A.)	1	LV
	61506-92050	Panel sub-assy, inside rear, LH (OPT)	1	45V LV
AH	61258-92000	Frame, side upper rear, LH	1	45V LV
	61257-92000	Frame, side upper rear, RH	1	45V LV
AI	61462-92000	Panel, side upper rear, LH	1	45V LV
	61461-92000	Panel, side upper rear, RH	1	45V LV
	55702-92000	Panel sub-assy, cowl side, RH	1	45V LV
		(includes illustration AJ of Fig 52)		
	55702-92170-1	Panel sub-assy, cowl side, RH (For U.S.A.)	1	LV
	55702-92170	Panel sub-assy, cowl side, RH (For U.S.A.) (Effective from the end of December 64)	1	LV
AJ	55721-92000	Panel, cowl side, RH	1	45V LV
	55721-92170-1	Panel, cowl side, RH (For U.S.A.)	1	LV
	55721-92170	Panel, cowl side, RH (For U.S.A.) (Effective from the end of December 64)	1	LV
	61110-92000	Inner assy, cowl side, RH (includes illustrations AK, AN of Fig 52)	1	45V LV
	61110-92170-1	Inner assy, cowl side, RH (For U.S.A.)	1	LV

BODY

FIG.—52 SIDE MEMBER (FJ45V, 45LV)

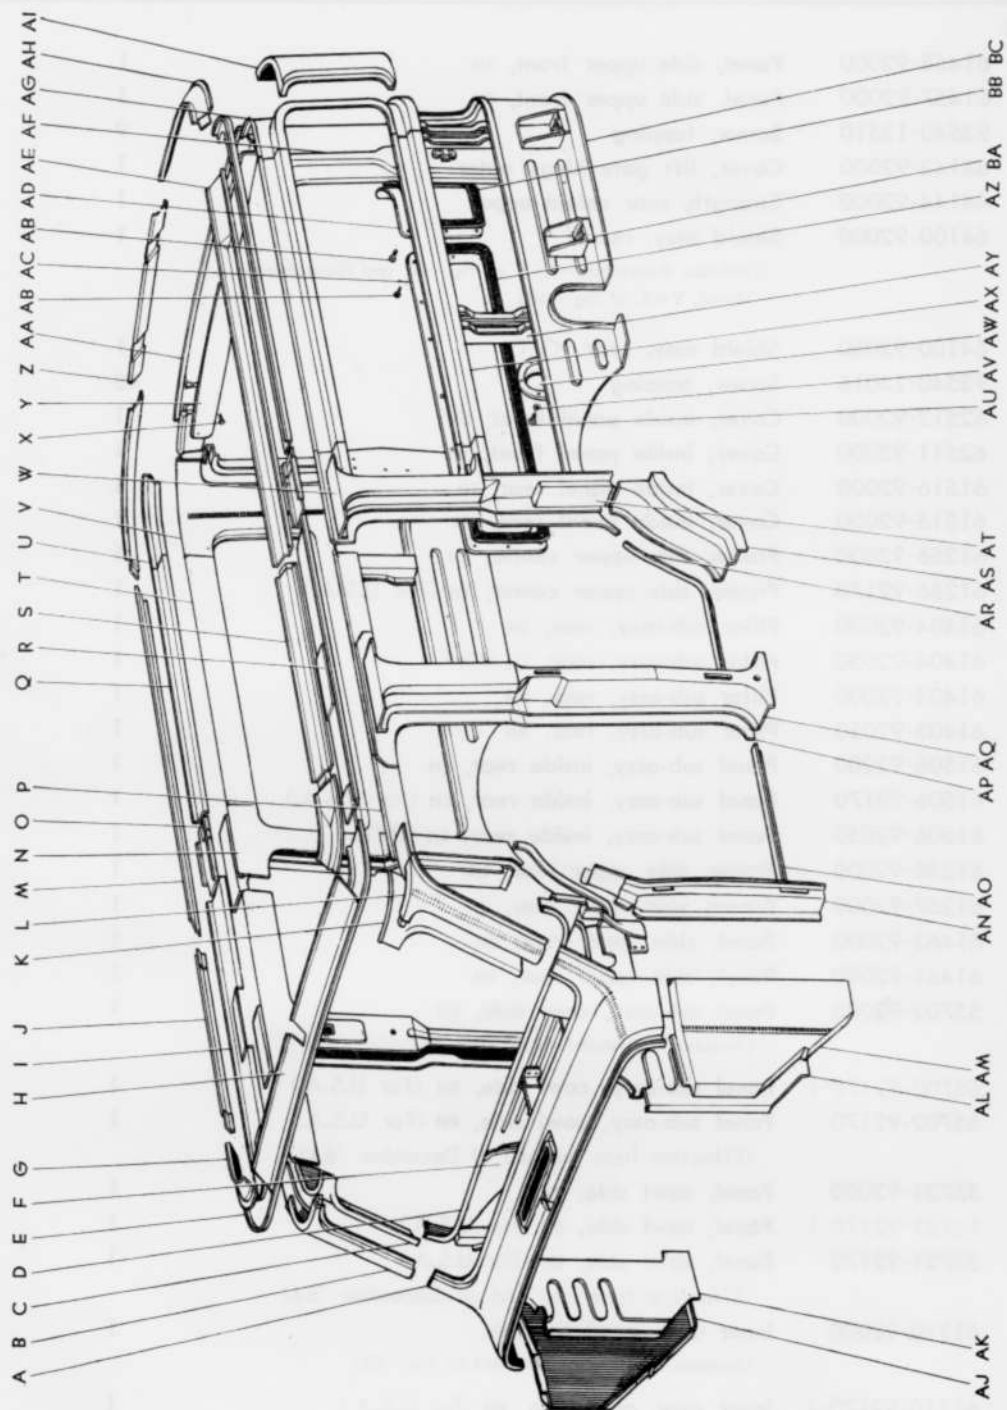

B 0500-C


Toyota Land Cruiser

215

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 52)				
AK	61121-92000	Panel, cowl side inner, RH	1	45V LV
	61121-92170-1	Panel, cowl side inner, RH (For U.S.A.)	1	LV
	61120-92000	Inner assy, cowl side, LH (includes illustrations AL AN of Fig 52)	1	45V LV
AL	61122-92000	Panel, cowl side inner, LH	1	45V LV
	55703-92000	Panel sub-assy, cowl side, LH (includes illustration AM of Fig 52)	1	45V LV
AM	55722-92000	Panel, cowl side, LH	1	45V LV
AN	61104-92000	Pillar sub-assy, front side, LH	1	45V LV
	61103-92000	Pillar sub-assy, front side, RH	1	45V LV
AO	57422-92000	Garnish, side rail front, LH	1	45V LV
	57421-92000	Garnish, side rail front, RH	1	45V LV
AP	61342-92000	Pillar, 1st side inner, LH	1	45V LV
	61342-92170	Pillar, 1st side inner, LH (For U.S.A.)	1	LV
	61341-92000	Pillar, 1st side inner, RH	1	45V LV
	61341-92170	Pillar, 1st side inner, RH (For U.S.A.)	1	LV
AQ	61302-92000	Pillar sub-assy, 1st side, LH	1	45V LV
	61302-92170	Pillar sub-assy, 1st side, LH (For U.S.A.)	1	LV
	61301-92000	Pillar sub-assy, 1st side, RH	1	45V LV
	61301-92170	Pillar sub-assy, 1st side, RH (For U.S.A.)	1	LV
AR	57423-92000	Garnish, side rail rear	2	45V LV
AS	61408-92000	Rail sub-assy, side rear, LH	1	45V LV
	61407-92000	Rail sub-assy, side rear, RH	1	45V LV
AT	61402-92000	Pillar sub-assy, 2nd side, LH	1	45V LV
	61401-92000	Pillar sub-assy, 2nd side, RH	1	45V LV
AU	91111-40616	Bolt (hex-hd 6 10p 16)	7	
AV	94512-00600	Washer, spring (6)	7	
AW	62518-92000	Cover, gasoline tank inlet hole	1	45V LV
AX	61513-92000	Panel, inside front lower, RH	1	45V LV
	61514-92000	Panel, inside front lower, LH	1	45V LV
AY	61573-92000	Pillar, inside panel	3	45V LV
AZ	62513-92000	Proof, inside panel front cover dust	2	45V LV
BA	61507-92000	Bracket sub-assy, panel	5	45V LV
BB	62517-92000	Proof, inside panel rear cover dust	2	45V LV
BC	61534-92000	Panel, inside center lower, LH	1	45V LV
	61533-92000	Panel, inside center lower, RH	1	45V LV

BODY

FIG. 53 WINDOW GLASS & PROTECTOR (FJ45V, 45LV)

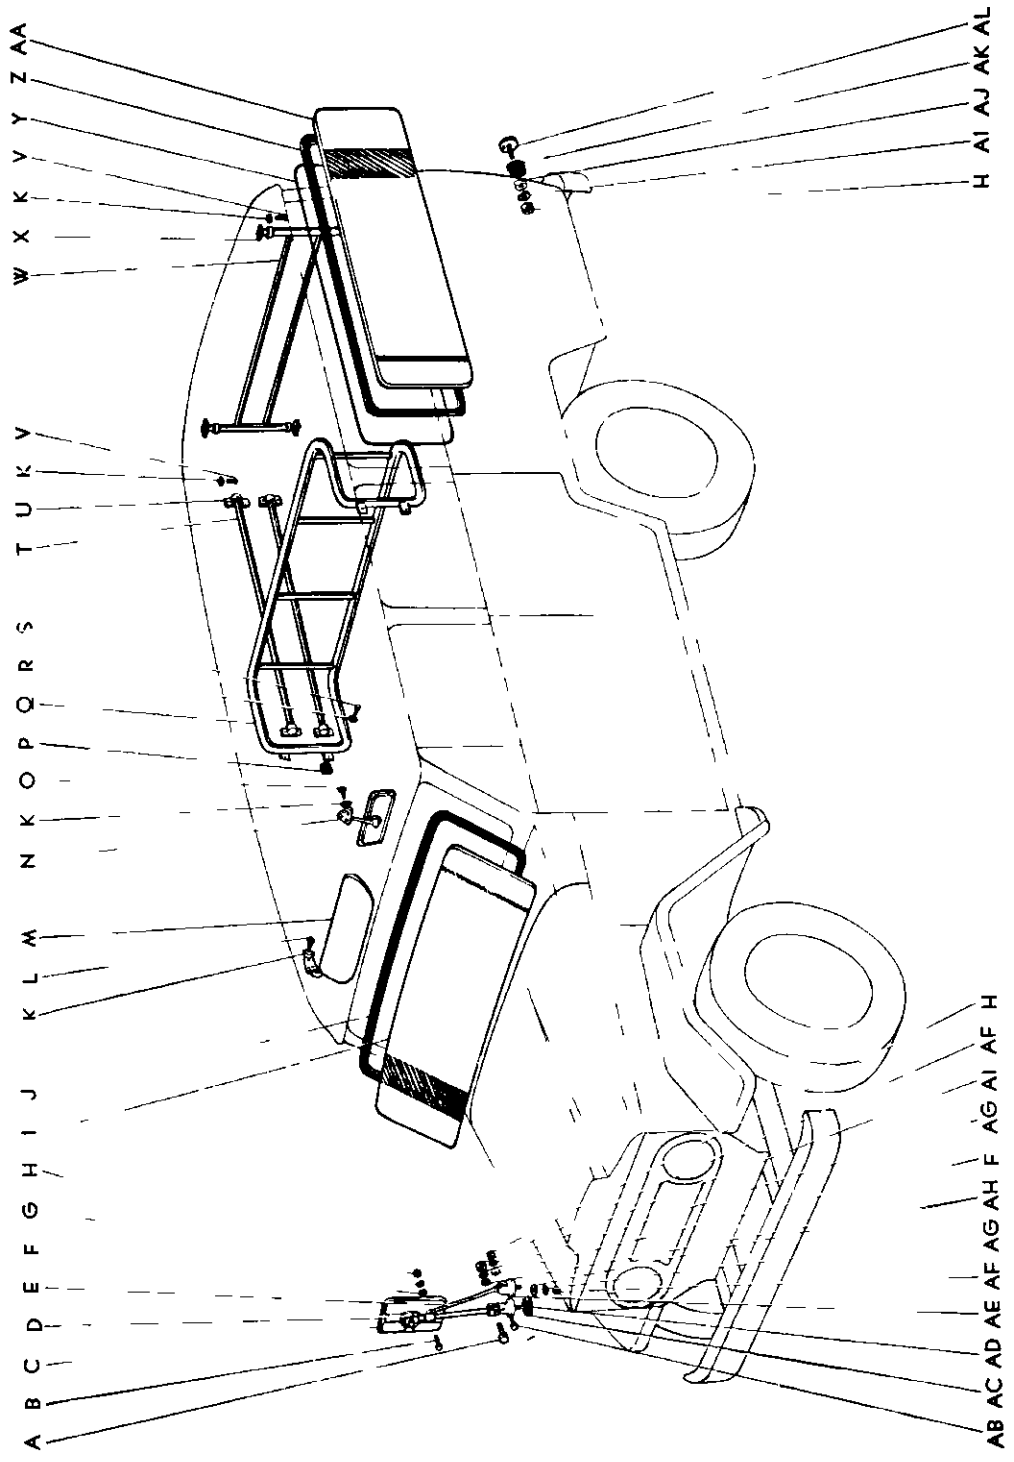


B 0502-D

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Window Glass & Protector (FJ45V, 45LV)				
(FIG.53)				
A	87925-92170	Pin, rear view mirror stay (Excludes U.S.A.)	1	45V LV
B	91111-40616	Bolt (hex-hd. 6 10p 16) (Excludes U.S.A.)	1	
C	87901-60011	Mirror sub-assy, outer rear view (Excludes U.S.A.)	1	45V LV
	87910-92001	Mirror assy, rear view outside (Excludes U.S.A.) (includes illustrations A~H, AB~AI of Fig 53)	1	45V
	87910-92101	Mirror assy, rear view outside (Excludes U.S.A.)	1	LV
	87920-92001	Stay assy, rear view mirror (Excludes U.S.A.) (includes illustrations A, B, D~H, AB, AD~AI of Fig 53)	1	45V
	87920-92170	Stay assy, rear view mirror (Excludes U.S.A.)	1	LV
D	87902-92170	Stay sub-assy, rear view mirror (Excludes U.S.A.)	1	45V LV
E	87926-92000	Stay, rear view mirror support (Excludes U.S.A.)	1	45V LV
F	94613-10600	Washer, plate 6 10 (Excludes U.S.A.)	2	
G	94511-00600	Washer, spring (6) (Excludes U.S.A.)	1	
H	94110-40600	Nut (hex 6 10p)	4 (U.S.A. -2)	
I	56111-92000	Glass, front window	1	45V LV
	56111-92170	Glass, front window For U.S.A.)	1	LV
J	56121-95002	Weatherstrip, windshield	1	45V LV
K	94524-00400	Washer, toothed (4)	30	
L	93230-14012	Screw (oval-hd 4 0.75p 12)	6	
M	74310-95012	Visor assy, RH	1 U.S.A. 1)	45V
	74310-95013	Visor assy, LH	1 (U.S.A. 1)	LV
N	78310-91336	Mirror assy, rear view inside	1	45V LV
O	93230-14010	Screw (oval-hd 4 0.75p 10)	3	
P	74815-92000	Pad, separator adjust (Excludes U.S.A.)	4	45V LV
Q	74810-92001	Separator assy (Excludes U.S.A.)	1	45V LV
R	94613-10800	Washer, plate (8 16) (Excludes U.S.A.)	4	
S	91111-40825	Bolt (hex-hd 8 1.25p 25) (Excludes U.S.A.)	4	
T	62781-92000	Bar, side window upper (Excludes U.S.A.)	2	45V LV
	62782-92000	Bar, side window lower (Excludes U.S.A.)	2	45V LV
U	62784-92000	Bracket, side window protector bar rear, RH (Excludes U.S.A.)	2	45V LV
	62785-92000	Bracket, side window protector bar rear, LH (Excludes U.S.A.)	2	45V LV


BODY

FIG. 53 WINDOW GLASS & PROTECTOR (FJ45V, 45LV)

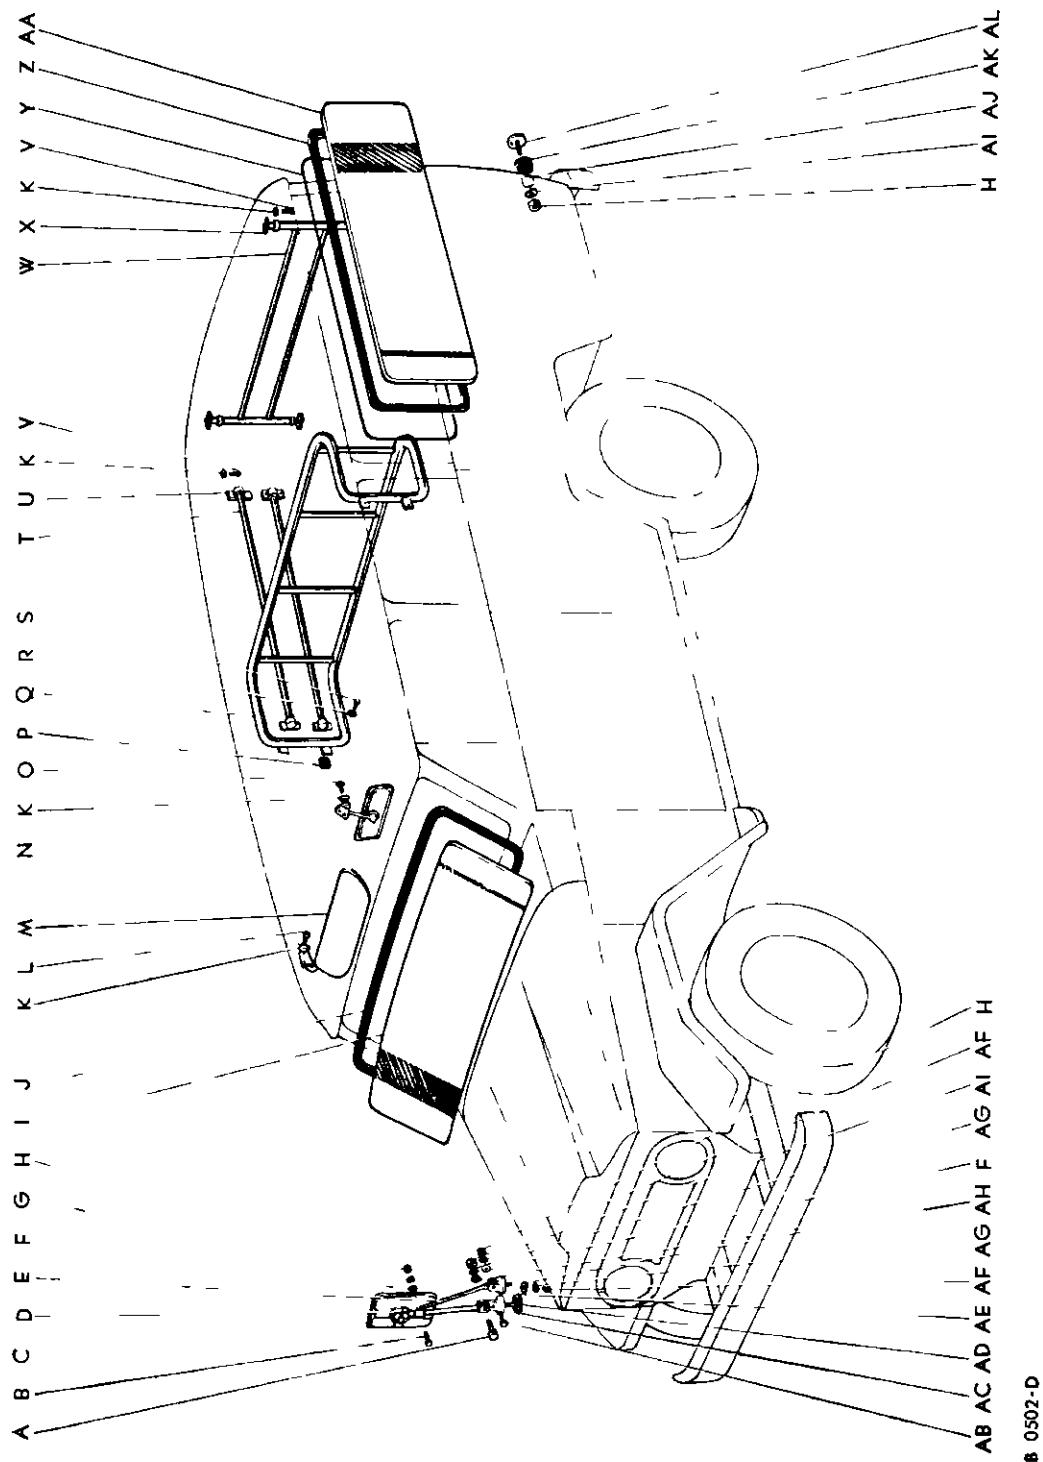

B 0502-D

FIG.—54 FRONT DOOR & WINDOW GLASS (FJ45V, 45LV)

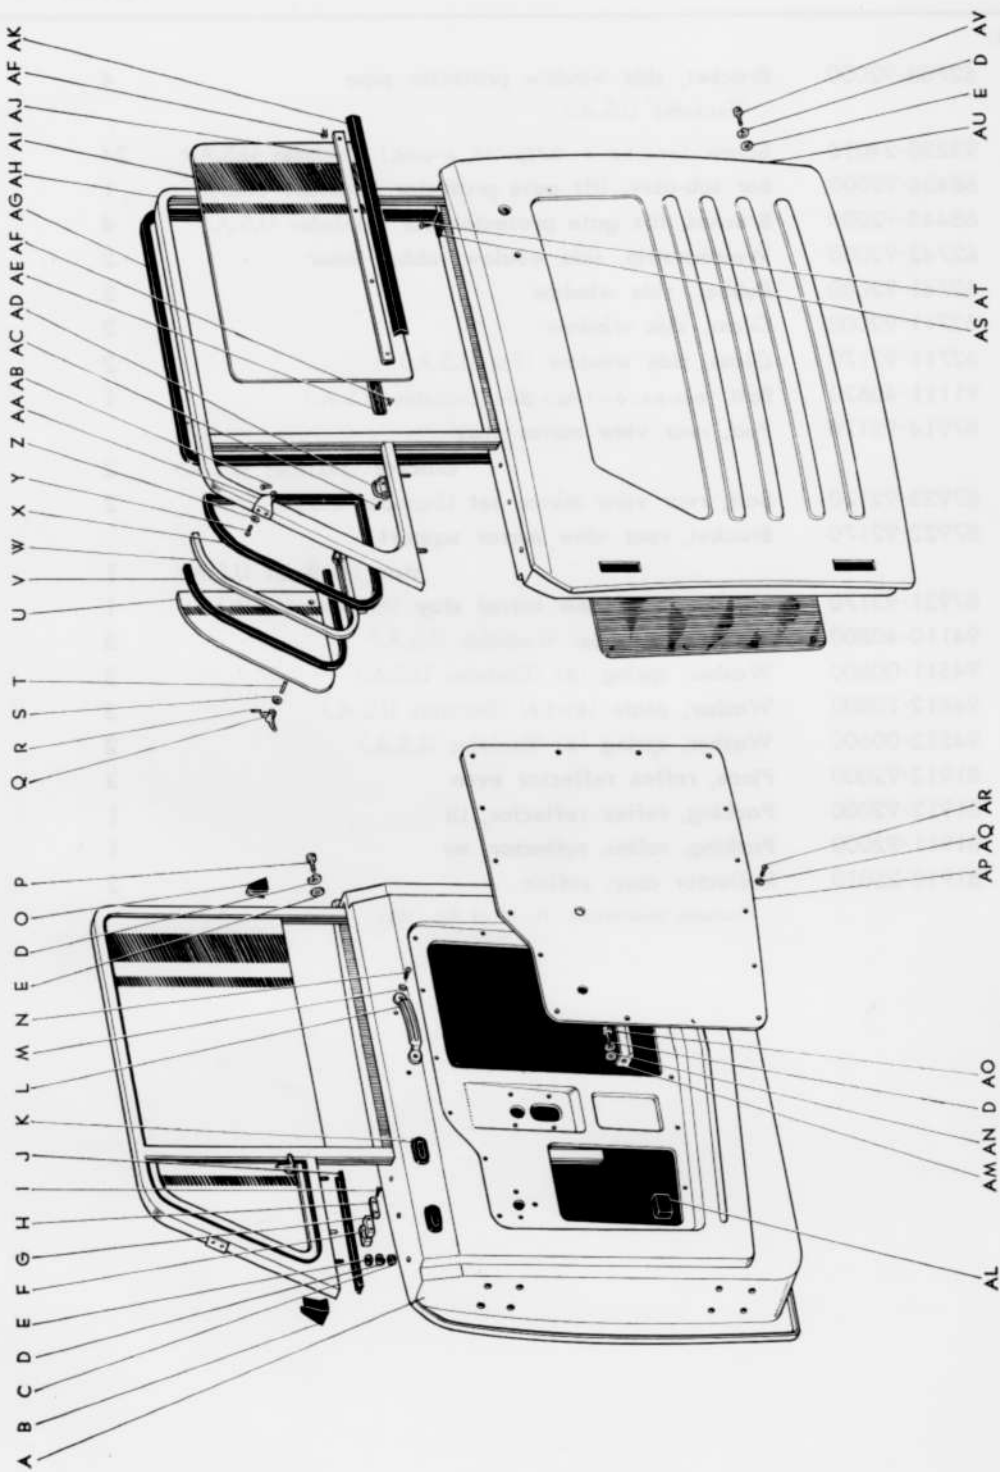


B 1294

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Front Door & Window Glass (FJ45V, 45LV)				
(FIG 54)				
	67100-92000	Door assy, front, RH (includes illustrations—A~AV of Fig 54 and illustrations—A~X, AD~AU, AY, BA~BC of Fig—56)	1	45V LV
	67200-92000	Door assy, front, LH (includes illustrations A~AV of Fig 54 and illustrations—A~C, F~T, V~X, AD, AF~AR, AT~BD of Fig 56)	1	45V LV
	67110-92000	Door assy, front, RH (includes illustrations A, D, E, P, AH, AU of Fig 54)	1	45V LV
	67120-92000	Door assy, front, LH	1	45V LV
A	67104-92000	Panel sub-assy, front door, inner RH	1	45V LV
	67105-92000	Panel sub-assy, front door, inner LH	1	45V LV
B	67216-92001	Spacer, door belt line front, LH	1	45V LV
	67215-92001	Spacer, door belt line front, RH	1	45V LV
C	94110-40600	Nut (hex. 6 10p)	6	
D	94511-00600	Washer, spring (6)	20	
E	94612-10600	Washer, plate (6/10)	14	
F	67553-92000	Holder, front door ventilator, outer	2	45V LV
G	67554-92000	Holder, front door ventilator, inner	2	45V LV
H	67555-92000	Plate, front door ventilator holder	2	45V LV
I	93210-16016	Screw (rd-hd. 6 -10p x 16)	4	
J	67451-92000	Packing, front door glass cannal, lower	2	45V LV
K	67849-95100	Cover, door window frame service hole	4	45V LV
L	65523-91301	Handle, door inside pull	2	45V LV
M	94524-00600	Washer, toothed (6)	16	
N	93230-26016	Screw (oval-hd 6 10p x 16, cr-pltd)	4	
O	67217-92001	Spacer, door belt line, rear RH	2	45V LV
	67218-92001	Spacer, door belt line, rear LH	2	45V LV
P	91111-40640	Bolt (hex-hd 6 10p x 40)	2	
Q	67547-92000	Handle, front door ventilator, LH	1	45V LV
	67546-92000	Handle, front door ventilator, RH	1	45V LV
R	67551-92000	Pin, front door ventilator lock handle	2	45V LV
S	67552-92000	Washer, front door ventilator lock handle	2	45V LV
T	67549-92000	Shaft, front door ventilator lock handle	2	45V LV
U	68121-92000	Glass, front door ventilator	2	45V LV
V	68183-92000	Rubber, front door glass	2	45V LV

BODY

FIG.—54 FRONT DOOR & WINDOW GLASS (FJ45V, 45LV)

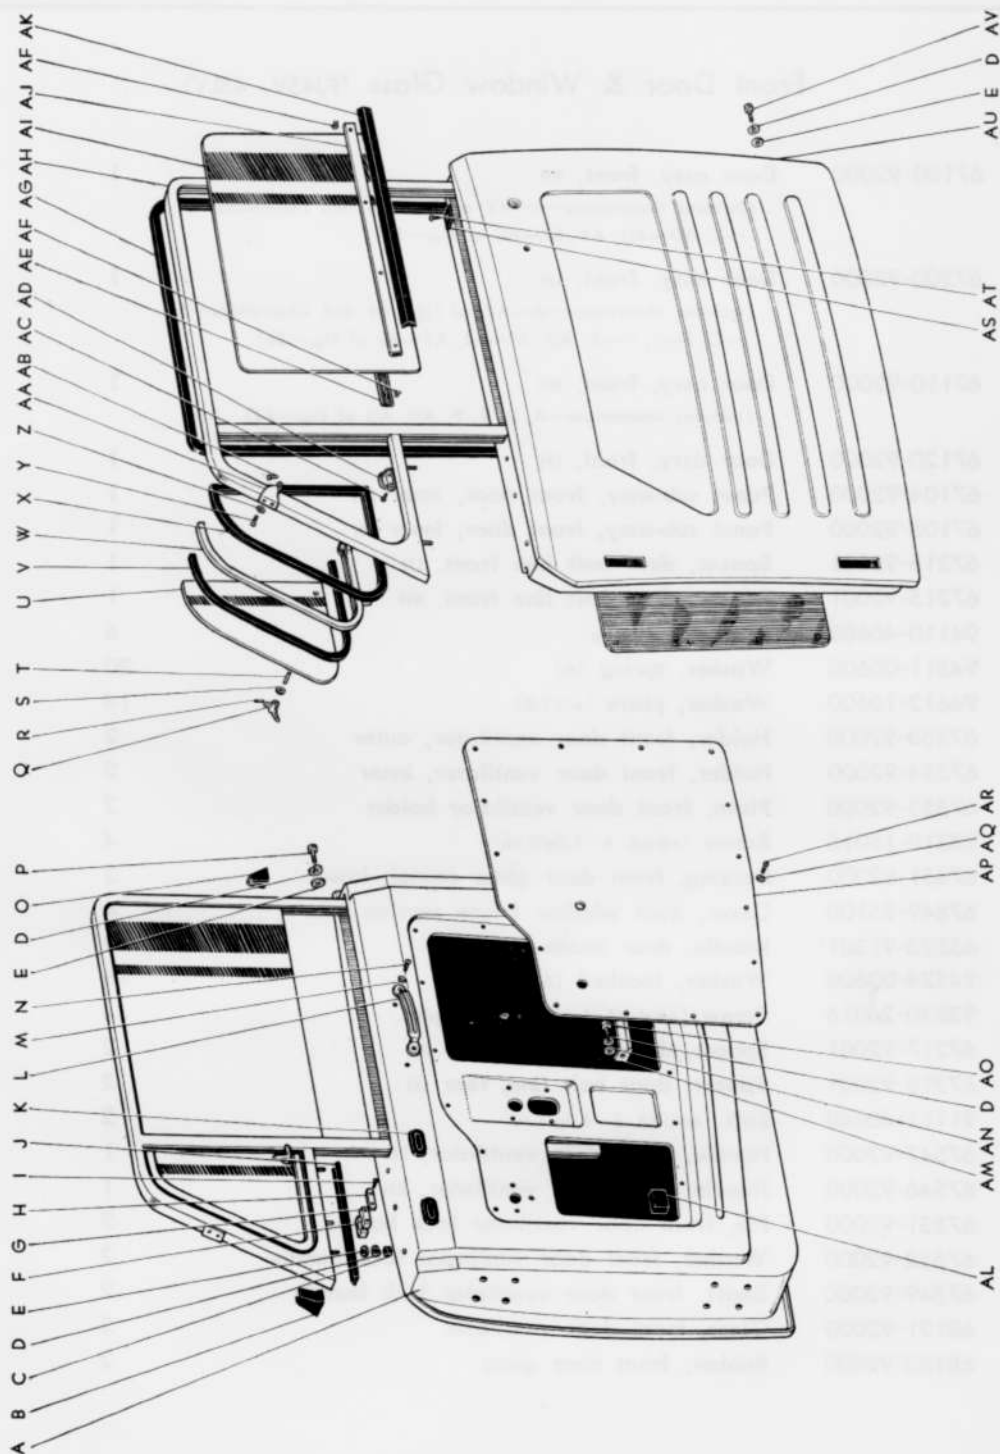

B 1294


Toyota Land Cruiser

223

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 54)				
W	67501-92000	Frame sub-assy, front door ventilator, RH (includes Illustrations Q~T of Fig 54)	1	45V LV
	67502-92000	Frame sub-assy, front door ventilator, LH	1	45V LV
X	68181-92000	Rubber, front ventilator window glass hold, RH	1	45V LV
	68182-92000	Rubber, front ventilator window glass hold, LH	1	45V LV
Y	93220-14008	Screw (fl-hd 4 0.75p 8)	8	
Z	94524-00400	Washer, toothed 4)	8	
AA	67542-92000	Pivot, front door ventilator, upper LH	1	45V LV
	67541-92000	Pivot, front door ventilator, upper RH	1	45V LV
AB	95111-00405	Rivet	2	
AC	93230-14008	Screw (oval hd 4 0.75p 8)	4	
AD	67422-92000	Check, front door ventilator lock, LH	1	45V LV
	67421-92000	Check, front door ventilator lock, RH	1	45V LV
AE	67213-92000	Proof, front door glass oscillate	2	45V LV
AF	90053-60501	Clip, spring	44	45V LV
AG	68141-92001	Run, front door glass, short	2	45V LV
	68142-92000	Run, front door glass, long	2	45V LV
	67420-92000	Channel assy, front door glass, LH (includes Illustrations F~I, Q~AD AH of Fig 54)	1	45V LV
	67410-92000	Channel assy, front door glass, RH	1	45V LV
AH	67402-92000	Channel sub-assy, front door glass, LH (includes illustrations F~I Q~T W, Y~AD of Fig 54)	1	45V LV
	67401-92000	Channel sub-assy, front door glass, RH	1	45V LV
AI	68111-92000	Glass, front door	2	45V LV
AJ	67212-92001	Plate, front door glass cleaner	2	45V LV
AK	67211-92000	Rubber, front door glass cleaner	2	45V LV
AL	67219-92000	Rubber, door open stopper silencer	2	45V LV
AM	67109-92000	Stopper sub-assy, front door glass	2	45V LV
AN	94613-10600	Washer, plate (6 10)	8	
AO	91111-40616	Bolt hex hd 6-1.0p 16)	4	
AP	67611-92000	Board, front door trim, RH	1	45V LV
	67612-92000	Board, front door trim, LH	1	45V LV
AQ	90207-05003	Washer, rosette	30	45V LV
AR	93530-14014	Screw, tapping	30	
AS	68172-92000	Rubber, door glass down stopper	2	45V LV
AT	93530-14020	Screw, tapping	4	
AU	67112-92000	Panel, front door outer, LH	1	45V LV
	67111-92000	Panel, front door outer, RH	1	45V LV
AV	91111-40610	Bolt (hex-hd. 6 1.0p 10)	4	

BODY

FIG.—55 FRONT DOOR & WINDOW GLASS (FJ45LV, For U.S.A.)

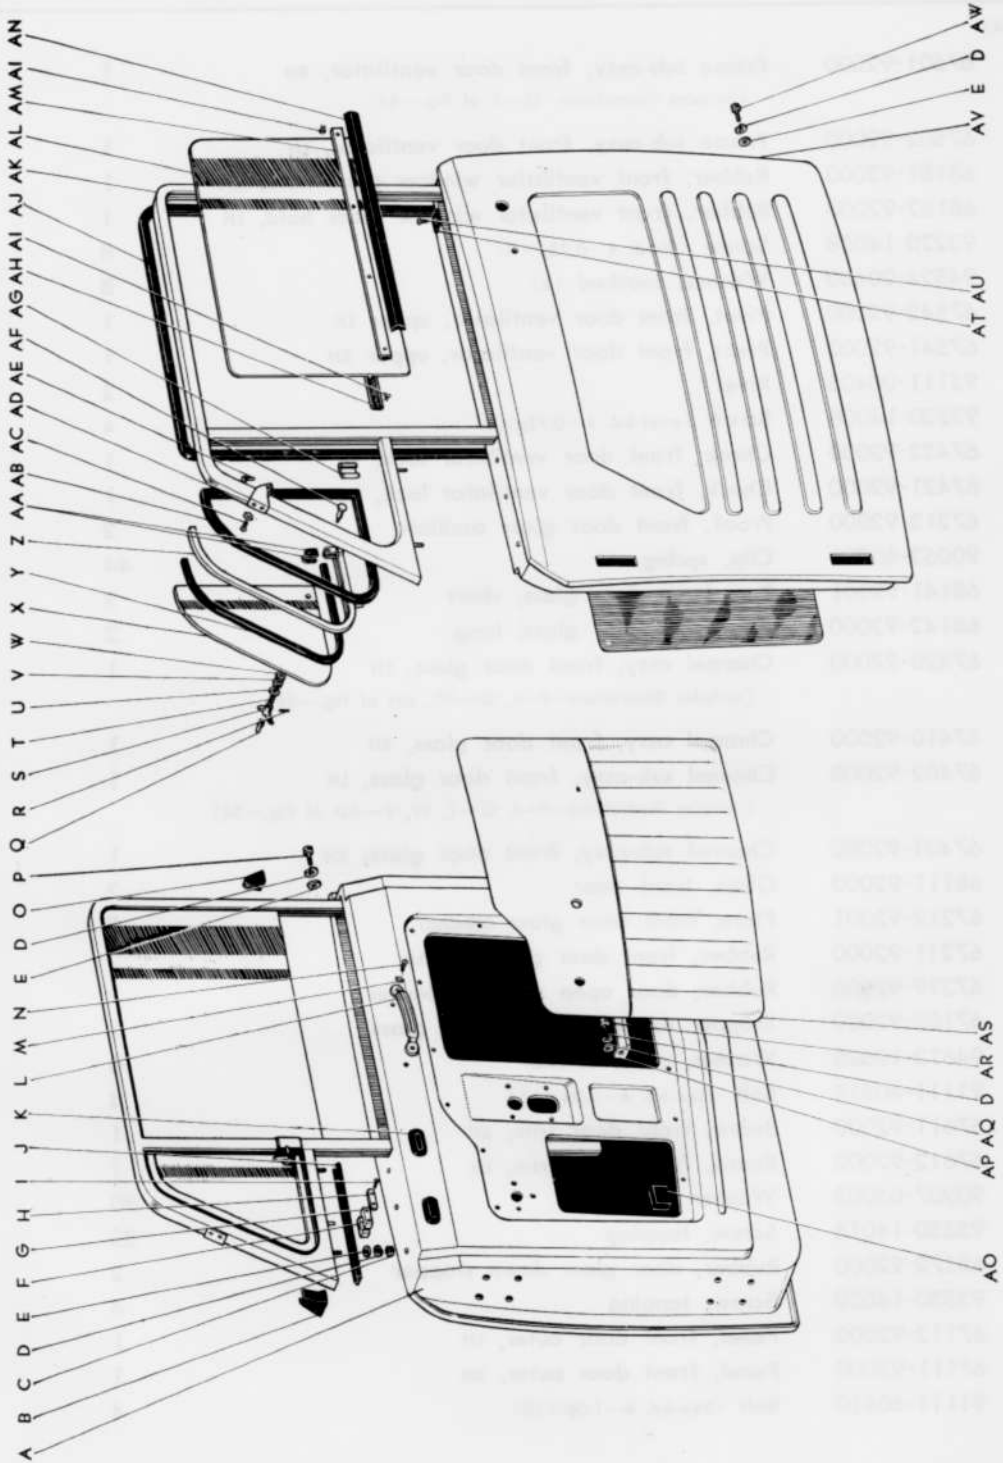


B 1285

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Front Door & Window Glass (FJ45LV, For U.S.A.)				
(FIG 55)				
	67100-92170	Door assy, front, RH (includes illustrations A~AW of Fig 55 and illustrations—A ~X, AD~AU, AY, BA~BC of Fig 56)	1	LV
	67200-92170	Door assy, front, LH (includes illustrations A~AW of Fig 55 and illustrations A~C, F~T, V~X, AD, AF~AR, AT~BD of Fig 56)	1	LV
	67110-92170	Door assy, front, RH includes illustrations—A D, E, P AK, AV of Fig 55	1	LV
	67120-92170	Door assy, front, LH	1	LV
A	67104-92170	Panel sub-assy, front door, inner RH	1	LV
	67105-92170	Panel sub-assy, front door, inner LH	1	LV
B	67216-92001	Spacer, door belt line front, LH	1	45V LV
	67215-92001	Spacer, door belt line front, RH	1	45V LV
C	94110-40600	Nut (hex 6 10p)	6	
D	94511-00600	Washer, spring (6)	20	
E	94612-10600	Washer, plate (6 10)	14	
F	67553-92000	Holder, front door ventilator, outer	2	45V LV
G	67554-92000	Holder, front door ventilator, inner	2	45V LV
H	67555-92000	Plate, front door ventilator holder	2	45V LV
I	93210-16016	Screw (rd-hd 6 10p 16)	4	
J	67451-92000	Packing, front door glass channel, lower	2	45V LV
K	67849-95100	Cover, door window frame service hole	4	45V LV
L	65523-91301	Handle, door inside pull	2	45V LV
M	94524-00600	Washer, toothed (6)	16	
N	93230-26016	Screw oval-hd 6—10p 16, cr-pltd)	4	
O	67217-92001	Spacer, door belt line, rear RH	2	45V LV
	67218-92001	Spacer, door belt line, rear LH	2	45V LV
P	91111-40640	Bolt (hex-hd 6 10p 40)	2	
Q	67564-95400	Button, ventilating window handle	2	LV
R	67563-95400	Pin, door ventilating window handle set	2	LV
S	67561-95400	Handle, door ventilating window, RH	1	LV
	67562-95400	Handle, door ventilating window, LH	1	LV
T	90501-05014	Spring, compression	2	LV
U	90206-09011	Washer, wave	2	LV

BODY

FIG.—55 FRONT DOOR & WINDOW GLASS (FJ45LV, For U.S.A.)

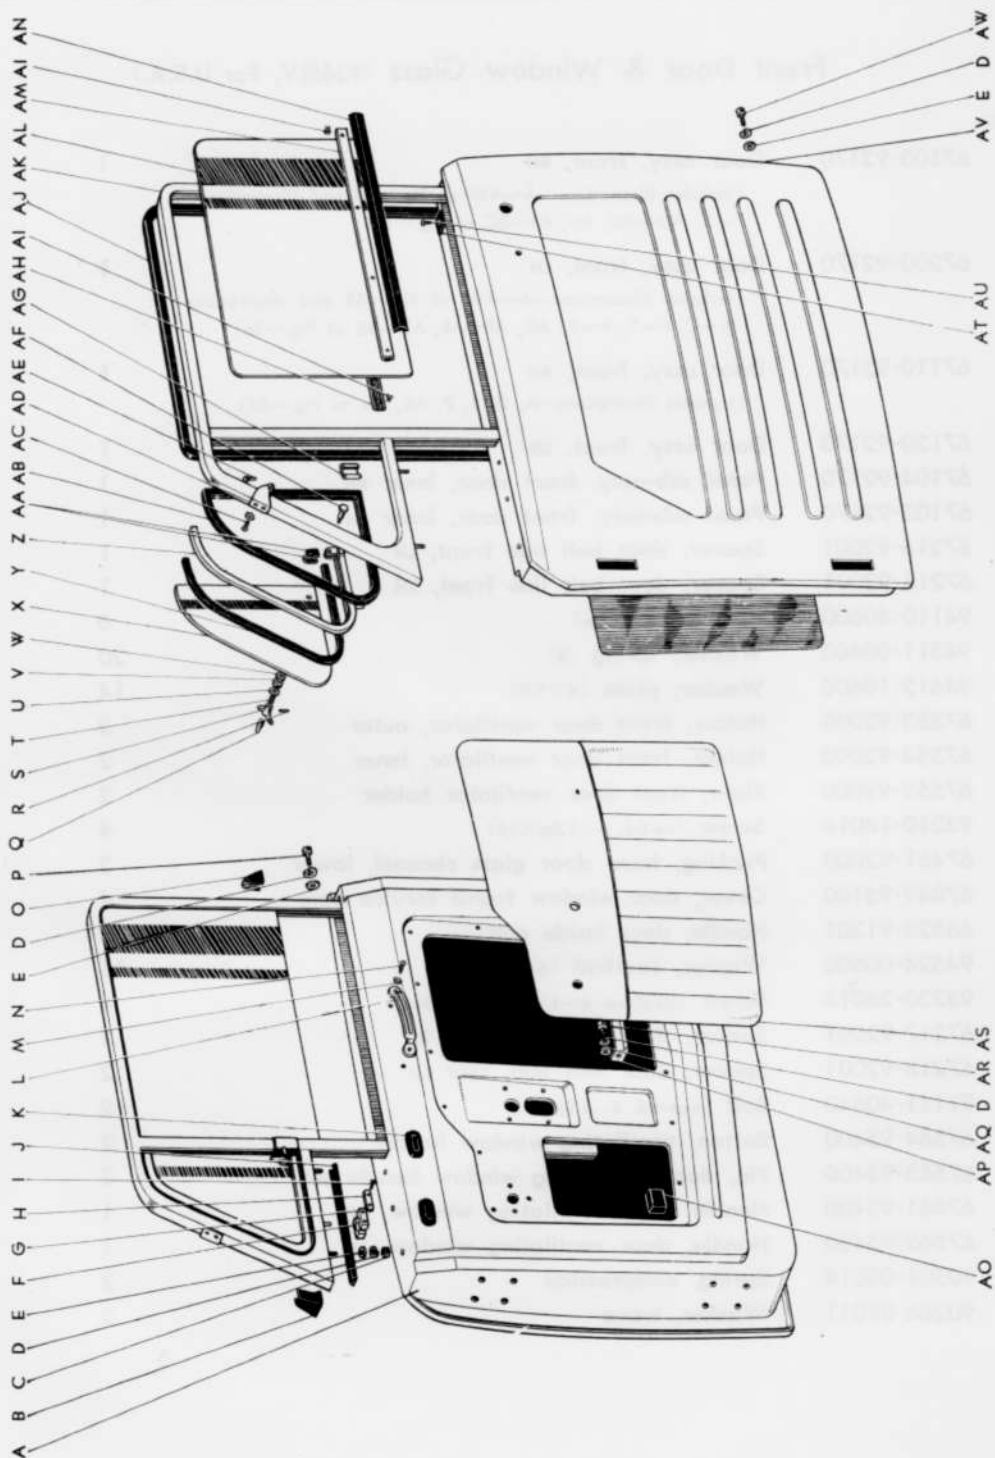


B 1285

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FIG 55				
V	90013-70001	Nut, hexagon	2	LV
W	90013-80002	Washer	2	LV
X	68121-92170	Glass, front door ventilator	2	LV
Y	68183-92000	Rubber, front door glass	2	45V LV
Z	67501-92001	Frame sub-assy, front door ventilator, RH	1	LV
	67502-92001	Frame sub-assy, front door ventilator, LH	1	LV
AA	67553-92001	Pad, front vent window handle shaft plate	4	LV
AB	68181-92000	Rubber, front ventilator window glass hold, RH	1	45V LV
	68182-92000	Rubber, front ventilator window glass hold, LH	1	45V LV
AC	93220-14008	Screw fl-hd 4 075p 8)	8	
	94524-00400	Washer, toothed (4)	8	
AD	67542-92000	Pivot, front door ventilator, upper LH	1	45V LV
	67541-92000	Pivot, front door ventilator, upper RH	1	45V LV
AE	95111-00405	Rivet	2	
AF	69994-91336	Shaft, front vent window handle	2	LV
AG	67471-92001	Plate, front vent window handle lock	2	LV
AH	67213-92000	Proof, front door glass oscillate	2	45V LV
AI	90053-60501	Clip, spring	44	45V LV
AJ	68141-92001	Run, front door glass, short	2	45V LV
	68142-92000	Run, front door glass, long	2	45V LV
	67420-92001	Channel assy, front door glass, LH	1	LV
(includes illustrations F~I Q~AG AK of Fig -55				
	67410-92001	Channel assy, front door glass, RH	1	LV
AK	67402-92001	Channel sub-assy, front door glass, LH	1	LV
(includes illustrations F~I Z~AE of Fig 55				
	67401-92001	Channel sub-assy, front door glass, RH	1	LV
AL	68111-92170	Glass, front door	2	LV
AM	67212-92001	Plate, front door glass cleaner	2	45V LV
AN	67211-92000	Rubber, front door glass cleaner	2	45V LV
AO	67219-92000	Rubber, door open stopper silencer	2	45V LV
AP	67109-92000	Stopper sub-assy, front door glass	2	45V LV
AQ	94613-10600	Washer, plate (6 10	8	
AR	91111-40616	Bolt (hex-hd 6 10p 16)	4	
AS	67610-92170	Board assy, front door trim, RH	1	LV
	67620-92170	Board assy, front door trim, LH	1	LV
AT	68172-92000	Rubber, door glass down stopper	2	45V LV

BODY

FIG.—55 FRONT DOOR & WINDOW GLASS (FJ45LV, For U.S.A.)

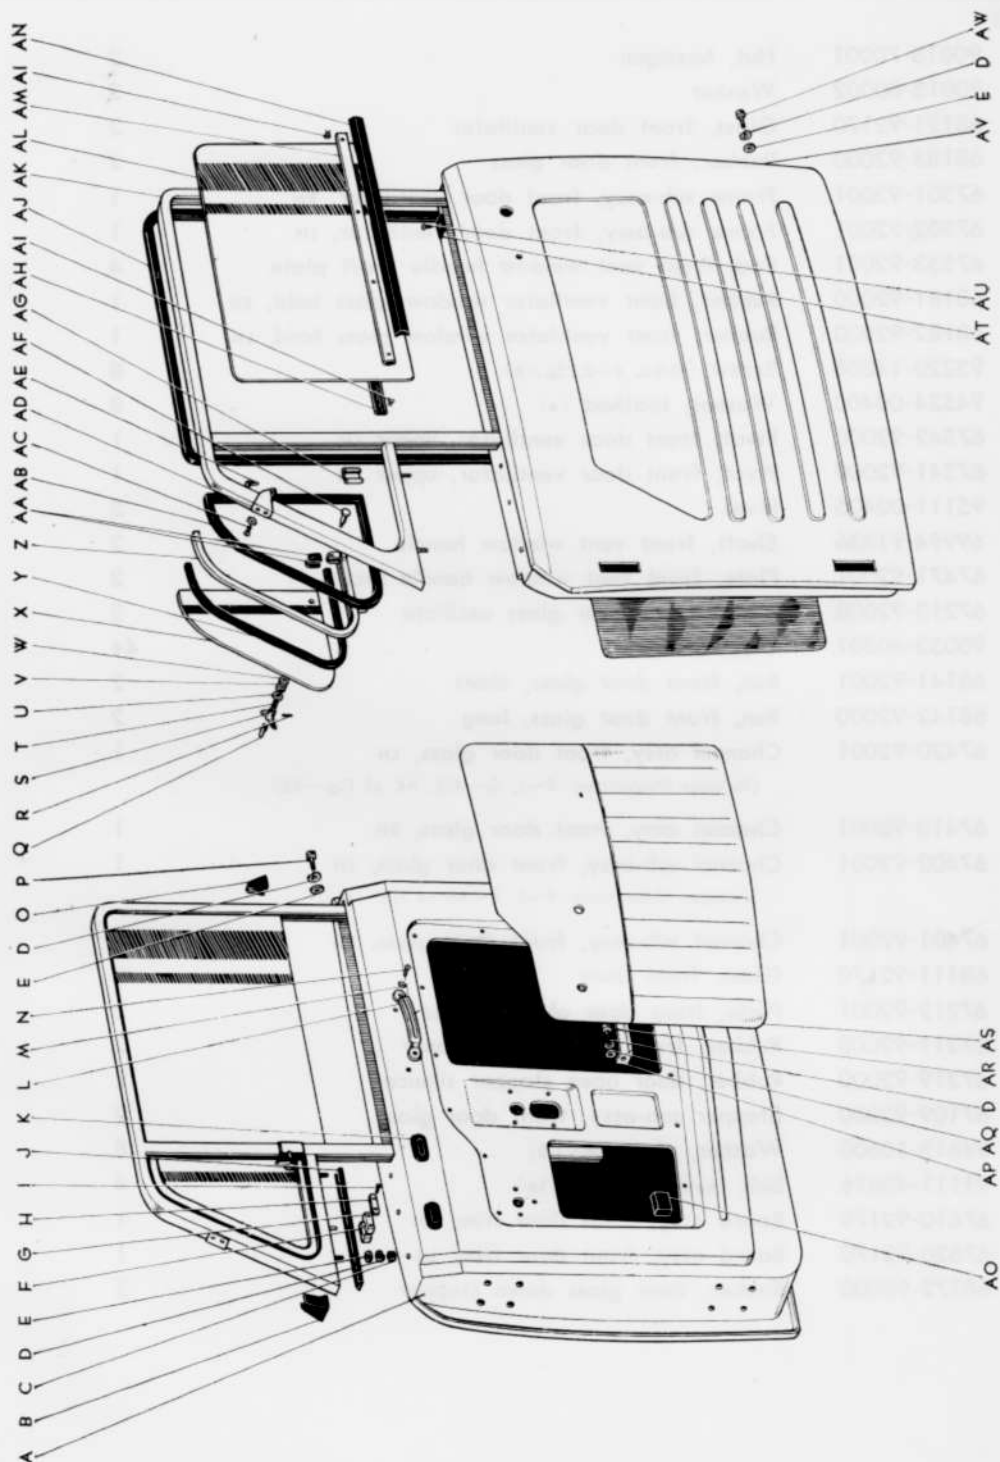


B 1285

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FIG 55				
AU	93530-14020	Screw, tapping	4	
AV	67112-92000	Panel, front door outer, LH	1	45V LV
	67111-92000	Panel, front door outer, RH	1	45V LV
AW	91111-40610	Bolt (hex-hd 6 10p 10)	4	

BODY

FIG. 56 FRONT DOOR LOCK & WINDOW REGULATOR (FJ45V, 451V)

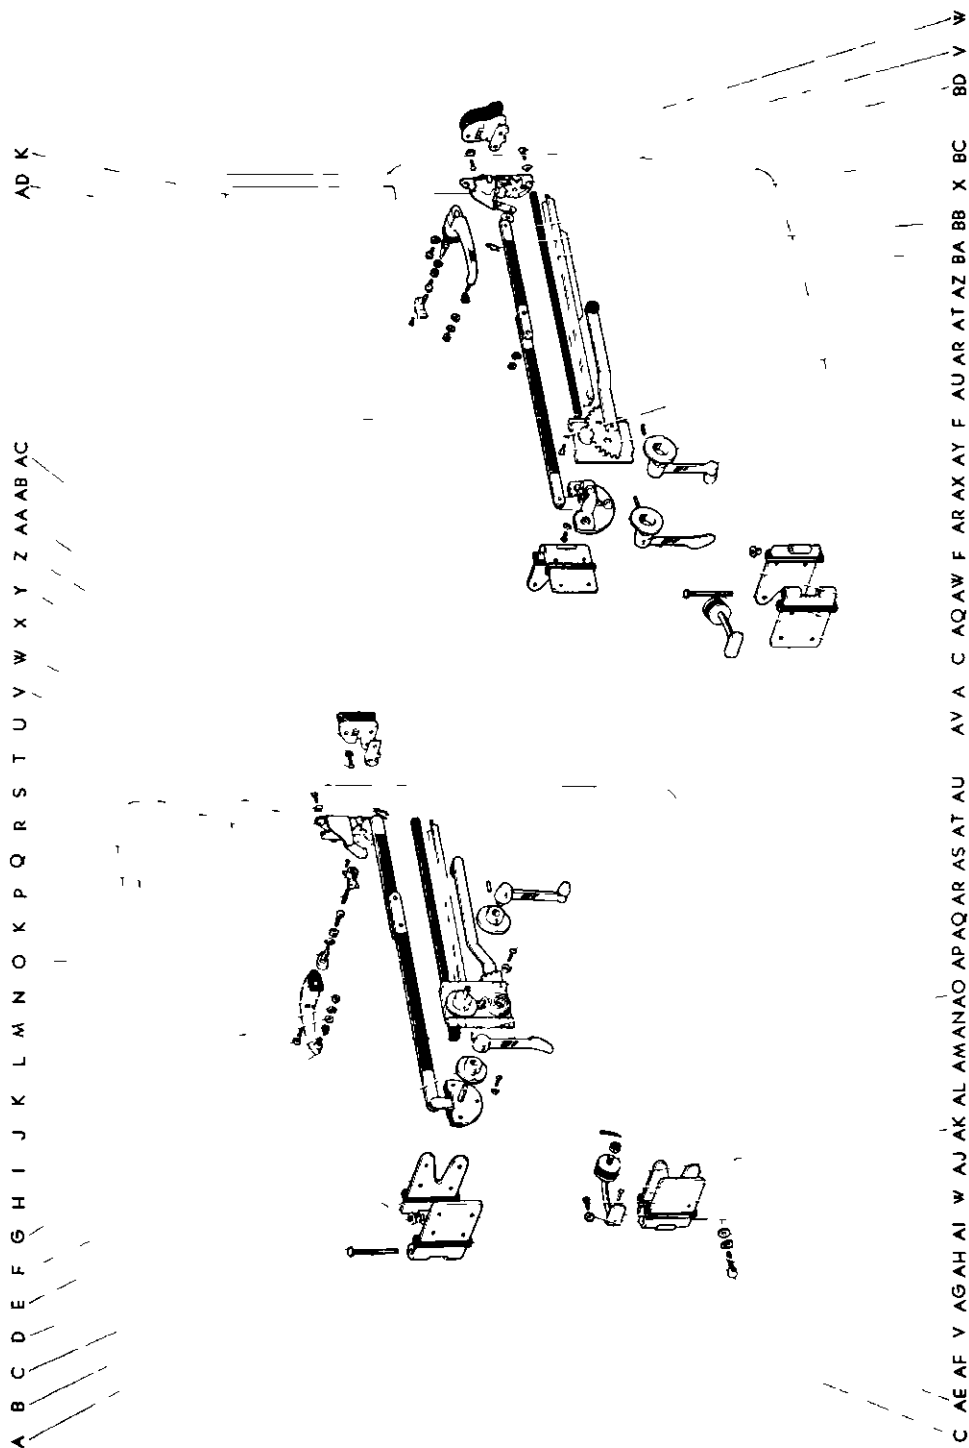


B 1295

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Front Door Lock & Window Regulator (FJ45V, 45LV)				
(FIG 56)				
A	68713-92000	Pin, front door hinge	4	45V LV
B	68712-39610	Bushing, door hinge	8	45V LV
C	68714-92000	Cover, door hinge	8	45V LV
D	68711-92000	Hinge, front door, upper	2	45V LV
E	69610-92000	Control assy, front door lock remote, RH	1	45V
	69630-92100	Control assy, front door lock remote, RH	1	LV
	69630-92170	Control assy, front door lock remote, RH (For U.S.A)	1	LV
F	65602-91301	Escutcheon sub-assy, door regulator handle	4	45V LV
	65460-91301	Handle assy, door outside, RH (w key) includes Illustrations G 1 N~T of Fig 561	1	45V
	69210-92100	Handle assy, door lock outside, RH (w key	1	LV
	65470-91301	Handle assy, door outside, LH	1	45V
	69220-92100	Handle assy, door lock outside, LH (w key)	1	LV
G	65406-91301	Handle sub-assy, door lock outside, RH	1	45V LV
	65407-91301	Handle sub-assy, door lock outside, LH	1	45V LV
H	65478-91301	Pad, door outside handle small	2	45V LV
I	65405-91301	Key sub-assy, door lock outside handle	1	45V LV
J	94613-10600	Washer, plate (6 10	2	
K	94511-00600	Washer, spring (6)	10	
L	94110-40600	Nut (hex. 6 10p)	2	
M	65477-91301	Pad, door lock outside handle	2	45V LV
N	65473-91301	Holder, door outside handle key	1	45V LV
O	65471-91301	Button, door outside handle push, RH	1	45V LV
	65472-91301	Button, door outside handle push, LH	1	45V LV
P	94120-40600	Nut (hex 6-10p)	2	
Q	91111-40660	Bolt (hex-hd 6 10p 60	2	
R	65475-91301	Spring, door lock outside handle	2	45V LV
S	65499-91301	Seat, door outside handle spring	2	45V LV
T	93220-13005	Screw (fl-hd 3 06p 5)	8	
U	65410-91301	Lock assy, door, RH	1	45V LV
V	94524-00600	Washer, toothed (6)	10	
W	93220-16016	Screw (fl-hd 6-10p 16)	12	
X	65582-91301	Pin, door lock remote control connect	2	45V LV
Y	93220-18025	Screw (fl-hd 8 125p 25)	6	

BODY

FIG.- 56 FRONT DOOR LOCK & WINDOW REGULATOR (FJ45V, 45LV)

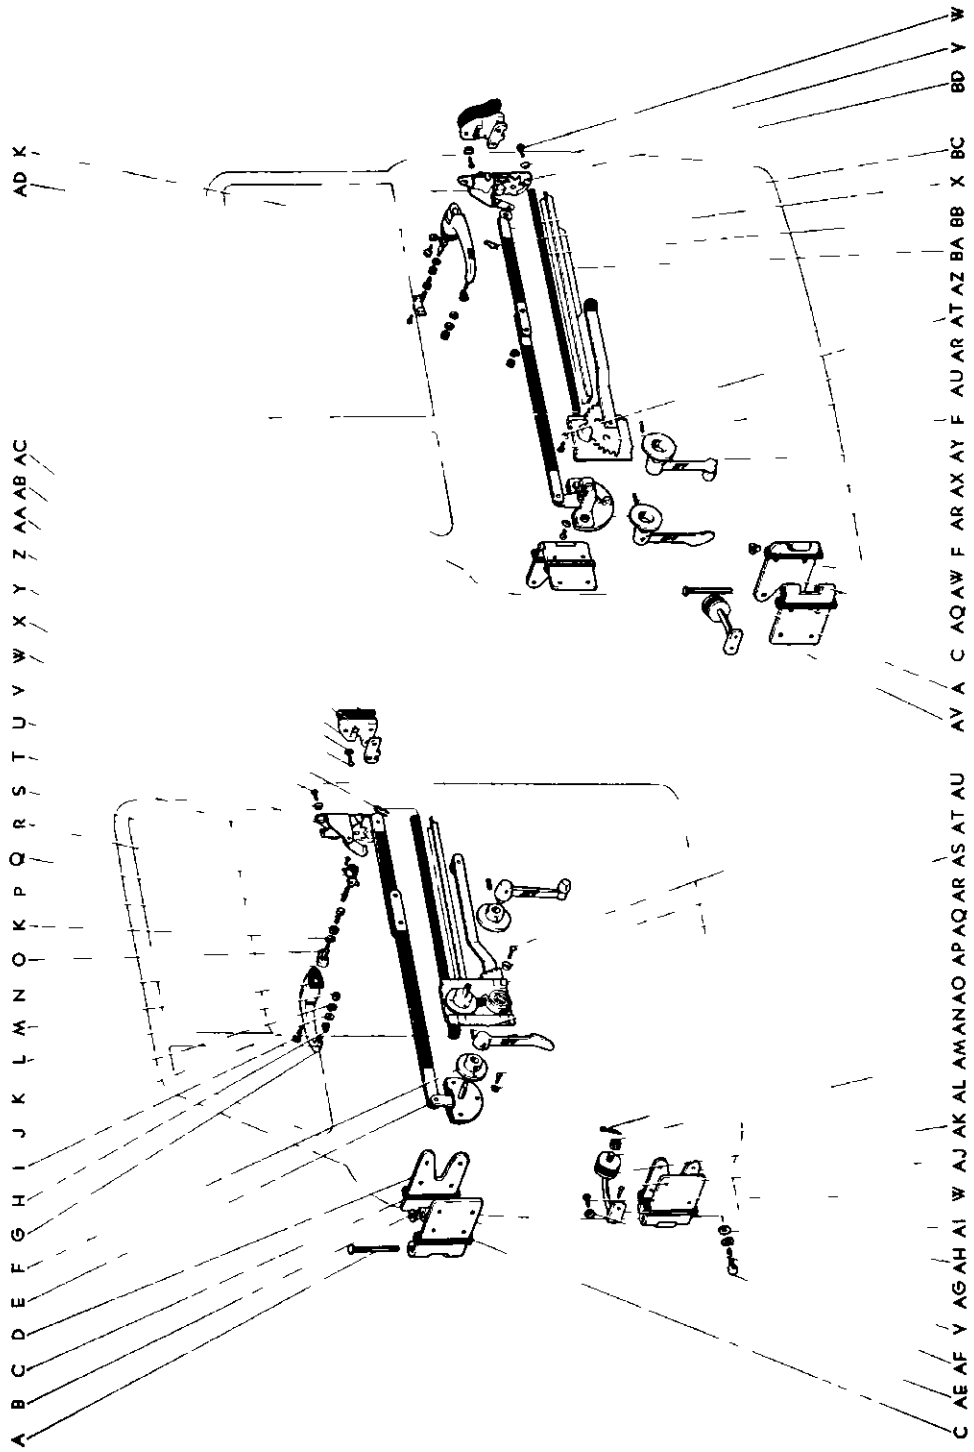


B 1295

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 56)				
Z	94524-00800	Washer, toothed (8)	14	
AA	65401-91301	Plate sub-assy, door lock striker, RH	1	45V LV
	65402-91301	Plate sub-assy, door lock striker, LH	1	45V LV
AB	65455-91306	Plate, door lock striker, RH	1	45V LV
	65456-91306	Plate, door lock striker, LH	1	45V LV
AC	65453-91301	Packing, door lock striker plate	2	45V LV
	65454-91201	Bracket, door striker, RH (thk. 1.6)	0~2	45V LV
	65455-91201	Bracket, door striker, LH (thk. 1.0)		
Optional specifications				
AD	93210-16020	Screw (rd-hd 6-10p 20)	2	
	68702-92000	Hinge sub-assy, front door, upper LH (includes illustrations A, B, D AE of Fig 56)	1	45V LV
	68701-92000	Hinge sub-assy, front door, upper RH	1	45V LV
AE	68712-92000	Hinge, front door upper, female	2	45V LV
AF	91111-40816	Bolt (hex-hd 8 1.25p 16)	32	
AG	94511-00800	Washer, spring (8)	32	
AH	94611-10800	Washer, plate (8 1.6)	32	
AI	68901-92000	Stopper sub-assy, door open (includes illustrations—AJ~AN of Fig 56)	2	45V LV
AJ	95112-00516	Rivet	4	
AK	68914-92000	Rubber, door open stopper	2	45V LV
AL	68913-92000	Washer, door open stopper rubber	4	45V LV
AM	94110-40800	Nut (hex 8-1.25p)	4	
AN	95381-02018	Pin, cotter	2	
AO	94523-00500	Washer, toothed (5)	6	
AP	93210-15016	Screw (rd-hd 5 0.9p 16)	6	
AQ	65521-91101	Handle, door inside	2	45V LV
AR	65522-91101	Pin, door inside handle	4	45V LV
AS	69710-92000	Regulator assy, door window, RH	1	45V LV
AT	94523-00600	Washer, toothed (6)	8	
AU	93210-16016	Screw (rd-hd 6 1.0p 16)	8	
	68703-92000	Hinge sub-assy, front door, lower RH (includes illustrations A, B, AV, AW of Fig 56)	1	45V LV
	68704-92000	Hinge sub-assy, front door, lower LH	1	45V LV
AV	68732-92000	Hinge, front door, lower female	2	45V LV
AW	68731-92000	Hinge, front door, lower male	2	45V LV
AX	69620-92000	Control assy, front door lock remote, LH	1	45V
	69640-92100	Control assy, front door lock remote, LH	1	LV
	69640-92170	Control assy, front door lock remote, LH (For U.S.A.)	1	LV

BODY

FIG. 56 FRONT DOOR LOCK & WINDOW REGULATOR (FJ45V, 45LV)

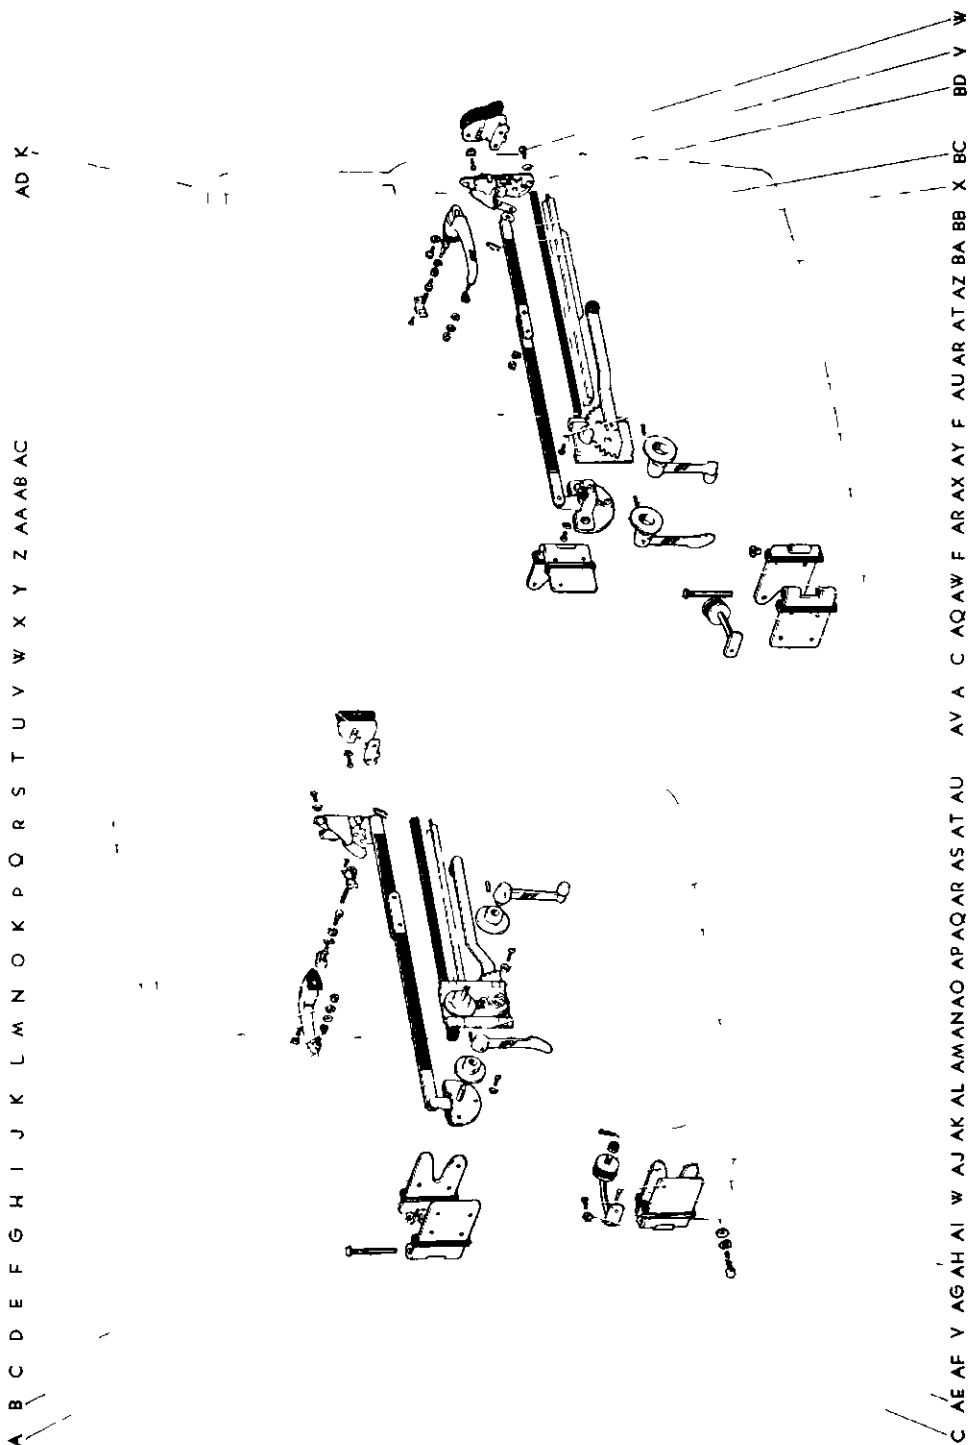


B 1295

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.56				
AY	65601-91101	Handle sub-assy, door regulator	2	45\ LV
AZ	69720-92000	Regulator assy, door window, LH	1	45\ LV
BA	65604-91311	Holder sub-assy, door glass, LH	1	45\ LV
	65603-91311	Holder sub-assy, door glass, RH	1	45\ LV
BB	68171-92000	Rubber, front door window glass skirt	2	45\ LV
BC	69601-91301	Control sub-assy, door lock remote	2	45\ LV
BD	65420-91301	Lock assy, door, LH	1	45\ LV

BODY

FIG.—57 REAR DOOR & WINDOW GLASS (FJ45V, 45LV)

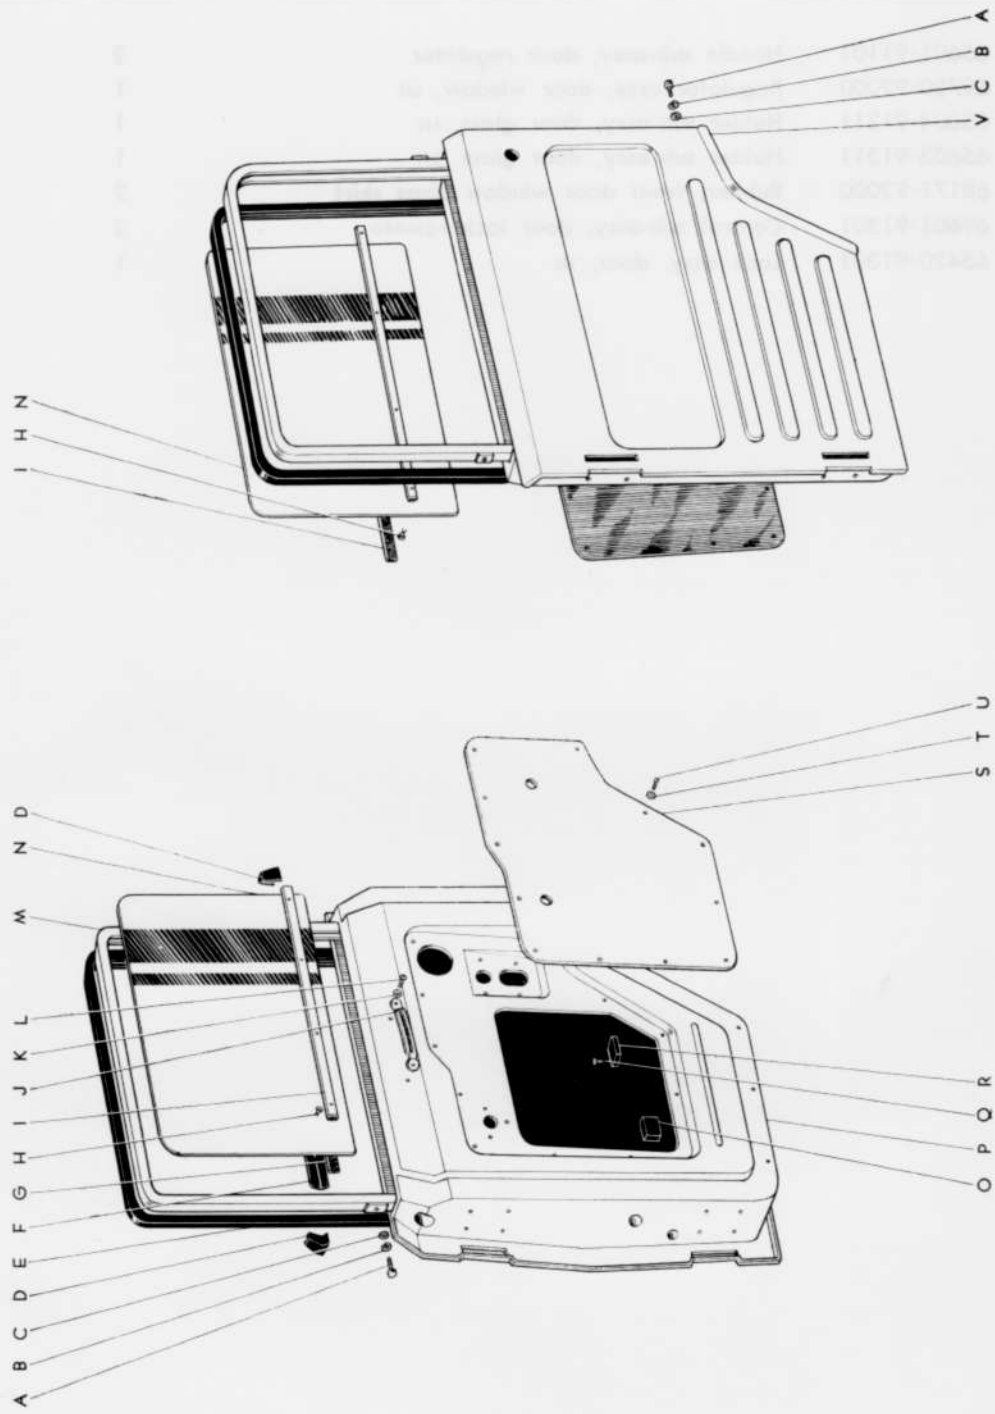


B 1296

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Door & Window Glass (FJ45V, 45LV)				
(FIG 57)				
	67300-92000	Door assy, rear, RH (includes illustrations A~V of Fig 57 and illustrations A ~U, AA, AE~BA of Fig 58)	1	45V LV
	67300-92170	Door assy, rear, RH (For U.S.A.)	1	LV
	67400-92000	Door assy, rear, LH (includes illustrations A~V of Fig 57 and illustrations—A~Q, S~U AA, AB, AE~BA of Fig 58)	1	45V LV
	67400-92170	Door assy, rear, LH (For U.S.A.)	1	LV
	67130-92000	Door sub-assy, rear, RH (includes illustrations—A~C, M, P, V of Fig 57)	1	45V LV
	67130-92170	Door sub-assy, rear, RH (For U.S.A.)	1	LV
	67140-92000	Door sub-assy, rear, LH	1	45V LV
	67140-92170	Door sub-assy, rear, LH (For U.S.A.)	1	LV
A	91111-40610	Bolt (hex-hd 6 10p 10)	8	
B	94511-00600	Washer, spring (6)	14	
C	94613-10600	Washer, plate (6 10)	10	
D	67217-92001	Spacer, door belt line, rear RH	2	45V LV
	67218-92001	Spacer, door belt line, rear LH	2	45V LV
E	68151-92000	Run, rear door glass	2	45V LV
F	67231-92000	Rubber, rear door glass cleaner	2	45V LV
G	67232-92000	Plate, rear door glass cleaner	2	45V LV
H	90053-60501	Clip, spring	50	45V LV
I	67233-92000	Proof, rear door glass oscillate	2	45V LV
J	65523-91301	Handle, door inside pull	2	45V LV
K	94524-00600	Washer, toothed (6)	22	
L	93230-26016	Screw (oval-hd 6 10p 16, cr-pltd)	4	
M	67403-92001	Channel sub-assy, rear door glass	2	45V LV
N	68113-92000	Glass, rear door	2	45V LV
	68113-92170	Glass, rear door (For U.S.A.)	2	LV
O	67219-92000	Rubber, door open stopper silencer	2	45V LV
P	67014-92000	Panel sub-assy, rear door inner, RH	1	45V LV
	67014-92170	Panel sub-assy, rear door inner, RH (For U.S.A.)	1	LV
	67015-92000	Panel sub-assy, rear door inner, LH	1	45V LV
	67015-92170	Panel sub-assy, rear door inner, LH (For U.S.A.)	1	LV

BODY

FIG.—57 REAR DOOR & WINDOW GLASS (FJ45V, 45LV)

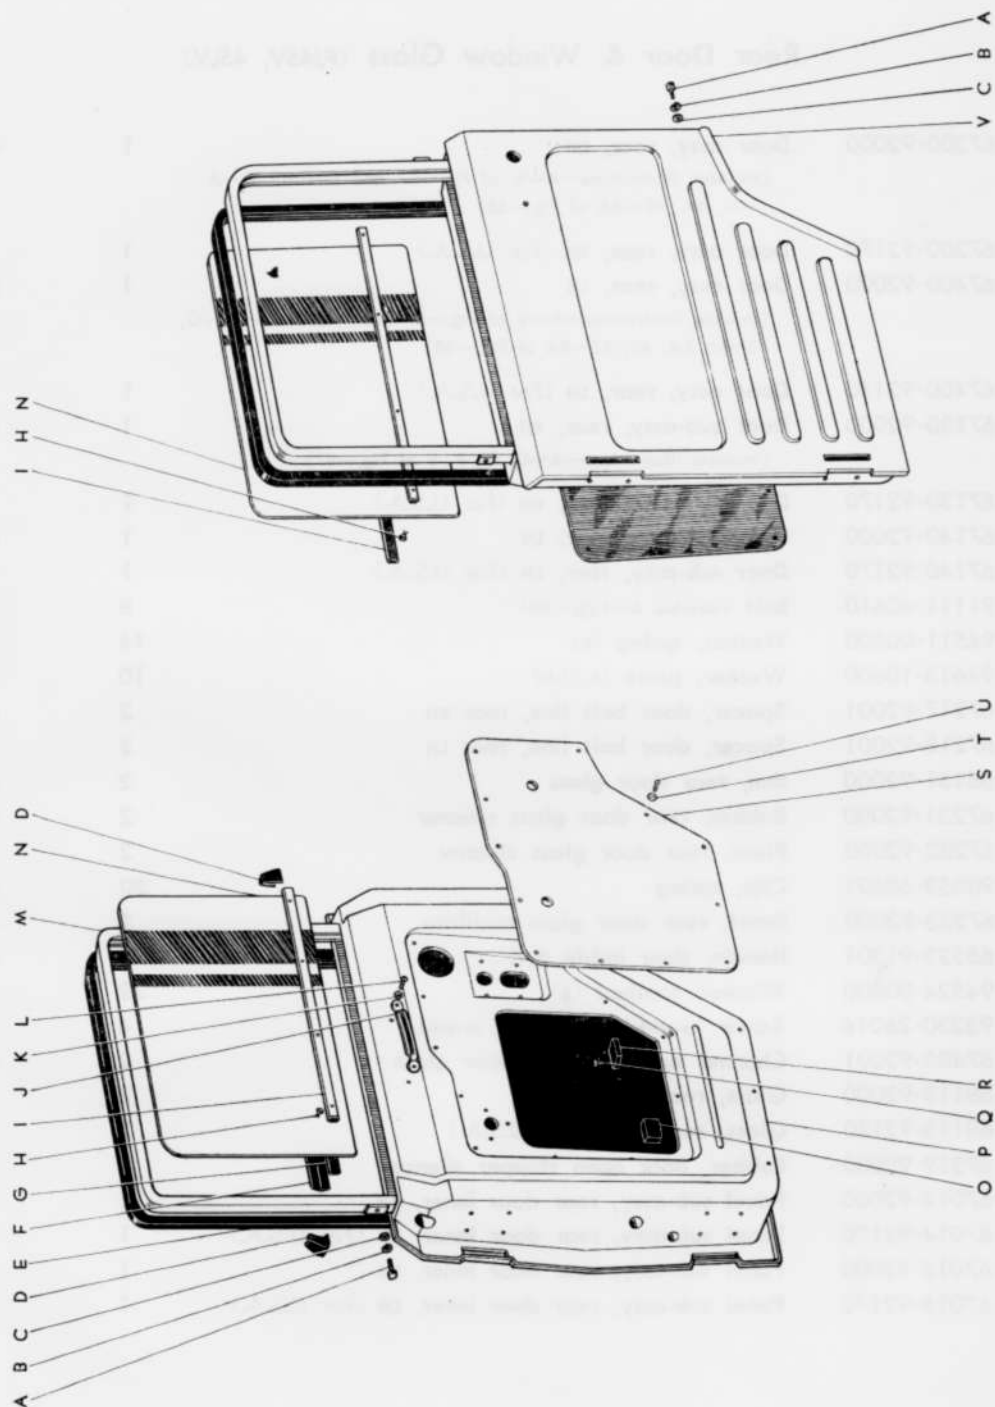

B 1296

Toyota Land Cruiser


239

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 57)				
Q	93530-14020	Screw, tapping	4	
R	68172-92000	Rubber, door glass down stopper	2	45V LV
S	67621-92000	Board, rear door trim, RH	1	45V LV
	67630-92170	Board assy, rear door trim, RH (For U.S.A.)	1	LV
	67622-92000	Board, rear door trim, LH	1	45V LV
	67640-92170	Board assy, rear door trim, LH (For U.S.A.)	1	LV
T	90207-05003	Washer, rosette (Excludes U.S.A.)	26	45V LV
U	93530-24014	Screw, tapping (Excludes U.S.A.)	26	
V	67122-92000	Panel, rear door outer, LH	1	45V LV
	67121-92000	Panel, rear door outer, RH	1	45V LV

BODY

Donated by Dominic Smith cruisercult.com

FIG. 58 REAR DOOR LOCK & WINDOW REGULATOR (FJ45V, 45LV)

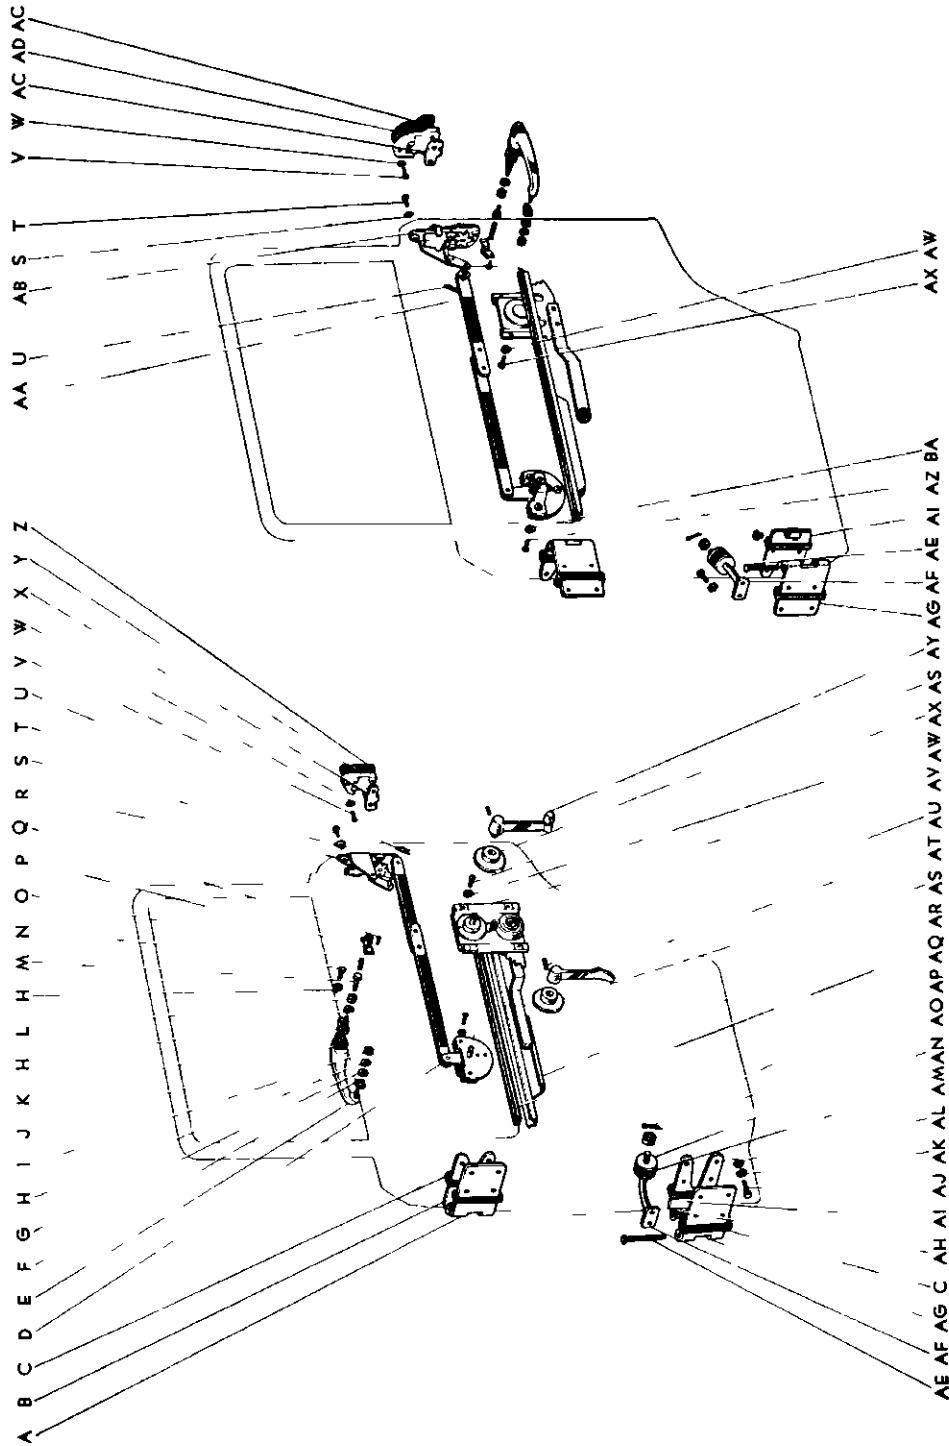

B 1297


Toyota Land Cruiser

241

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Door Lock & Window Regulator (FJ45V, 45LV)				
(FIG 58)				
A	68752-92000	Hinge, rear door female, upper	2	45V LV
	68706-92000	Hinge sub-assy, rear door, upper, LH (includes illustrations - A, B, AE, AH of Fig 58)	1	45V LV
	68705-92000	Hinge sub-assy, rear door, upper, RH	1	45V LV
B	68751-92000	Hinge, rear door male, upper	2	45V LV
C	68714-92000	Cover, door hinge	8	45V LV
D	69650-92000	Control assy, rear door lock remote, RH	1	45V LV
	69650-92170	Control assy, rear door lock remote, RH (For U.S.A.)	1	LV
	69660-92000	Control assy, rear door lock remote, LH	1	45V LV
	69660-92170	Control assy, rear door lock remote, LH (For U.S.A.)	1	LV
	69210-92100	Handle assy, door outside, RH (includes illustrations E, H, K~M, O~Q of Fig -58)	1	45V LV
	69470-91301	Handle assy, door outside, LH	1	45V LV
E	65406-91301	Handle sub-assy, door outside, RH	1	45V LV
	65407-91301	Handle sub-assy, door outside, LH	1	45V LV
F	65478-91301	Pad, door outside handle small	2	45V LV
G	94613-10600	Washer, plate (6x10)	10	
H	94511-00600	Washer, spring (6)	14	
I	94110-40600	Nut (hex 6 10p)	2	
J	65477-91301	Pad, door outside handle	2	45V LV
K	65471-91301	Button, door outside handle push, RH	1	45V LV
	65472-91301	Button, door outside handle push, LH	1	45V LV
L	94120-40600	Nut (hex 6 10p)	2	
M	91111-40660	Bolt (hex-hd. 6 10p 60)	2	
N	93210-16020	Screw (rd hd 6 1.0p x 20)	2	
O	65475-91301	Spring, door outside handle	1	45V LV
P	65499-91301	Seat, door outside handle spring	2	45V LV
Q	93220-13005	Screw (fl-hd. 3 0.6p x 5)	8	
R	65410-91301	Lock assy, door, RH	1	45V LV
S	94524-00600	Washer, toothed (6)	22	
T	93220-16016	Screw (fl-hd 6-10p x 16)	14	
U	65582-91301	Pin, door lock remote control connect	2	45V LV

BODY

FIG. 58 REAR DOOR LOCK & WINDOW REGULATOR (FJ45V, 45LV)

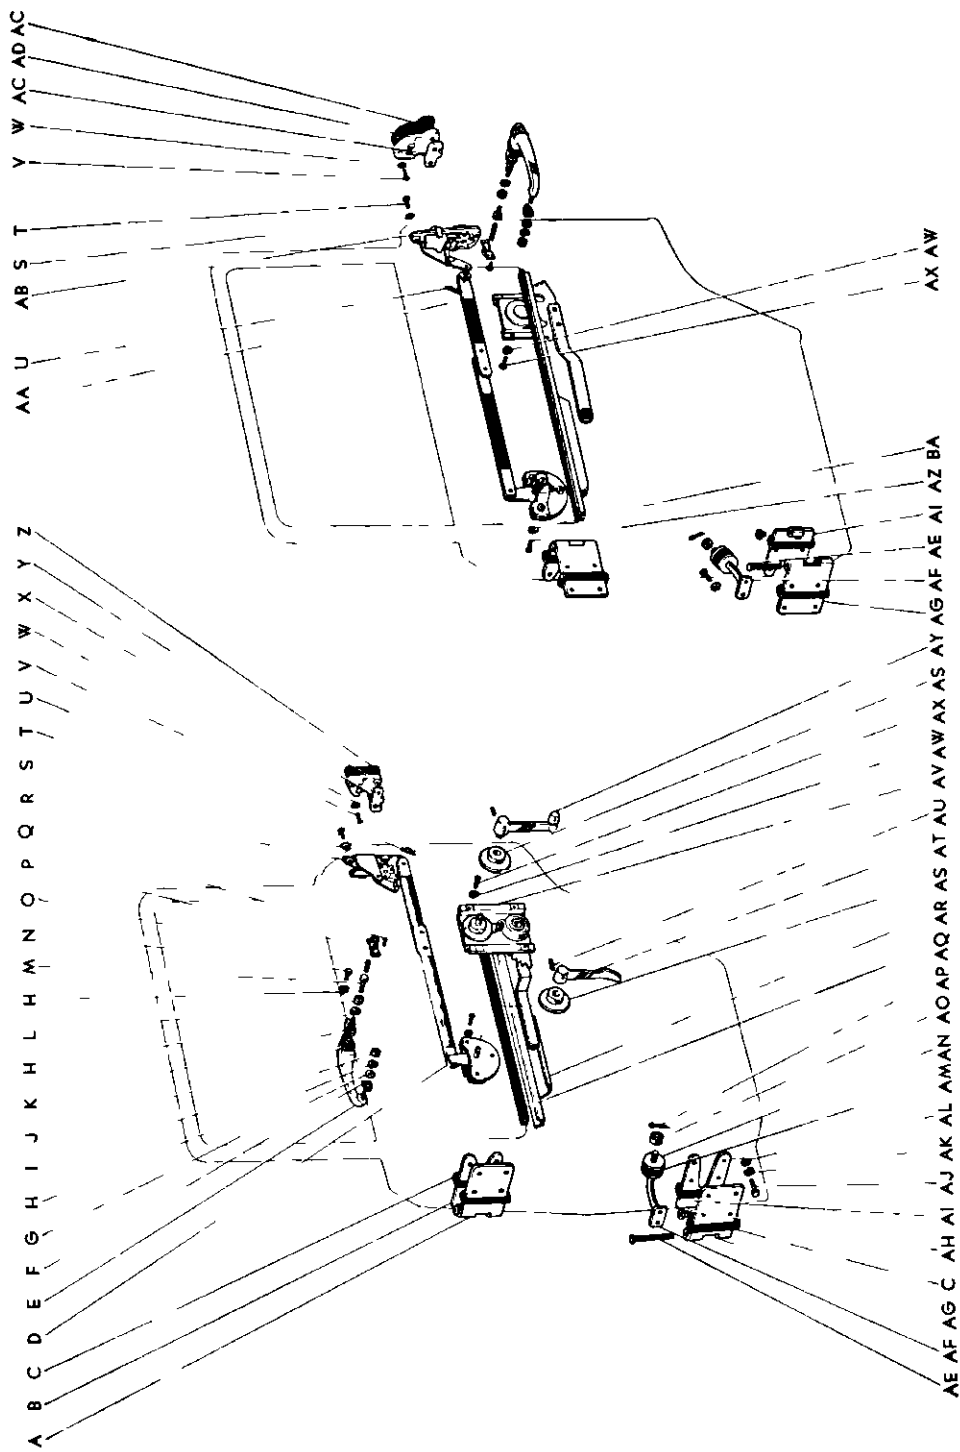

B 1297


Toyota Land Cruiser

243

ILLUSTRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 58)				
V	93220-18025	Screw (fl-hd 8 1.25p 25)	6	
W	94524-00800	Washer, toothed (8)	6	
X	65455-91306	Plate, door lock striker, RH	1	45V LV
Y	65401-91301	Stopper sub-assy, door down, RH	1	45V LV
Z	65453-91301	Packing, door lock striker plate	2	45V LV
AA	69606-92000	Plate sub-assy, door lock remote control connect	2	45V LV
AB	65420-91301	Lock assy, door, LH	1	45V LV
AC	65456-91306	Plate, door lock striker, LH	1	45V LV
AD	65402-91301	Stopper sub-assy, door lock striker, LH	1	45V LV
AE	68713-92000	Pin, front door hinge	4	45V LV
AF	68901-92000	Stopper sub-assy, door open	2	45V LV
(includes illustrations—AM~AP of Fig 58)				
AG	68722-92000	Hinge, rear door female, lower	2	45V LV
AH	68712-39610	Bushing, door hinge	8	45V LV
	68707-92000	Hinge sub-assy, rear door, lower RH	1	45V LV
(includes illustrations AE, AG~AI of Fig 58)				
	68708-92000	Hinge sub-assy, rear door, lower LH	1	45V LV
AI	68771-92000	Hinge, rear door male, lower	2	45V LV
AJ	91111-40816	Bolt (hex-hd 8 1.25p 16)	32	
AK	94511-00800	Washer, spring (8)	32	
AL	94612-10800	Washer, plate (8 x 1.6)	32	
AM	68914-92000	Stopper rubber, door open	2	45V LV
AN	68913-92000	Washer, door open stopper rubber	4	45V LV
AO	94110-40800	Nut (hex 8 1.25p)	4	
AP	95381-02018	Pin, cotter	2	
AQ	68171-92000	Rubber (For rear door window glass skirt)	2	45V LV
AR	65603-91311	Holder sub-assy, door glass, RH	1	45V LV
AS	65602-91301	Escutcheon sub-assy, door regulator handle	4	45V LV
AT	65521-91101	Handle, door inside	2	45V LV
AU	65522-91101	Pin, door inside handle	4	45V LV
AV	69710-92000	Regulator assy, door window, RH	1	45V LV
AW	94523-00600	Washer, toothed (6)	8	
AX	93210-16010	Screw (fl-hd 6 1.0p 10)	8	
AY	65601-91101	Handle sub-assy, door regulator	2	45V LV
AZ	93210-15016	Screw (rd-hd 5 0.9p 16)	6	
BA	94523-00500	Washer, toothed (5)	6	

BODY

FIG.—59 REAR GATE & GLASS (FJ45V, 45LV)

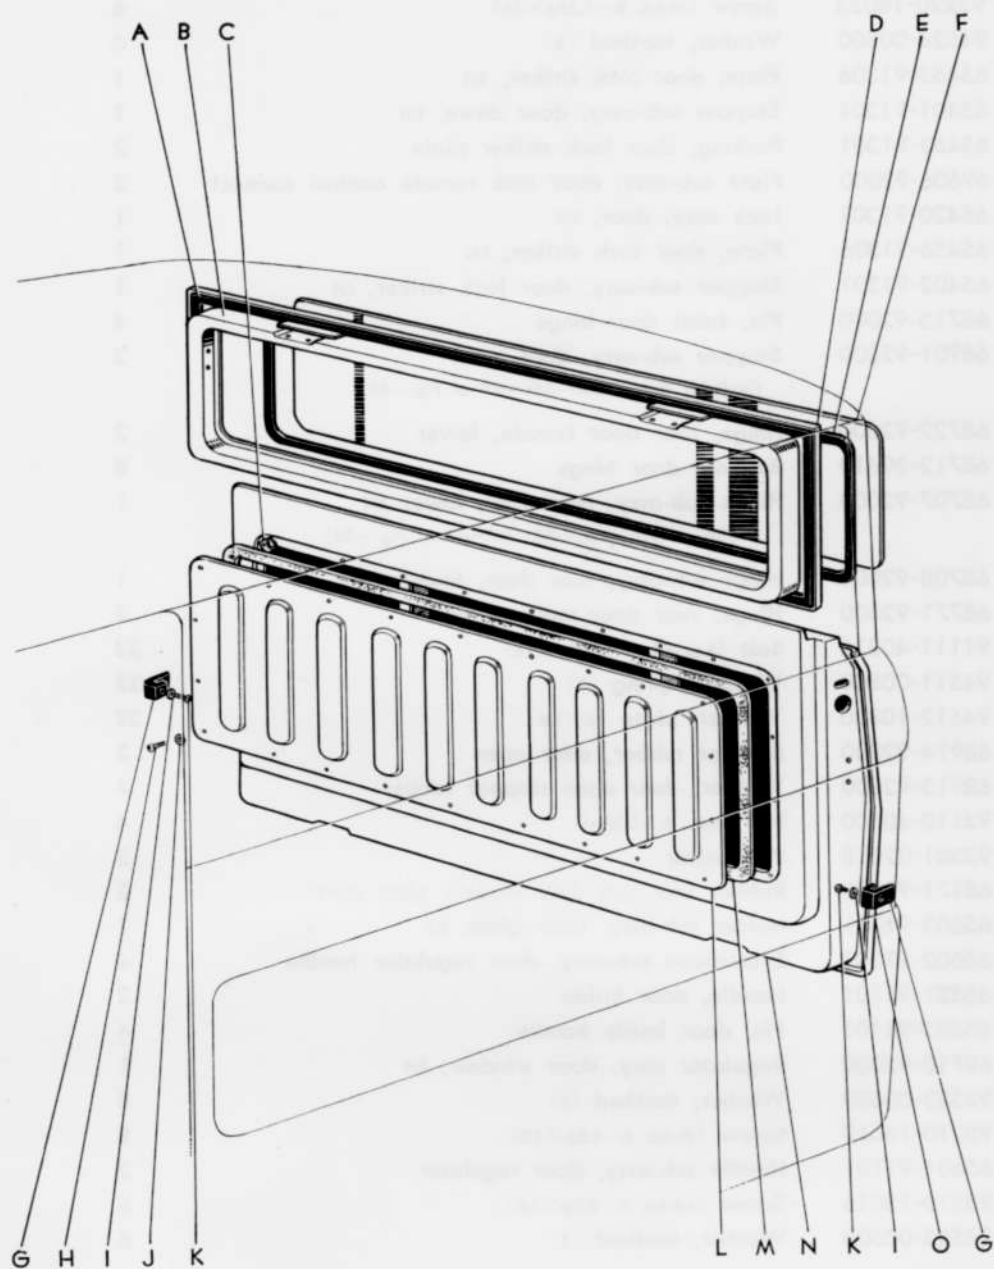


B 1298

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Gate & Glass (FJ45V, 45LV)				
(FIG 59)				
	67600-92000	Gate assy, lift (includes illustrations A, B, D~F of Fig 59 and illustrations - F, Q~AB, AK of Fig 60)	1	45V LV
	67600-92170	Gate assy, lift (For U.S.A.)	1	LV
	67900-92100	Gate assy, tail (includes illustrations C, G~O of Fig 59 and illustrations D, F~P, V, AC~AJ, AL, AP, AR~BE of Fig 60)	1	45V LV
A	68452-92000	Weatherstrip, lift gate	1	45V LV
	68453-92000	Weatherstrip, lift gate, lower	1	45V LV
	67950-92000	Gate assy, lift (includes illustrations B, D of Fig 59)	1	45V LV
	67950-92170	Gate assy, lift (For U.S.A.)	1	LV
B	67906-92000	Gate sub-assy, lift inner	1	45V LV
	67906-92170	Gate sub-assy, lift inner (For U.S.A.)	1	LV
C	67924-92000	Nut, speed	22	45V LV
D	67951-92000	Panel, lift gate outer	1	45V LV
E	67942-92000	Rubber, lift gate window	1	45V LV
F	67941-92000	Glass, lift gate window	1	45V LV
	67941-92170	Glass, lift gate window (For U.S.A.)	1	LV
G	67911-91105	Packing, tail gate supporter	2	45V LV
H	93540-14012	Screw, tapping	22	
I	94612-10400	Washer, plate (4 × 0.6)	2	
J	94512-00400	Washer, spring (4)	22	
K	93210-14025	Screw (rd-hd. 4 - 0.75p × 25)	2	
L	67923-92000	Cover, tail gate inner panel	1	45V LV
M	67925-92000	Packing, tail gate inner panel cover	1	45V LV
	67910-92100	Gate assy, tail (includes illustrations—N, O of Fig 59)	1	45V LV
N	67902-92000	Panel sub-assy, tail gate inner	1	45V LV
O	67901-92100	Panel sub-assy, tail gate outer	1	45V LV

BODY

FIG. 60 REAR GATE LOCK & HINGE (FJ45V, 45LV)

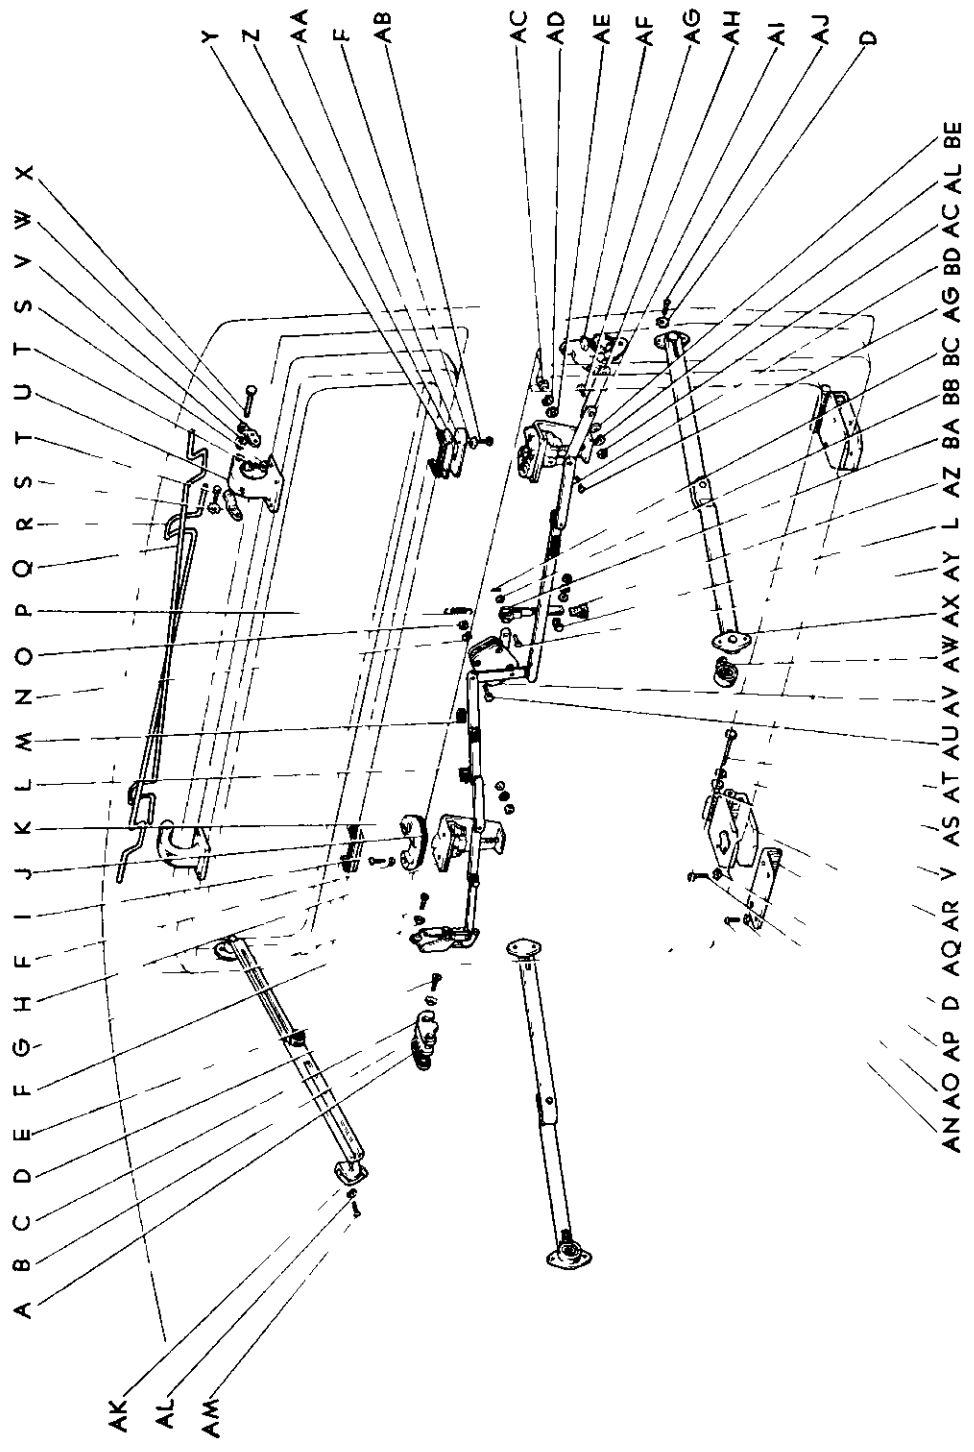


B 1299

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Rear Gate Lock & Hinge (FJ45V, 45LV)				
(FIG 60)				
A	69478-91105	Plate, tail gate lock striker	2	45V LV
	68311-92000	Liner, tail gate lock check (thk 2.3, 1.6)	0~2	45V LV
B	69428-91105	Striker, tail gate lock, RH	1	45V LV
	69429-91105	Striker, tail gate lock, LH	1	45V LV
C	69463-91105	Gear, tail gate lock striker, RH	1	45V LV
	69464-91105	Gear, tail gate lock striker, LH	1	45V LV
D	94524-00800	Washer, toothed (8)	24	
E	93220-18030	Screw (fl-hd 8 1.25p 30)	4	
F	94524-00600	Washer, toothed (6)	16	
G	93220-16016	Screw (fl-hd 6 1.0p 16)	6	
H	69350-91107	Lock assy, lift gate, RH	1	45V LV
	69360-91107	Lock assy, lift gate, LH	1	45V LV
I	93220-16020	Screw (fl-hd 6 1.0p 20)	4	
J	69488-91107	Seat, gate hold striker plate insert	2	45V LV
K	69480-91107	Insert assy, gate lock striker plate, RH	1	45V LV
	69490-91107	Insert assy, gate lock striker plate, LH	1	45V LV
L	76507-91105	Control sub-assy, gate lock remote	3	45V LV
	94110-40600	Nut (hex 6 1.0p)	3	
	94511-00600	Washer, spring (6)	3	
	94612-10600	Washer, plate (6 1.0)	3	
M	76528-91105	Silencer, gate remote control	4	45V LV
N	94512-00500	Washer, spring (5)	3	
O	94110-40500	Nut (hex 5 0.9p)	3	
P	68321-92000	Spring, tail gate lock lever back	1	45V LV
Q	64911-91107	Bar, lift gate torsion, RH	1	45V LV
R	64912-91107	Bar, lift gate torsion, LH	1	45V LV
S	94523-00800	Washer, toothed (8)	16	
T	91111-40816	Bolt (hex-hd 8 1.25p 16)	16	
U	68804-91107	Hinge sub-assy, lift gate	2	45V LV
includes illustrations V~X of Fig - 60)				
V	65328-91101	Bushing, nylon	8	45V LV
W	68881-91107	Bracket, lift gate hinge	4	45V LV
X	68892-91107	Pin, lift gate hinge	2	45V LV
Y	69485-91107	Seat, gate lock striker plate insert	2	45V LV
Z	69486-91107	Shim, gate lock striker plate, No 1 (thk 2.3	Optional specifications 0~2	45V LV
	69487-91107	Shim, gate lock striker plate, No 2 (thk 3.2)		

BODY

FIG. 60 REAR GATE LOCK & HINGE (FJ45V, 45LV)

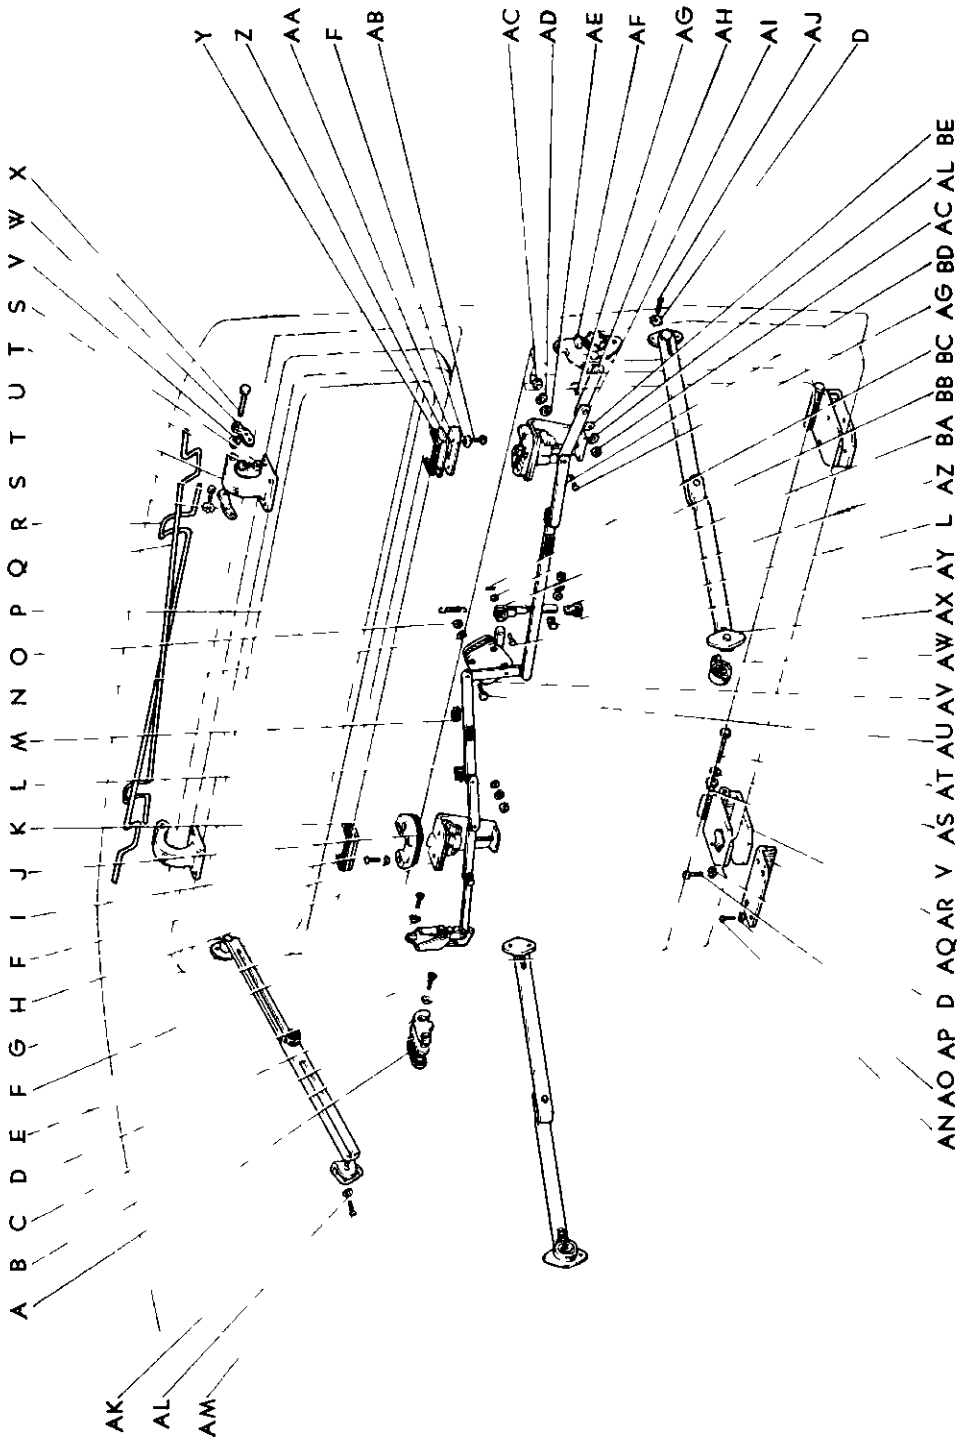


B 1299

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 60)				
AA	69489-91107	Insert, gate lock striker plate	2	45V LV
AB	93230-16016	Screw (oval-hd 6 10p 16)	4	
AC	94110-40600	Nut (hex 6 10p)	6	
AD	94512-00600	Washer, spring (6)	4	
AE	94613-10600	Washer, plate (6 10)	4	
AF	65420-91301	Lock assy, door, LH (For tail gate)	1	45V LV
	65410-91301	Lock assy, door, RH (For tail gate)	1	45V LV
AG	93210-16016	Screw (rd-hd 6 10p 16)	6	
AH	68431-92000	Rod, tail gate lock connect	2	45V LV
	68403-92001	Rod sub-assy, lift gate lock connect	2	45V LV
(includes illustrations—AC, AG~AI, AL, BE of Fig 60)				
AI	69669-91107	Rod, gate lock remote control	2	45V LV
AJ	93220-18025	Screw (fl-hd 8 1.25p 25)	8	
AK	68410-92000	Stay assy, tail gate, RH	1	45V LV
	68420-92000	Stay assy, tail gate, LH	1	45V LV
AL	94511-00600	Washer, spring (6)	12	
AM	91111-40612	Bolt (hex-hd 6 10p 12)	10	
AN	93540-14016	Screw, tapping	8	
AO	94524-00400	Washer, toothed (4	4	
AP	93220-18020	Screw (fl-hd. 8 1.25p 20)	12	
AQ	58375-92000	Cover, tail gate hinge	2	45V LV
AR	68805-91107	Hinge sub-assy, tail gate	2	45V LV
(includes illustrations V, AS, AT of Fig 60)				
AS	65329-91101	Ring, door hinge bushing	4	45V LV
AT	76333-91105	Pin, tail gate hinge	2	45V LV
AU	91111-40525	Bolt (hex-hd. 5 0.9p 25)	3	
	69660-91107	Control assy, gate lock remote	1	45V LV
(includes illustrations F, H~M, AV, AY~BD of Fig 60)				
AV	69607-91105	Lever sub-assy, gate lock control	1	45V LV
AVW	76631-91105	Spring, tail gate supporter	1	45V LV
AX	68990-91107	Supporter assy, tail gate, LH	1	45V LV
	68980-91107	Supporter assy, tail gate, RH	1	45V LV
AY	76525-91105	Pin, gate lock remote control rod	2	45V LV
AZ	69609-91105	Rod sub-assy, gate lock connect, No 2	1	45V LV
BA	69308-91107	Rod sub-assy, gate lock connect, No 1	1	45V LV
BB	76529-91105	Washer, gate lock remote control silencer	6	45V LV

FIG. 60 REAR GATE LOCK & HINGE (FJ45V, 45LV)

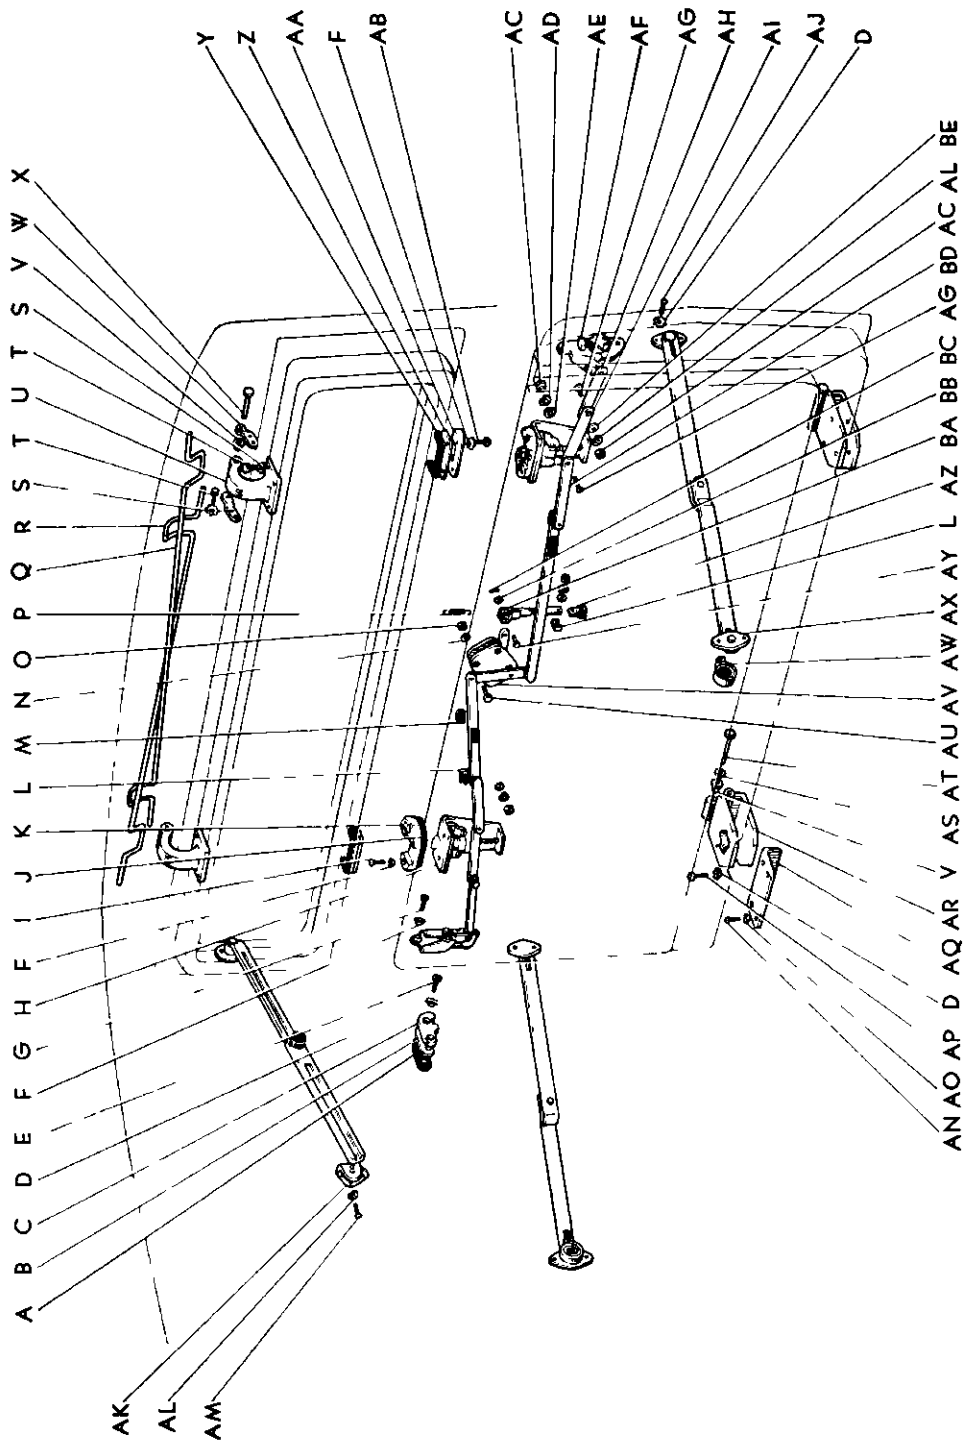


Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 60)				
BC	95381-01215	Pin, cotter	2	
	69660-92000	Control assy, gate lock remote (includes illustrations F, H~P, AC~AI, AL, AU, AV, AY~BE of Fig 60)	1	45V LV
BD	69669-92000	Rod, gate lock remote control	2	45V LV
BE	94612-10600	Washer, plate (6 x 10)	2	

BODY

FIG.—61 BACK DOOR & WINDOW GLASS (FJ45V, 451V, OPT)

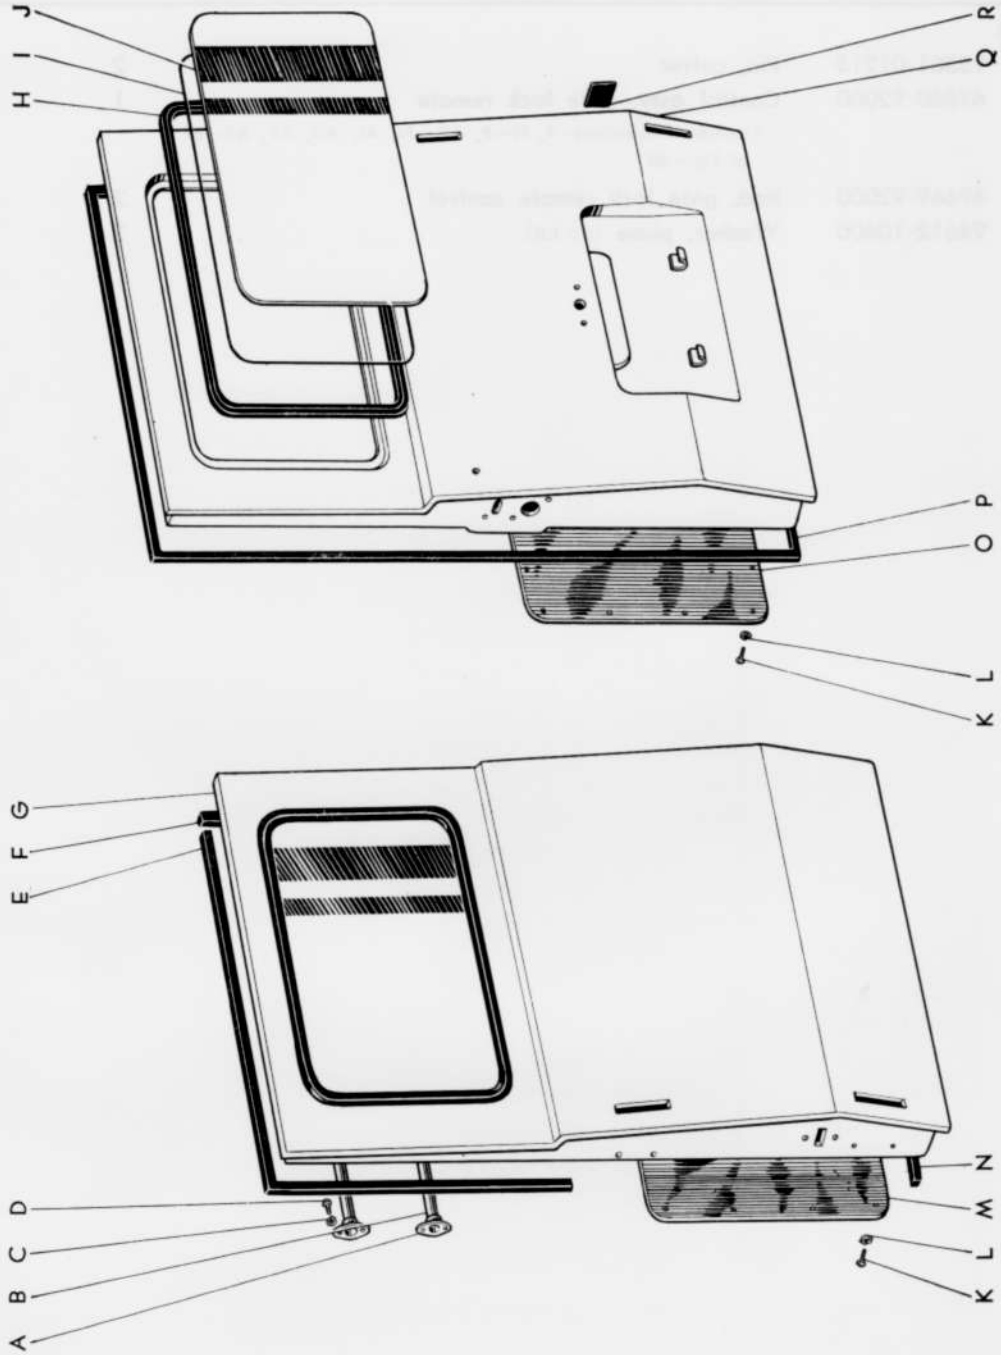

B 1300


Toyota Land Cruiser

253

ILLUSTRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Back Door & Window Glass (FJ45V, 45LV, OPT)				
(FIG 61)				
	67910-92050	Door assy, back, RH (includes illustrations—A~D, H~L, O~R of Fig 61 and illustrations—A~E, O~AN, BE~BH of Fig 62)	1	45V LV
	67910-92150	Door assy, back, RH (Effective from the middle of September 64)	1	45V LV
	67920-92050	Door assy, back, LH (includes illustrations A~N, R of Fig 61 and illustrations A~H, L~N, P, T, W, X, Z~AE, AG~AK, AM~AU, AW, AY~BD of Fig 62)	1	45V LV
A	68442-92050	Bracket, back door window protector	8	45V LV
	68442-92051	Bracket, back door window protector (Effective from the beginning of June 64)	8	45V LV
B	68441-92050	Pipe, back door window protector	4	45V LV
	68441-92051	Pipe, back door window protector (Effective from the beginning of June 64)	4	45V LV
C	94524-00400	Washer, toothed (4)	16	
D	93230-14016	Screw (oval-hd 4-075p 16)	16	
E	68422-92050	Weatherstrip, back door, LH	1	45V LV
F	68423-92050	Weatherstrip, back door inner	1	45V LV
G	67020-92050	Door assy, back, LH	1	45V LV
H	68371-92900	Weatherstrip, back door window	2	45V LV
I	68372-92900	Weatherstrip, back door, outer	2	45V LV
J	67941-92100	Glass, back door window	2	45V LV
K	93540-14016	Screw, tapping	26	
L	94511-00400	Washer, spring (4)	26	
M	68412-92050	Cover, back door inner hole, LH	1	45V LV
N	68424-92050	Weatherstrip, back door lower, LH	1	45V LV
O	68411-92050	Cover back door inner hole, RH	1	45V LV
P	68421-92050	Weatherstrip, back door, RH	1	45V LV
Q	67010-92050	Door assy, back, RH	1	45V LV
	67010-92150	Door assy, back, RH (Effective from the middle of September 64)	1	45V LV
R	98427-92050	Rubber, door open stopper silencer	2	45V LV

BODY

FIG. 62 BACK DOOR LOCK & HINGE (FJ45V, 45LV, OPT)

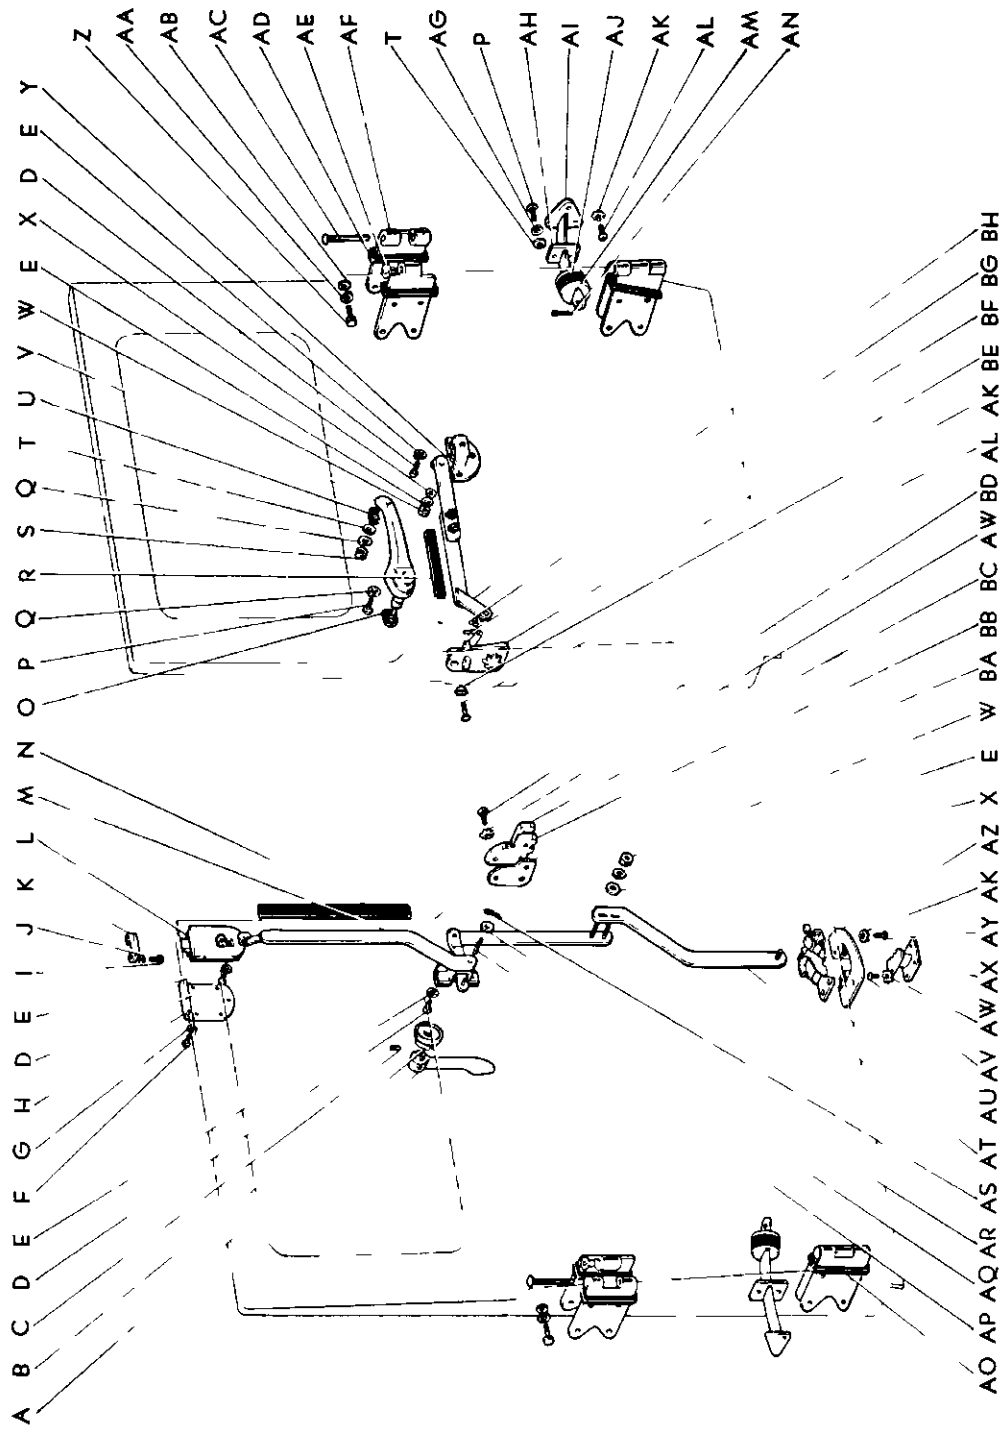

B 1301


Toyota Land Cruiser

255

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Back Door Lock & Hinge FJ45V, 45LV, OPT)				
FIG 62				
A	65521-91101	Handle, door inside	2	45V LV
B	65505-91301	Escutcheon sub-assy, door inside handle	2	45V LV
C	65522-91101	Pin, door inside handle	2	45V LV
D	93210-15016	Screw rd hd 5 09p 16)	10	
E	94511-00500	Washer, spring (5)	13	
F	93540-14016	Screw, tapping	5	
G	94512-00400	Washer, spring (4)	5	
H	67955-92050	Cover, back door lock	1	45V LV
I	93230-15010	Screw oval-hd 5 09p 10	2	
J	94524-00500	Washer, toothed (5)	2	
K	65533-91103	Check, back door, LH upper	1	45V LV
L	65501-91103	Lock sub-assy, back door, LH	1	45V LV
M	68431-92050	Lever, back door lock control upper	1	45V LV
N	68429-92050	Rubber, silencer, LH	2	45V LV
O	65477-91301	Pad, door lock outside handle	1	45V LV
P	93210-16020	Screw rd hd 6 10p 20	5	
Q	94511-00600	Washer, spring (6)	2	
R	68428-92050	Rubber, silencer, RH	1	45V LV
S	94110-40600	Nut hex 6 10p	1	
T	94613-10600	Washer, plate 6 10	5	
U	65478-91301	Pad, door outside handle small	1	45V LV
V	65460-91301	Handle assy, door outside, RH	1	45V LV
W	94110-40500	Nut hex 5 09p	3	
X	94612-10500	Washer, plate 5 10	4	
Y	68420-92050	Control assy, door lock remote, RH	1	45V LV
Z	91111-40816	Bolt hex-hd 8 125p 16	32	
AA	94512-00800	Washer, spring (8)	32	
AB	94613-10800	Washer, plate 8 16	32	
AC	68713-92000	Pin, front door hinge	4	45V LV
AD	68714-92000	Cover, door hinge	8	45V LV
AE	68712-92000	Bushing, door hinge	8	45V LV
AF	68801-92050	Hinge sub-assy, back door, RH	2	45V LV
		(includes illustrations AC~AE of Fig—62		
AG	94512-00600	Washer, spring (6)	4	
AH	69141-92900	Plate, door open stopper arm guide	2	45V LV

BODY

FIG. 62 BACK DOOR LOCK & HINGE (FJ45V, 45LV, OPT)

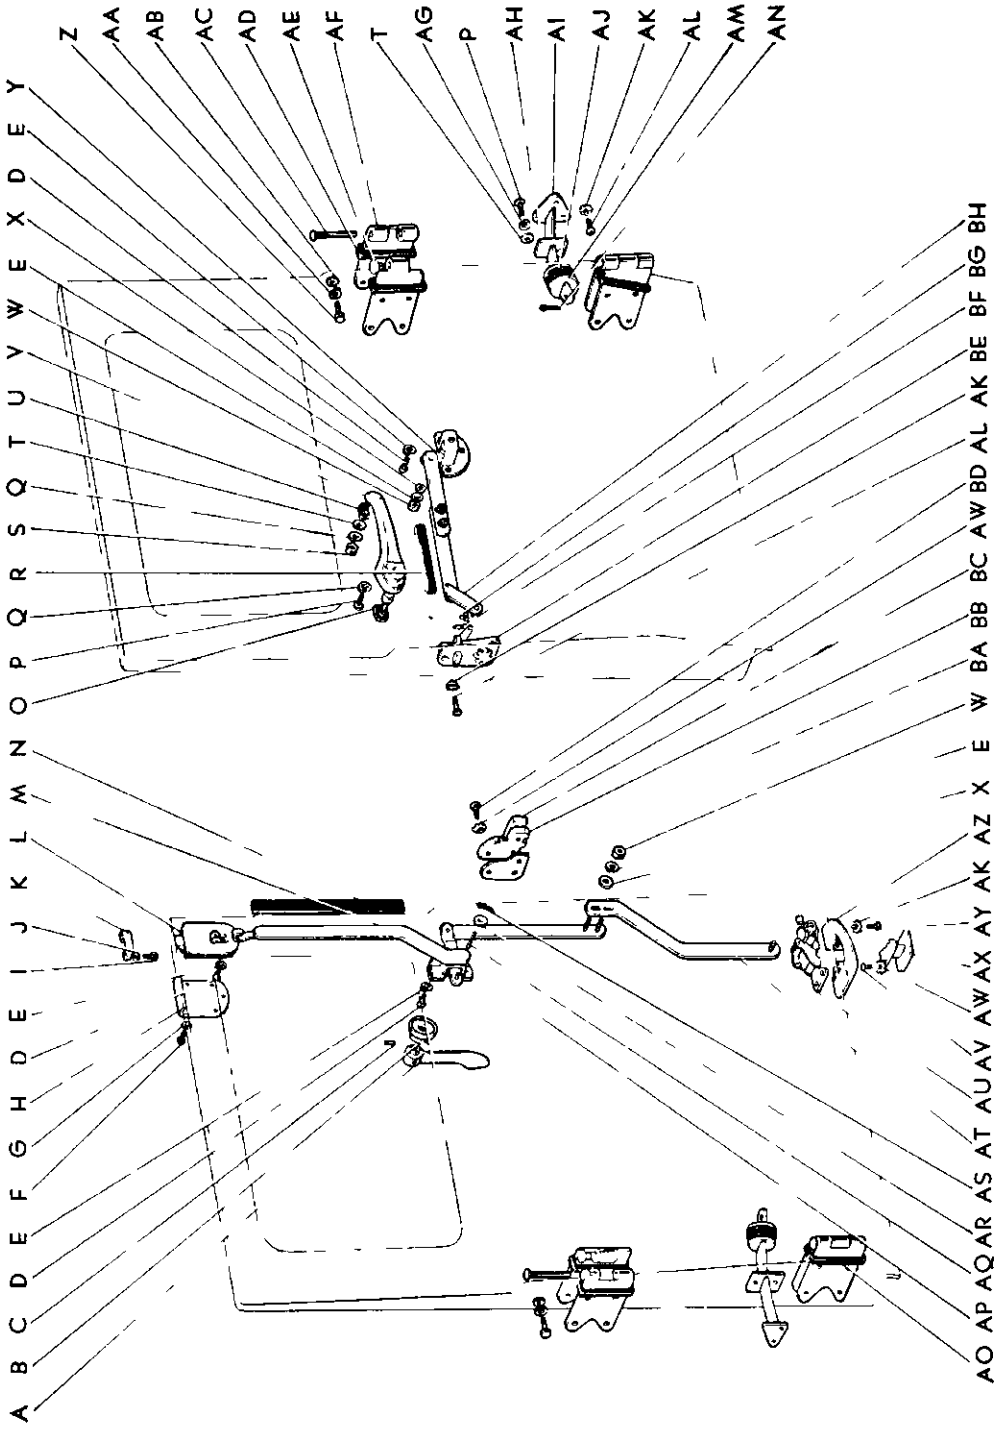

B 1301

Toyota Land Cruiser


257

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG 62)				
AI	69104-92900	Stopper sub-assy, door open	2	45V LV
AJ	69142-92900	Rubber, door open stopper	2	45V LV
AK	94524-00600	Washer, toothed 6	12	
AL	93220-16016	Screw fl-hd 6 10p 16	9	
AM	69148-92900	Washer, door open stopper rubber	4	45V LV
AN	95381-04030	Pin, cotter	2	
AO	68802-92050	Hinge sub-assy, back door, LH includes illustrations AC~AE of Fig 62	1	45V LV
Ar	68403-92050	Control sub-assy, back door lock, LH	1	45V LV
AQ	65452-91101	Spring, back door control connect	2	45V LV
AR	94612-10800	Washer, plate 8 161	2	
AS	95381-02015	Pin, cotter	2	
AT	68432-92050	Lever, back door lock control lower	1	45V LV
	69340-20010	Lock assy, rear door includes illustrations AU, AZ of Fig 62	1	45V LV
AU	69309-20010	Body sub-assy, rear door lock inside, LH	1	45V LV
AV	93220-18016	Screw fl-hd 8 125p 16	4	
AW	94524-00800	Washer, toothed 8	7	
AX	69420-20010	Plate assy, door lock striker, LH	1	45V LV
AY	93220-16020	Screw fl-hd 6 10p 20	3	
AZ	69305-20010	Body sub-assy, door lock outside, LH	1	45V LV
BA	65453-91301	Packing, door lock striker plate	1	45V LV
BB	65401-91301	Plate sub-assy, door lock striker, RH	1	45V LV
BC	65455-91301	Plate, door lock striker, RH	1	45V LV
	65454-91201	Bracket, door striker, RH	0~1	45V LV
	65455-91201	Bracket, door striker, LH		
BD	93220-18025	Screw fl-hd 8 125p 25	3	
BE	65410-91301	Lock assy, door, RH	1	45V LV
BF	65582-91301	Pin, door lock remote control connect	1	45V LV
BG	65581-91301	Washer, door lock remote	1	45V LV
BH	68402-92050	Plate sub-assy, door lock remote control connect	1	45V LV

PODY

Donated by Dominic Smith cruisercult.com

FIG.—63 ROOF SILENCER & MAT (FJ45V, 45LV)

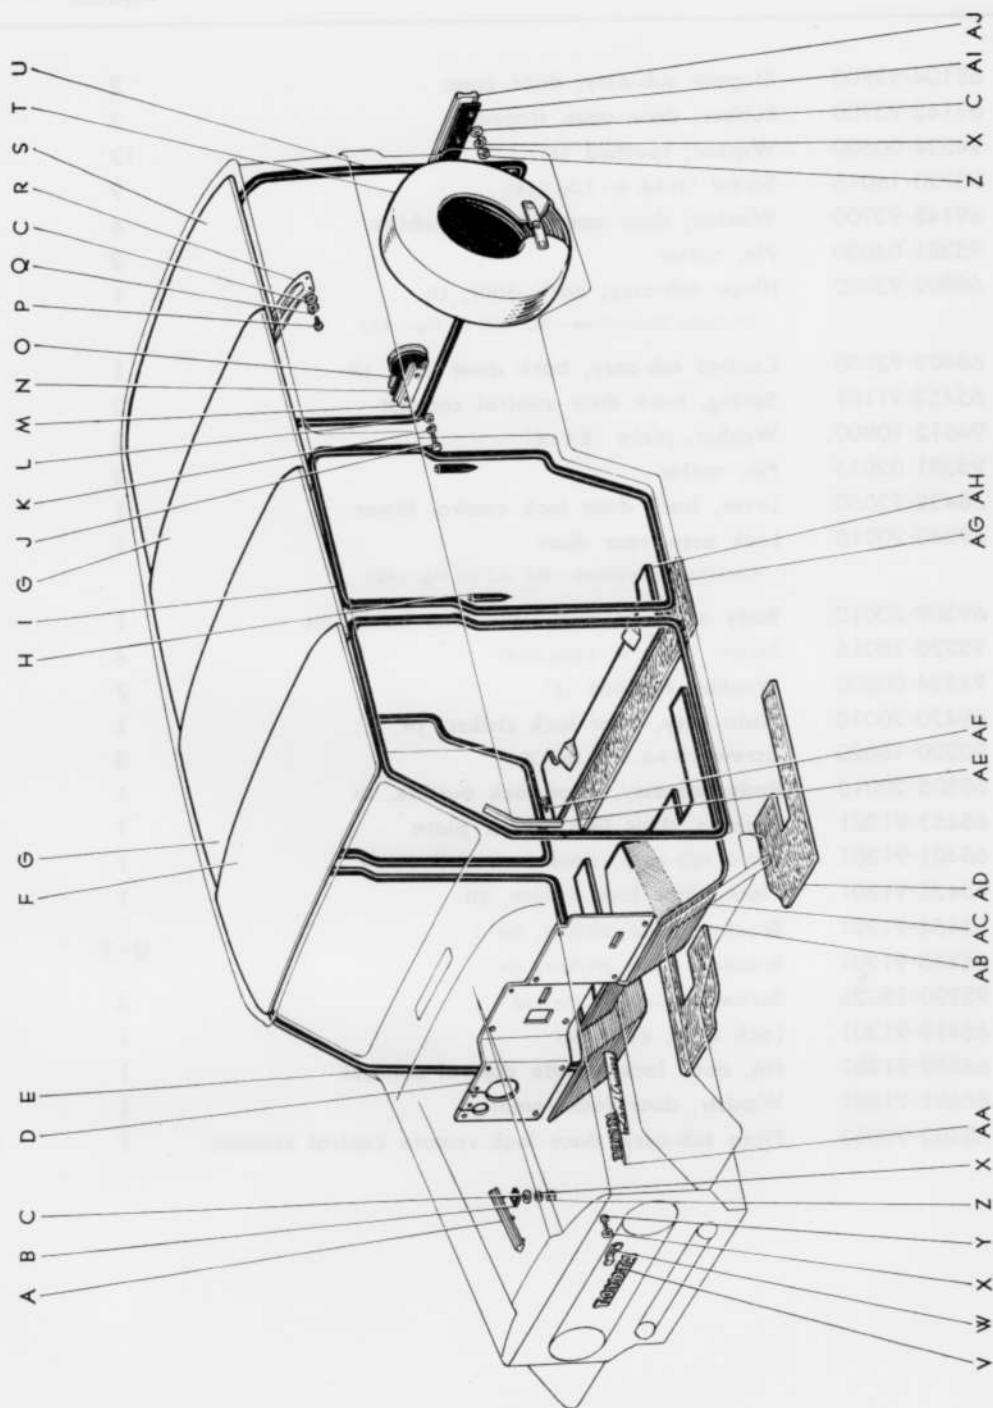


B 1302

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
Roof Silencer & Mat (FJ45V, 45LV)				
(FIG 63)				
A	75304-60010	Ornament sub-assy, hood	1	40V LV 45V LV
B	75399-60010	Pad, hood ornament set	3	40V LV 45V LV
C	94613-10600	Washer, plate (6 10)	19	
D	55210-92000	Silencer assy, dash panel	1	45V
	55210-92100	Silencer assy, dash panel	1	LV
	55210-92101	Silencer assy, dash panel	1	LV
Effective from the end of September '64				
E	67861-92000	Weatherstrip, door	2	45V LV
F	63341-92000	Silencer, roof, No 1	1	45V LV
G	63342-92000	Silencer, roof, No 2	2	45V LV
H	67863-92000	Rubber, door bumper	8	45V LV
I	67862-92000	Weatherstrip, rear door	2	45V LV
J	93210-14008	Screw rd-hd 4 0.75p 8)	2	
K	94511-00400	Washer, spring 4)	2	
L	94612-10400	Washer, plate (4 0.6	2	
M	75454-92000	Retainer, rear body, ornament 4-wheel drive	1	45V LV
N	75463-60010	Pad, rear body ornament 4-wheel drive	1	40V LV 45V LV
O	75453-60010	Ornament, rear body 4-wheel drive	1	40V LV 45V LV
P	93210-16012	Screw rd-hd 6 1.0p 12)	12	
Q	94512-00600	Washer, spring 6)	12	
R	63343-92000	Silencer, roof, No 3	1	45V LV
S	63103-92000	Strength sub-assy, roof	3	45V LV
T	51901-92000	Cover sub-assy, spare tire	1	45V LV
U	68451-92000	Weatherstrip assy, lift & tail gate	1	45V LV
	68425-92050	Strip, back door moulding rubber (OPT)	1	45V LV
	68426-92050	Strip, back door moulding rubber (OPT)	1	45V LV
V	75321-60010	Plate, radiator grille name	1	40V LV 45V LV
W	75312-60020	Plate, radiator grille ornament set	2	40V LV 45V LV
X	94511-00600	Washer, spring (6)	9	
Y	91111-40612	Bolt hex-hd 6 1.0p 12)	2	
Z	94110-40600	Nut (hex 6 1.0p)	7	
AA	75305-60010	Ornament sub-assy, hood side panel	1	40V LV 45V LV
AB	58521-92000	Pad, floor silencer front, RH	1	45V LV

BODY

FIG.—63 ROOF SILENCER & MAT (FJ45V, 45LV)

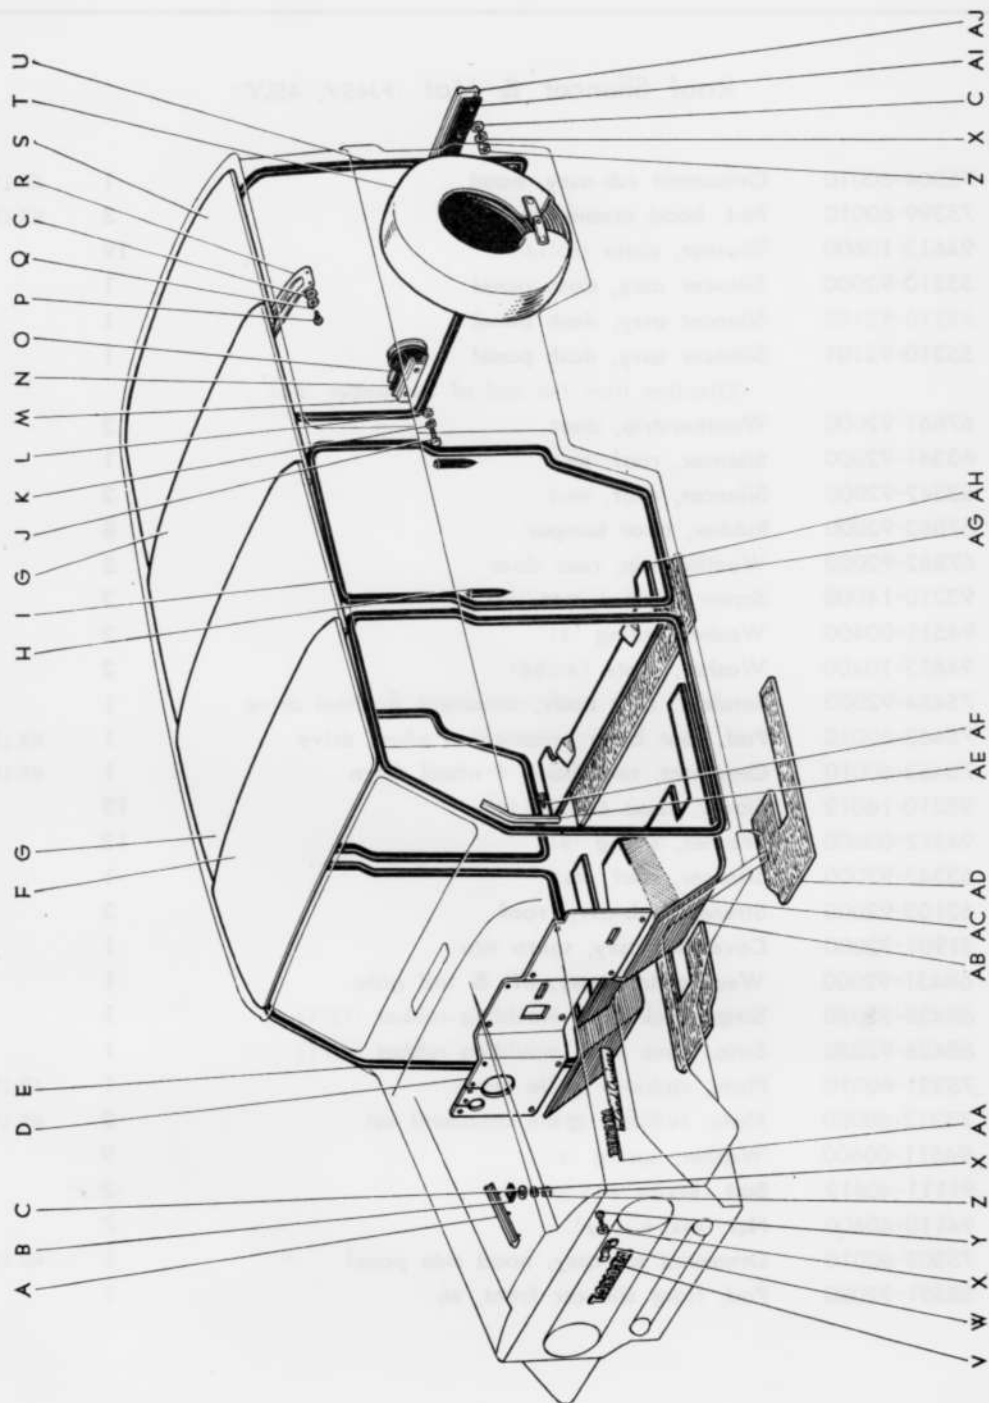


B 1302

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FIG 63)				
AC	58510-92000	Mat assy, floor front	1	45V LV
	58510-92063	Mat assy, floor front OPT	1	45V
	58510-92163	Mat assy, floor front OPT	1	LV
	58510-92061	Mat assy, floor front OPT	1	45V
	58510-92161	Mat assy, floor front OPT	1	LV
	58510-92062	Mat assy, floor front OPT	1	45V
	58510-92162	Mat assy, floor front OPT	1	LV
AD	58522-92000	Pad, floor silencer floor, LH	1	45V LV
AE	67882-92000	Plate, front door weatherstrip set, LH	1	45V LV
	67881-92000	Plate, front door weatherstrip set, RH	1	45V LV
AF	93540-14016	Screw, tapping	10	
AG	58561-92001	Pad, floor silencer	1	45V LV
AH	58550-92001	Mat assy, floor rear	1	45V LV
AI	75442-92000	Pad, plate body rear name	1	40V LV 45V LV
AJ	75441-92000	Plate sub-assy, body rear name	1	40V LV 45V LV

PODY

FIG.—64 ROOF SILENCER & MAT (FJ45LV, For U.S.A.)

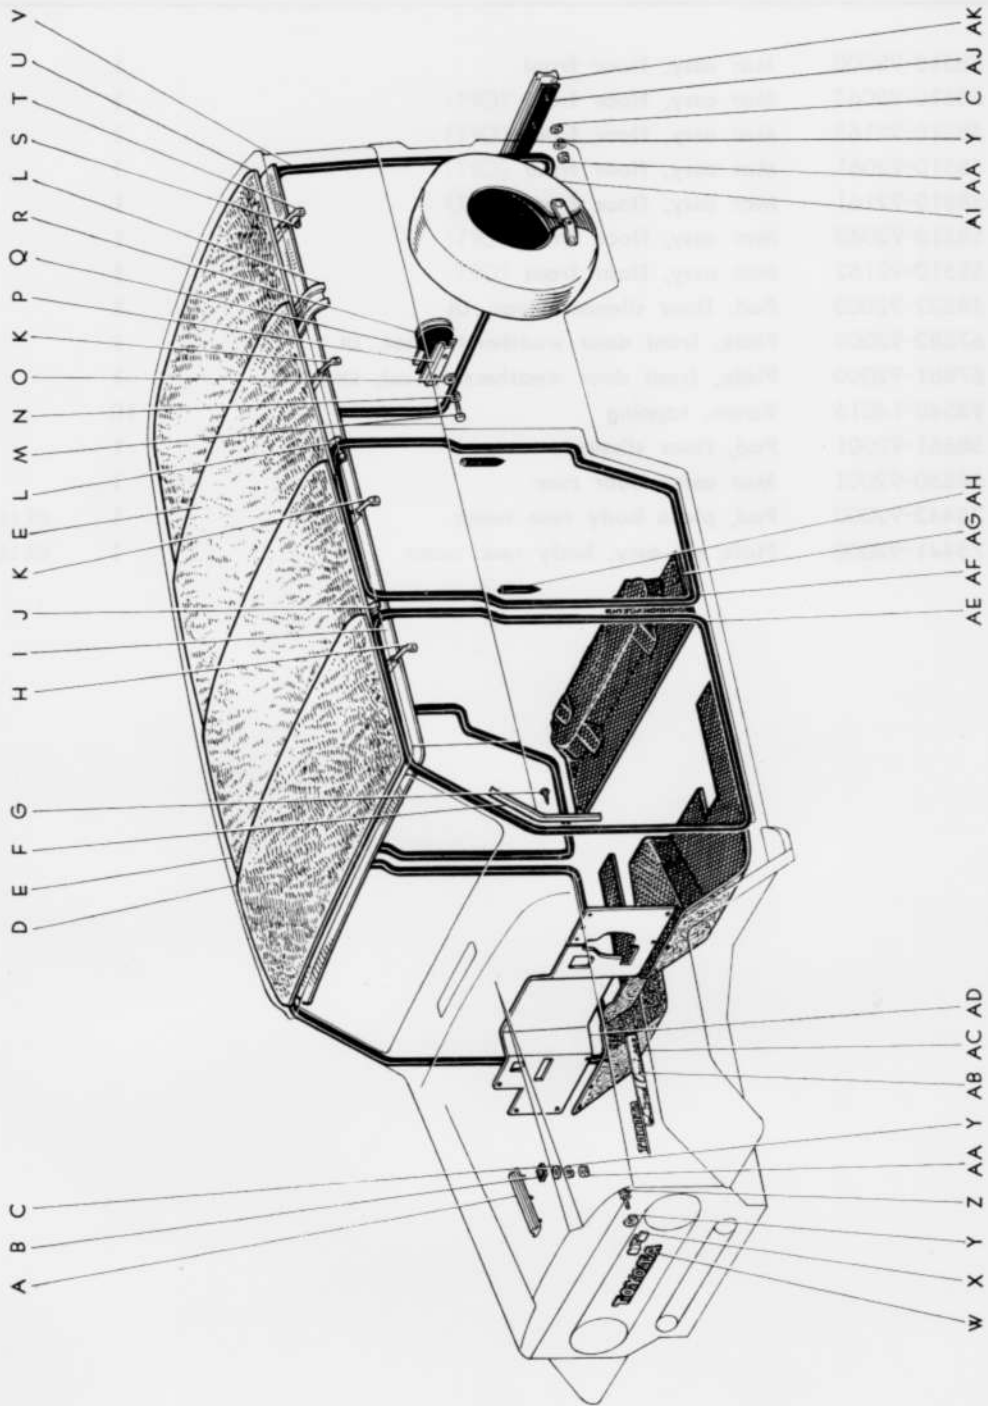

B 1303


Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Roof Silencer & Mat (FJ45LV, For U.S.A)				
(FIG 64				
A	75304-60010	Ornament sub-assy, hood	1	40V LV 45V LV
B	75399-60010	Pad, hood ornament set	3	40V LV 45V LV
C	94613-10600	Washer, plate (6 10	19	
D	63341-92170	Silencer, roof, No 1	1	LV
E	63342-92170	Silencer, roof, No 2	2	LV
F	67882-92000	Plate, front door weatherstrip set, LH	1	45V LV
	67881-92000	Plate, front door weatherstrip set, RH	1	45V LV
G	93540-14016	Screw, tapping	10	
H	63361-92170	Support, roof headlining, No 1	1	LV
I	63301-92170	Headlining sub-assy, roof leather	1	LV
J	63104-92170	Strength sub-assy, roof, No 2	1	LV
K	63362-92170	Support, roof headlining, No 2	2	LV
L	63103-92170	Strength sub-assy, roof, No 1	2	LV
M	93210-14008	Screw (rd-hd 4 0.75p 8	2	
N	94511-00400	Washer, spring (4	2	
O	94612-10400	Washer, plate (4 0.6	2	
P	75454-92000	Retainer, rear body, ornament 4-wheel drive	1	45V LV
Q	75463-60010	Pad, rear body ornament 4-wheel drive	1	40V LV 45V LV
R	75453-60010	Ornament, rear body 4-wheel drive	1	40V LV 45V LV
S	93530-13016	Screw, tapping	8	
T	63363-92170	Support, roof headlining, No 3	1	LV
U	63343-92170	Silencer, roof, No 3	1	LV
V	68451-92000	Weatherstrip assy, lift & tail gate	1	45V LV
	68425-92050	Strip, back door moulding rubber OPT	1	45V LV
	68426-92050	Strip, back door moulding rubber (OPT	1	45V LV
W	75321-60010	Plate, radiator grille name	1	40V LV 45V LV
X	75312-60020	Plate, radiator grille ornament set	2	40V LV 45V LV
Y	94511-00600	Washer, spring (6	7	
Z	91111-40612	Bolt (hex-hd 6 1.0p 12)	2	
AA	94110-40600	Nut (hex 6 1.0p)	7	
AB	75305-60010	Ornament sub-assy, hood side panel	1	40V LV 45V LV
AC	58510-92170	Mat assy, floor, front	1	LV
	58510-92171	Mat assy, floor, front	1	LV

(Effective from the beginning of December 64

BODY

FIG.—64 ROOF SILENCER & MAT (FJ45LV, For U.S.A.)

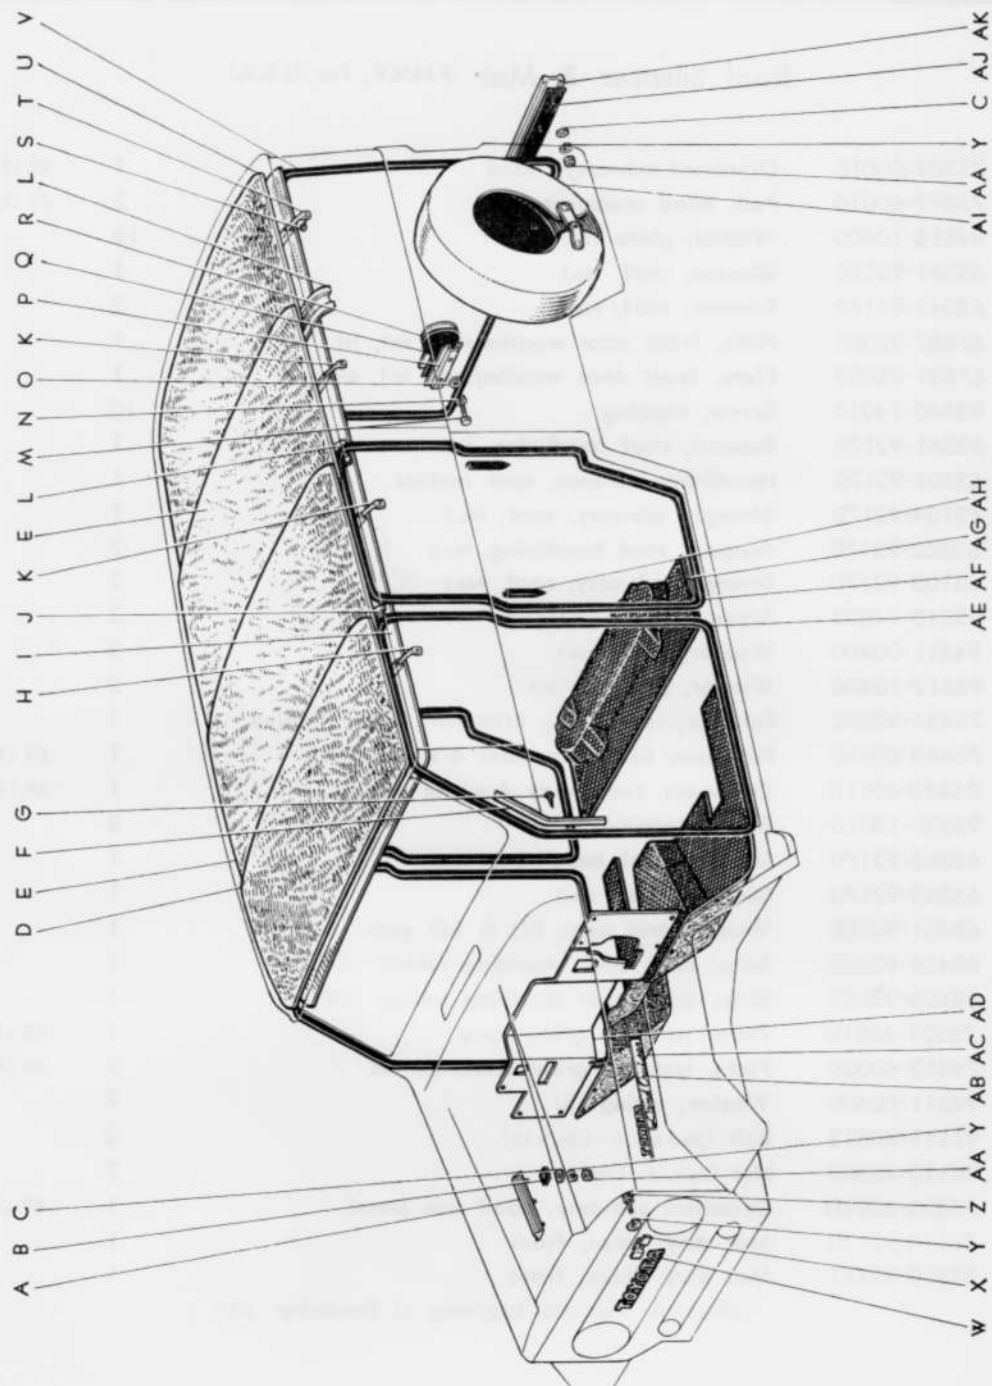


B 1303

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.64)				
AD	55210-92100	Silencer assy, dash panel	1	LV
	55210-92101	Silencer assy, dash panel	1	LV
		Effective from the end of September 64		
	55210-92170	Silencer assy, dash panel	1	LV
		Effective from the end of December 64		
AE	67861-92000	Weatherstrip, door	2	45V LV
AF	67862-92000	Weatherstrip, rear door	2	45V LV
AG	58550-92170	Mat assy, floor, rear	1	LV
AH	67863-92000	Rubber, door bumper	8	45V LV
AI	51901-92000	Cover sub-assy, spare tire	1	45V LV
AJ	75442-92000	Pad, plate body rear name	1	40V LV 45V LV
AK	75441-92000	Plate sub-assy, body rear name	1	40V LV 45V LV

BODY

FIG. 65 SEAT & SEAT TRACK (FJ45V, 45LV)

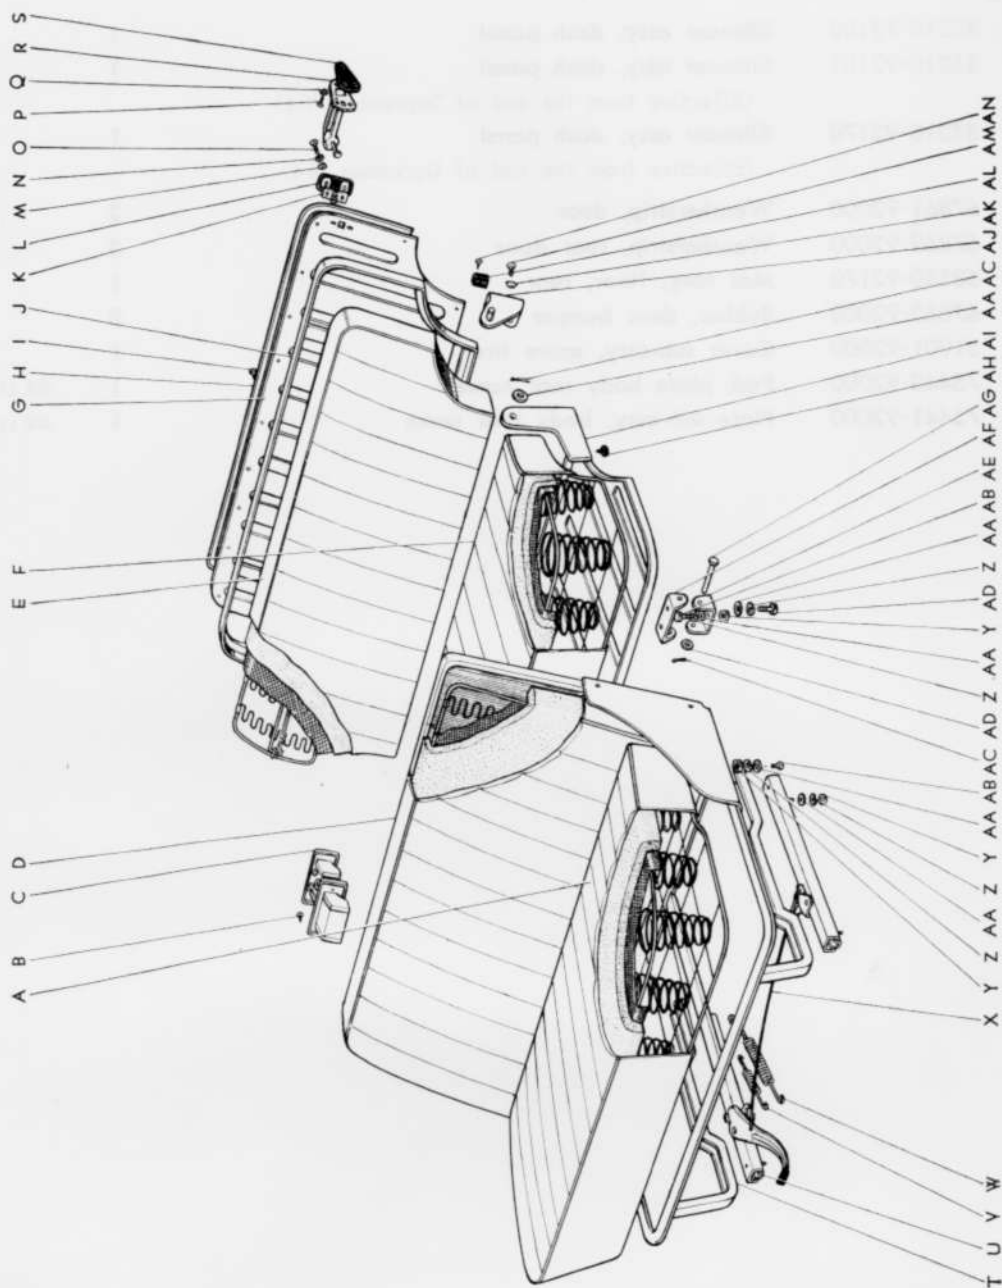


B 0608-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
Seat & Seat Truck (FJ45V, 45LV)				
FIG 65)				
	71100-92001	Seat assy, front (includes illustrations A~D T of Fig 65)	1	45V
	71100-92101	Seat assy, front	1	LV
	71100-92170	Seat assy, front (For U.S.A.)	1	LV
	71200-92000	Seat assy, rear (includes illustrations E~O AC~AN of Fig 65)	1	45V LV
	71200-92170	Seat assy, rear (For U.S.A.)	1	LV
	71410-92170	Cushion assy, front seat (includes illustration A of Fig 65)	1	45V LV
	71410-92170-1	Cushion assy, front seat (For U.S.A.)	1	LV
A	71071-92170	Cover sub-assy, front seat cushion	1	45V LV
	71071-92170-1	Cover sub-assy, front seat cushion (For U.S.A.)	1	LV
B	93220-24016	Screw fl-hd 4 075p 16, cr-pltd)	2	
C	74011-92000	Tray, ash	1	45V LV
	71430-92170	Back assy, front seat (includes illustration D of Fig 65)	1	45V LV
	71430-92170-1	Back assy, front seat (For U.S.A.)	1	LV
D	71073-92170	Cover sub-assy, front seat back	1	45V LV
	71480-92000	Back assy, rear seat (includes illustrations E G~J of Fig 65)	1	45V LV
	71480-92170	Back assy, rear seat (For U.S.A.)	1	LV
E	71077-92001	Cover sub-assy, rear seat back	1	45V LV
	71077-92170	Cover sub-assy, rear seat back (For U.S.A.)	1	LV
	71460-92001	Cushion assy, rear seat (includes illustrations F, AI of Fig 65)	1	45V LV
	71460-92170	Cushion assy, rear seat (For U.S.A.)	1	LV
	71035-92000	Cushion sub-assy, rear seat (includes illustration F of Fig 65)	1	45V LV
	71035-92170	Cushion sub-assy, rear seat (For U.S.A.)	1	LV
F	71075-92001	Cover sub-assy, rear seat cushion	1	45V LV
	71075-92170	Cover sub-assy, rear seat cushion (For U.S.A.)	1	LV
G	71225-92000	Panel, rear seat back	1	45V LV
	71225-92170	Panel, rear seat back (For U.S.A.)	1	LV
H	71226-92000	Bead, vinyl	1	45V LV
	71226-92170	Bead, vinyl (For U.S.A.)	1	LV

BODY

FIG.—65 SEAT & SEAT TRACK (FJ45V, 45LV)

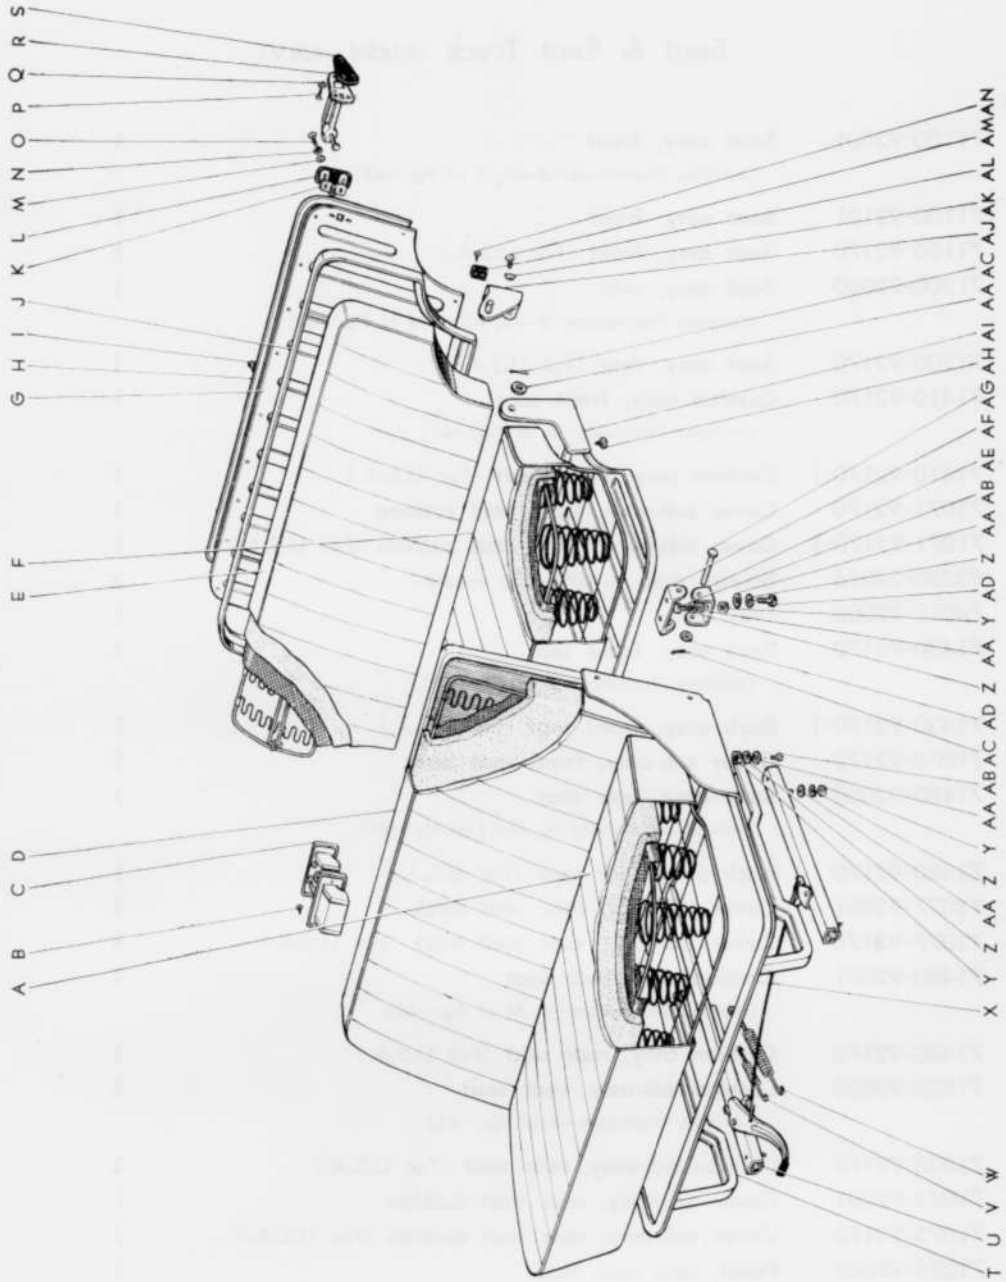


B 0608-C

Toyota Land Cruiser

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FIG 65				
I	93540-14016	Screw, tapping	20	
J	71202-92000	Frame sub-assy, rear seat back	1	45V LV
	71202-92170	Frame sub-assy, rear seat back (For U.S.A.)	1	LV
K	71319-11010	Holder, rear seat back stopper	2	45V LV
L	71608-11010	Cover sub-assy, rear seat back holder	2	45V LV
M	94613-10600	Washer, plate 6 10	4	
N	94511-00600	Washer, spring (6)	4	
O	93210-16016	Screw rd-hd 6 10p 16	4	
P	93230-16025	Screw oval-hd 6 10p 25	6	
Q	94512-00600	Washer, spring (6)	6	
R	72520-92170	Stop assy, rear seat back, LH	1	45V LV
	72520-11010	Stop assy, rear seat back, LH (For U.S.A.)	1	LV
	72510-92170	Stop assy, rear seat back, RH	1	45V LV
	72510-11010	Stop assy, rear seat back, RH (For U.S.A.)	1	LV
S	72516-92000	Pad, rear seat back stop	2	45V LV
T	71450-92170	Frame & back assy, front seat (includes illustration D of Fig 65)	1	45V LV
	71450-92170-2	Frame & back assy, front seat (For U.S.A.)	1	LV
U	72110 30020	Track assy, seat, RH (includes illustration V W of Fig - 65)	1	45V
	72110-30021	Track assy, seat, RH Effective from the beginning of December '64	1	45V
	72110 30030	Track assy, seat, RH	1	LV
	72110-30031	Track assy, seat, RH (Effective from the end of November '64)	1	LV
	72110 92170	Track assy, seat, RH (For U.S.A.)	1	LV
	72110-92171	Track assy, seat, RH (For U.S.A.) (Effective from the end of December '64)	1	LV
	72120 30010	Track assy, seat, LH	1	45V
	72120-30011	Track assy, seat, LH (Effective from the beginning of December '64)	1	45V
	72120 30020	Track assy, seat, LH	1	LV
	72120-30021	Track assy, seat, LH (Effective from the end of November '64)	1	LV
	72120 92170	Track assy, seat, LH (For U.S.A.)	1	LV
	72120-92171	Track assy, seat, LH (For U.S.A.) (Effective from the end of December '64)	1	LV
V	90506-12009	Spring, tension	1	45V LV

BODY

FIG.—65 SEAT & SEAT TRACK (FJ45V, 45LV)

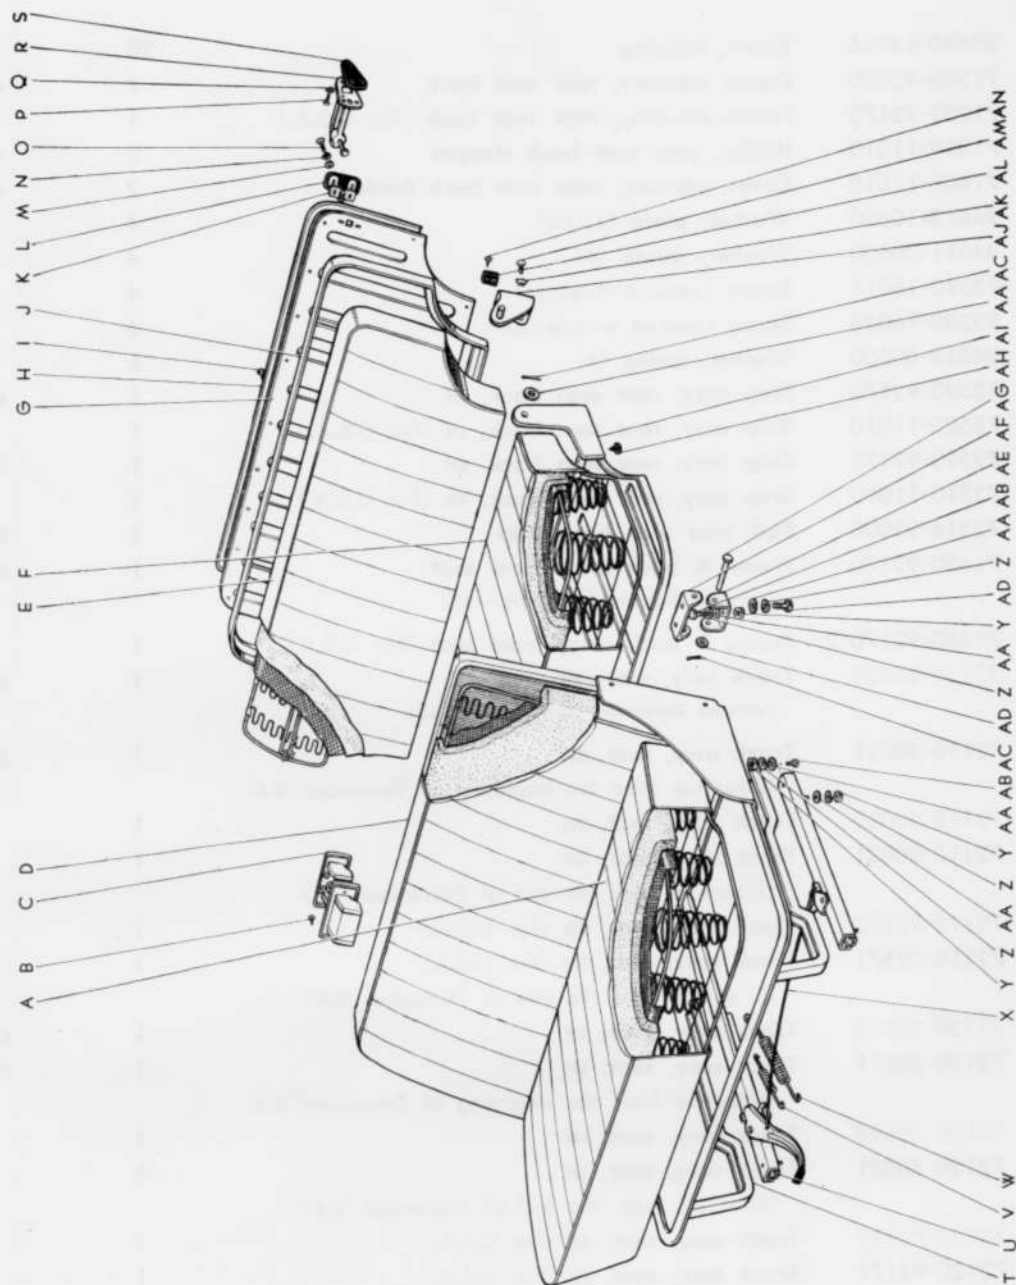

B 0608-C

Toyota Land Cruiser

271

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FIG 65)				
W	90506-18010	Spring, tension	1	45V
	72321-92170	Spring, tension (For U.S.A.)	1	LV
X	72301-92000	Wire sub-assy, seat adjuster control	1	45V LV
	72301-92001	Wire sub-assy, seat adjuster control (Effective from the beginning of December '64)	1	45V LV
Y	94110-40800	Nut (hex 8 125p)	12	
Z	94511-00800	Washer, spring (8	18	
AA	94612-10800	Washer, plate (8 16)	20	
AB	91111-40820	Bolt (hex-hd 8 125p 20)	8	
AC	95381-02015	Pin, cotter	4	
AD	91111-40816	Bolt (hex-hd 8 125p 16)	6	
AE	71312-92170	Hinge, rear seat female	2	45V LV
AF	71311-92170	Hinge, rear seat male	2	45V LV
AG	71313-92170	Pin, rear seat hinge	2	45V LV
AH	90541-10009	Cushion	4	45V LV
AI	71201-92000	Panel sub-assy, rear seat cushion	1	45V LV
	71201-92170	Panel sub-assy, rear seat cushion (For U.S.A.)	1	LV
AJ	71306-92170	Hinge sub-assy, rear seat back, LH	1	45V LV
	71309-92170	Hinge sub-assy, rear seat back, LH (For U.S.A.)	1	LV
	71305-92170	Hinge sub-assy, rear seat back, RH	1	45V LV
	71308-92170	Hinge sub-assy, rear seat back, RH (For U.S.A.)	1	LV
AK	94524-00800	Washer, toothed (8)	4	
AL	68172-92000	Rubber (For rear seat back cushion stopper)	2	45V LV
AM	93220-18020	Screw (fl-hd. 8 125p 20)	4	
AN	93210-14020	Screw, tapping	4	

BODY

SPACE FOR MEMO

ALPHABETICAL INDEX

MANUFACTURER'S NUMERICAL INDEX

STANDARD HARDWARE INDEX

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
A			BAR, radiator support	159	39 G
ABSORBER, shock, rear	65	17 E	BAR, rear bumper	139	35 AJ
ACCESSORY, car heater	115	31	BAR, side window lower		
ACCESSORY ASSY, car heater	117	32	(Excludes U S A)	217	53 T
ACCESSORY ASSY, heater	123	33	BAR, side window upper		
ADAPTOR, defroster hole	119	32 AR	(Excludes U S A)	217	53 T
ADAPTOR, water hose joint	117	32 H	BAR, stabilizer, rear	43	13 C
AMMETER ASSY	83	20 AA	BAR SUB-ASSY, lift gate protector		
APRON, fender, LH	153	37 AT	(Excludes U S A)	219	53 W
APRON, fender, RH	153	37 AT	BEAD, vinyl	267	65 H
APRON, rear fender, LH	175	43 S	BEAD, vinyl (For U S A)	267	65 H
APRON, rear fender, RH	175	43 S	BEARING	45	13 AD
APRON, rear tire inner, LH	207	51 AV	BEARING	47	13 BB
APRON, rear tire inner, RH	207	51 AV	BEARING	55	14 AO
APRON, rear tire outer, LH	207	51 AT	BEARING	55	14 AQ
APRON, rear tire outer, RH	207	51 AT	BEARING (For differential drive		
APRON SUB-ASSY, fender, LH	153	37 AT	pinion rear)	47	13 AV
APRON SUB-ASSY, fender, LH			BEARING, universal joint spider	39	12
(For U S A)	175	43 S	BEARING, windshield wiper	107	29 J
APRON SUB-ASSY, fender, RH	153	37 AT	BEARING, windshield wiper motor	111	30 R
APRON SUB-ASSY, fender, RH			BLADE ASSY, windshield wiper	103	28 F
(For U S A)	175	43 S	BLADE ASSY, windshield wiper	107	29 I
ARM ASSY windshield wiper	103	28 K	BLADE ASSY, windshield wiper	165	41 L
ARM ASSY, windshield wiper	165	41 K	BLADE ASSY, windshield wiper	169	42 B
ARM ASSY, windshield wiper	169	42 A	BLOCK ASSY, fuse	93	25 L
ARM ASSY, windshield wiper, LH	107	29 A	BLOCK ASSY, junction	93	25 D
ARM ASSY, windshield wiper, RH	107	29 A	BLOWER ASSY, heater	119	32
ARM & BLADE ASSY, windshield			BOARD, front door trim, LH	223	54 AP
wiper	165	41	BOARD, front door trim, RH	223	54 AP
ARM & BLADE ASSY, windshield			BOARD, rear door trim, LH	289	57 S
wiper	169	42	BOARD, rear door trim, RH	239	57 S
ARM SUB-ASSY, outer rear view			BOARD ASSY, front door trim, LH	227	55 AS
mirror	165	41 G	BOARD ASSY, front door trim, RH	227	55 AS
ARM SUB-ASSY, outer rear view			BOARD ASSY, rear door trim, LH		
mirror	171	42 AO	(For U S A)	239	57 S
ARMATURE, wiper motor	111	30 W	BOARD ASSY, rear door trim, RH		
AXLE ASSY, rear For gear ratio			(For U S A)	239	57 S
4 11 1)	43		BODY, dome lamp (For U S A)	97	26 R
AXLE ASSY, rear STD) (For gear			BODY, front turn signal lamp	97	26 E
ratio 3 7 1)	43		BODY, license lamp w tail gate		
B			handle	99	27 T
BACK ASSY, front seat	267	65	BODY, pillar lamp	97	26 H
BACK ASSY, front seat (For U S A)	267	65	BODY, rear combination lamp, LH	99	27 F
BACK ASSY, rear seat	267	65	BODY, rear combination lamp, RH	99	27 F
BACK ASSY, rear seat (For U S A)	267	65	BODY ASSY, rear, front	173	43
BALL, windshield wiper motor	111	30 P	BODY ASSY, rear, rear	173	43
BAND, jack holder	203	51 D	BODY ASSY, rear, rear (For U S A)	173	43
BAND SUB ASSY, fuel	27	8 AS	BODY & CORD SUB-ASSY, front		
BAR, front bumper	139	35 AL	turn signal lamp	97	26 E
BAR, front bumper	145	36 AL	BODY SUB-ASSY, door lock outside,		
BAR, lift gate torsion, LH	247	60 R	LH	257	62 AZ
BAR, lift gate torsion, RH	247	60 Q	BODY SUB-ASSY, rear door lock		
BAR, radiator support	155	38 G	inside, LH	257	62 AU
			BODY SUB-ASSY, rear, front	173	43
			BODY SUB-ASSY, rear, rear	173	43
			BODY SUB ASSY, rear, rear		
			(For U S A)	173	43

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
BODY SUB-ASSY, wiper motor	111	30 Q	BRACKET, flexible hose, No 3	57	15 O
BOLT	115	31 V	BRACKET, flexible hose, No 3	61	16 R
BOLT	117	32 S	BRACKET, front body rear mounting	141	35 BG
BOLT differential bearing cap	45	13 Q	BRACKET, front body rear mounting	145	36 BE
BOLT, fuel tank protector set	27	8 AQ	BRACKET, front floor, LH	141	35 BJ
BOLT, hexagon	41	12 M	BRACKET, front floor, LH	147	36 BI
BOLT, hexagon	45	13 AB	BRACKET, front floor, RH	141	35 BJ
BOLT, hexagon	67	17 AH	BRACKET, front floor, RH	147	36 BI
BOLT, pin hold hexagon	23	5 Q	BRACKET, front side cover		
BOLT, rear bumper set	139	35 AI	tarpaulin bow, LH	181	44 F
BOLT, rear bumper set	145	36 AK	BRACKET, front side cover		
BOLT, rear spring center	65	17 AA	tarpaulin bow, RH	181	44 F
BOLT, rear view mirror set			BRACKET, front turn signal lamp	97	26 L
(Excludes U S A)	219	53 AD	BRACKET, front ventilator handle	199	49 S
BOLT, round head square neck	139	35 AP	BRACKET, gasoline tank set, LH	25	8 P
BOLT, round head square neck	145	36 AO	BRACKET, gasoline tank set, RH	25	8 P
BOLT, round head square neck	157	38 AB	BRACKET, heater	115	31 T
BOLT, safety strap ring	155	38 M	BRACKET, hood stay clamp spring	149	37 I
BOLT, set	53	14 U	BRACKET, lift gate hinge	247	60 W
BOLT, stud	23	5 B	BRACKET, lift gate protector bar		
BOLT, stud	43	13 O	(Excludes U S A)	219	53 X
BOLT, stud	45	13 T	BRACKET, mudguard set	207	51 AY
BOLT, U	65	17 Y	BRACKET, muffler inlet pipe clamp	23	5 G
BOLT, washer based head hexagon	27	8 AO	BRACKET, outer rear view mirror		
BOLT, windshield wiper arm lock	105	28 AJ	arm	167	41 AB
BOOT, sliding shaft	39	12 J	BRACKET, outer rear view mirror		
BOW ASSY, front side cover			arm	171	42 AJ
tarpaulin, LH	181	44	BRACKET, rear body mounting, rear	137	35 U
BOW ASSY, front side cover			BRACKET, rear body mounting, rear	143	36 U
tarpaulin, RH	181	44	BRACKET, rear body rear mounting	137	35 W
BOW SUB-ASSY, front side			BRACKET, rear body rear mounting	147	36 BM
tarpaulin, LH	183	44 AB	BRACKET, rear bumper	139	35 AH
BOW SUB-ASSY, front side			BRACKET, rear bumper (OPT	145	36 AB
tarpaulin, RH	183	44 AB	BRACKET, rear stabilizer link, LH	45	13 AO
BOX SUB-ASSY, tool	179	43 BD	BRACKET, rear stabilizer link, RH	45	13 AO
BRACKET, back window protector	253	61 A	BRACKET, rear upper door lock		
BRACKET, cowl ventilator handle	199	49 O	outer	185	45 C
BRACKET, door striker, LH	257	62 BC	BRACKET, rear view mirror stay		
BRACKET, door striker, LH			(Excludes U S A)	219	53 AE
(thk — 10)	233	56 AC	BRACKET, rear view mirror support		
BRACKET, door striker, RH	257	62 BC	stay (Excludes U S A)	219	53 AE
BRACKET, door striker, RH			BRACKET, seat visor	207	51 AS
(thk 16)	233	56 AC	BRACKET, side window protector		
BRACKET, engine front mounting, LH	137	35 E	bar rear, LH Excludes U S A	217	53 U
BRACKET, engine front mounting, LH	143	36 E	BRACKET, side window protector		
BRACKET, engine front mounting, RH	137	35 E	bar rear, RH Excludes U S A)	217	53 U
BRACKET, engine front mounting, RH	143	36 E	BRACKET, side window protector		
BRACKET, engine rear mounting, LH	137	35 R	pipe (Excludes U S A)	219	53 U
BRACKET, engine rear mounting, LH	143	36 R	BRACKET, spring, No 3 LH	65	17 S
BRACKET, engine rear support, RH	137	35 R	BRACKET, spring, No 3 RH	65	17 S
BRACKET, engine rear support, RH	143	36 R	BRACKET, spring, No 4	65	17 P
BRACKET, exhaust pipe clamp	23	5 K	BRACKET, stabilizer	45	13 U
BRACKET, flexible hose	37	11 O	BRACKET, steering gear housing	53	14 AI
BRACKET, flexible hose, No 1	57	15 G	BRACKET, windshield wiper	103	28 AB
BRACKET, flexible hose, No.1	61	16 G	BRACKET, wiper motor set	107	29 T
BRACKET, flexible hose, No 2	57	15 G	BRACKET ASSY, windshield wiper	105	28 AE
BRACKET, flexible hose, No 2	61	16 G	BRACKET ASSY, wiper motor	109	29 Y

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
BRACKET SUB-ASSY, battery	137	35 O	BUTTON, door outside handle push,		
BRACKET SUB-ASSY, battery	143	36 O	LH	231	56 O
BRACKET SUB ASSY, cowl ventilator			BUTTON, door outside handle push,		
dampner	201	50 D	LH	241	58 K
BRACKET SUB-ASSY, front license			BUTTON, door outside handle push,		
plate	139	35 AM	RH	231	56 O
BRACKET SUB-ASSY, front license			BUTTON, door outside handle push,		
plate	145	36 AM	RH	241	58 K
BRACKET SUB-ASSY, horn, LH	151	37 X	BUTTON, ventilating window handle	225	55 Q
BRACKET SUB-ASSY, horn, RH	151	37 X			
BRACKET SUB-ASSY, jack, upper	179	43 BE	C		
BRACKET SUB-ASSY, panel	215	52 BA			
BRACKET SUB-ASSY, pedal	37	11 J	CABLE, control	117	32 D
BRACKET SUB-ASSY, radiator cover			CAP, differential bearing	47	13 AR
support hinge	151	37 AJ	CAP, gear housing bracket	53	14 AJ
BRACKET SUB-ASSY, rear license			CAP, windshield wiper arm	103	28 Q
plate	177	43 AO	CAP, wiper arm drive shaft	107	29 B
BRACKET SUB-ASSY, spare tire set	203	51 R	CAP ASSY, fuel tank	25	8 C
BRACKET SUB-ASSY, steering gear			CARRIER ASSY (For gear ratio		
housing	53	14	4 11 1)	43	13
BRUSH, wiper motor carbone	113	30 AF	CARRIER ASSY (STD) (For gear		
BULB (12V 3W)	81	20 J	ratio 3 7 1	43	13
BULB (12V 3WL)	81	20 J	CARRIER ASSY, differential		
BULB (12V 3WL)	81	20 I	(For gear ratio 3 7 1)	43	13
BULB (12V 6W)	97	26 G	CARRIER ASSY, differential		
BULB (12V 8W)	81	20 S	(For gear ratio 4 11 1)	43	13
BULB (12V 8W)	99	27 X	CARRIER SUB-ASSY, differential	47	13 AZ
BULB (12V 10W) FOR U.S.A.)	97	26 Q	CASE, differential	47	13 AU
BULB (12V 24W)	99	27 L	CASE, front spring clip bolt	67	17 AI
BULB (12V 25 8W)	97	26 D	CASE SUB-ASSY, blower	119	32 AI
BULB (12V 25 8W)	99	27 D	CATCH, tool case rear	205	51 AK
BULB (12V 32cp)	97	26 D	CATCH ASSY, windshield	167	41 AI
BULB (For transfer indicator lamp	81	20 B	CATCH ASSY, windshield	171	42 Y
BUMPER, rear (OPT)	139	35 AJ	CATCH SUB-ASSY, hood	149	37 O
BUMPER, rear (OPT)	145	36 AJ	CHANNEL, side rail inner, LH	137	35 D
BUMPER SUB-ASSY, rear spring	65	18 Z	CHANNEL, side rail inner, LH	143	36 D
BUSH, cord	119	32 AF	CHANNEL, side rail inner, RH	137	35 D
BUSHING	37	11 H	CHANNEL, side rail inner, RH	143	36 D
BUSHING	43	13 D	CHANNEL ASSY, front door		
BUSHING	53	14 Q	glass, LH	223	54
BUSHING	65	17 D	CHANNEL ASSY, front door		
BUSHING	65	17 O	glass, LH	227	55
BUSHING For fuel hose clamp)	25	8 L	CHANNEL ASSY, front door		
BUSHING, cord	115	31 K	glass, RH	223	54
BUSHING, door hinge	231	56 B	CHANNEL ASSY, front door		
BUSHING, door hinge	243	58 AH	glass, RH	227	55
BUSHING, door hinge	255	62 AE	CHANNEL SUB-ASSY, front door		
BUSHING, front brake flexible			glass, LH	193	47 E
hose tension spring	57	15 E	CHANNEL SUB-ASSY, front door		
BUSHING, front brake flexible			glass, LH	223	54 AH
hose tension spring	61	16 E	CHANNEL SUB-ASSY, front door		
BUSHING, nylon	247	60 V	glass, LH	227	55
BUSHING, solid	53	14 X	CHANNEL SUB-ASSY, front door		
BUSHING, solid	53	14 AG	glass, RH	193	47 E
BUSHING, stabilizer	45	13 W	CHANNEL SUB-ASSY, front door		
BUSHING, windshield wiper motor	105	28 AD	glass, RH	223	54 AH

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
CHANNEL SUB-ASSY, front door glass, RH	227	55 AK	CLAMP, outside rear view mirror arm inside	171	42 AL
CHANNEL SUB-ASSY, front floor center	177	43 BB	CLAMP, steering column, lower	163	40 AA
CHANNEL SUB ASSY, rear door glass	237	57 M	CLAMP, steering column, lower (For U.S.A.)	163	40 AA
CHECK, back door, LH upper	255	62 K	CLAMP, steering column, lower OPT)	51	14 K
CHECK, front door ventilator lock, LH	223	54 AD	CLAMP, steering column, upper	163	40 AC
CHECK, front door ventilator lock, RH	223	54 AD	CLAMP, steering column, upper (For U.S.A.)	163	40 AC
CHECK, rear upper door lock	187	45 AR	CLAMP, tube	61	17 O
CLAMP	23	5 M	CLAMP, tube, No 1	57	15 D
CLAMP	25	8 M	CLAMP, tube, No 1	61	16 D
CLAMP	25	8 Y	CLAMP, tube, No 2	57	15 J
CLAMP	37	11 A	CLAMP, tube, No 2	61	16 J
CLAMP	57	15 F	CLAMP, wiring harness	85	21 K
CLAMP	57	15 M	CLAMP, wiring harness	87	22 I
CLAMP	57	15 T	CLAMP ASSY, fuel tank inlet pipe rubber	27	8 AI
CLAMP	57	15 V	CLEVIS, master cylinder push rod	37	11 I
CLAMP	57	15 W	CLIP	37	11 N
CLAMP	61	16 F	CLIP	39	12 I
CLAMP	61	16 M	CLIP	57	15 AF
CLAMP	61	16 W	CLIP	63	16 AI
CLAMP	61	16 Y	CLIP	117	32 F
CLAMP	61	16 AA	CLIP	179	43 BI
CLAMP	85	21 A	CLIP, defroster hose	115	31 Q
CLAMP	85	21 L	CLIP, door glass weatherstrip	189	46 F
CLAMP	87	22 N	CLIP, rear spring, No 1	65	17 V
CLAMP	87	22 A	CLIP, rear spring, No 2	65	17 X
CLAMP	87	22 K	CLIP, rear spring, No 3	67	17-AJ
CLAMP	87	22 M	CLIP, spring	181	44 Y
CLAMP	89	23 A	CLIP, spring	223	54 AF
CLAMP	89	23 L	CLIP, spring	227	55 AI
CLAMP	89	24 A	CLIP, spring	237	57 H
CLAMP	91	24 J	CLIP, spring (For jack holder cushion)	203	51 F
CLAMP	91	24 M	COCK, water hose drain	115	31 E
CLAMP	91	23 N	COCK, water hose drain	119	32 BF
CLAMP	115	31 S	COCK, water hose drain	123	33 O
CLAMP	117	32 P	COLLAR	37	11 F
CLAMP	119	32 BG	COLLAR	115	31 L
CLAMP	123	33 Q	COLLAR, pipe	23	5 C
CLAMP (For hood side panel cushion shim)	153	37 AW	COLLAR, rear axle housing side	45	13 AL
CLAMP, cable large	85	21 J	CONNECTOR, water hose	119	32 AX
CLAMP, cable large	87	22 F	CONNECTOR, water hose	119	32 BD
CLAMP, cable large	89	23 F	CONNECTOR, water hose	123	33 C
CLAMP, cable large	91	24 F	CONNECTOR, water hose	123	33 N
CLAMP, cable large	201	50 N	CONSENT ASSY, inspection lamp	93	25 N
CLAMP, fuel tank band shim	25	8 W	CONTROL ASSY door lock remote, RH	255	62 Y
CLAMP, hose	115	31 C	CONTROL ASSY, front door lock remote, LH	233	56 AX
CLAMP, hose	117	32 X	CONTROL ASSY, front door lock remote, LH (For U.S.A.)	233	56 AX
CLAMP, hose	119	32 BA	CONTROL ASSY, front door lock remote, RH	231	56 E
CLAMP, hose	123	33 D			
CLAMP, jack handle	179	43 BK			
CLAMP, muffler inlet pipe	23	5 I			
CLAMP, outside rear view mirror arm inside	167	41 AA			

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
CONTROL ASSY, front door lock			COVER, transmission under	147	36 BF
remote, RH (For U S A)	231	56 E	COVER, windshield wiper motor	111	30 M
CONTROL ASSY, gate lock remote	249	60	COVER, windshield wiper motor	111	30 U
CONTROL ASSY, gate lock remote	251	60	COVER, windshield wiper motor	113	30 AI
CONTROL ASSY, rear door lock			COVER ASSY, hood	149	37
remote, LH	241	58 D	COVER SUB-ASSY, cowl side air		
CONTROL ASSY, rear door lock			guide	119	32 AN
remote, LH (For U S A)	241	58 D	COVER SUB-ASSY, engine front		
CONTROL ASSY, rear door lock			under	139	35 BC
remote, RH	241	58 D	COVER SUB-ASSY, engine front		
CONTROL ASSY, rear door lock			under	145	36 BB
remote, RH (For U S A)	241	58 D	COVER SUB ASSY, front seat back	267	65 D
CONTROL SUB-ASSY, back door			COVER SUB-ASSY, front seat cushion	267	65 A
lock, LH	257	62 AP	COVER SUB-ASSY, front seat		
CONTROL SUB-ASSY, door lock			cushion (For U S A)	267	65 A
remote	235	56 BC	COVER SUB-ASSY, hole	117	32 A
CONTROL SUB-ASSY, gate lock			COVER SUB-ASSY, hood	149	37 T
remote	247	60 L	COVER SUB-ASSY, power take-off		
CORD, pillar lamp	97	24 K	control lever (OPT)	177	43 AT
COVER, back door inner hole, LH	253	61 M	COVER SUB-ASSY, power take-off		
COVER, back door inner hole, RH	253	61 O	control lever (OPT)	205	51 AC
COVER, back door lock	255	62 H	COVER SUB-ASSY, power take-off		
COVER, door hinge	231	56 C	control lever, B OPT	177	43 AV
COVER, door hinge	241	58 C	COVER SUB ASSY, power take-off		
COVER, door hinge	255	62 AD	control lever, B (OPT)	205	51 AG
COVER, door window frame			COVER SUB-ASSY, radiator	151	37 AA
service hole	221	54 K	COVER SUB-ASSY, rear axle housing	43	13 N
COVER, door window frame			COVER SUB-ASSY, rear seat back	267	65 E
service hole	225	55 K	COVER SUB-ASSY, rear seat back		
COVER, engine room under, LH	139	35 BE	(For U S A)	267	65 E
COVER, engine room under, LH	145	36 BD	COVER SUB ASSY, rear seat back		
COVER, engine room under, RH	139	35 BE	holder	269	65 L
COVER, engine room under, RH	145	36 BD	COVER SUB-ASSY, rear seat cushion	267	65 F
COVER, frame	203	51 H	COVER SUB-ASSY, rear seat cushion		
COVER, front door window			For U S A)	267	65 F
regulator hole	191	46 Z	COVER SUB-ASSY, roof ventilator		
COVER, front floor 2nd crossmember	203	51 G	Excludes U S A)	181	44 P
COVER, front floor 2nd			COVER SUB-ASSY, sector shaft end	53	14 V
crossmember (U S A	203	51 G	COVER SUB-ASSY, spare tire	259	63 S
COVER, fuel tank inspection hole	203	51 L	COVER SUB ASSY, spare tire	265	64 AH
COVER, gasoline tank inlet hole	215	52 AW	COVER SUB-ASSY, tool box	179	43 BH
COVER, gasoline tank inlet pipe set	197	48 G	COVER SUB-ASSY, transmission	177	43 AP
COVER, gear housing end	53	14 Z	COVER SUB-ASSY, transmission	205	51 Y
COVER, headlamp dimmer switch	95	25 AA	COVER SUB ASSY, transmission		
COVER, inside panel front, LH	213	52 AC	For U S A	205	51 Y
COVER, inside panel front, RH	213	52 AC	COVER SUB-ASSY, transmission		
COVER, inside panel rear, LH	213	52 AD	(OPT) (For change lever &		
COVER, inside panel rear, RH	213	52 AD	transfer control lever	177	43 AP
COVER, inspection lamp consent	99	27 M	COVER SUB-ASSY, transmission		
COVER, lift gate hinge outer	213	52 Y	(OPT) (For change lever &		
COVER, shifting lever (OPT)	177	43 AS	transfer control lever	205	51 Y
COVER, shifting lever (OPT)	205	51 AB	COVER SUB-ASSY, transmission		
COVER, stabilizer bracket	45	13 X	OPT (For change lever, transfer		
COVER, switch	207	51 BC	control lever & power take off		
COVER, tail gate hinge	249	60 AQ	control lever A)	177	43 AP
COVER, tail gate inner panel	245	59 L			
COVER, transmission under	140	35 BF			

ALPHABETICAL INDEX

299

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
COVER SUB-ASSY, transmission (OPT For change lever, transfer control lever & power take-off control lever A)	205	51 Y	CUSHION, wiper motor bracket	107	29 U
COVER SUB-ASSY, transmission (OPT For change lever, transfer control lever & power take-off control lever A, B)	177	43 AP	CUSHION ASSY, front seat	267	65
COVER SUB ASSY, transmission (OPT For change lever, transfer control lever & power take-off control lever A, B)	205	51 Y	CUSHION ASSY, front seat (For U S A)	267	65
COVER SUB ASSY, transmission (OPT For power take-off control lever A)	177	43 AP	CUSHION ASSY, rear seat	267	65
COVER SUB ASSY, transmission (OPT For power take-off control lever A)	205	51 Y	CUSHION ASSY, rear seat (For U S A)	267	65
COVER SUB ASSY, transmission (OPT For power take-off control lever A, B)	205	51 Y	CUSHION SUB-ASSY, rear seat	267	65
COVER SUB ASSY, transmission (OPT For power take-off control lever A, B)	205	51 Y	CUSHION SUB-ASSY, rear seat (For U S A)	267	65
COWL ASSY	155	38	CYLINDER ASSY, back door lock	99	27 U
COWL ASSY	197	48 A	CYLINDER & KEY SET ASSY	83	20
COWL ASSY For U S A	197	48 A	CYLINDER & KEY SET ASSY, door & ignition	83	20
COWL ASSY (OPT)	155	38	D		
COWL SUB ASSY	155	38 J			
COWL SUB-ASSY OPT	155	38 J	DAMPER, air	121	32 BT
CRANK SUB-ASSY, windshield wiper link	107	29 Q	DAMPER, cowl ventilator	201	50 C
CROSSMEMBER, frame, No 2	137	35 V	DAMPER ASSY, cowl ventilator	201	50
CROSSMEMBER, frame, No 2	143	36 V	DEFLECTOR, dust	47	13 BE
CROSSMEMBER, frame rear	139	35 Z	DOOR ASSY, back, LH	253	61 G
CROSSMEMBER, frame rear	145	36 AE	DOOR ASSY, front, LH	221	54
CROSSMEMBER SUB-ASSY, frame, front	139	35 AV	DOOR ASSY, front, LH	225	55
CROSSMEMBER SUB-ASSY, frame, front	145	36 AU	DOOR ASSY, back, RH	185	45
CUP, spider bearing	39	12 F	DOOR ASSY, front, RH	221	54
CUSHION	149	37 L	DOOR ASSY, front, RH	225	55
CUSHION	193	47 U	DOOR ASSY, back, RH	253	61 Q
CUSHION	271	65 AH	DOOR ASSY, LH	189	46
CUSHION (Excludes U S A	205	51 AL	DOOR ASSY, rear, LH	237	57
CUSHION, door glass down stopper	193	47 Z	DOOR ASSY, rear, LH (For U S A)	237	57
CUSHION, exhaust pipe	23	5 L	DOOR ASSY, rear, RH	237	57
CUSHION, hood hinge seat	149	37 S	DOOR ASSY, rear, RH (For U S A)	189	46
CUSHION, jack holder	203	51 C	DOOR SUB ASSY, cowl ventilator	199	49 H
CUSHION, rear swing gate, center	175	43 Y	DOOR SUB-ASSY, glove compartment	161	40 U
CUSHION, rear swing gate, lower LH	175	43 W	DOOR SUB-ASSY, rear, LH	237	57
CUSHION, rear swing gate, lower RH	175	43 W	DOOR SUB-ASSY, rear, LH (For U S A)	237	57
CUSHION, rear swing gate, side	175	43 T	DOOR SUB ASSY, rear, RH	237	57
CUSHION, rubber (Excludes U S A)	199	49 D	DOOR SUB-ASSY, rear, RH (For U S A)	237	57
CUSHION, tool box, A	173	43 P	DUCT air	119	32 AT
CUSHION, tool box, B	179	43 BG	DUCT air	121	32 BM
CUSHION, windshield wiper frame	103	28 W	DUST-PROOF, steering column hole	51	14 M
			DUST-PROOF, steering column hole (For U S A)	51	14 M
			DUST-PROOF, steering column hole (OPT)	51	14 M
			DUST-PROOF ASSY, shifting lever hole (OPT)	177	43 AR
			DUST PROOF ASSY, shifting lever hole (OPT)	205	51 AA
			DUSTER RUBBER, rear tire outer apron	207	51 AU

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
E			FRAME, side inner rear, LH (For U S A)	211	52 T
ELBOW	117	32 V	FRAME, side inner rear, RH	211	52 T
ESCUTCHEON SUB-ASSY, door inside handle	255	62 B	FRAME, side inner rear, RH For U S A)	211	52 T
ESCUTCHEON SUB-ASSY, door regulator handle	231	56 F	FRAME, side outer center, LH	211	52 O
ESCUTCHEON SUB-ASSY, door regulator handle	243	58 AS	FRAME, side outer center, LH (For U S A)	211	52 O
F			FRAME, side outer center, RH	211	52 O
FAN, blower	117	32 AA	FRAME, side outer center, RH (For U S A)	211	52 O
FENDER ASSY, front, LH	151	37	FRAME, side outer front, LH	211	52 R
FENDER ASSY, front, LH (For U S A)	151	37	FRAME, side outer front, RH	209	52 I
FENDER ASSY, front, RH	151	37	FRAME, side outside	211	52 Q
FENDER SUB-ASSY, front, LH	151	37 Z	FRAME, side outside rear, LH	211	52 U
FENDER SUB-ASSY, front, LH (For U S A.)	151	37 Z	FRAME, side outside rear, RH	211	52 U
FENDER SUB-ASSY, front, RH	151	37 Z	FRAME, side upper center, LH	213	52 AE
FITTING, grease, small	39	12 G	FRAME, side upper center, LH (For U S A)	213	52 AE
FLANGE, exhaust pipe gasket	23	5 E	FRAME, side upper center, RH	211	52 M
FLANGE, rear axle housing	45	13 AM	FRAME, side upper center, RH (For U S A)	211	52 M
FLANGE, universal joint	49	13 BF	FRAME, side upper front, LH	211	52 S
FLASHER ASSY, turn signal	93	23 M	FRAME, side upper front, LH (For U S A)	211	52 S
FLOOR, front floor rear	207	51 AR	FRAME, side upper front, RH	209	52 J
FLOOR, front, front LH	205	51 AO	FRAME, side upper front, RH For U S A	209	52 J
FLOOR, front, front RH	203	51 B	FRAME, side upper rear, LH	213	52 AH
FLOOR, front, front RH (For U S A)	203	51 B	FRAME, side upper rear, RH	213	52 AH
FLOOR ASSY	197	48 D	FRAME, windshield wiper motor	111	30 AC
FLOOR ASSY, front	203	51	FRAME & BACK ASSY, front seat	269	65 T
FLOOR ASSY, front (For U S A)	203	51	FRAME & BACK ASSY, front seat (For U S A)	269	65 T
FLOOR ASSY, rear	203	51	FRAME SUB-ASSY	137	35
FLOOR ASSY, rear (For U S A)	203	51	FRAME SUB-ASSY	143	36
FLOOR SUB-ASSY, front, LH	177	43 AZ	FRAME SUB-ASSY, front door		
FLOOR SUB-ASSY, front, RH	173	43 J	ventilator, LH	223	54 W
FLOOR SUB-ASSY, rear floor	173	43 Q	FRAME SUB-ASSY, front door ventilator, LH	227	55 Z
FLOOR SUB-ASSY, rear floor (For U S A.)	173	43 Q	FRAME SUB-ASSY, front door ventilator, RH	223	54 W
FLOOR SUB-ASSY, rear front	203	51 J	FRAME SUB-ASSY, front door ventilator, RH	227	55 Z
FLOOR SUB-ASSY, rear front (For U S A)	203	51 J	FRAME SUB-ASSY, front door window, LH	191	46 T
FLOOR SUB ASSY, rear, rear	203	51 O	FRAME SUB-ASSY, front door window, RH	191	46 T
FLOOR SUB-ASSY, rear, rear (OPT)	203	51 O	FRAME SUB-ASSY, rear seat back	269	65 J
FRAME, front ventilating window glass, A	189	46 N	FRAME SUB-ASSY, rear seat back (For U S A)	269	65 J
FRAME, fuel tank set, front	25	8 Z	FRAME SUB-ASSY, side front, LH	211	52
FRAME, fuel tank set, rear	25	8 AD	FRAME SUB-ASSY, side front, LH (For U S A)	211	52
FRAME, side inner front, LH	211	52 P	FRAME SUB-ASSY, side front, RH	209	52
FRAME, side inner front, LH (For U S A)	211	52 P	FRAME SUB-ASSY, side front, RH (For U S A)	209	52
FRAME, side inner front, RH	211	52 P			
FRAME, side inner front, RH (For U S A)	211	52 P			
FRAME, side inner rear, LH	211	52 T			

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
FRAME SUB-ASSY, ventilator window glass, LH B	189	46 N	GEAR, differential ring (N-37) (For gear ratio 3.7:1)	47	13 AS
FRAME SUB-ASSY, ventilator window glass, RH B	189	46 N	GEAR, differential ring N 37) (For gear ratio 4.11:1)	47	13 AS
FRAME SUB-ASSY, windshield	165	41 P	GEAR, differential side N 16)	45	13 AH
FRAME SUB-ASSY, windshield	169	42 F	GEAR, tail gate lock striker, LH	247	60 C
FRAME SUB-ASSY, windshield (OPT)	169	42 F	GEAR, tail gate lock striker, RH	247	60 C
FUSE (5 amp)	93	25	GEAR, windshield wiper motor	111	30 D
FUSE 15 amp)	93	25	GLASS, back door window	253	61 J
FUSE 30 amp)	93	25	GLASS, door window (For USA)	189	46 H
G			GLASS, front door	189	46 H
GAGE ASSY, fuel receiver	83	20 Z	GLASS, front door	223	54 AI
GAGE ASSY, fuel sender	25	8 S	GLASS, front door	227	55 AL
GAGE ASSY, oil pressure receiver	25	20 U	GLASS, front door ventilator	221	54 U
GAGE ASSY oil pressure sender	83	20 AC	GLASS, front door ventilator	227	55 X
GAGE ASSY, temperature receiver	83	20 W	GLASS, front ventilator window	191	46 S
GAGE ASSY, water temperature sender	81	20 L	GLASS, front ventilator window For USA	191	46 S
GARNISH, roof ventilator opening flange	181	44 O	GLASS, front window	217	53 I
GARNISH, side rail front, LH	215	52 AO	GLASS, front window (For USA)	217	53 I
GARNISH, side rail front, RH	215	52 AO	GLASS, lift gate window	245	59 F
GARNISH, side rail rear	215	52 AR	GLASS, lift gate window (For USA)	245	59 F
GASKET	25	8 B	GLASS, rear door	237	57 N
GASKET	25	8 E	GLASS, rear door (For USA)	237	57 N
GASKET	27	8 AN	GLASS, rear upper door	185	45 F
GASKET	43	13 P	GLASS, rear upper door (For USA)	185	45 F
GASKET	59	15 AK	GLASS, side window	181	44 W
GASKET	63	16 AN	GLASS, side window	219	53 AA
GASKET (For drain plug)	43	13 L	GLASS, side window (For USA)	181	44 W
GASKET, blower case	117	32 Y	GLASS, side window (For USA)	219	53 AA
GASKET, blower case	117	32 Z	GLASS, windshield	165	41 M
GASKET, blower case	119	32 AM	GLASS, windshield	169	42 C
GASKET, blower motor	119	32 AE	GRILLE, radiator	151	37 AC
GASKET, differential carrier thk -0.2	47	13 AY	GRIP, door	191	46 X
GASKET, exhaust pipe	23	5 D	GRIP, instrument panel safety hand	161	40 L
GASKET, fuel tank gage	25	8 T	GROMMET	25	8 I
GASKET, gear housing end cover thk 0.3, 0.2, 0.1	53	14 AC	GROMMET	85	21 D
GASKET, gear housing end cover (thk -0.5)	53	14 AC	GROMMET	85	21 E
GASKET, sector shaft end cover thk. 0.5)	53	14 W	GROMMET	85	21 U
GATE ASSY, lift	245	59	GROMMET	85	21 V
GATE ASSY, lift (For USA)	245	59	GROMMET	87	22 D
GATE ASSY, rear swing, LH	175	43	GROMMET	87	22 E
GATE ASSY, rear swing, RH	175	43	GROMMET	87	22 T
GATE ASSY, tail	245	59	GROMMET	89	23 D
GATE SUB-ASSY, lift inner	245	59 B	GROMMET	89	23 E
GATE SUB-ASSY, lift inner (For USA)	245	59 B	GROMMET	89	23 G
GATE SUB-ASSY, rear swing, LH	175	43 U	GROMMET	89	23 U
GATE SUB-ASSY, rear swing, RH	175	43 U	GROMMET	89	23 V
			GROMMET	89	23 W
			GROMMET	91	24 D
			GROMMET	91	24 E
			GROMMET	91	24 S
			GROMMET	91	24 T
			GROMMET	119	32 BC
			GROMMET	123	33 K
			GROMMET	123	33 M
			GROMMET	149	37 C

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
GROMMET	163	40 AB	HANDLE SUB ASSY, door outside, LH	241	58 E
GROMMET	207	51 AZ	HANDLE SUB-ASSY, door outside, RH	241	58 E
GROMMET (For rain leader hose)	201	50 P	HANDLE SUB-ASSY, door regulator	235	56 AY
GROMMET (For wiring harness)	85	21 F	HANDLE SUB-ASSY, door regulator	243	58 AY
GROMMET (For wiring harness)	87	22 S	HANGER, release fork retracting		
GROMMET (For wiring harness)	89	23 J	spring	37	11 R
GROMMET (For wiring harness)	91	24 R	HANGER SUB-ASSY, battery	137	35 N
GROMMET, cab wiring harness	85	21 B	HANGER SUB-ASSY, battery	143	36 M
GROMMET, cab wiring harness	87	22 B	HARNESS ASSY, chassis wire	87	22 N
GROMMET, cab wiring harness	89	23 B	HARNESS ASSY, chassis wire	89	23 O
GROMMET, cab wiring harness	91	24 B	HARNESS ASSY, chassis wire	91	24 L
GROMMET, steering column	53	14 P	HARNESS ASSY, license lamp wire	85	21 P
GUARD SUB-ASSY, rear bumper	139	35 AK	HARNESS ASSY, license lamp wire	87	22 P
GUIDE, defloster (OPT)	169	42 R	HARNESS ASSY, license lamp wire	89	23 P
GUM, bushing (For front floor			HARNESS ASSY, license lamp wire	91	24 O
panel hole)	173	43 K	HARNESS ASSY, room lamp wire	85	21 M
GUSSET, front bumper, LH	137	35 B	HARNESS ASSY, room lamp wire	87	22 L
GUSSET, front bumper, LH	143	36 B	HARNESS ASSY, room lamp wire	89	23 M
GUSSET, front bumper, RH	137	35 B	HARNESS ASSY, room lamp wire	91	24 K
GUSSET, front bumper, RH	143	36 B	HARNESS ASSY, room lamp wire		
GUSSET, front bumper, upper	137	35 A	(For U S A)	91	24 K
GUSSET, front bumper, upper	143	36 A	HARNESS ASSY, windshield		
			wiper wire	85	21 G
H			HARNESS ASSY, windshield		
			wiper wire	87	22 J
HANDLE, door	233	56 AO	HARNESS ASSY, windshield		
HANDLE, door inside	243	58 AT	wiper wire	89	23 I
HANDLE, door inside	255	62 A	HARNESS ASSY, windshield		
HANDLE, door inside pull	221	54 L	wiper wire	91	24 G
HANDLE, door inside pull	225	55 L	HARNESS ASSY, wiring cowl	85	21 C
HANDLE, door inside pull	237	57 J	HARNESS ASSY, wiring cowl	87	22 C
HANDLE, door ventilating window,			HARNESS ASSY, wiring cowl	89	23 C
LH	225	55 S	HARNESS ASSY, wiring cowl	91	24 C
HANDLE, door ventilating window,			HARNESS ASSY, wiring cowl OPT	85	21 C
RH	225	55 S	HARNESS ASSY, wiring cowl (OPT	87	22 C
HANDLE, front door ventilator, LH	221	54 Q	HARNESS ASSY, wiring cowl (OPT)	89	23 C
HANDLE, front door ventilator, RH	221	54 Q	HARNESS ASSY, wiring cowl OPT)	91	24 C
HANDLE ASSY, door lock, LH	195	47	HARNESS SUB-ASSY, license lamp		
HANDLE ASSY, door lock outside,			connecting wire (OPT)	85	21 P
LH w key	231	56	HARNESS SUB-ASSY, license lamp		
HANDLE ASSY, door lock outside,			connecting wire (OPT)	87	22 P
RH w key)	231	56	HARNESS SUB-ASSY, license lamp		
HANDLE ASSY, door lock, RH	195	47	connecting wire (OPT)	89	23 P
HANDLE ASSY, door outside, LH	231	56	HARNESS SUB-ASSY, license lamp		
HANDLE ASSY, door outside, LH	241	58	connectig wire (OPT)	91	24 O
HANDLE ASSY, door outside, RH	241	58	HARNESS SUB-ASSY, license		
HANDEL ASSY, door outside, RH	255	62 V	lamp wire (OPT)	85	21 P
HANDLE ASSY, door outside, RH			HARNESS SUB ASSY, license		
(w key)	231	56	lamp wire (OPT)	87	22 P
HANDLE SUB-ASSY, cowl ventilator	199	49 U	HARNESS SUB-ASSY, license		
HANDLE SUB-ASSY, door inside, LH	195	47 AG	lamp wire OPT	89	23 P
HANDLE SUB-ASSY, door inside, RH	195	47 AG	HARNESS SUB-ASSY, license lamp		
HANDLE SUB-ASSY, door lock			wire OPT	91	24 O
outside, LH	231	56 G	HEADINING SUB-ASSY, roof leather	263	64 I
HANDLE SUB-ASSY, door lock			HEADLAMP-ASSY 12V 50 40W	93	25 C
outside, RH	231	56 G	HEATER & ACCESSORY ASSY	115	31
HANDLE SUB-ASSY, door outside	195	47 AL	HEATER & ACCESSORY ASSY	117	32

ALPHABETICAL INDEX

303

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
HEATER & ACCESSORY ASSY	123	33	HINGE SUB-ASSY, rear upper		
HEATER ASSY	115	31 X	door center, B	187	54 AD
HEATER ASSY	123	33 H	HINGE SUB-ASSY, tail gate	249	60 AR
HINGE, cowl ventilator door, LH	199	49 V	HINGE SUB-ASSY, tool box lock	173	43 O
HINGE, cowl ventilator door, RH	199	49 V	HINGE SUB-ASSY, windshield		
HINGE, cowl ventilator, female	199	49 W	support, LH	167	41 AE
HINGE, front door, lower female	233	56 AV	HINGE SUB-ASSY, windshield		
HINGE, front door, lower male	233	56 AW	support, LH	171	42 AD
HINGE, front door, upper	231	56 D	HINGE SUB-ASSY, windshield		
HINGE, front door upper, female	233	56 AE	support, RH	167	41 AC
HINGE, rear upper door, female	185	45 V	HINGE SUB-ASSY, windshield		
HINGE, radiator cover support	151	37 AG	support, RH	171	42 W
HINGE, rear door female, lower	243	58 AG	HOLDER, door outside handle key	231	56 N
HINGE, rear door female, upper	241	58 A	HOLDER, front door ventilator, inner	221	54 G
HINGE, rear door male, lower	243	58 AI	HOLDER, front door ventilator, inner	225	55 G
HINGE, rear door male, upper	241	58 B	HOLDER, front door ventilator, outer	221	54 F
HINGE, rear seat female	271	65 AE	HOLDER, front door ventilator, outer	225	55 F
HINGE, rear seat male	271	65 AF	HOLDER, rear seat back stopper	269	65 K
HINGE ASSY, front door, LH	193	47 AC	HOLDER, roof ventilator spring		
HINGE ASSY, front door, RH	193	47 A	(Excludes U S A)	199	49 E
HINGE MALE SUB-ASSY, rear			HOLDER SUB-ASSY, door glass, LH	235	56 BA
upper door, LH	185	45 Q	HOLDER SUB-ASSY, door glass, RH	235	56 BA
HINGE MALE SUB-ASSY, rear			HOLDER SUB-ASSY, door glass, RH	243	58 AR
upper door, RH	185	45 Q	HOLDER SUB ASSY, jack	203	51 E
HINGE SUB-ASSY, back door, LH	257	62 AO	HOLDER SUB-ASSY, wiper motor	113	30 AE
HINGE SUB-ASSY, back door, RH	255	62 AF	HOOD ASSY	149	37
HINGE SUB-ASSY, front door,			HOOD ASSY (OPT)	149	37
lower LH	233	56	HOOD SUB ASSY	149	37 T
HINGE SUB-ASSY, front door,			HOOD SUB-ASSY (OPT)	149	37 T
lower RH	233	56	HOOK	139	35 AR
HINGE SUB ASSY, front door,			HOOK	145	36 AQ
upper LH	233	56	HOOK, front window catch upper	167	41 AH
HINGE SUB-ASSY, front door,			HOOK, front winPow catch upper	171	42 X
upper RH	233	56	HOOK, rear upper door stay	187	45 AK
HINGE SUB-ASSY, hood	149	37 Q	HORN ASSY, high pitched	93	25 E
HINGE SUB-ASSY, lift gate	247	60 U	HORN ASSY, low pitched	93	25 F
HINGE SUB-ASSY, rear swing			HOSE	119	32 AU
gate, LH	175	43 AJ	HOSE	119	32 BE
HINGE SUB-ASSY, rear swing			HOSE	123	33 I
gate, RH	175	43 AJ	HOSE	123	33 J
HINGE SUB-ASSY, rear door,			HOSE	123	33 L
lower LH	243	58	HOSE	123	33 P
HINGE SUB-ASSY, rear door,			HOSE (net	117	32 T
lower RH	243	58	HOSE (Outlet)	117	32 T
HINGE SUB-ASSY, rear door,			HOSE, defroster	115	31 J
upper LH	241	58	HOSE, defroster	115	31 P
HINGE SUB-ASSY, rear door,			HOSE, defroster	117	32 E
upper RH	241	58	HOSE, defroster	117	32 I
HINGE SUB-ASSY, rear seat back, LH	271	65 AJ	HOSE, flexible	37	11 P
HINGE SUB-ASSY, rear seat			HOSE, flexible	61	16 S
back, LH (For U S A)	271	65 AJ	HOSE, flexible	57	15 Q
HINGE SUB-ASSY, rear seat			HOSE, rain leader	201	50 A
back, RH	271	65 AJ	HOSE, water	115	31 B
HINGE SUB-ASSY, rear seat			HOSE, water	115	31 F
back, RH (For U S A)	271	65 AJ	HOSE, water	115	31 H
HINGE SUB-ASSY, rear upper			HOSE, water	119	32 AY
door center, A	187	45 AF	HOSE, water	119	32 AZ

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
HOUSING ASSY, rear axle	45	13 S	LAMP ASSY, dome (For U S A)	95	25 R
HOUSING SUB-ASSY, rear axle	45	13 S	LAMP ASSY, dome (For U S A)	97	26
HOUSING SUB-ASSY, steering gear	53	14 AE	LAMP ASSY, fog (12V 35W) OPT	93	25 A
HOUSING SUB-ASSY, turn indicator lamp	81	20 G	LAMP ASSY, front drive indicator	81	20
I			LAMP ASSY, front turn signal	93	25 G
INNER ASSY, cowl side, LH	215	52	LAMP ASSY, front turn signal	97	26
INNER ASSY, cowl side, RH	213	52	LAMP ASSY, inspection	99	27 K
INNER ASSY, cowl side, RH (For U S A)	213	52	LAMP ASSY, license w tail gate handle	95	25 U
INNER ASSY, side, LH	211	52	LAMP ASSY, license w tail gate handle	99	27
INNER ASSY, side, LH (For U S A)	211	52	LAMP ASSY, pillar	95	25 Q
INNER ASSY, side, RH	211	52	LAMP ASSY, pillar	97	26
INNER ASSY, side, RH (For U S A)	211	52	LAMP ASSY, rear combination, LH	95	25 X
INSERT, front ventilating window glass	191	46 R	LAMP ASSY, rear combination, LH	99	27
INSERT, gate lock striker plate	249	60 AA	LAMP ASSY, rear combination, RH	95	25 S
INSERT ASSY, gate lock striker plate, LH	247	60 K	LAMP ASSY, rear combination, RH	99	27
INSERT ASSY, gate lock striker plate, RH	247	60 K	LAMP ASSY, turn signal indicator	81	20
INSULATOR SUB-ASSY, L column tube bushing	53	14 Q	LATCH, rear swing gate lock	175	43 AC
INSULATOR SUB-ASSY, W column tube bushing	53	14 Q	LEAF, rear spring No 1	67	18
J			LEAF, rear spring No 2	67	18
JOINT, water hose drain	115	31 D	LEAF, rear spring No 3	67	18
JOINT, water hose through	115	31 U	LEAF, rear spring No 5	67	18
JOINT ASSY, universal, w yckle	39	12	LEAF, rear spring No 6	67	18
JOINT SUB-ASSY, water hose valve	115	31 G	LEAF, rear spring No 8	67	18
JOINT SUB-ASSY, water hose valve	117	32 G	LEAF, rear spring No 9	67	18
JOINT SUB-ASSY, water hose valve	117	32 W	LEAF SUB-ASSY, rear spring, w clip	67	18
K			LEAF SUB-ASSY, rear spring, w clip No 2	67	18
KEY ASSY, front door lock (40V—RH door, 40LV LH door	195	47 AK	LENS, dome lamp (For U S A)	97	26 P
KEY ASSY, front door lock (OPT 40V RH door, 40LV door	195	47 AK	LENS, front turn signal lamp	97	26 B
KEY SUB-ASSY, door lock outside handle	231	56 I	LENS, license lamp	101	27 Y
KNOB, door lock key (40V—LH door, 40LV—RH door	195	47 AH	LENS, pillar lamp	97	26 F
KNOB, front ventilating window open stopper	189	46 D	LENS, rear combination lamp, LH	99	27 C
KNOB, glove compartment	161	40 A	LENS, rear combination lamp, RH	99	27 C
L			LEVER, back door lock control lower	257	62 AT
LAMP, transfer indicator signal	81	20 A	LEVER, back door lock control upper	255	62 M
LAMP ASSY (For parking) 12V 25 8W) (32 4cp)	93	25 B	LEVER ASSY, rear upper door lock outer, LH	185	45
LAMP ASSY, courtesy	81	20 R	LEVER ASSY, rear upper door lock outer, RH	185	45
			LEVER SUB-ASSY, gate lock control	249	60 AV
			LEVER SUB ASSY, rear upper door lock outer	185	45 E
			LID SUB-ASSY, roof ventilator (Excludes U S A)	199	49 B
			LIGHTER ASSY, cigarette	81	20 M
			LIGHTER ASSY cigarette (For U S A)	81	20 M
			LINER, tail gate lock check (thk —23, 16)	247	60 A
			LINK ASSY, windshield wiper	103	28
			LINK ASSY, windshield wiper	107	29
			LINK SUB-ASSY, cowl venti damper	201	50 V
			LINK SUB-ASSY, stabilizer	43	13 E
			LOCK, differential bearing adjusting nut	45	13 AQ
			LOCK ASSY, door, LH	195	47 AJ

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
LOCK ASSY, door, LH	235	56 BD	MOTOR ASSY, windshield wiper	169	42 G
LOCK ASSY, door, LH	243	58 AB	MOTOR & LINK ASSY, windshield	107	29
LOCK ASSY, door, LH			MOTOR SUB-ASSY, blower	119	32 AD
(For trial gate)	249	60 AF	MUFFLER ASSY	23	5 J
LOCK ASSY, door, RH	195	47 AJ			
LOCK ASSY, door, RH	231	56 U	N		
LOCK ASSY, door, RH	241	58 R			
LOCK ASSY, door, RH	257	62 BE	NET, air duct	121	32 BR
LOCK ASSY, door, RH			NOZZLE SUB-ASSY, defroster,		
(For trial gate)	249	60 AF	LH (OPT)	169	42 Q
LOCK ASSY, fuel tank cap	25	18 A	NOZZLE SUB-ASSY, defroster, LH	209	52 F
LOCK ASSY, lift gate, LH	247	60 H	NOZZLE SUB-ASSY, defroster, LH		
LOCK ASSY, lift gate, RH	247	60 H	(For U.S.A.)	209	52 F
LOCK ASSY, rear door	257	62	NOZZLE SUB-ASSY, defroster,		
LOCK ASSY, rear door, LH	195	47 AJ	RH (OPT)	169	42 Q
LOCK ASSY, rear door, RH	195	47 AJ	NOZZLE SUB-ASSY, defroster, RH	209	52 F
LOCK ASSY, rear drop gate	175	43 AE	NOZZLE SUB-ASSY, defroster, RH		
LOCK ASSY, rear upper door, LH	187	45 AJ	(For U.S.A.)	209	52 F
LOCK ASSY, rear upper door, RH	187	45 AC	NUT	119	32 AB
LOCK SUB-ASSY, back door, LH	255	62 L	NUT, castle	49	13 BH
			NUT, differential bearing adjusting	45	13 AC
M			NUT, hexagon	51	14 I
			NUT, hexagon	53	14 T
MAT, step, LH	157	38 Y	NUT, hexagon	67	17 AD
MAT, step, RH	157	38 Y	NUT, hexagon	227	55 V
MAT ASSY, floor front	259	63 AB	NUT, manifold clamp & exhaust		
MAT ASSY, floor front	263	64 AB	pipe set	23	5 A
MAT ASSY, floor front (OPT)	261	63 AB	NUT, speed	245	59 C
MAT ASSY, floor rear	261	63 AG	NUT, windshield wiper	107	29 C
MAT ASSY, floor rear	265	64 AF	NUT, windshield wiper	107	29 H
MEMBER, rear diagonal, LH	139	35 AA	NUT, windshield wiper arm lock	105	28 AH
MEMBER, rear diagonal, LH	145	36 X	NUT, windshield wiper motor	111	30 F
MEMBER, rear diagonal, RH	139	35 AA	NUT, wing	137	35 M
MEMBER, rear diagonal, RH	145	36 X	NUT, wing	143	36 N
MEMBER, spare wheel set	139	35 Y	NUT, wiper arm shaft pipe	103	28 H
MEMBER, spare wheel set	143	36 W	NUT SUB-ASSY, spare tire set	203	51 P
MEMBER SUB-ASSY, rear shock					
absorber upper support	137	35 X	O		
MEMBER SUB-ASSY, rear shock					
absorber upper support	147	36 BK	ORNAMENT, cowl ventilator	201	50 H
METER ASSY, combination (Km)	83	20 V	ORNAMENT, rear body		
METER Assy, combination (Mile)	83	20 V	4 wheel drive	259	63 N
MIRROR ASSY, inner rear view	165	41 R	ORNAMENT, rear body		
MIRROR ASSY, inner rear view	169	42 H	4 wheel drive	263	64 Q
MIRROR ASSY, outer view	169	42	ORNAMENT SUB-ASSY, hood	259	63 A
MIRROR ASSY, rear view inside	217	53 N	ORNAMENT SUB-ASSY, hood	263	64 A
MIRROR ASSY, rear view outside	165	41	ORNAMENT SUB-ASSY, hood		
MIRROR ASSY, rear view outside	217	53 C	side panel	259	63 Z
MIRROR ASSY, rear view outside			ORNAMENT SUB-ASSY, hood		
(Excludes U.S.A.)	217	53	side panel	263	64 AA
MIRROR SUB-ASSY, outer rear view	165	41 E	ORNAMENT SUB-ASSY,		
MIRROR SUB-ASSY, outer rear view	169	42 P	radiator grille	153	37 AN
MIRROR SUB-ASSY, outer rear view	217	53 C			
MOTOR ASSY, windshield wiper	105	28 AG	P		
MOTOR ASSY, windshield wiper	109	29 Z			
MOTOR ASSY, windshield wiper	111	30	PACKING, battery set plate	137	35 K
MOTOR ASSY, windshield wiper	165	41 Q	PACKING, battery set plate	143	36 K

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
PACKING, body	99	25 S	PAD, floor silencer front, RH	259	63 AA
PACKING, door lock striker plate	233	56 AC	PAD, front vent window handle		
PACKING, door lock striker plate	243	58 Z	shaft plate	227	55 AA
PACKING, door lock striker plate	257	62 BA	PAD, hood ornament set	263	64 B
PACKING, front door glass			PAD, hood ornament set	259	63 B
channel, lower	221	54 J	PAD, pedal	37	11 V
PACKING, front door glass			PAD, Plate body rear name	261	63 AH
channel, lower	225	55 J	PAD, Plate body, radar name	265	64 AI
PACKING, front turn signal lamp	97	26 C	PAD, rear body ornament		
PACKING, front turn signal			4-wheel drive	259	63 M
lamp body	97	26 M	PAD, rear seat back stop	269	65 S
PACKING, fuel tank outer inlet pipe	25	8 H	PAD, rear view mirror stay bracket		
PACKING, glovecompartment door	161	40 E	(Excludes U S A)	219	53 AC
PACKING, lens	99	27 W	PAD, separator adjust		
PACKING, pillar lamp body	97	26 J	(Excludes U S A)	217	53 P
PACKING, rear combination lamp			PANEL, control	117	32 B
body, LH	99	27 G	PANEL, cowl side inner, LH	215	52 AL
PACKING, rear combination lamp			PANEL, cowl side inner, RH	215	52 AK
body, RH	99	27 G	PANEL, cowl side inner, RH		
PACKING, rear combination lamp			(For U S A)	215	52 AK
lens, LH	99	27 E	PANEL, cowl side, LH	215	52 AM
PACKING, rear combination lamp			PANEL, cowl side, RH	213	52 AJ
lens, RH	99	27 E	PANEL, cowl side, RH (For U S A)	213	52 AJ
PACKING, rear upper side panel set	183	44 AC	PANEL, front door outer, LH	223	54 AU
PACKING, reflex reflector, LH	219	53 AK	PANEL, front door outer, LH	229	55 AV
PACKING, reflex reflector, RH	219	53 AK	PANEL, front door outer, RH	223	54 AU
PACKING, roof shield, A	181	44 N	PANEL, front door outer, RH	229	55 AV
PACKING, roof shield, B	181	44 T	PANEL, front floor center	177	43 BA
PACKING, roof ventilator			PANEL, inside center lower, LH	215	52 BC
(Excludes U S A)	199	49 A	PANEL, inside center lower, RH	215	52 BC
PACKING, roof ventilator			PANEL, inside front lower, LH	215	52 AX
(Excludes U S A)	181	44 Q	PANEL, inside front lower, RH	215	52 AX
PACKING, tail gate inner			PANEL, lift gate outer	245	54 D
panel cover	245	59 M	PANEL, rear door outer, LH	239	57 V
PACKING, tail gate supporter	245	59 G	PANEL, rear door outer, RH	239	57 V
PACKING, transmission cover, A	177	43 AX	PANEL, rear floor side, LH	173	43 R
PACKING, transmission cover, A	205	51 Z	PANEL, rear floor side, RH	173	43 R
PACKING, transmission cover, B	177	43 AX	PANEL, rear seat back	267	65 G
PACKING, transmission cover, B	205	51 Z	PANEL, rear seat back (For U S A)	267	65 G
PACKING, transmission cover, C	177	43 AX	PANEL, side upper front, LH	213	52 W
PACKING, transmission cover, C	205	51 AA	PANEL, side upper front RH	213	52 W
PACKING, windshield wiper, A	107	29 E	PANEL, side upper rear LH	213	52 AI
PACKING, windshield wiper arm shaft	103	28 P	PANEL, side upper rear RH	213	52 AI
PACKING, windshield wiper, B	107	29 F	PANEL, step inner, LH	159	39 V
PACKING, windshield wiper			PANEL, step inner, RH	159	39 V
connecting rod felt	103	28 C	PANEL, step outer, LH	159	39 V
PACKING, windshield wiper motor	113	30 AH	PANEL, step outer, RH	159	39 V
PACKING, wiper motor crank			PANEL ASSY, hood side, LH	151	37
housing cover	111	30 G	PANEL ASSY, hood side, RH	151	37
PAD, door lock outside	255	62 O	PANEL ASSY, rear body front		
PAD, door lock outside handle	231	56 M	side, LH	179	
PAD, door outside handle	241	58 J	PANEL, ASSY, rear body front		
PAD, door outside handle small	231	56 H	side, RH	179	
PAD, door outside handle small	241	58 F	PANEL ASSY, rear upper side, LH	183	44 AF
PAD, door outside handle small	255	62-U	PANEL ASSY, rear upper side, RH	183	44 AF
PAD, floor silencer	261	63 AF	PANEL ASSY, roof	181	44 X
PAD, floor silencer front, LH	261	63 AC	PANEL ASSY, roof (For U S A)	181	44 X

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
PANEL SUB-ASSY, back door, lower	187	45 AE	PANEL SUB-ASSY, rear body front		
PANEL SUB-ASSY, back door, upper	185	45 J	outside, RH	179	43 BF
PANEL SUB-ASSY, cowl side, LH	215	52	PANEL SUB-ASSY, rear body rear		
PANEL SUB-ASSY, cowl side, RH	213	52	side, LH	179	43 BN
PANEL SUB-ASSY, cowl side, RH			PANEL SUB-ASSY, rear body rear		
(For U S A)	213	52	side, LH (For U S A)	179	43 BN
PANEL SUB-ASSY, cowl upper	209	52 A	PANEL SUB-ASSY, rear body rear		
PANEL SUB-ASSY, cowl upper			side, RH	179	43 BN
(For U S A)	209	52-A	PANEL SUB-ASSY, rear body rear		
PANEL SUB-ASSY, dash	159	39 W	side, RH (For U S A)	179	43 BN
PANEL SUB-ASSY, dash (For U S A)	159	39 W	PANEL SUB-ASSY, rear door inner,		
PANEL SUB-ASSY, dash (OPT)	159	39 W	LH	237	57 P
PANEL SUB-ASSY, front door,			PANEL SUB-ASSY, rear door inner,		
inner LH	221	54 A	LH (For U S A)	237	57 P
PANEL SUB ASSY, fronnt door,			PANEL SUB-ASSY, rear door inner,		
inner LH	225	55 A	RH	237	57 P
PANEL SUB-ASSY, front door,			PANEL SUB-ASSY, rear door inner,		
inner RH	221	54 A	RH (For U S A)	237	57 P
PANEL SUB-ASSY, front door,			PANEL SUB-ASSY, rear seat cushion	271	65 AI
inner RH	225	55 A	PANEL SUB-ASSY, rear seat		
PANEL SUB-ASSY, front door, LH	191	46 AC	cushion (For U S A)	271	65 AI
PANEL SUB-ASSY, front door, RH	191	46 V	PANEL SUB ASSY, rear skirt (OPT)	205	51 X
PANEL SUB ASSY, hood side, LH	151	37 Y	PANEL SUB-ASSY, roof	197	48 C
PANEL SUB-ASSY, hood side, RH	151	37 Y	PANEL SUB ASSY, tail gate inner	245	59 N
PANEL SUB-ASSY, inside front, LH	211	52 N	PANEL SUB ASSY, tail gate outer	245	59 O
PANEL SUB-ASSY, inside front, LH			PEDAL SUB-ASSY, brake	37	11 U
For U S A)	211	52 N	PEDAL SUB ASSY, clutch	37	11 T
PANEL SUB-ASSY, inside front, RH	211	52 N	PIECE, balance 5g	39	12
PANEL SUB-ASSY, inside front, RH			PIECE, balance (10g)	39	12
(For U S A)	211	52 N	PIECE, balance (20g)	39	12
PANEL SUB-ASSY, inside rear, LH	213	52 AG	PIECE, balance 30g)	39	12
PANEL SUB-ASSY, inside rear, LH			PIECE, radiator grille distance	151	37 AF
For U S A)	213	52 AG	PIECE, refle reflector even	219	53 AJ
PANEL SUB-ASSY, inside rear, LH			PIECE, stabilizer bushing	43	13 B
OPT)	213	52 AG	PILLAR, 1st side inner, LH	215	52 AP
PANEL SUB ASSY, inside rear, RH	211	52 V	PILLAR, 1st side inner, LH		
PANEL SUB ASSY, inside rear, RH			For U S A	215	52 AP
For U S A	211	52 V	PILLAR, 1st side inner, RH	215	52 AP
PANEL SUB-ASSY, inside rear, RH			PILLAR, 1st side inner, RH		
OPT)	211	52 V	(For U S A)	215	52 AP
PANEL SUB-ASSY, instrument	161	40 W	PILLAR, front window side inner, RH	209	52 C
PANEL SUB-ASSY, instrument	209	52 D	PILLAR, front window side inner, RH	209	52 K
PANEL SUB-ASSY, instrument			PILLAR, front window side upper, RH	209	52 B
For U S A	163	40 W	PILLAR, front window side upper, RH	211	52 L
PANEL SUB-ASSY, instrument			PILLAR, inside panel	215	52 AY
(For U S A	209	52 D	PILLAR SUB-ASSY, 1st side, LH	215	52 AQ
PANEL SUB-ASSY, instrument OPT	163	40 W	PILLAR SUB-ASSY, 1st side, LH		
PANEL SUB ASSY, lower, LH	197	48 F	For U S A)	215	52 AQ
PANEL SUB-ASSY, lower, LH OPT)	197	48 F	PILLAR SUB-ASSY, 1st side, RH	215	52 AQ
PANEL SUB ASSY, lower, RH	197	48 F	PILLAR SUB ASSY, 1st side, RH		
PANEL SUB ASSY, lower, RH OPT	197	48 F	For U S A	215	52 AQ
PANEL SUB ASSY, rear body front			PILLAR SUB-ASSY, front side, LH	215	52 AN
inside, LH	179	43 BF	PILLAR SUB-ASSY, front side, RH	215	52 AN
PANEL SUB-ASSY, rear body front			PILLAR SUB-ASSY, rear, LH	213	52 AF
inside, RH	179	43 BF	PILLAR SUB-ASSY, rear, LH OPT	213	52 AF
PANEL SUB-ASSY, rear body front			PILLAR SUB-ASSY, rear, RH	213	52 AF
outside, LH	179	43 BF	PILLAR SUB ASSY, rear, RH (OPT	213	52 AF

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
PILLAR SUB-ASSY, 2nd side, LH	215	52 AT	PIVOT, front door ventilator,		
PILLAR SUB-ASSY, 2nd side, RH	215	52 AT	upper LH	227	55 AD
PIN	37	11 E	PIVOT, front door ventilator,		
PIN, cowl ventilator damper spring	201	50 G	upper RH	223	54 AA
PIN, cowl ventilator door hinge	199	49 X	PIVOT, front door ventilator,		
PIN, cowl ventilator control wire	201	50 U	upper RH	227	55 AD
PIN, differential pinion shaft	45	13 AE	PIVOT, windshield wiper link	107	29 K
PIN, door inside handle	233	56 AR	PIVOT, windshield wiper link	107	29 O
PIN, door inside handle	243	58-AU	PLATE, battery set	137	35 J
PIN, door inside handle	255	62 C	PLATE, battery set	143	36 J
PIN, door lock remote control			PLATE, door lock striker	193	47 I
connect	231	56 X	PLATE, door lock striker, LH	233	56 AB
PIN, door lock remote control			PLATE, door lock striker, LH	243	58-AC
connect	241	58 U	PLATE, door lock striker, RH	233	56 AB
PIN, door lock remote control			PLATE, door lock striker, RH	243	58 X
connect	257	62 BF	PLATE, door lock striker, RH	257	62 BC
PIN, door ventilating window handle			PLATE, door open stopper arm guide	255	62 AH
set	225	55 R	PIPE, back door window protector	253	61 B
PIN, front door hinge	231	56 A	PLATE, front door glass cleandr	223	54 AJ
PIN, front door hinge	243	58 AE	PLATE, front door glass cleandr	227	55 AM
PIN, front door hinge	255	62 AE	PLATE, front door glass outer		
PIN, front door open stopper hinge	193	47 D	weatherstrip, set	189	46 G
PIN, front door ventilator lock			PATEL, front door ventilator holder	221	54 H
handle	221	54 R	PLATE, front door ventilator holder	225	55 H
PIN, gate lock remote control rod	249	60 AY	PLATE, front door weatherstrip		
PIN, glove door stopper	161	40 V	set, LH	261	63 AD
PIN, lift gate hinge	247	60 X	PLATE, front door weatherstrip		
PIN, rear seat hinge	271	65 AG	set, LH	263	64 F
PIN, rear shock absorber lower			PLATE, front door weatherstrip		
pivot	67	17 AF	set, RH	261	63 AD
PIN, rear shock absorber upper			PLATE, front door weatherstrip		
pivot	65	17 G	set, RH	263	64 F
PIN, rear view mirror stay			PLATE, front vent window handle		
(Excludes U S A	217	53 A	lock	227	55 AG
PIN, spring bracket	65	17 Q	PLATE, fuel tank cap lock	25	8 D
PIN, tail gate hinge	249	60 AT	PLATE, fuel tank cap retainer	25	8 F
PIN, windshield wiper motor	111	30 H	PLATE, hood stay hinge	149	37 D
PIN, w hole	185	45 D	PLATE, instrument Panel caution		
PIN, w serration	193	47 B	(Mark English)	161	40 P
PIN SUB ASSY, spring bracket	65	17 T	PLATE, instrument panel caution		
PINION, differential (N 10	45	13 AJ	(Mark English) (OPT)	161	40 P
PINION, differential drive (N-9)			PLATE, instrument panel caution		
(For ratio 4 11 1)	47	13 AT	(Mark Portuguese)	161	40 P
PINION, differential drive (N-10)			PLATE, instrument panel caution		
(For gear ratio 3 7 1)	47	13 AT	(Mark Portuguese) (OPT)	161	40 P
PIPE, fuel tank breather vinyl	27	8 AK	PLATE, instrument panel caution		
PIPE, rear exhaust	23	5 N	(Mark Spanish)	161	40 P
PIPE, wiper arm shaft	103	28 E	PLATE, instrument panel caution		
PIPE, wire harness guide	85	21 Q	(Mark Spanish) (OPT)	161	40 P
PIPE, wire harness guide	87	22 O	PLATE, mudguard set retainer		
PIPE, wire harness guide	89	23 Q	(Excludes U S A)	153	37 AX
PIPE, wire harness guide	91	24 N	PLATE, mudguard set retainer, rear	207	51 AW
PIPE SUB ASSY, front exhaust	23	5 F	PLATE, radiator grille name	259	63 U
PIPE SUB-ASSY, fuel	25	8 X	PLATE, radiator grille name	263	64 V
PIPE SUB-ASSY, fuel tank inlet upper	25	8 G	PLATE, radiator grille ornament set	259	63 V
PIVOT, front door ventilator,			PLATE, radiator grille ornament set	263	64 W
upper LH	223	54 AA	PLATE, radiator shroud	155	38 P

Donated by Dominic Smith cruisercult.com

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
ROD, front ventilator	199	49 R	RUBBER, fuel tank inspection hole		
ROD, gate lock remote control	249	60 AI	cover	203	51 K
ROD, gate lock remote control	251	60 BD	RUBBER, license lamp wire harness		
ROD, radiator brace	155	38 H	bushing	85	21 I
ROD, radiator brace	159	39 H	RUBBER, license lamp wire harness		
ROD, stabilizer end link	43	13 A	bushing	87	22 H
ROD, tail gate lock connect	249	60 AH	RUBBER, license lamp wire harness		
ROD, windshield wiper link	107	29 N	bushing	89	23 H
ROD, windshield wiper link	107	29 P	RUBBER, license lamp wire harness		
ROD ASSY, choke	81	20 T	bushing	91	24 I
ROD ASSY, throttle	81	20 Q	RUBBER, lift gate window	245	59 E
ROD SUB-ASSY, gate lock connect,			RUBBER, mudguard	153	37 AY
No 1	249	60 BA	RUBBER, mudguard, rear	207	51 AX
ROD SUB-ASSY, gate lock connect,			RUBBER, rear door glass cleaner	237	57 F
No 2	249	60 AZ	RUBBER, side window	219	53 Z
ROD SUB-ASSY, lift gate lock			RUBBER, silencer, LH	255	62 N
connect	249	60	RUBBER, silencer, RH	255	62 R
ROD SUB-ASSY, wiper motor	103	28 G	RUBBER SUB-ASSY, exhaust pipe	23	5 H
ROD SUB-ASSY, wiper motor			RUN, front door glass, long	223	54 AG
connecting	103	28 J	RUN, front door glass, long	227	55 AJ
ROLLER	39	12 C	RUN, front door glass, short	223	54 AG
ROLLER, steering sector	51	14 G	RUN, front door glass, short	227	55 AJ
ROLLER, steering sector, No 3	51	14 H	RUN, rear door glass	237	57 E
ROLLER KIT, steering sector	51	14			
ROLLER SUB ASSY, rear upper door	187	45 AN			
ROOF ASSY	197	48			
RUBBER (For rear door window					
glass skirt)	243	58 AQ	SCREEN, cowl ventilator	199	49 I
RUBBER For rear seat back cushion			SCREW	97	26 A
stopper)	271	65 AL	SCREW, license lamp rim set	99	27 V
RUBBER, door bumper	259	63 H	SCREW, rear combination lamp, long	99	27 A
RUBBER, door bumper	265	64 AG	SCREW, rear combination lamp, short	99	27 A
RUBBER, door glass down stopper	223	54 AS	SCREW, tapping	121	32 BP
RUBBER, door glass down stopper	227	55 AT	SCREW, windshield wiper motor	111	30 J
RUBBER, door glass down stopper	239	57 R	SCREW, windshield wiper motor	111	30 L
RUBBER, door open stopper	223	56 AK	SCREW, windshield wiper motor	111	30 N
RUBBER, door open stopper	257	62 AJ	SCREW, windshield wiper motor	111	30 V
RUBBER, door open stopper silencer	223	54 AL	SCREW, windshield wiper motor	113	30 AG
RUBBER, door open stopper silencer	227	55 AO	SCREW, wiper motor set	103	28 AA
RUBBER, door open stopper silencer	237	57 O	SEAL, type T, oil	47	13 BD
RUBBER, door open stopper silencer	253	61 R	SEAL, universal joint spider bearing	39	12 E
RUBBER, front door glass	221	54 V	SEAT, door outside handle spring	231	56 S
RUBBER, front door glass	227	55 Y	SEAT, door outside handle spring	241	58 P
RUBBER, front door glass cleaner	223	54 AK	SEAT, gate hold striker plate insert	247	60 J
RUBBER, front door glass cleaner	227	55 AN	SEAT, gate lock striker plate insert	247	60 Y
RUBBER, front door window glass			SEAT, rear spring	45	13 AN
skirt	235	56 BB	SEAT ASSY, front	267	65
RUBBER, front ventilator window			SEAT ASSY, front For U S A	267	65
glass hold, LH	223	54 X	SEAT ASSY, rear	267	65
RUBBER, front ventilator window			SEAT ASSY, rear For U S A	267	65
glass hold, LH	227	55 AB	SEAT SUB ASSY, spring U bolt, LH	65	17 AC
RUBBER, front ventilator window			SEAT SUB-ASSY, spring U bolt, RH	65	17 AC
glass hold, RH	223	54 X	SEPARATOR ASSY Excludes U S A	217	53 Q
RUBBER, front ventilator window			SET BAND SUB ASSY, tool case	205	51 AM
glass hold, RH	227	55 AB	SHACKLE SUB ASSY, spring, No 2	65	17 R
RUBBER, fuel tank inlet pipe	27	8 AJ	SHAFT, differential pinion	45	13 AF
			SHAFT, front door ventilator lock		
			handle	221	54 T

ILLUSTRATION INDEX

SUMMARY	FIGURE NUMBER	PAGE	SUMMARY	FIGURE NUMBER	PAGE
SHAFT, front vent window handle	227	55 AF	SIDE ASSY, outer, RH	197	48 B
SHAFT, steering sector roller	51	14 D	SIDE ASSY, RH	197	48 E
SHAFT, windshield wiper motor	111	30 O	SILENCER, gate remote control	247	60 M
SHAFT ASSY, propeller, front	39	12	SILENCER, roof, No 1	259	63 F
SHAFT ASSY, propeller, rear	39	12	SILENCER, roof, No 1	263	64 D
SHAFT ASSY, steering sector	53	14 Y	SILENCER, roof, No 2	259	63 G
SHAFT SUB-ASSY, propeller, front	41	12 L	SILENCER, roof, No 2	263	64 E
SHAFT SUB-ASSY, propeller, front, w universal joint	39	12	SILENCER, roof, No 3	259	63 O
SHAFT SUB-ASSY, propeller, rear	41	12 L	SILENCER, roof, No 3	263	64 T
SHAFT SUB ASSY, propeller, rear, w universal joint	39	12	SILENCER ASSY, dash panel	259	63 D
SHAFT SUB-ASSY, steering main	55	14 AS	SILENCER ASSY, dash panel	263	64 AC
SHAFT SUB-ASSY, windshield wiper arm, LH	103	28 L	SLINGER, drive pinion oil	47	13 BC
SHAFT SUB-ASSY, windshield wiper arm, RH	103	28 D	SOCKET ASSY, inspection lamp	99	27 P
SHAFT SUB-ASSY, wiper drive	111	30	SOCKET & WIRE SUB-ASSY, flasher indicator lamp	81	20 K
SHIELD ASSY, rear	213	52 AA	SOCKET & WIRE SUB-ASSY, front drive indicator lamp	81	20 C
SHIELD ASSY, rear (OPT)	213	52 AA	SPACER	47	13 AX
SHIM	51	14 E	SPACER	117	32 O
SHIM	139	35 AG	SPACER	181	44 E
SHIM (6ea, of thk 0.3 and 5ea, of thk -0.5)	53	14 AB	SPACER, differential pinion shaft, No 1	45	13 AG
SHIM (For battery bracket)	137	35 Q	SPACER, differential pinion shaft, No 2	45	13 AG
SHIM (For battery bracket)	143	36 Q	SPACER, differential pinion shaft, No 3	45	13 AG
SHIM (For radiator support)	157	38 S	SPACER, door belt line front, LH	221	54 B
SHIM (For radiator support)	159	39 R	SPACER, door belt line front, LH	225	55 B
SHIM (thk -0.03)	47	13 BA	SPACER, door belt line front, RH	221	54 B
SHIM (thk -0.10)	47	13 BA	SPACER, door belt line front, RH	225	55 B
SHIM (thk -0.2)	55	14 AR	SPACER, door belt line, rear LH	221	54 O
SHIM (thk 0.25)	47	13 AW	SPACER, door belt line, rear LH	225	55 O
SHIM (thk -0.25)	47	13 BA	SPACER, door belt line, rear LH	237	57 D
SHIM (thk 0.30)	47	13 AW	SPACER, door belt line, rear RH	221	54 O
SHIM (thk -0.35)	47	13 AW	SPACER, door belt line, rear RH	225	55 O
SHIM (thk 0.45)	47	13 AW	SPACER, door belt line, rear RH	237	57 D
SHIM (thk 0.45)	47	13 BA	SPACER, rear swing gate hinge female	177	43 AK
SHIM (thk -0.5)	55	14-AR	SPACER, windshield	167	41 AD
SHIM, floor rear stiffener	179	43 BJ	SPACER, windshield	171	42 AC
SHIM, fuel tank, lower	27	8 AR	SPACER, windshield (OPT)	171	42 AC
SHIM, fuel tank, upper	25	8 V	SPEEDOMETER ASSY (Km)	81	20 H
SHIM, gate lock striker plate, No.1 (thk -2.3)	247	60 Z	SPEEDOMETER ASSY (Mile)	81	20 H
SHIM, gate lock striker plate, No.2 (thk -3.2)	247	60 Z	SPIDER, universal joint	39	12 D
SHIM, hood side panel cushion	153	37 AU	SPIDER KIT, universal joint	39	12
SHIM, mounting	137	35 T	SPRING	57	15 H
SHIM, mounting	143	36 T	SPRING	61	16 H
SHIM, radiator cover cushion	151	37 AB	SPRING, back door control connect	257	62 AQ
SHIM, radiator cover support hinge bracket	153	37 AK	SPRING, compression	225	55 T
SHIM, steering sector adjusting (thk -0.31)	53	14 AB	SPRING, cowl ventilator damper	201	50 F
SHIM, step	157	38 AA	SPRING, cowl ventilator handle	199	49 N
SHIM SUB-ASSY, cowl body mounting	157	38 AG	SPRING, door lock	193	47 P
SIDE ASSY, LH	197	48 E	SPRING, door lock outside handle	231	56 R
SIDE ASSY, outer, LH	197	48 B	SPRING, door outside handle	241	58 O
			SPRING, hood stay clamp	149	37 K
			SPRING, instrument panel pocket cover lock	161	40 F

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
SPRING, jack handle set	203	51 W	STOPPER, front door open	193	47 C
SPRING, pentroof ventilator			STOPPER, rear swing gate open,		
Excludes U S A)	199	49 C	female	179	43 BM
SPRING, starting handle support			STOPPER, throttle wire	83	20 X
(For U S A)	179	43	STOPPER, wiper arm shaft	103	28 M
SPRING, tail gate lock lever back	247	60 P	STOPPER, wiper arm shaft	103	28 N
SPRING, tail gate supporter	249	60 AW	STOPPER ASSY, front ventilating		
SPRING, tension	37	11 M	window open, LH Excludes U S A)	181	44 R
SPRING, tension	187	45 AA	STOPPER ASSY, front ventilator		
SPRING, tension	187	45 AB	window open, LH	189	46 M
SPRING, tension	269	65 V	STOPPER ASSY, front ventilator		
SPRING, tension	271	65 W	window open, RH	189	46 M
SPRING, tension (For U S A)	271	65 W	STOPPER ASSY, rear swing gate		
SPRING, torsion	185	45 Z	open	175	43 AD
SPRING, windshield wipdr motor	111	30 T	STOPPER RUBBER, door open	243	58 AM
SPRING ASSY, rear, LH	67	17 AG	STOPPER SUB-ASSY, door down, RH	243	58 Y
SPRING ASSY, rear, RH	67	17 AG	STOPPER SUB-ASSY, door lock	193	47 Q
STATOR COIL SUB-ASSY, windshield			STOPPER SUB ASSY, door lock		
wiper motor	111	30 Z	striker, LH	243	58 AD
STATOR SUB-ASSY, wiper motor	111	30 AB	STOPPER SUB-ASSY, door open	233	55 AI
STAY, air duct	117	32 J	STOPPER SUB-ASSY, door open	243	58 AF
STAY, air duct	117	32 U	STOPPER SUB-ASSY, door open	257	62 AI
STAY, air duct	121	32 BO	STOPPER SUB-ASSY, front door glass	223	54 AM
STAY, front fender, LH	153	37 AS	STOPPER SUB-ASSY, front door glass	227	55 AP
STAY, front fender, RH	153	37 AS	STOPPER SUB-ASSY, tool box lock	179	43 BC
STAY, rear view mirror support	217	53 E	STRENGTH, front upper	209	52 H
STAY, steering column	163	40 AD	STRENGTH, front upper (For U S A)	209	52 H
STAY, steering column For U S A)	163	40 AD	STRENGTH, front upper, LH	209	52 G
STAY ASSY, rear view mirror	217	53	STRENGTH, front upper, RH	209	52 G
STAY ASSY, rear view mirror			STRENGTH, rear floor front end	203	51 I
(Excludes U S A)	217	53	STRENGTH, rear floor front end		
STAY ASSY, tail gate, LH	249	60 AK	(For U S A)	203	51 I
STAY ASSY, tail gate, RH	249	60 AK	STRENGTH, rear shield upper	213	52 Z
STAY SUB-ASSY, back door, LH	185	45 K	STRENGTH SUB-ASSY, front floor	207	51 AQ
STAY SUB ASSY, hood	149	37 M	STRENGTH SUB ASSY, front floor		
STAY SUB-ASSY, rear upper door,			(For U S A)	207	51 AQ
RH	185	45 H	STRENGTH SUB-ASSY, roof	259	63 R
STAY SUB-ASSY, rear view mirror			STRENGTH SUB-ASSY, roof, No 1	263	64 L
(Excludes U S A)	217	53 D	STRENGTH SUB ASSY, roof, No 2	263	64 J
STEP, rear	175	43 X	STRIKER, tail gate lock, LH	247	60 B
STEP, rear OPT	175	43 X	STRIKER, tail gate lock, RH	247	60 B
STEP ASSY, LH	157	38	STRIP, back door moulding rubber		
STEP ASSY, RH	157	38	(OPT)	259	63 T
STEP SUB-ASSY, LH	157	38 AD	STRIP, back door moulding rubber		
STEP SUB-ASSY, rear	205	51 X	(OPT)	263	64 U
STEP SUB-ASSY, RH	157	38 AD	SUB PLATE, steering column hole dust		
STOP ASSY, rear seat back, LH	269	65 R	proof set For U S A)	53	14
STOP ASSY, rear seat back, LH			SUPPORT, release cylinder	37	11 S
For U S A)	269	65 R	SUPPORT, roof headlining, No 1	263	64 H
STOP ASSY, rear seat back, RH	269	65 R	SUPPORT, roof headlining, No 2	263	64 K
STOP ASSY, rear seat back, RH			SUPPORT, roof headlining, No 3	263	64 S
(For U S A)	269	65 R	SUPPORT, windshield wiper motor	111	30 C
STOP SUB-ASSY, door down	193	47 F	SUPPORT, windshield wiper motor	111	30 X
STOP SUB-ASSY, front door glass			SUPPORT SUB ASSY, radiator	157	38 Q
down	193	47 Y	SUPPORT SUB-ASSY, radiator	159	39 M
STOPPER, bumper, rear LH	65	17 K	SUPPORTER ASSY, tail gate, LH	249	60 AX
STOPPER, bumper, rear RH	65	17 K	SUPPORTER ASSY, tail gate, RH	249	60 AX

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
SWITCH, car heater control	115	31 Y	TUBE, wheel cylinder, No 2	57	15 A
SWITCH ASSY, fog lamp (OPT)	81	20 N	TUBE, wheel cylinder, No 2	61	16 A
SWITCH ASSY, general use pull type	81	20 E	TUBE, wheel cylinder, rear	57	15 P
SWITCH ASSY, headlamp dimmer	93	25 J	TUBE, wheel cylinder, rear	61	16 T
SWITCH ASSY, heater	117	32 C	TUBE SUB-ASSY, fuel suction	25	8 U
SWITCH ASSY, heater blower	123	33 A	TUBE SUB-ASSY, steering column	53	14
SWITCH ASSY, ignition	83	20 AB			
SWITCH ASSY, interior dome lamp	81	20 O	V		
SWITCH ASSY, light control	81	20 D			
SWITCH ASSY, over drive lock nut			VISOR ASSY, LH	217	53 M
(For front drive indicator)	95	25 P	VISOR ASSY, RH	217	53 M
SWITCH ASSY, stop lamp	93	25 H			
SWITCH ASSY, turn signal	93	25 K	W		
SWITCH ASSY, windshield wiper	81	20 P			
SWITCH ASSY, windshield wiper			WASHER	119	32 AC
(For U S A)	81	20 P	WASHER	119	32 AH
SWITCH SUB-ASSY, license lamp			WASHER	227	55 W
connecting female	95	25 U	WASHER, differential pinion thrust	45	13 AK
SWITCH SUB-ASSY, license lamp			WASHER, differential side gear		
connecting male	95	25 V	thrust	45	13 AI
SWITCH SUB-ASSY, wiper motor	111	30 W	WASHER, door lock remote	257	62 BG
			WASHER, door open stopper rubber	233	56 AL
T			WASHER, door open stopper rubber	243	58 AN
TANK ASSY, fuel	27	8	WASHER, door open stopper rubber	257	62 AM
TANK SUB-ASSY, fuel	27	8 AM	WASHER, finish	161	40 N
TRACK ASSY, seat, LH	269	65 U	WASHER, front door ventilator		
TRACK ASSY, seat, LH (For U S A)	269	65 U	lock handle	221	54 S
TRACK ASSY, seat, RH	269	65 U	WASHER, front ventilating window		
TRACK ASSY, seat, RH (For U S A)	269	65 U	open wave	189	46 C
TRAY, ash	267	65 C	WASHER, gate lock remote control		
TRAY, battery	137	35 L	silencer	249	60 BB
TRAY, battery	143	36 L	WASHER, plate	49	13 BG
TUBE, bridge, front 3 way	57	15 J	WASHER, plate	149	37 F
TUBE, bridge, front 3 way	61	16 I	WASHER, rear combination lamp,		
TUBE, bridge, front 3 way	61	16 Z	leather	99	27 B
TUBE, master cylinder to flexible			WASHER, ring	103	28 A
hose	37	11 B	WASHER, rosette	223	54 AQ
TUBE, master cylinder to 3 way	57	15 K	WASHER, shock absorber cushion	65	17 C
TUBE, master cylinder to 3 way	61	16 P	WASHER, shock absorber cushion	65	17 F
TUBE, steering column	53	14 O	WASHER, spring	53	14 R
TUBE, 3way to front LH			WASHER, wave	225	55 U
flexible hose	57	15 Y	WASHER, windshield wiper	107	29 G
TUBE, 3way to front LH			WASHER, windshield wiper arm		
flexible hose	61	16 L	shaft	103	28 I
TUBE, 3way to front RH			WASHER, windshield wiper arm		
flexible hose	57	15 X	spring	105	28 AI
TUBE, 3way to front RH			WASHER, windshield wiper link	107	29 D
flexible hose	61	16 AB	WASHER, windshield wiper link felt	107	29 L
TUBE, 3way to rear flexible hose	57	15 N	WASHER, windshield wiper motor	111	30 A
TUBE, 3way to rear flexible hose	61	16 Q	WASHER, windshield wiper motor	111	30 B
TUBE, 3way to rear LH brake	57	15 U	WASHER, windshield wiper motor	111	30 E
TUBE, 3way to rear LH brake	61	16 X	WASHER, windshield wiper motor	111	30 AA
TUBE, 3way to rear RH brake	57	15 R	WASHER, wiper arm shaft, LH	103	28 O
TUBE, 3way to rear RH brake	61	16 U	WASHER, wiper motor set	105	28 AC
TUBE, wheel cylinder, No 1	57	15 C	WAY, 3	57	15 B
TUBE, wheel cylinder, No 1	61	16 C	WAY, 3	57	15 L
			WAY, 3	57	15 S

ALPHABETICAL INDEX

NOMENCLATURE	PAGE	FIGURE NUMBER	NOMENCLATURE	PAGE	FIGURE NUMBER
WAY, 3	61	16 B	WEATHERSTRIP ASSY, lift &		
WAY, 3	61	16 N	tail gate	259	63 T
WAY, 3	61	16 V	WEATHERSTRIP ASSY, lift &		
WAY, 2	61	16 K	tail gate	263	64 U
WEATHERSTRIP, back door, inner	253	61 F	WEATHERSTRIP SUB-ASSY,		
WEATHERSTRIP, back door, LH	253	61 E	front door, LH	191	46 AB
WEATHERSTRIP, back lower, LH	253	61 N	WEATHERSTRIP SUB-ASSY,		
WEATHERSTRIP, back door, outer	253	61 I	front door, RH	191	46 AB
WEATHERSTRIP, back door, RH	253	61 P	WINDOW SUB-ASSY, front upper	209	52 E
WEATHERSTRIP, back door window	253	61 H	WINDOW SUB-ASSY, front upper		
WEATHERSTRIP, back window guide	185	45 W	(For U.S.A.)	209	52 E
WEATHERSTRIP, cowl ventilator	199	49 J	WINDSHIELD ASSY	165	41
WEATHERSTRIP, cowl ventilator	201	50 B	WINDSHIELD ASSY	169	42
WEATHERSTRIP, door	259	63 E	WINDSHIELD ASSY (OPT)	169	42
WEATHERSTRIP, door	265	64 AD	WIPER ASSY, windshield	103	28
WEATHERSTRIP, door glass channel	189	46 I	WIPER ASSY, windshield	107	29
WEATHERSTRIP, front door, upper			WIRE, heater switch to blower	123	33 B
LH	189	46 P	WIRE, instrument panel lamp feed	85	21 H
WEATHERSTRIP, front door, upper			WIRE, instrument panel lamp feed	87	22 G
RH	189	46 P	WIRE, instrument panel lamp feed	89	23 K
WEATHERSTRIP, front door window			WIRE, instrument panel lamp feed	91	24 H
outer	189	46 E	WIRE, windshield wiper motor	111	30 Y
WEATHERSTRIP, front ventiating			WIRE, windshield wiper motor lead	113	30 AL
window, LH	189	46 O	WIRE ASSY, cowl ventilator control	201	50 Y
WEATHERSTRIP, front ventiating			WIRE SUB-ASSY, fog lamp feed		
window, RH	189	46 O	(OPT)	85	21 R
WEATHERSTRIP, lift gate	245	59 A	WIRE SUB-ASSY, fog lamp feed		
WEATHERSTRIP, lift gate, lower	245	59 A	(OPT)	87	22 Q
WEATHERSTRIP, rear door	259	63 I	WIRE SUB-ASSY, fog lamp feed		
WEATHERSTRIP, rear door	265	64 AE	(OPT)	89	23 S
WEATHERSTRIP, rear upper door	185	45 P	WIRE SUB-ASSY, fog lamp feed		
WEATHERSTRIP, rear upper door			(OPT)	91	24 P
window, inner	185	45 I	WIRE SUB-ASSY, seat adjuster		
WEATHERSTRIP, rear upper door			control	271	65 X
window, outer	185	45 G	WIRING ASSY, chassis	85	21 O
WEATHERSTRIP, rear upper side			WIRING ASSY, headlamp junction	85	21 S
panel	183	44 AE	WIRING ASSY, headlamp junction	87	22 R
WEATHERSTRIP, roof	181	44 M	WIRING ASSY, headlamp junction	89	23 R
WEATHERSTRIP, side window, inner	181	44 V	WIRING ASSY, headlamp junction	91	24 Q
WEATHERSTRIP, side window			WIRING ASSY, to generator	85	21 T
rubber inner	219	53 Y	WIRING ASSY, to generator	89	23 T
WEATHERSTRIP, side window, outer	181	44 U			
WEATHERSTRIP, windshield	165	41 O	Y		
WEATHERSTRIP, windshield	169	42 E			
WEATHERSTRIP, windshield	217	53 J	YOKE, universal joint, flange	39	12 A
WEATHERSTRIP, windshield outer	165	41 N	YOKE SUB-ASSY, universal joint slide	39	12 H
WEATHERSTRIP, windshield outer	169	42 D			
WEATHERSTPIP ASSY, front door					
window, inner	189	46 J			

MANUFACTURER S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
04371-60010	39		41315-30010	45	13 AC	47313-60020	61	16 AB
04452-55010	51		41316-30010	45	13 AQ	47314-60020	57	15 Y
17401-92000	23	5 F	41331-55010	45	13 AH	47314-60030	61	16 L
17431-92000	23	5 N	41341-55010	45	13 AJ	47316-60040	57	15 N
17441-60010	23	5 E	41342-55010	45	13 AF	47316-60040	61	16 Q
17510-60020	23	5 J	41343-55010	45	13 AE	47318-60030	57	15 R
17571-92000	23	5 G	41344-35010	45	13 AG	47319-60030	57	15 U
17572-92000	23	5 H	41345-35010	45	13 AG	47319-60030	61	16 X
17581-92000	23	5 K	41346-35010	45	13 AG	47331-60010	57	15 C
27700-40010	95	25 O	41351-35010	45	13 AK	47331-60010	61	16 C
31238-60020	37	11 R	41352-39020	45	13 AK	47332-60010	57	15 A
31301-60020	37	11 T	41361-35010	45	13 AI	47332-60010	61	16 A
31321-61010	37	11 V	41362-39010	45	13 AI	47333-35010	57	15 P
31479-60010	37	11 S	42100-60050	43		47333-35010	61	16 T
31479-60020	37	11 S	42100-60060	43		47351-60020	57	15 G
31481-60020	37	11 B	42101-60902	45	13 S	47351-60020	61	16 G
31481-60030	37	11 B	42109-60010	43	13 N	47352-60020	57	15 G
31484-60010	37	11 O	42110-60030	45	13 S	47352-60020	61	16 G
37101-60030	41	12 L	42122-35010*	45	13 AM	47353-60010	57	15 O
37104-60010	41	12 L	42137-55010	45	13 AL	47353-60010	61	16 R
37110-60030	39		42151-60030	45	13 AN	47361-60020	57	15 D
37140-60010	39		42171-60010	45	13 AO	47361-60020	61	16 D
37170-60030	39		42172-60010	45	13 AO	47361-60040	61	16 O
37180-60010	39		42181-60010	47	13 AY	47362-60020	57	15 J
37302-60010	39	12 H	42183-60010	43	13 P	47362-60020	61	16 J
37315-60010	39	12 A	45200-60040	51		48042-35010	65	17 R
37324-30010	49	13 BF	45200-60050	51		48046-60020	65	17 AC
37334-60010	39	12 J	45201-60020	55	14 AS	48047-60020	65	17 AC
37335-60010	39	12 K	45205-60030	53		48146-60010	67	17 AI
37341-30010	47	13 BE	45206-60010	53	14 Q	48203-60060	67	
37343-60010	39	12 E	45207-60020	53	14 Q	48210-60060	67	17 AG
37402-60010	39		45251-60030	53	14 O	48211-60060	67	
37402-60020	39		45272-55010	51	14 K	48212-60060	67	
37402-60030	39		45300-60030	51		48213-60060	67	
37402-60040	39		45300-60040	51		48215-60060	67	
37410-60020	39		45301-25020	53	14 AE	48216-60060	67	
37411-60020	39	12 D	45302-60010	53		48218-60060	67	
37431-60020~	39	12 F	45304-60010	53	14 V	48219-60060	67	
37431-60030~	39	12 F	45312-60010	53	14 AI	48220-60030	67	17 AG
37431-60040*	39	12 F	45321-60010	53	14 Z	48241-60060	65	17 V
37431-60050~	39	12 F	45322-55010	53	14 AC	48242-60060	65	17 X
41101-60020	47	13 AZ	45322-60010	53	14 AC	48243-60060	67	17 AJ
41110-60010	43		45332-60010	53	14 W	48247-60020	65	17 AA
41110-60020	43		45338-55010	53	14 AB	48306-60010	65	17 Z
41110-60901	43		45341-35010	53	14 AJ	48323-35010	65	17 G
41110-60902	43		45350-60020	53	14 Y	48344-60040	65	17 K
41113-35010*	47	13 AR	45352-55010	53	14 AA	48354-60040	65	17 K
41114-35010	45	13 Q	45361-55010	51	14 D	48409-35010	65	17 T
41201-60010	47		47101-60020	37	11 U	48414-35010	65	17 S
41201-60020	47		47101-60030	37	11 U	48415-35010	65	17 S
41211-60010~	47	13 AT	47264-35010	37	11-I	48416-35010	65	17 P
41211-60020~	47	13 AT	47311-60020	57	15 K	48444-35010	65	17 N
41214-30010	47	13 BC	47311-60030	61	16 P	48531-60050	65	17 E
41221-60010~	47	13 AS	47312-60010	57	15 I	48532-30010	65	17 AF
41221-60020~	47	13 AS	47312-60010	61	16 I	48533-35010	67	17 Q
41222-35010	45	13 Y	47312-60020	61	16 Z	48802-60010	43	13 E
41311-35010	47	13 AU	47313-60020	57	15 X	48812-60010	43	13 C

MANUFACTURER S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
48815-60010	45	13 W	51741-92000	141	35 BJ	53107-60010	151	37 AJ
48819-30010	43	13 B	51741-92000	147	36 BI	53108-60010	157	38 Q
48823-60010	45	13 X	51742-92000	141	35 BJ	53108-60010	159	39 M
48824-60010	45	13 U	51742-92000	147	36 BI	53111-60010	151	37 AC
48827-30010	43	13 A	51743-60010	137	35 W	53112-60010	151	37 AF
51001-60010	137		51743-60010	147	36 BM	53149-60010	151	37 AB
51001-60010	143		51743-92001	137	35 U	53152-60010	151	37 AG
51001-60020	137		51743-92001	143	36 U	53154-60010	153	37 AK
51001-60020	143		51780-60010	157		53163-60010	155	38 G
51111-60010	137	35 S	51786-60010	157	38 Y	53163-60013	159	38 G
51111-60010	143	36 S	51787-60010	157	38 Y	53164-60010	155	38 P
51121-60010	137	35 S	51790-60010	157		53164-60010	159	39 L
51121-60010	143	36 S	51793-60010	157	38 Z	53167-60010	155	38 H
51131-60010	137	35 D	51794-60010	157	38 Z	53167-60010	159	39 H
51131-60010	143	36 D	51901-92000	259	63 T	53206-60010	119	32 AN
51132-60010	137	35 D	51901-92000	265	64 AI	53301-60020	149	37 T
51132-60010	143	36 D	51901-92001	203	51 R	53301-60050	149	37 T
51201-60010	139	35 AV	51902-92300	203	51 P	53301-92000	149	37 T
51201-60010	145	36 AU	51923-92000	203	51 Q	53303-60010	151	37 Y
51201-60020	139	35 AV	51961-60010	139	35 AR	53304-60010	151	37 Y
51201-60020	145	36 AU	51961-60010	145	36 AQ	53310-60020	149	
51203-60020	137	35 X	52032-30010	157	38 AG	53310-60050	149	
51203-60020	147	36 BK	52033-30010	141	35 B	53310-92000	149	
51221-60030	137	35 V	52033-30010	147	36 BH	53350-60010	151	
51221-60030	143	36 V	52033-30010	173	43 F	53359-60010	153	37 AU
51241-60010	139	35 Y	52106-92050	145	36 AD	53360-60010	151	
51241-60010	143	36 W	52107-92000	139	35 AK	53401-60010	149	37 Q
51281-60030	139	35 AA	52111-60030	139	35 AL	53403-60010	149	37 M
51281-60030	145	36 X	52111-60030	145	36 AL	53412-60010	149	37 S
51282-60020	139	35 AA	52116-60010	137	35 A	53431-60010	149	37 K
51282-60020	145	36 X	52116-60010	143	36 A	53432-60010	149	37 I
51291-60020	139	35 Z	52141-60010	137	35 B	53433-60010	149	37 D
51291-60020	145	36 AE	52141-60010	143	36 B	53506-60010	149	37 O
51405-60010	139	35 BD	52142-60010	137	35 B	53701-60010	153	37 AT
51405-60010	145	36 BC	52142-60010	143	36 B	53702-60010	153	37 AT
51408-60010	139	35 BC	52151-92002	139	35 AJ	53711-60050	153	37 AT
51408-60010	145	36 BB	52151-92050	139	35 AJ	53712-60010	153	37 AT
51421-60010	137	35 E	52151-92050	145	36 AJ	53801-60010	151	37 Z
51421-60010	143	36 E	52152-92000	139	35 AI	53801-92000	151	37 Z
51422-60010	137	35 E	52152-92000	145	36 AK	53801-92100	151	37 Z
51422-60010	143	36 E	52153-92050	145	36 AB	53802-60010	151	37 Z
51431-60020	137	35 R	52163-92001	139	35 AH	53802-92000	151	37 Z
51431-60020	143	36 R	52213-90310	157	38 AA	53802-92100	151	37 Z
51434-60010	137	35 R	52214-92000	139	35 AG	53802-92170	151	37 Z
51434-60010	143	36 R	52215-92000	137	35 T	53810-60010	151	
51453-60010	139	35 BE	52215-92000	143	36 T	53810-60040	151	
51453-60010	145	36 BD	52241-60010	179	43 BJ	53810-92000	151	
51454-60010	139	35 BE	52321-55010	137	35 Q	53810-92100	151	
51454-60010	145	36 BD	52321-55010	143	36 Q	53820-60010	151	
51495-60010	141	35 BF	52321-55010	157	38 S	53820-60020	151	
51495-60010	147	36 BF	52321-55010	159	39 R	53820-92000	151	
51707-60010	157	38 AD	52411-92000	25	8 P	53820-92100	151	
51708-60010	157	38 AD	52412-92000	25	8 P	53820-92170	151	
51711-60020	141	35 BG	52413-92000	25	8 Z	53835-92000	199	49 A
51711-60020	145	36 BE	52414-92000	25	8 AD	53836-92000	199	49 E
51712-60010	141	35 BG	53011-60010	153	37 AN	53851-60010	153	37 AS
51712-60010	145	36 BE	53106-60010	151	37 AA	53852-60010	153	37 AS

MANUFACTURER'S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
53871-92000	159	39 V	55701-60030	155	38 J	56111-92170	217	53 I
53872-92000	159	39 V	55701-60060	155	38 J	56121-60010	165	41 O
53873-92000	159	39 V	55701-60070	155	38 J	56121-60010	169	42 E
53874-92000	159	39 V	55701-92000	209	52 A	56121-95002	217	53 J
53881-92000	153	37 AY	55701-92100	209	52 A	56122-60010	165	41 N
53882-92000	153	37 AX	55701-92170	209	52 A	56122-60010	169	42 D
55100-92000	159	39 W	55701-92170-1	209	52 A	56134-92001	209	52 C
55100-92000	197	48 A	55702-92000	213		56135-92001	209	52 K
55100-92001	197	48 A	55702-92170	213		56141-92000	209	52 B
55100-92100	197	48 A	55702-92170-1	213		56142-92000	211	52 L
55101-92060	159	39 W	55703-92000	215		56144-92000	209	52 H
55101-92100	159	39 W	55712-92170	201	50 H	56144-92170	209	52 H
55101-92160	159	39 W	55721-92000	213	52 AJ	56145-92000	209	52 G
55101-92170	159	39 W	55721-92170	213	52 AJ	56146-92000	209	52 G
55121-60010	53	14 N	55721-92170-1	213	52 AJ	56200-60030	173	
55121-92170	53	14 N	55722-92000	215	52 AM	56200-60080	173	
55122-60010	51	14 M	55755-92170	201	50 A	56200-90330	173	
55122-60020	51	14 M	55801-92170	201	50 V	56211-60020	167	41 AD
55122-92170	51	14 M	55801-95210	199	49 H	56211-60020	171	42 AC
55123-92170	53	14 N	55802-95210	199	49 U	56211-60030	171	42 AC
55191-60010	155	38 M	55803-92000	199	49 B	56300-60020	165	
55210-92000	259	63 D	55803-92170	201	50 D	56300-60020	169	
55210-92100	259	63 D	55810-92170	201		56300-60060	169	
55210-92100	265	64 AD	55814-92170	201	50 U	56301-60020	165	41 P
55210-92101	259	63 D	55819-92170	201	50 C	56301-60020	169	42 F
55210-92101	265	64 AD	55820-92170	201	50 Y	56301-60050	169	42 F
55210-92170	265	64 AD	55822-95210	199	49 O	56306-60010	167	41 AC
55301-60010	161	40 W	55824-95210	199	49 N	56306-60010	171	42 W
55301-60040	161	40 W	55825-92000	199	49 S	56307-60010	167	41 AE
55301-92000	163	40 W	55835-92000	199	49 R	56307-60010	171	42 AD
55301-92000	209	52 D	55841-92170	201	50 F	56450-60010	167	41 AI
55301-92060	163	40 W	55842-92170	201	50 G	56450-60010	171	42 Y
55301-92100	163	40 W	55843-92170	201	50 B	56456-60020	167	41 AH
55301-92100	209	52 D	55845-92170	201	50 Z	56456-60020	171	42 X
55301-92160	163	40 W	55851-95210	199	49 V	57401-92000	203	51 A
55301-92171	163	40 W	55852-95210	199	49 V	57402-92000	205	51 AP
55301-92171	209	52 D	55853-95210	199	49 W	57421-92000	215	52 AO
55301-92172	163	40 W	55855-95210	199	49 X	57422-92000	215	52 AO
55301-92172	209	52 D	55861-95210	199	49 I	57423-92000	215	52 AR
55351-60010	161	40 L	55881-95210	199	49 J	57455-59010	173	43 K
55405-20020	117	32 A	55901-92000	37	11 J	58003-60020	173	
55501-60010	161	40 U	55905-60010	169	42 Q	58004-60030	173	
55501-60030	161	40 U	55905-92000	209	52 F	58004-60080	173	
55521-90010	161	40 A	55905-92101	209	52 F	58004-90330	173	
55531-35010	161	40 V	55905-92170	209	52 F	58022-92001	207	51 AQ
55544-55010	161	40 F	55906-60010	169	42 Q	58022-92170	207	51 AQ
55549-60010	161	40 E	55906-92000	209	52 F	58031-60010	179	43 BE
55661-60010	163	40 AC	55906-92101	209	52 F	58103-60010	177	43 BB
55661-92171	163	40 AC	55906-92170	209	52 F	58132-60010	177	43 BA
55662-60010	163	40 AA	55955-60010	169	42 R	58200-92001	197	48 D
55662-92171	163	40 AA	56100-60020	173		58201-60010	173	43 J
55672-60010	163	40 AD	56103-92000	209	52 E	58202-60010	177	43 AZ
55672-60020	163	40 AD	56103-92100	209	52 E	58206-60070	177	43 AP
55672-92170	163	40 AD	56103-92170	209	52 E	58206-60070	205	51 Y
55700-60020	155		56111-60010	165	41 M	58206-60080	177	43 AP
55700-60050	155		56111-60010	169	42 C	58206-60080	205	51 Y
55700-60060	155		56111-92000	217	53 I	58206-60090	177	43 AP

MANUFACTURER'S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
58206-60090	205	51 Y	58379-92000	207	51 AZ	61217-92000	211	52 Q
58206-60100	177	43 AP	58510-92000	261	63 AC	61218-92000	211	52 U
58206-60100	205	51 Y	58510-92061	261	63 AC	61219-92000	211	52 U
58206-60110	177	43 AP	58510-92062	261	63 AC	61231-92000	211	52 P
58206-60110	205	51 Y	58510-92063	261	63 AC	61231-92170	211	52 P
58206-60120	177	43 AP	58510-92161	261	63 AC	61232-92000	211	52 P
58206-60120	205	51 Y	58510-92162	261	63 AC	61232-92170	211	52 P
58206-92170	205	51 Y	58510-92163	261	63 AC	61233-92000	211	52 T
58208-60011	177	43 AT	58510-92170	263	64 AC	61233-92170	211	52 T
58208-60011	205	51 AC	58510-92171	263	64 AC	61234-92000	211	52 T
58209-60010	177	43 AV	58521-92000	259	63 AB	61234-92170	211	52 T
58209-60010	205	51 AG	58522-92000	261	63 AD	61251-92000	209	52 J
58210-92001	203		58550-92001	261	63 AH	61251-92170	209	52 J
58210-92170	203		58550-92170	265	64 AG	61252-92000	211	52 S
58211-92000	203	51 B	58561-92001	261	63 AG	61252-92170	211	52 S
58211-92170	203	51 B	58731-92000	203	51 L	61255-92000	211	52 M
58212-92000	205	51 AO	58732-92000	203	51 K	61255-92170	211	52 M
58213-92001	207	51 AR	58761-95110	205	51 AN	61256-92000	213	52 AE
58214-92000	205	51 AK	59202-91101	103	28 D	61256-92170	213	52 AE
58215-92001	203	51 H	59203-91101	103	28 L	61257-92000	213	52 AH
58216-92001	207	51 AS	59204-91101	103	28 G	61258-92000	213	52 AH
58217-92001	203	51 G	59205-91101	103	28 J	61301-60030	179	43 BF
58217-92170-1	203	51 G	59211-91101	103	28 AA	61301-92000	215	52 AQ
58237-92001	203	51 I	59212-91101	105	28 AC	61301-92170	215	52 AQ
58237-92170	203	51 I	59213-91101	105	28 AD	61302-60030	179	43 BF
58263-60010	177	43 AX	59214-91101	103	28 W	61302-92000	215	52 AQ
58263-60010	205	51 Z	59215-91101	103	28 E	61302-92170	215	52 AQ
58264-60010	177	43 AX	59216-91101	103	28 C	61307-60020	179	43 BF
58264-60010	205	51 Z	59217-91101	103	28 A	61308-60040	179	43 BF
58265-60020	177	43 AX	59218-91101	105	28 AJ	61310-60010	179	
58265-60020	205	51 Z	59219-91101	105	28 AI	61320-60010	179	
58273-60010	177	43 AS	59221-91101	105	28 AH	61341-92000	215	52 AP
58273-60010	205	51 AB	59222-91101	103	28 Q	61341-92170	215	52 AP
58279-60010	177	43 AY	59223-91101	103	28 H	61342-92000	215	52 AP
58279-60010	205	51 AI	59224-91101	103	28 I	61342-92170	215	52 AP
58280-60020	177	43 AR	59225-91101	103	28 P	61400-92000	197	48 E
58280-60020	205	51 AA	59226-91101	103	28 O	61401-92000	215	52 AT
58301-60030	173	43 Q	59227-91101	103	28 N	61402-92000	215	52 AT
58301-60040	173	43 Q	59228-91101	103	28 M	61403-92000	213	52 AF
58301-90330	173	43 Q	61103-92000	215	52 AN	61403-92050	213	52 AF
58301-92001	203	51 J	61104-92000	215	52 AN	61404-92000	213	52 AF
58301-92170	203	51 J	61110-92000	213		61404-92050	213	52 AF
58302-92000	203	51-O	61110-92170-1	213		61405-92000	197	48 F
58302-92050	203	51 O	61120-92000	215		61405-92050	197	48 F
58306-92000	205	51 X	61121-92000	215	52 AK	61406-92000	197	48 F
58307-92050	205	51 X	61121-92170-1	215	52 AK	61406-92050	197	48 F
58310-92001	203		61122-92000	215	52 AL	61407-92000	215	52 AS
58310-92170	203		61201-92000	209		61408-92000	215	52 AS
58312-92000	207	51 AV	61201-92170	209		61410-92000	197	48 B
58313-92000	207	51 AV	61202-92000	211	52 O	61420-92000	197	48 B
58331-92000	207	51 AT	61202-92170	211	52 O	61456-92001	197	48 G
58332-92000	207	51 AT	61211-92000	209	52 I	61457-92000	213	52 W
58333-92000	207	51 AU	61212-92000	211	52 R	61458-92000	213	52 W
58355-92000	203	51 W	61215-92000	211	52 O	61461-92000	213	52 AI
58363-60010	179	43 BK	61215-92170	211	52 O	61462-92000	213	52 AI
58375-92000	249	60 AQ	61216-92000	211	52 O	61500-92000	197	48 E
58376-92000	207	51 BC	61216-92170	211	52 O	61501-60010	183	44 AF

MANUFACTURER S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
65601-91101	235	56 AY	67200-60020	189		67517-60010	189	46 O
65601-91101	243	58 AY	67200-60030	189		67518-60010	189	46 O
65602-91301	231	56 F	67200-92000	221		67541-92000	223	54 AA
65602-91301	243	58 AS	67200-92170	225		67541-92000	227	55 AD
65603-91311	235	56 BA	67201-60010	185	45 H	67542-92000	223	54 AA
65603-91311	243	58 AR	67202-60010	185	45 K	67542-92000	227	55 AD
65604-91311	235	56 BA	67211-92000	223	54 AK	67546-92000	221	54 Q
65801-60020	183	44 AB	67211-92000	227	55 AN	67547-92000	221	54 Q
65802-60020	183	44 AB	67212-92001	223	54 AJ	67549-92000	221	54 T
62810-60010	181		67212-92001	227	55 AM	67551-92000	221	54 R
65815-60020	181	44 F	67213-92000	223	54 AE	67552-92000	221	54 S
65816-60020	181	44 F	67213-92000	227	55 AH	67553-92000	221	54 F
65820-60030	181		67215-92001	221	54 B	67553-92000	225	55 F
66241-92000	207	51 AX	67215-92001	225	55 B	67553-92001	227	55 AA
66242-92000	207	51 AW	67216-92001	221	54 B	67554-92000	221	54 G
66243-92000	207	51 AY	67216-92001	225	55 B	67554-92000	225	55 G
67001-60020	191	46 V	67217-92001	221	54 O	67555-92000	221	54 H
67001-60030	191	46 V	67217-92001	225	55 O	67555-92000	225	55 H
67002-60020	191	46 AC	67217-92001	237	57 D	67560-60010	189	46 M
67002-60030	191	46 AC	67218-92001	221	54 O	67561-95400	225	55 S
67005-60010	185	45 J	67218-92001	225	55 O	67562-95400	225	55 S
67006-60010	187	45 AE	67218-92001	237	57 D	67563-95400	225	55 R
67010-92050	253	61 Q	67219-92000	223	54 AI	67564-95400	225	55 Q
67010-92150	253	61 Q	67219-92000	227	55 AO	67565-60010	189	46 D
67014-92000	237	57 P	67219-92000	237	57 O	67566-60010	189	46 C
67014-92170	237	57 P	67231-92000	237	57 F	67570-60010	181	44 R
67015-92000	237	57 P	67232-92000	237	57 G	67570-60010	189	46 M
67015-92170	237	57 P	67233-92000	237	57 I	67600-92000	245	
67020-92050	253	61 G	67300-92000	237		67600-92170	245	
67041-60010	191	46 T	67300-92170	237		67610-92170	227	55 AS
67042-60010	191	46 T	67400-92000	237		67611-92000	223	54 AP
67100-60020	189		67400-92170	237		67612-92000	223	54 AP
67100-60030	189		67401-92000	223	54 AH	67620-92170	227	55 AS
67100-92000	221		67401-92001	227	55 AK	67621-92000	239	57 S
67100-92170	225	54 A	67402-92000	223	54 AH	67622-92000	239	57 S
67104-92000	221		67402-92001	227	55 AK	67630-92170	239	57 S
67104-92170	225	55 A	67403-92001	237	57 M	67640-92170	239	57 S
67105-92000	221	54 A	67404-60010	193	47 Y	67811-60010	191	46 X
67105-92170	225	55 A	67410-92000	223		67849-95100	221	54 K
67109-60010	187	45 AN	67410-92001	227		67849-95100	225	55 K
67109-92000	223	54 AM	67420-92000	223		67861-92000	259	63 E
67109-92000	227	55 AP	67420-92001	227		67861-92000	265	64 AE
67110-92000	221		67421-92000	223	54 AD	67862-92000	259	63 I
67110-92170	225		67422-92000	223	54 AD	67862-92000	265	64 AF
67111-92000	223	54 AU	67451-60020	193	47 I	67863-92000	259	63 H
67111-92000	229	55 AV	67451-92000	221	54 J	67863-92000	265	64 AH
67112-92000	223	54 AU	67451-92000	225	55 J	67881-92000	261	63 AE
67112-92000	229	55 AV	67471-92001	227	55 AG	67881-92000	263	64 F
67120-92000	221		67500-60010	185		67882-92000	261	63 AE
67120-92170	225		67501-60010	189	46 N	67882-92000	263	64-F
67121-92000	239	57 V	67501-92000	223	54 W	67900-92100	245	
67122-92000	239	57 V	67501-92001	227	55 Z	67901-92100	245	59 O
67130-92000	237		67502-60010	189	46 N	67902-92000	245	59 N
67130-92170	237		67502-92000	223	54 W	67906-92000	245	59 B
67140-92000	237		67502-92001	227	55 Z	67906-92170	245	59 B
67140-92170	237		67511-60010	189	46 N	67910-92050	253	
67181-60010	187	45 AK	67516-60010	191	46 R	67910-92100	245	

MANUFACTURER'S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
67910-92150	253		68321-92000	247	60 P	68732-92000	233	56 AV
67911 91105	245	59 G	68371-92900	253	61 H	68731-92000	241	58 B
67920-92050	253		68372-92900	253	61 I	68752-92000	241	58 A
67923-92000	245	59 L	68402-92050	257	62 BH	68771-92000	243	58 AI
67924-92000	245	59 C	68403-92001	249		68801-60010	185	45 Q
67925-92000	245	59-M	68403-92050	257	62 AP	68801-92050	255	62 AF
67941-92000	245	59 F	68404-92000	219	52 W	68802-60010	185	45 Q
67941-92100	253	61 J	68410-92000	249	60 AK	68802-92050	257	62 AO
67941-92170	245	59 F	68411-92050	253	61 O	68803-60010	187	45 AF
67942-92000	245	59 E	68412-92050	253	61 M	68804-60010	187	45 AD
67950-92000	245		68420-92000	249	60 AK	68804-91107	247	60 U
67950-92170	245		68420-92050	255	62 Y	68805-91107	249	60 AR
67951 92000	245	59 D	68421-92050	253	61 P	68829-60010	185	45 P
67955 92050	255	62 H	68422-92050	253	61 E	68881-91107	247	60 W
68108-60010	191	46 AB	68423-92050	253	61 F	68892-91107	247	60 X
68109-60010	191	46 AB	68424-92050	253	61 N	68898-60010	193	47 D
68111-60010	189	46 H	68425-92050	259	63 U	68901-92000	233	56 AI
68111-60030	189	46 H	68425-92050	263	64 V	68901-92000	243	58 AF
68111-92000	223	54 AI	68426-92050	259	63 U	68905-60020	175	43 AJ
68111-92170	227	55 AL	68426-92050	263	64 V	68906-60010	175	43 AJ
68113-92000	237	57 N	68428-92050	255	62 R	68907-90301	175	43 AJ
68113-92170	237	57 N	68429-92050	255	62 N	68908-90301	175	43 AJ
68121-60010	191	46 S	68431-92000	249	60 AH	68913-92000	233	56 AL
68121-60030	191	46 S	68431-92050	255	62 M	68913-92000	243	58 AN
68121 92000	221	54 U	68432-92050	257	62 AT	68914-92000	233	56 AK
68121-92170	227	55 X	68441-92050	253	61 B	68914-92000	243	58 AM
68131-60010	185	45 F	68441-92051	253	61 B	68930-60010	175	43 AD
68131-60020	185	45 F	68442-92050	253	61 A	68935-60010	179	43 BM
68141 92001	223	54 AG	68442-92051	253	61 A	68937-60010	193	47 C
68141-92001	227	55 AJ	68443-92000	219	58 X	68980-91107	249	60 AX
68142-92000	223	54 AG	68451-92000	259	63 U	68990-91107	249	60 AX
68142-92000	227	55 AJ	68451-92000	263	64 V	69104-92900	257	62 AI
68151-92000	237	57 E	68452-92000	245	59 A	69141-92900	255	62 AH
68161-60010	189	46 E	68453-92000	245	59 A	69142-92900	257	62 AJ
68161-60030	189	46 P	68701-92000	233		69148-92900	257	62 AM
68162-60010	189	46 P	68702-92000	233		69201-60020	195	47 AL
68170-60010	189	46 J	68703-92000	233		69207-95010	195	47 AG
68171-92000	235	56 BB	68704-92000	233		69208-95010	195	47 AG
68171-92000	243	58 AQ	68705-92000	241	58 A	69210-92100	231	56 F
68172-92000	223	54 AS	68706-92000	241	58 A	69210-92100	241	
68172-92000	227	55 AT	68707-92000	243		69220-92100	231	56 F
68172-92000	239	57 R	68708-92000	243		69302-95000	193	47 Q
68172-92000	271	65 AL	68710-60010	193	47 A	69305-20010	257	62 AZ
68181-92000	223	54 X	68711-92000	231	56 D	69308-91107	249	60 BA
68181-92000	227	55 AB	68712-39610	231	56 B	69309-20010	257	62 AU
68182-92000	223	54 X	68712-39610	243	58 AH	69310-60010	195	
68182-92000	227	55 AB	68712-92000	233	56 AE	69310-60020	195	
68183-92000	221	54 V	68712-92000	255	62 AE	69310-95010	195	47 AJ
68183-92000	227	55 Y	68713-92000	231	56 A	69320-60010	195	
68191-30010	193	47 Z	68713-92000	243	58 AE	69320-60020	195	
68211-60011	189	46 I	68713-92000	255	62 AC	69320-95010	195	47 AJ
68212-60010	191	46 U	68714-92000	231	56 C	69320-95011	195	47 AJ
68213-60010	189	46 Q	68714-92000	241	58 C	69323-95010	193	47 P
68221-60020	189	46 G	68714-92000	255	62 AD	69330-95010	195	47 AJ
68291 60010	185	45 G	68720-60010	193	47 AC	69340-20010	257	
68292-60010	185	45 I	68722-92000	243	58 AG	69350-91107	247	60 H
68311-92000	247	60 A	68731-92000	233	56 AW	69360 60010	175	43 AE

MANUFACTURER'S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
69360-91107	247	60 H	69901-69810	193	47 E	72301-92001	271	65 X
69363-60010	175	43 AC	69902-69810	193	47 E	72321-92170	271	65 W
69363-60020	175	43 AC	69994-91336	227	55 AF	72510-11010	269	65 R
69370-60010	175	43 AE	71035-92000	267		72510-92170	269	65 R
69380-60010	187	45 AC	71035-92170	267		72516-92000	269	65 S
69388-95010	195	47 AH	71071-92170	267	65 A	72520-11010	269	65 R
69390-60010	187	45 AJ	71071-92170-1	267	65 A	72520-92170	269	65 R
69405-95010	193	47 F	71073-92170	267	65 D	74011-92000	267	65 C
69420-20010	257	62 AX	71075-92001	267	65 F	74110-60010	161	40 O
69428-91105	247	60 B	71075-92170	267	65 F	74310-95012	217	53 M
69429-91105	247	60 B	71077-92001	267	65 E	74310-95013	217	53 M
69463-91105	247	60 C	71077-92170	267	65-E	74401-60010	137	35 O
69464-91105	247	60 C	71100-92001	267		74401-60010	143	36 O
69470-91301	241		71100-92101	267		74403-60010	137	35 N
69478-91105	247	60 A	71100-92170	267		74403-60010	143	36 M
69480-91107	247	60 K	71200 92000	267		74431-60010	137	35 L
69485-91107	247	60 Y	71200-92170	267		74431-60010	143	36 L
69486-91107	247	60 Z	71201-92000	271	65 AI	74451-60010	137	35 J
69487-91107	247	60 Z	71201-92170	271	65 AI	74451-60010	143	36 J
69488-91107	247	60 J	71202-92000	269	65 J	74471-60010	137	35 K
69489 91107	249	60 AA	71202 92170	269	65 J	74471 60010	143	36 K
69490-91107	247	60 K	71225-92000	267	65 G	74531-60030	161	40 P
69500-60010	83		71225-92170	267	65 G	74351-60040	161	40 P
69500-60050	83		71226 92000	267	65 H	74351-60050	161	40 P
69500-60060	83		71226-92170	267	65 H	74531-60060	161	40 P
69500 60070	83		71305-92170	271	65 AJ	74531-60070	161	40 P
69500-60902	83		71306-92-70	271	65 AJ	74541-60080	161	40 P
69508-60010	185	45 E	71308-92170	271	65 AJ	74701-95010	203	51 E
69510-60010	195	47 AK	71309-92170	271	65 AJ	74713 95010	203	51 C
69540-31010	99	27 U	71311-92170	271	65 AF	74714 95010	203	51 D
69550-60010	185		71312-92170	271	65 AE	74741 95110	179	43 BK
69560 60010	185		71313-92170	271	65 AG	74810-92001	217	53 Q
69583-60010	185	45 C	71319 11010	269	65 K	74815-92000	217	53 P
69601-91301	235	56 BC	71410 92170	267		75101-60010	139	35 AM
69606-92000	243	58 AA	71410 92170-1	267		75101 60010	145	36 AM
69607 91105	249	60 AV	71430-92170	267		75102-60020	177	43 AO
69609 91105	249	60 AZ	71430 92170-1	267		75201-60020	179	43 BD
69610-92000	231	56 E	71450-92170	269	65 T	75202-60030	179	43 BH
69620-92000	233	56 AX	71450-92170 2	269	65 T	75203-60010	173	43 O
69630-92100	231	56 E	71460-92001	267		75204-60010	179	43 BC
69630 92170	231	56 E	71460 92170	267		75207-92000	205	51 AM
69640-92100	233	56 AX	71480 92000	267		75233 60010	173	43 P
69640-92170	233	56 AX	71480 92170	267		75234 60010	179	43 BG
69650-92000	241	58 D	71608-11010	269	65 L	75304-60010	259	63 A
69650-92170	241	58 D	72110-30020	269	65 U	75304-60010	263	64 A
69660-91107	249		72110-30021	269	65 U	75305-60010	259	63 AA
69660-92000	241	58 D	72110-30030	269	65 U	75305 60010	263	64 AB
69660-92000	251		72110-30031	269	65 U	75312-60020	259	63 W
69660 92170	241	58 D	72110-92170	269	65 U	75312-60020	263	64 X
69669-91107	249	60 AI	72110-92171	269	65 U	75321-60010	259	63 Y
69669 92000	251	60 BD	72120-30010	269	65 U	75321 60010	263	64 W
69710 92000	233	56 AS	72120-30011	269	65 U	75399 60010	259	63 B
69710-92000	243	58 AV	72120-30020	269	65 U	75399-60010	263	64 B
69720 92000	235	56 AZ	72120-30021	269	65 U	75441-92000	261	63 AJ
69810-60011	193	47 X	72120 92170	269	65 U	75441-92000	265	64 AK
69820-60011	193	47 AF	72120 92171	269	65 U	75442-92000	261	63 AI
69881-60020	191	46 Z	72301-92000	271	65 X	75442-92000	265	64 AJ

MANUFACTURER S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
75453-60010	259	63 O	81271-39410	101	27 Y	82047-92000	89	23 P
75453-60010	263	64 R	81272-39410	99	27 W	82047-92000	91	24 O
75454-92000	259	63 M	81273-31010	99	27 T	82211-60010	85	21 H
75454-92000	263	64 P	81274-39410	99	27 S	82211-60010	87	22-G
75463-60010	259	63 N	81276-39410	101	27-Z	82211-60010	89	23 K
75463-60010	263	64 Q	81279-39410	99	27 V	82211-60010	91	24 H
76333-91105	249	60 AT	81370-60010	99	27 K	82220-60041	89	23 C
76507-91105	247	60 L	81401-35010	99	27 Q	82220-60071	85	21-C
76525-91105	249	60 AY	81420-35010	93	25 N	82220-60072	87	22 C
76528-91105	247	60 M	81420-35010	99	27-P	82220-60100	85	21 C
76529-91105	249	60 BB	81431-39610	99	27 M	82220-60100	87	22-C
76631-91105	249	60 AW	81510-60010	93	25 B	82220-60110	89	23 C
77001-92000	27	8 AM	81510-60040	93	25 G	82220-60110	91	24 C
77100-92000	27		81510-60040	97		82220-60120	91	24 C
77201-92001	25	8 G	81510-60070	93	25-G	82240-60010	89	23 R
77206-92000	25	8 U	81510-60070	97		82240-60010	91	24-Q
77208-92000	25	8 X	81511-55010	97	26 B	82240-60040	85	21 S
77222-92900	27	8 AJ	81512-55010	97	26 C	82240-60040	87	22 R
77223-92000	27	8-AK	81513-60030	97	26-E	82250-60010	85	21-T
77293-60010	25	8 H	81513-60070	97	26 E	82250-60010	89	23 T
77310-60040	25	8 C	81514-60030	97	26 M	82407-92050	85	21-P
77313-60010	25	8 F	81514-60040	97	26 M	82407-92050	87	22 P
77314-60010	25	8 D	81518-60030	97	26 L	82407-92050	89	23-P
77330-60010	25	8 A	81550-60040	95	25 S	82407-92050	91	24-O
77601-92000	27	8 AS	81550-60040	99		82420-60070	85	21 O
77613-92000	25	8 V	81551-60040	99	27 C	82420-60070	87	22 N
77614-92000	27	8 AR	81552-31010	99	27 E	82420-60070	89	23 O
77621-92000	27	8 AP	81553-60040	99	27 F	82420-60070	91	24-L
77623-92000	27	8 AQ	81554-31010	99	27 G	82420-60050	91	24 L
77653-35010	25	8 W	81557-31010	99	27 A	82470-92000	85	21-P
77653-35010	153	37 AW	81558-31010	99	27 B	82470-92000	87	22 P
78310-60010	81	20 T	81559-31010	99	27 A	82470-92000	89	23 P
78310-91336	217	53 N	81560-60010	95	25 X	82470-92000	91	24 O
78410-60010	81	20 Q	81560-60010	99		82510-92000	85	21 M
78471-50010	83	20 X	81561-60010	99	27 C	82510-92000	87	22-L
80248-92000	85	21 Q	81562-31010	99	27 E	82510-92000	89	23 M
80248-92000	87	22 O	81563-60010	99	27 F	82510-92000	91	24 K
80248-92000	89	23 Q	81564-31010	99	27 G	82510-92170	91	24 K
80248-92000	91	24 N	81801-55010	81	20 G	82610-20011	93	25-L
81081-60010	81	20 K	81806-60010	81	20 A	82610-20021	93	25 L
81086-60010	81	20 C	81810-60010	81		82610-60031	93	25-L
81110-60010	93	25 C	81810-60020	81		82670-30020	93	25 D
81110-60020	93	25 C	81860-60010	81		82730-92000	85	21-G
81210-60010	93	25 A	81910-25010	95	25 T	82730-92000	87	22 J
81230-60010	81	20 R	81910-25010	219	53 AL	82730-92000	89	23 I
81240-30010	95	25 Q	81910-60010	175	43 AH	82730-92000	91	24 G
81240-30010	97	26 E	81911-92000	219	53 AK	82811-92000	85	21 I
81240-61010	95	25 R	81912-92000	219	53 AK	82811-92000	87	22 H
81240-61010	97		81913-92000	219	53 AJ	82811-92000	89	23 H
81241-30020	97	26 P	81980-20020	93	25 M	82811-92000	91	24 I
81241-39420	97	26 F	81980-35010	93	25 M	83100-60011	83	20-V
81243-39410	97	26 H	82024-60010	85	21 R	83100-60021	83	20 V
81243-61010	97	26 R	82024-60010	87	22 Q	83110-60010	81	20 H
81244-39410	97	26 J	82024-60020	89	23 S	83110-60020	81	20 H
81245-39410	97	26 K	82024-60020	91	24 P	83310-60010	83	20 Z
81270-60050	95	25 U	82047-92000	85	21 P	83320-35010	25	8 S
81270-60050	99	27 Q	82047-92000	87	22 P	83361-20010	25	8 T

MANUFACTURER S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
83410-60010	83	20 W	85136-55020	113	30 AH	87110-60020	115	31 X
83420-20010	81	20 L	85137-55020	113	30 AG	87110-60040	123	33 H
83510-60010	81	20 U	85139-55020*	113	30 S	87114-39020	119	32 AB
83520-55010	83	20 AC	85141-55020	111	30 X	87117-55040	119	32 AR
83610-60020	83	20 AA	85143-91336	111	30 AL	87130-60030	119	
84110-60010	81	20 D	85144-55020*	111	30 U	87134-60030	121	32 BT
84140-59620	93	25 J	85145-55020*	111	30 V	87141-60030	119	32 AM
84141-59610	95	25 AA	85146-55020	111	30 M	87142-60030	117	32 Z
84160-60020	81	20 N	85147-55020	113	30 AI	87148-60030	117	32 Y
84170-59620	81	20 O	85152-55020	111	30 J	87150-60030	119	32 AQ
84270-60010	81	20 E	85154-55020	111	30 Y	87200-60020	115	
84310-60010	93	25 K	85155-55020	111	30 A	87200-60030	117	
84310-60020	93	25 K	85160-35010	103		87200-60040	123	
84340-30010	93	25 H	85160-60010	107		87204-60030	117	32 W
84450-60020	83	20 AB	85161-91336	107	29 O	87205-25010	115	31 G
84610-30010	95	25 P	85162-91336	107	29 K	87206-60030	117	32 G
84650-60010	81	20 P	85163-55010	107	29 M	87211-60030	121	32 BM
84650-92170	81	20 P	85164-91336	107	29 P	87212-60030	119	32 AT
84730-55020	115	31 Y	85165-91336	107	29 N	87231-60020	115	31 J
84803-92000	95	25 W	85167-90010*	107	29 G	87231-60030	117	32 I
84804-92000	95	25 V	85168-55010	107	29 C	87232-60020	115	31 P
85010-60020	107		85169-55010	107	29 D	87232-60030	117	32 E
85011-55020	111	30 AB	85171-91336*	107	29 J	87236-25010	115	31 Q
85012-55020	113	30 AE	85173-25040	107	29 L	87237-61020	115	31 L
85013-55020	111	30 K	85182-55030	107	29 H	87238-25010	115	31 I
85014-91336	111		85185-92170	107	29 E	87241-60020	115	31 B
85017-55010	107	29 Q	85186-92170	107	29 F	87242-60020	115	31 F
85060-60010	165		85190-35010	103	28 K	87243-60020	115	31 H
85060-60010	169		85190-35020	103	28 K	87245-60030	119	32 AY
85110-35010	105	28 AG	85190-60010	165	41 K	87246-60030	119	32 AZ
85110-60010	165	41 Q	85190-60010	169	42 A	87251-60020	115	31 U
85110-60020	107		85190-92170-1	107	29 A	87253-60020	115	31 D
85110-60030	169	42 G	85190-92170-2	107	29 A	87254-60020	115	31 E
85110-91336	109	29 Z	85203-92170	109	29 Y	87254-60020	119	32 BF
85110-91336	111		85220-10010	107	29 I	87254-60020	123	33 O
85110-92000	103		85220-55010	103	28 F	87256-55010	117	32 H
85111-55020	111	30 W	85220-55010	165	41 L	87265-60030	119	32 AX
85113-55020	111	30 AC	85220-55010	169	42 B	87265-60040	123	33 C
85114-55020	113	30 AF	85230-39410	105	28 AE	87266-60030	119	32 BD
85115-55020	111	30 Q	85231-92000	103	28 AB	87266-60040	123	33 N
85116-55020 *	111	30 D	85233-92170	107	29 T	87267-60020	115	31 A
85117-55020	111	30 P	85234-92170	107	29 U	87274-60020	115	31 T
85118-55020	111	30 N	85500-10011	81	20 M	87290-60030	117	32 C
85119-55020*	111	30 R	85500-10012	81	20 M	87290-60030	123	33 A
85120-92000	103		86508-60010	151	37 X	87291-60030	121	32 BO
85121-55020*	111	30 T	86509-60010	151	37 X	87291-60040	123	33 B
85123-55020*	111	30 C	86510-30020	93	25 E	87292-60030	119	32 BB
85125-55020	111	30 H	86510-30030	93	25 E	87293-60030	117	32 U
85126-91336*	111	30 O	86520-30020	93	25 F	87294-60030	121	32 BR
85127-55020*	111	30 F	86520-30030	93	25 F	87295-60030	117	32 B
85128-55020*	111	30 E	86530-20030	93	25 I	87296-60030	117	32 D
85129-55020	111	30 Z	86530-20040	93	25 I	87297-60030	117	32 J
85131-55020 *	111	30 B	87100-60020	115		87298-60030	119	32 AE
85132-55020	111	30 AA	87100-60030	117		87810-60011	165	41 R
85133-55020	111	30 I	87100-60040	123		87810-60011	169	42 H
85134-55020	111	30-G	87103-60030	119	32 AI	87901-60011	165	41 E
85135-55010	107	29 B	87104-60030	119	32 AD	87901-60011	169	42 P

MANUFACTURER'S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
87901-60011	217	53 C	90175-08003	137	35 M	90461-04108	61	16 Y
87902-60030	165	41 G	90175-08003	143	36 N	90461-04216	57	15 T
87902-60030	171	42 AO	90201-06028	149	37 F	90461-04216	61	16 W
87902-92170	217	53 D	90201-19117	49	13 BG	90461-06037	57	15 F
87910-60031	165		90204-13012	53	14 R	90461-06037	61	16 F
87910-60031	169		90206-09011	225	55 U	90461-08060	117	32 P
87910-92001	217	53 C	90207-05001	161	40 N	90461-08061	115	31 S
87910-92101	217	53 C	90207-05003	223	54 AQ	90461-08199	123	33 Q
87914-92170	219	53 AC	90240-06065	185	45 D	90461-23063	23	5 I
87920-92001	217	53 C	90245-08011	193	47 B	90461-23071	23	5 M
87920-92170	217	53 C	90249-10002	37	11 E	90462-10004	85	21 J
87921-92170	219	53 AE	90260-10013	65	17 U	90462-10004	87	22 F
87922-92170	219	53 AE	90301-29035	53	14-AF	90462-10004	89	23 F
87923-92170	219	53 AD	90310-32010	53	14 AH	90462-10004	91	24 F
87925-92170	217	53 A	90311-38028	47	13 BD	90462-10004	201	50 N
87926-60010	167	41 AA	90341-18014	43	13 J	90462-10006	85	21 A
87926-60010	171	42 AL	90345-53008	53	14 AD	90462-10006	87	22 A
87926-92000	217	53 E	90361-03023*	39	12 C	90462-10006	89	23 A
87927-60010	167	41-AB	90380-32038	53	14 X	90462-10006	91	24 A
87927-60010	171	42 AJ	90384-32058	53	14 AG	90462-10008	85	21 K
88371-20010	117	32 AA	90385-11021	43	13 D	90462-10008	87	22 I
90013-70001	227	55 V	90385-12022	25	8 L	90462-10021	57	15 W
90013-80002	227	55 W	90385-12022	57	15 E	90462-10021	61	16-AA
90053-00500	199	49 D	90385-12022	61	16 E	90462-10034	57	15 M
90053-60500	203	51 F	90385-16007	65	17 D	90462-10034	61	16 M
90053-60501	181	44-Y	90385-18025	65	17 O	90462-10034	85	21 L
90053-60501	223	54 AF	90386-13007	37	11-H	90462-10034	87	22-K
90053-60501	227	55 AI	90386-18026	53	14 Q	90462-10034	89	23 L
90053-60501	237	57 H	90387-10004	37	11 F	90462-10034	91	24 J
90053-80400	199	49 Q	90407-54016	117	32 V	90462-12024	25	8 M
90099-00004	121	32 BP	90412-09004	61	16 K	90463-08030	85	21 N
90099-01225	119	32 AC	90413-09003	57	15 B	90463-08030	87	22 M
90099-02302	119	32 AH	90413-09003	61	16 B	90463-08030	89	23 N
90099-04072	115	31 V	90413-09007	57	15 S	90463-08030	91	24 M
90099-04162	117	32 S	90413-09007	61	16 V	90463-08049	25	8 Y
90099-32009	115	31 K	90413-09015	57	15 L	90463-10045	37	11 A
90099-32029	119	32 AF	90413-09015	61	16 N	90467-06004	189	46 F
90099-35218	119	32 BG	90430-11100	59	15 AK	90467-11003	179	43 BI
90101-08072	41	12 M	90430-11100	63	16 AN	90467-41023	39	12 I
90101-08083	67	17 AH	90430-12038	27	8 AN	90467-44033	117	32 F
90101-10061	45	13 AB	90430-18012	43	13 L	90468-08001	37	11 N
90102-08002	23	5 Q	90430-34053	25	8 B	90468-08001	57	15 AF
90105-12005	27	8 AO	90430-40059	25	8 E	90468-08001	63	16 AI
90112-10004	139	35 AP	90445-21092	123	33 J	90480-01050	87	22 D
90112-10004	145	36 AO	90445-21093	123	33 I	90480-01050	91	24 S
90112-10007	157	38 AB	90445-21094	123	33 P	90480-01051	85	21 D
90113-14012	53	14 U	90445-24060	117	32 T	90480-01051	89	23 D
90116-08012	43	13 O	90445-24087	119	32 AU	90480-01109	119	32 BC
90116-08025	45	13 T	90445-24088	117	32 T	90480-01109	123	33 K
90116-08026	45	13 T	90446-08106	119	32 BE	90480 12069	53	14 P
90116-10043	23	5 B	90446-09107	123	33 L	90480-13110	123	33 M
90117-13036	65	17 Y	90460-23032	119	32 BA	90480-15007	85	21 B
90170-10050	23	5 A	90460-23032	123	33 D	90480-15007	87	22 B
90170-10054	51	14 I	90460-27002	117	32 X	90480-15007	89	23 B
90170-13028	67	17 AD	90460-66017	27	8 AI	90480-15007	91	24 B
90170-14057	53	14 T	90460-67201	115	31 C	90480-19048	85	21 F
90171-19012	49	13 BH	90461-04108	57	15 V	90480-19048	87	22 S

MANUFACTURER'S NUMERICAL INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
90480-19048	89	23 J	90540-08008	193	47 U	90945-01004*	51	14 H
90480-19048	91	24 R	90540-09007	149	37 L	90947-02006	37	11 P
90480-19048	201	50 P	90541-10009	205	51 AL	90947-02027	57	15 Q
90480-20023	85	21 U	90541-10009	271	65 AH	90947-02027	61	16-S
90480-20023	89	23 V	90560-08094	117	32 O	90948-03003	65	17 C
90480-20023	149	37 C	90560-09025	181	44 E	90948-03004	65	17 F
90480-26043	89	23 U	90560-10028	167	41 Z	90950-01019	177	43 AO
90480-45005	163	40 AB	90560-10028	171	42 AM	90981-11002	81	20 J
90480-46032	85	21 E	90560-30157	47	13 AX	90981-11004	97	26 Q
90480-46032	87	22 E	90564-10059	51	14 E	90981-12001	81	20 S
90480-46032	89	23 E	90564-30033	47	13 BA	90981-12001	99	27 X
90480-46032	91	24 E	90564-30034	47	13 BA	90981-12003	99	27 L
90480-46033	85	21 V	90564-30035	47	13 BA	90999-90014	97	26 A
90480-46033	87	22 T	90564-30063	47	13 BA	95119-25040	111	30 L
90480-46033	89	23-G	90564-33062	53	14 AB	96451-00600	39	12 G
90480-46033	91	24 D	90564-40037	55	14 AR	97600-30205	55	14-AQ
90480-46041	89	23 W	90564-40038	55	14 AR	97600-30206	55	14 AO
90480-46041	91	24-T	90564-40039	55	14 AR	97610-30306	47	13 BB
90480-58059	25	8 I	90564-75048	47	13 AW	97610-30308	47	13 AV
90501-05014	225	55 T	90564-75049	47	13 AW	97700-17831	45	13 AD
90506-05014	187	45 AB	90564-75050	47	13 AW	97700-17887	45	13 AD
90506-09015	187	45 AA	90564-75051	47	13 AW	98427-92050	253	61 R
90506-09043	57	15 H	90917-05004*	23	5 C	99118-62905	93	25 L
90506-09043	61	16 H	90917-06005	23	5 D	99118-62915	93	25 L
90506-12009	269	65 V	90917-08001	23	5 L	99118-62930	93	25 L
90506-12023	37	11-M	90930-03019	45	13 Z	99132-12250	97	26 D
90506-18010	271	65 W	90930-03023	45	13 AP	99132-13015	81	20 B
90508-12062	185	45 Z	90937-01016	39		99132-13030	81	20 I
90508-12063	185	45 Z	90937-01017	39		99132-13030	81	20 J
90521-31038*	39	12 B	90937-01018	39		99132-13060	97	26 G
90521-31039*	39	12 B	90937-01019	39		99132-22250	97	26 D
90521-31040*	39	12 B	90945-01001	51	14 G	99132-22250	99	27 D
90521-31041*	39	12 B	90945-01003*	51	14 F			

STANDARD HARDWARE INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
B O L T								
90091-00504	121	32 BS	91111-40660	241	58 M	91111-40820	163	40 Z
90091-00609	116	31 R	91111-40816	25	8 K	91111-40820	175	43 V
91111-40525	249	60 AU	91111-40816	45	13 V	91111-40820	271	65 AB
91111-40610	177	43 AU	91111-40816	57	15 AC	91111-40825	23	5 Y
91111-40610	205	51 AH	91111-40816	57	15 AE	91111-40825	65	17 H
91111-40610	223	54 AV	91111-40816	61	16 AF	91111-40825	137	35 G
91111-40610	229	55 AW	91111-40816	63	16 AH	91111-40825	143	36 G
91111-40610	237	57 A	91111-40816	85	21 W	91111-40825	203	51 S
91111-40612	107	29 R	91111-40816	87	22 U	91111-40825	217	53 S
91111-40612	117	32 M	91111-40816	89	23 X	91111-40832	119	32 AL
91111-40612	161	40 Q	91111-40816	91	24 V	91111-41025	23	5 R
91111-40612	249	60 AM	91111-40816	139	35 AO	91111-41025	37	11 L
91111-40612	259	63 Y	91111-40816	145	36 AN	91111-41028	157	38 R
91111-40612	263	64 Z	91111-40816	151	37 V	91111-41028	159	39 N
91111-40616	25	8 O	91111-40816	157	38 X	91111-41032	145	36 AC
91111-40616	103	28 T	91111-40816	159	39 U	91111-41045	167	41 Y
91111-40616	105	28 AF	91111-40816	161	40 C	91111-41045	171	42 AG
91111-40616	139	35 AZ	91111-40816	165	41 W	91111-41056	37	11 Q
91111-40616	145	36 AY	91111-40816	171	42 AN	91111-41056	165	41 J
91111-40616	149	37 G	91111-40816	173	43 C	91111-41056	171	42 AF
91111-40616	155	38 C	91111-40816	193	47 AA	91111-41232	139	35 AE
91111-40616	159	39 D	91111-40816	233	56 AF	91111-50820	193	47 AE
91111-40616	173	43 N	91111-40816	243	58 AJ	91111-50822	51	14 A
91111-40616	183	44 AD	91111-40816	247	60 T	91111-50825	151	37 AH
91111-40616	199	49 T	91111-40816	255	62 Z	91111-50832	151	37 AI
91111-40616	201	50 S	91111-40816	271	65 AD	91111-50850	51	14 L
91111-40616	205	51 AJ	91111-40818	123	33 E	91111-51036	139	35 AB
91111-40616	215	52 AU	91111-40818	137	35 C	91111-51036	147	36 BL
91111-40616	217	53 B	91111-40818	143	36 C	91111-51040	141	35 BK
91111-40616	223	54 AO	91111-40820	23	5 S	91111-51040	147	36 BJ
91111-40616	227	55 AR	91111-40820	43	13 G	91111-51045	141	35 BH
91111-40620	55	14 AP	91111-40820	59	15 AG	91111-51045	147	36 BG
91111-40620	109	29 X	91111-40820	63	16 AJ	91111-51045	173	43 H
91111-40620	153	37 AV	91111-40820	119	32 AS	91111-51056	157	38 AF
91111-40620	219	53 AB	91111-40820	137	35 P	91111-51075	37	11 C
91111-40625	201	50 K	91111-40820	143	36 P	91111-51240	55	14 AL
91111-40640	221	54 P	91111-40820	155	38 A	91111-51250	139	35 AU
91111-40640	225	55 P	91111-40820	159	39 A	91111-51250	145	36 AT
91111-40660	231	56 Q						

S C R E W

90090-00603	116	31 O	93110-15010	155	38 N	93180-16014	119	32 AP
90090-50401	121	32 BU	93110-15010	159	39 J	93180-16016	95	25 Z
90090-50512	119	32 BH	93110-15016	157	38 AE	93180-16016	117	32 N
90090-50512	121	32 BN	93110-15016	185	45 L	93180-16016	123	33 T
90090-50615	119	32 AG	93180-16012	57	15 Z	93180-16020	181	44 AA
93110-14008	113	30 AK	93180-16012	61	16 AC	93210-13008	161	40 B
93110-14010	83	20 Y	93180-16012	165	41 B	93210-13010	201	50 X
93110-14010	99	27 N	93180-16012	171	42 AE	93210-13013	179	43 BL

STANDARD HARDWARE INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
93210-14008	189	46 K	93210-16020	241	58 N	93230-16016	187	45 AG
93210-14008	259	63 J	93210-16020	255	62 P	93230-16016	193	47 W
93210-14008	263	64 M	93210-16025	151	37 AD	93230-16016	249	60 AB
93210-14010	25	8 Q	93210-18014	177	43 AN	93230-16025	269	65 P
93210-14010	169	42 S	93210-18016	167	41 AJ	93230-18016	167	41 AK
93210-14010	179	43 BL	93210-18016	171	42 AB	93230-18016	171	42 AA
93210-14010	203	51 U	93210-18020	175	43 AB	93230-18020	167	41-AG
93210-14012	199	49 G	93220-13005	231	56 T	93230-18020	169	42 U
93210-14014	187	45 AM	93220-13005	241	58 Q	93230-18020	181	44 C
93210-14020	271	65 AN	93220-14008	223	54 Y	93230-18020	185	45 S
93210-14025	245	59 K	93220-14008	227	55 AC	93230-24012	191	46 Y
93210-15010	187	45 AH	93220-14016	95	25 AB	93230-24016	219	53 V
93210-15012	173	43 E	93220-16016	231	56 W	93230-26012	81	20 F
93210-15012	187	45 AQ	93220-16016	241	58 T	93230-26016	221	54 N
93210-15016	233	56 AP	93220-16016	247	60 G	93230-26016	225	55 N
93210-15016	243	58 AZ	93220-16016	257	62 AL	93230-26016	237	57 L
93210-15016	255	62 D	93220-16020	247	60 I	93510-13512	97	26 S
93210-16010	25	8 AE	93220-16020	257	62 AY	93520-16020	97	26 I
93210-16010	165	41 T	93220-18016	193	47 G	93530-13016	263	64 S
93210-16010	169	42 J	93220-18016	257	62 AV	93530-14014	223	54 AR
93210-16010	175	43 AI	93220-18020	185	45 T	93530-14020	229	55 AU
93210-16010	177	43 AM	93220-18020	249	60 AP	93530-14020	239	57 Q
93210-16010	181	44 L	93220-18020	271	65 AM	93530-23512	161	40 M
93210-16010	189	46 A	93220-18025	231	56 Y	93530-24014	239	57 U
93210-16010	243	58 AX	93220-18025	243	58 V	93540-13510	213	52 X
93210-16012	191	46 AA	93220-18025	249	60 AJ	93540-14012	245	59 H
93210-16012	259	63 P	93220-18025	257	62 BD	93540-14016	207	51 BA
93210-16014	185	45 Y	93220-18030	247	60 E	93540-14016	213	52 AB
93210-16016	145	36 AG	93220-24016	267	65 B	93540-14016	249	60 AN
93210-16016	149	37 P	93230-13010	195	47 AI	93540-14016	253	61 K
93210-16016	165	41 V	93230-14008	223	54 AC	93540-14016	255	62 F
93210-16016	169	42 L	93230-14010	201	50 I	93540-14016	261	63 AF
93210-16016	175	43 AG	93230-14010	217	53 O	93540-14016	263	64 G
93210-16016	221	54 I	93230-14012	217	53 L	93540-14016	269	65 I
93210-16016	225	55 I	93230-14016	253	61 D	93540-15014	139	35 AW
93210-16016	233	56 AU	93230-15010	255	62 I	93540-15014	145	36 AV
93210-16016	249	60 AG	93230-15014	119	32 AO	93580-17020	57	15 AC
93210-16016	269	65 O	93230-16012	149	37 R	93580-17020	59	15 AI
93210-16018	203	51 M	93230-16012	193	47 N	93580-17020	61	16 AF
93210-16020	187	45 AP	93230-16016	181	44 D	93580-17020	63	16 AL
93210-16020	233	56 AD						

N U T

90092-10504	121	32 BK	94110-40500	185	45 O	94110-40600	161	40 S
90092-10605	115	31 M	94110-40500	247	60 O	94110-40600	177	43 AL
94110-15016	157	38 AC	94110-40500	255	62 W	94110-40600	177	43 AM
94110-40300	161	40 K	94110-40600	99	27 J	94110-40600	181	44 A
94110-40300	179	43 BL	94110-40600	103	28 R	94110-40600	193	47 K
94110-40300	201	50 W	94110-40600	103	28 U	94110-40600	199	49 K
94110-40400	161	40 I	94110-40600	119	32 AW	94110-40600	201	50 O
94110-40400	179	43 BL	94110-40600	145	36 AI	94110-40600	205	51 AF
94110-40400	201	50 Q	94110-40600	149	37 E	94110-40600	217	53 H
94110-40500	103	28 X	94110-40600	155	38 F	94110-40600	221	54 C
94110-40500	153	37 AQ	94110-40600	159	39 F	94110-40600	225	55 C

STANDARD HARDWARE INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
94110-40600	231	56 L	94110-40800	157	38 V	94110-41200	97	26 N
94110-40600	241	58 I	94110-40800	159	39 S	94110-41200	139	35 AS
94110-40600	247	60 L	94110-40800	163	40 Y	94110-41200	145	36 AR
94110-40600	249	60 AC	94110-40800	175	43 Z	94110-41400	65	17 L
94110-40600	255	62 S	94110-40800	181	44 J	94120-40600	231	56 P
94110-40600	259	63 Z	94110-40800	219	53 AF	94120-40600	241	58 L
94110-40600	263	64 AA	94110-40800	233	56 AM	94120-40800	25	8 AA
94110-40800	23	5 O	94110-40800	243	58 AO	94120-41000	37	11 G
94110-40800	25	8 AB	94110-40800	271	65 Y	94120-41300	53	14 S
94110-40800	41	12 O	94110-41000	23	5 V	94141-40800	23	5 W
94110-40800	43	13 M	94110-41000	65	17 AB	94141-40800	193	47 S
94110-40800	51	14 J	94110-41000	139	35 AQ	94141-41000	43	13 F
94110-40800	59	15 AJ	94110-41000	145	36 Y	94141-41200	65	17 B
94110-40800	63	16 AM	94110-41000	157	38 U	94171-10800	165	41 A
94110-40800	65	17 J	94110-41000	159	39 P	94171-10800	169	42 M
94110-40800	139	35 AN	94110-41000	165	41 I	94171-20600	185	45 A
94110-40800	145	36 AF	94110-41000	171	42 AI	94350-10600	193	47 J
94110-40800	153	37 AM						

W A S H E R

90093-00402	121	32 BQ	94511-00600	113	30 AD	94511-00800	163	40 X
90093-00501	119	32 BI	94511-00600	117	32 L	94511-00800	167	41 X
90093-00505	121	32 BL	94511-00600	123	33 S	94511-00800	171	42 Z
90093-00602	117	32 Q	94511-00600	145	36 AH	94511-00800	173	43 B
90094-00402	121	32 BV	94511-00600	149	37 H	94511-00800	181	44 I
90094-00502	121	32 BJ	94511-00600	155	38 E	94511-00800	219	53 AG
90094-00602	115	31 N	94511-00600	159	39 E	94511-00800	233	56 AG
90094-00602	117	32 R	94511-00600	161	40 R	94511-00800	243	58 AK
90094-01001	115	31 W	94511-00600	165	41 S	94511-00800	271	65 Z
94511-00300	161	40 J	94511-00600	169	42 I	94511-01000	45	13 AA
94511-00300	179	43 BL	94511-00600	173	43 M	94511-01000	145	36 Z
94511-00400	25	8 AF	94511-00600	185	45 B	94511-01000	155	38 L
94511-00400	113	30 AJ	94511-00600	191	46 W	94511-11200	97	26 O
94511-00400	161	40 H	94511-00600	193	47 L	94512-00400	187	45 AL
94511-00400	169	42 T	94511-00600	199	49 L	94512-00400	203	51 V
94511-00400	179	43 BL	94511-00600	201	50 L	94512-00400	245	59 J
94511-00400	199	49 F	94511-00600	205	51 AE	94512-50400	255	62 G
94511-00400	201	50 T	94511-00600	217	53 G	94512-00500	185	45 N
94571-00400	253	61 L	94511-00600	221	54 D	94512-00500	247	60 N
94511-00400	259	63 K	94511-00600	225	55 D	94512-00600	25	8 N
94511-00400	263	64 N	94511-00600	231	56 K	94512-00600	57	15 AA
94511-00500	103	28 Y	94511-00600	237	57 B	94512-00600	61	16 AD
94511-00500	139	35 AX	94511-00600	241	58 H	94512-00600	95	25 Y
94511-00500	145	36 AW	94511-00600	247	60 L	94512-00600	99	27 I
94511-00500	153	37 AP	94511-00600	249	60 AL	94512-00600	107	29 W
94511-00500	155	38 O	94511-00600	255	62 O	94512-00600	139	35 BA
94511-00500	159	39 K	94511-00600	259	63 Y	94512-00600	145	36 AZ
94511-00500	187	45 AI	94511-00600	263	64 X	94512-00600	151	37 U
94511-00500	255	62 E	94511-00600	269	65 N	94512-00600	175	43 AF
94511-00600	25	8 AG	94511-00800	25	8 J	94512-00600	177	43 AM
94511-00600	55	14 AN	94511-00800	137	35 I	94512-00600	181	44 Z
94511-00600	99	27 R	94511-00800	143	36 I	94512-00600	187	45 AO
94511-00600	103	28 S	94511-00800	157	38 W	94512-00600	203	51 N
94511-00600	107	29 S	94511-00800	159	39 T	94512-00600	215	52 AV

STANDARD HARDWARE INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
94512-00600	219	53 AI	94524-00400	25	8 R	94612-10600	225	55 E
94512-00600	249	60 AD	94524-00400	201	50 J	94612-10600	247	60 L
94512-00600	255	62 AG	94524-00400	207	51 BB	94612-10600	251	60 BE
94512-00600	259	63 Q	94524-00400	217	53 K	94612-10800	25	8 AC
94512-00600	269	65 Q	94524-00400	223	54 Z	94612-10800	27	8 AL
94512-00800	23	5 P	94524-00400	227	55 AC	94612-10800	123	33 G
94512-00800	41	12 N	94524-00400	249	60 AO	94612-10800	137	35 H
94512-00800	43	13 I	94524-00400	253	61 C	94612-10800	143	36 H
94512-00800	51	14 B	94524-00500	255	62 J	94612-10800	153	37 AR
94512-00800	57	15 AB	94524-00600	181	44 G	94612-10800	155	38 D
94515-00800	57	15 AD	94524-00600	193	47 O	94612-10800	159	39 C
94512-00800	61	16 AE	94524-00600	221	54 M	94612-10800	161	40 D
94512-00800	63	16 AG	94524-00600	225	55 M	94612-10800	165	41 D
94512-00800	65	17 I	94524-00600	231	56 V	94612-10800	169	42 O
94512-00800	85	21 Y	94524-00600	237	57 K	94612-10800	173	43 A
94512-00800	87	22 V	94524-00600	241	58 S	94612-10800	181	44 H
94512-00800	91	24 U	94524-00600	247	60 F	94612-10800	219	53 AH
94512-00800	119	32 AK	94524-00600	257	62 AK	94612-10800	243	58 AL
94512-00800	123	33 F	94524-00800	85	21 X	94612-10800	257	62 AR
94512-00800	137	35 F	94524-00800	87	22 W	94612-10800	271	65 AA
94512-00800	143	36 F	94524-00800	89	23 Y	94612-11000	139	35 AC
94512-00800	151	37 W	94524-00800	167	41 AF	94612-11000	145	36 AA
94512-00800	155	38 B	94524-00800	171	42 V	94612-11000	149	37 A
94512-00800	159	39 B	94524-00800	185	45 R	94612-11000	155	38 K
94512-00800	165	41 C	94524-00800	193	47 H	94612-11000	159	39 Q
94512-00800	169	42 N	94524-00800	233	56 Z	94612-11000	165	41 F
94512-00800	175	43 AA	94524-00800	243	58 W	94612-11000	171	42 AK
94512-00800	193	47 AB	94524-00800	247	60 D	94612-11000	173	43 G
94512-00800	203	51 T	94524-00800	257	62 AW	94612-11200	97	26 O
94512-00800	255	62 AA	94524-00800	271	65 AK	94612-11200	139	35 AF
94512-01000	23	5 U	94525-00800	185	45 U	94613-10600	27	8 AH
94512-01000	37	11 D	94611-10600	119	32 AV	94613-10600	55	14 AM
94512-01000	139	35 AD	94611-10600	169	42 K	94613-10600	139	35 BB
94512-01000	145	36 AP	94611-10600	193	47 V	94613-10600	145	36 BA
94512-01000	157	38 T	94611-10800	233	56 AH	94613-10600	149	37 N
94512-01000	159	39 O	94612-10400	161	40 G	94613-10600	155	38 I
94512-01000	165	41 H	94612-10400	179	43 BL	94613-10600	159	39 I
94512-01000	171	42 AH	94612-10400	201	50 E	94613-10600	161	40 T
94512-01000	173	43 I	94612-10400	245	59 I	94613-10600	165	41 U
94512-01200	45	13 R	94612-10400	259	63 L	94613-10600	173	43 L
94512-01200	55	14 AK	94612-10400	263	64 O	94613-10600	181	44 K
94512-01200	139	35 AT	94612-10500	103	28 Z	94613-10600	189	46 B
94512-01200	145	36 AS	94612-10500	139	35 AY	94613-10600	193	47 M
94512-01300	67	17 AE	94612-10500	145	36 AX	94613-10600	199	49 M
94512-01400	65	17 M	94612-10500	153	37 AO	94613-10600	201	50 R
94521-00400	99	27 O	94612-10500	173	43 D	94613-10600	217	53 F
94521-00400	189	46 L	94612-10500	185	45 M	94613-10600	223	54 AN
94521-00600	151	37 AE	94612-10500	199	49 P	94613-10600	227	55 AQ
94521-00600	177	43 AW	94612-10500	255	62 X	94613-10600	231	56 J
94521-00600	181	44 B	94612-10600	99	27 H	94613-10600	237	57 C
94521-00800	193	47 AD	94612-10600	103	28 B	94613-10600	241	58 G
94522-01200	97	26 O	94612-10600	107	29 V	94613-10600	249	60 AE
94523-00500	233	56 AO	94612-10600	117	32 K	94613-10600	255	62 T
94523-00500	243	58 BA	94612-10600	123	33 R	94613-10600	259	63 C
94523-00600	233	56 AT	94612-10600	201	50 M	94613-10600	263	64 C
94523-00600	243	58 AW	94612-10600	205	51 AD	94613-10600	269	65 M
94523-00800	247	60 S	94612-10600	221	54 E	94613-10800	23	5 T

STANDARD HARDWARE INDEX

PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER	PART NUMBER	PAGE	FIGURE NUMBER
94613-10800	57	15 AH	94613-10800	119	32 AJ	94613-10800	217	53 R
94613-10800	61	16 AE	94613-10800	57	15 AB	94613-10800	255	62 AB
94613-10800	63	17 AK	94613-10800	153	37 AL	94711-90800	43	13 K
94613-10800	57	15 AB	94613-10800	193	47 T	94711-90800	51	14 C

COTTER PIN

95381-01215	251	60 BC	95381-02018	233	56 AN	95381-02025	149	37 B
95381-01620	103	28 V	95381-02018	243	58 AP	95381-03020	37	11 K
95381-02012	185	45 X	95381-02020	23	5 X	95381-03025	65	17 A
95381-02015	257	62 AS	95381-02020	193	47 R	95381-04030	49	13 BI
95381-02015	271	65 AC	95381-02025	43	13 H	95381-04030	257	62 AN

R I V E T

95111-00405	223	54 AB	95111-01022	65	17 W	95112-00305	181	44 S
95111-00405	227	55 AE	95112-00305	149	37 J	95112-00516	233	56 AJ

Prepared by

TOYOTA MOTOR SALES CO., LTD.

No 3, 2 chome Hatchobar , Chuo ku Tokyo, Japan

Cable Address JIDOSHA TOKYO

Tel Tokyo 551 7111 7121

FEBRUARY 1965

PRINTED IN JAPAN

Running No 93631 65



TOYOTA MOTOR