


AUTO ANTENNA

FROM POWER SOURCE SYSTEM (SEE PAGE 40)

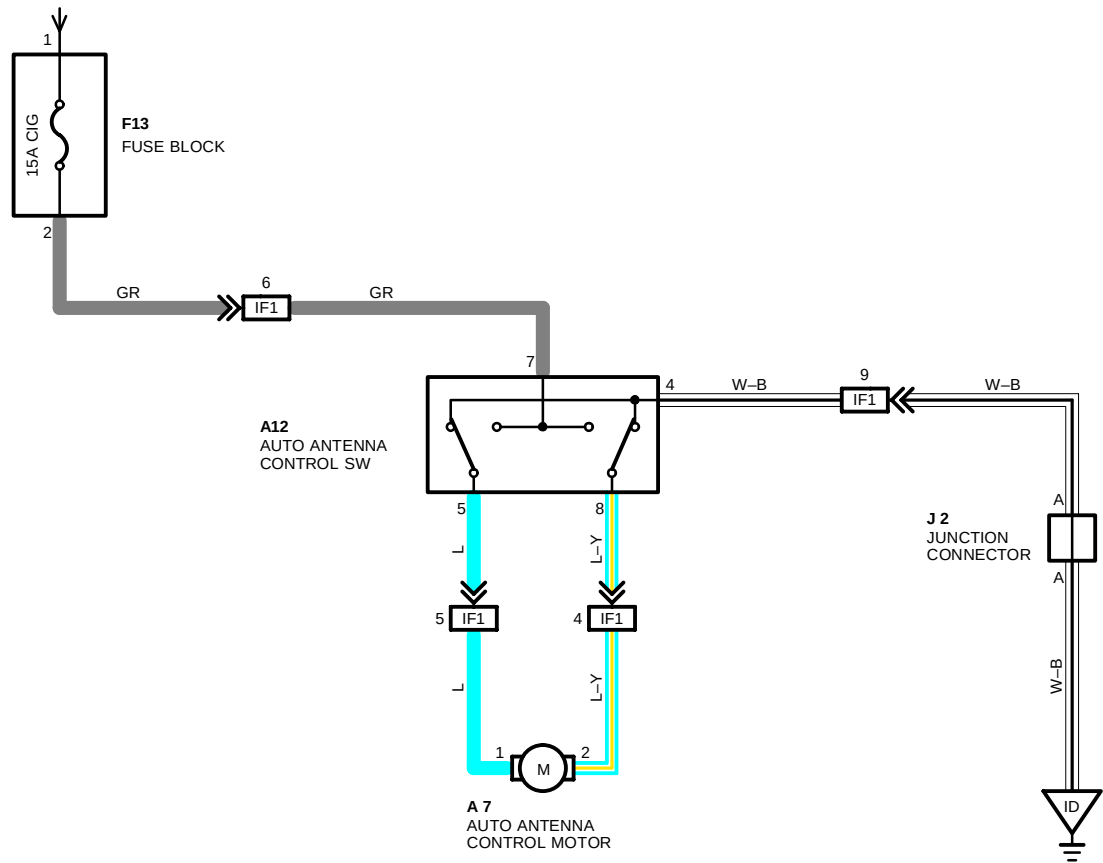

SERVICE HINTS

A12 AUTO ANTENNA CONTROL SW
7-GROUND : APPROX. 12VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
4-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 7	19	F13	20		
A12	20	J 2	20		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	24	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	24	LEFT KICK PANEL

