



# ILLUMINATION

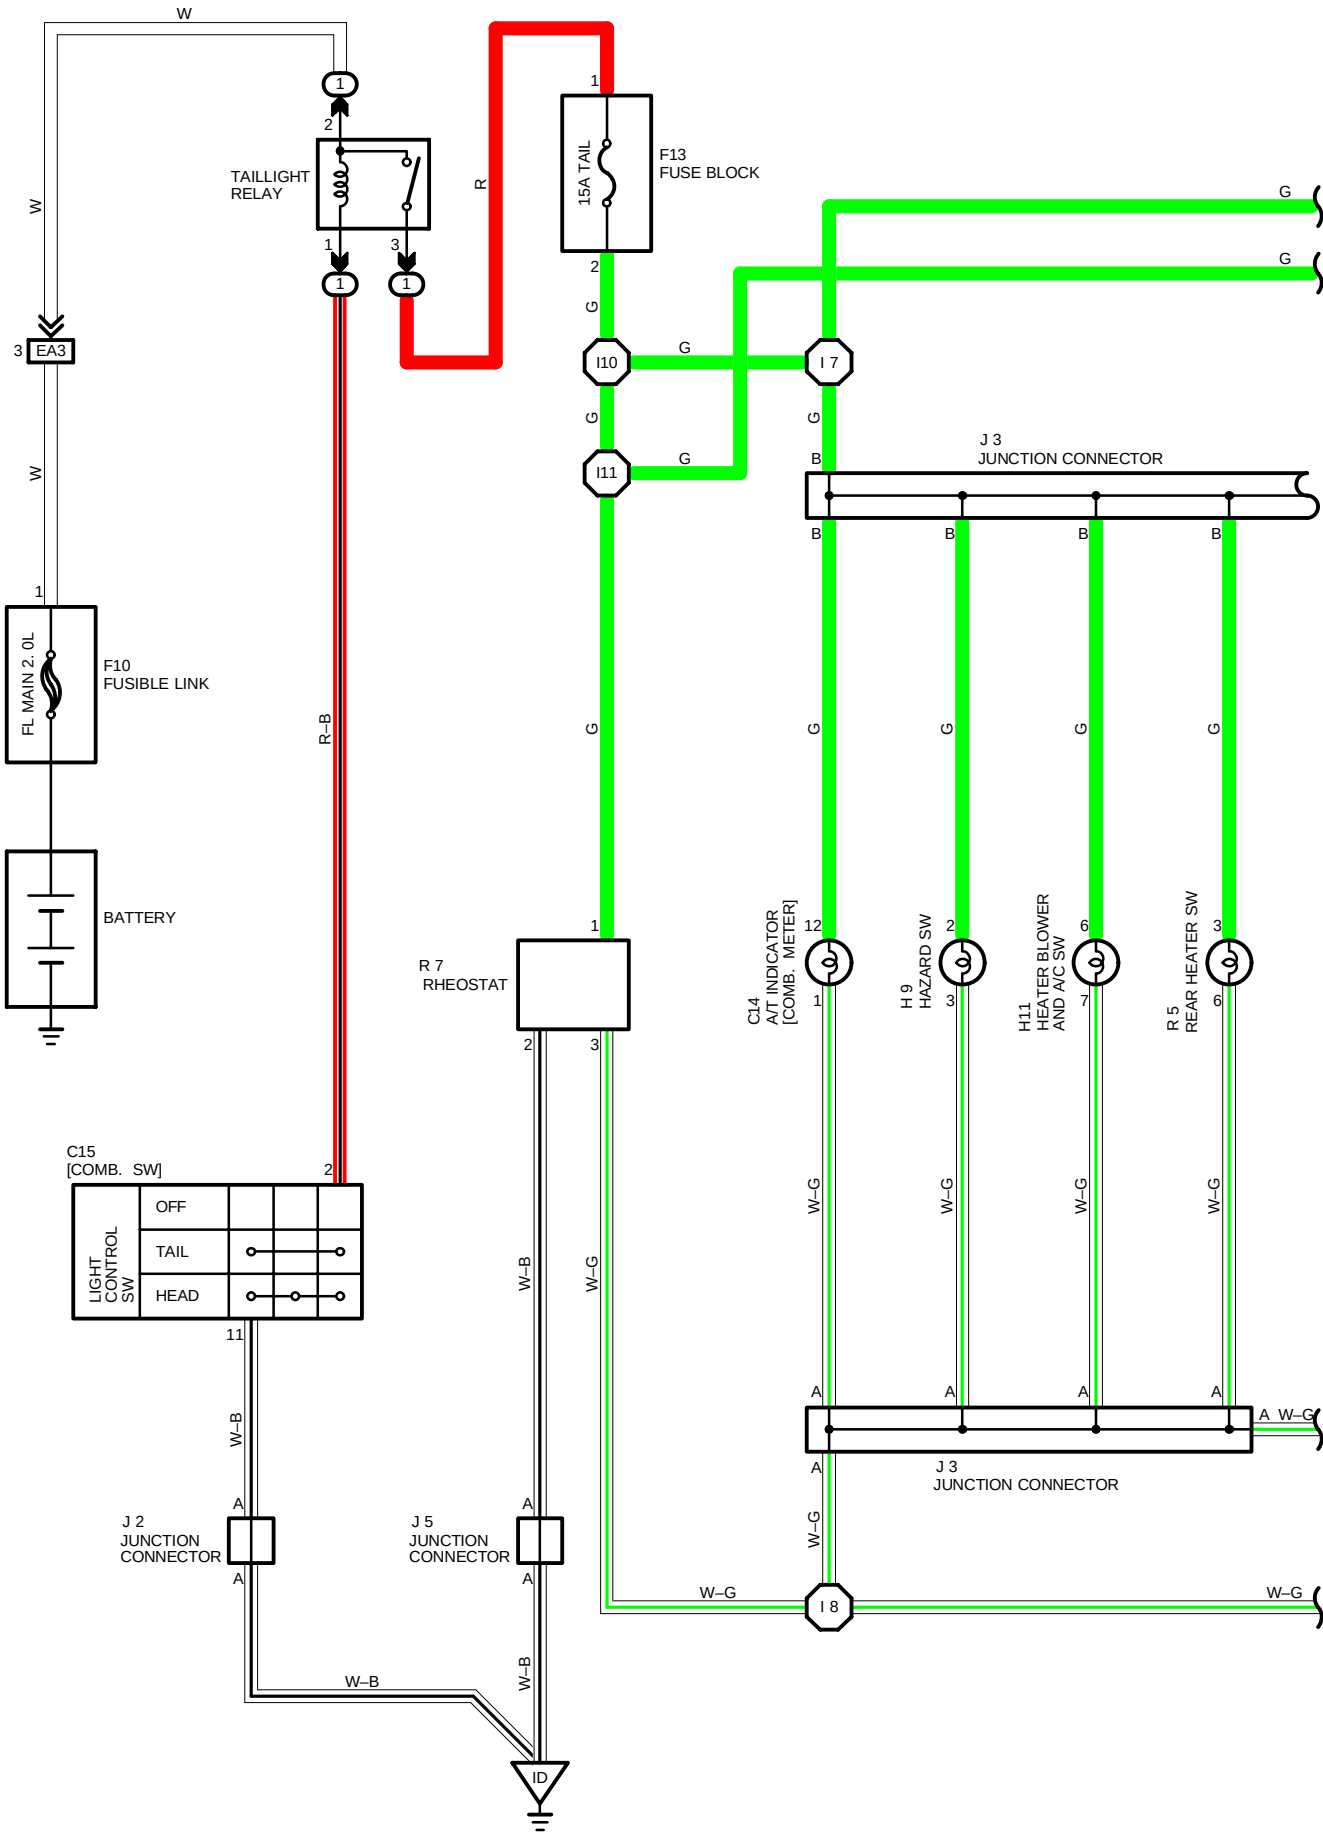

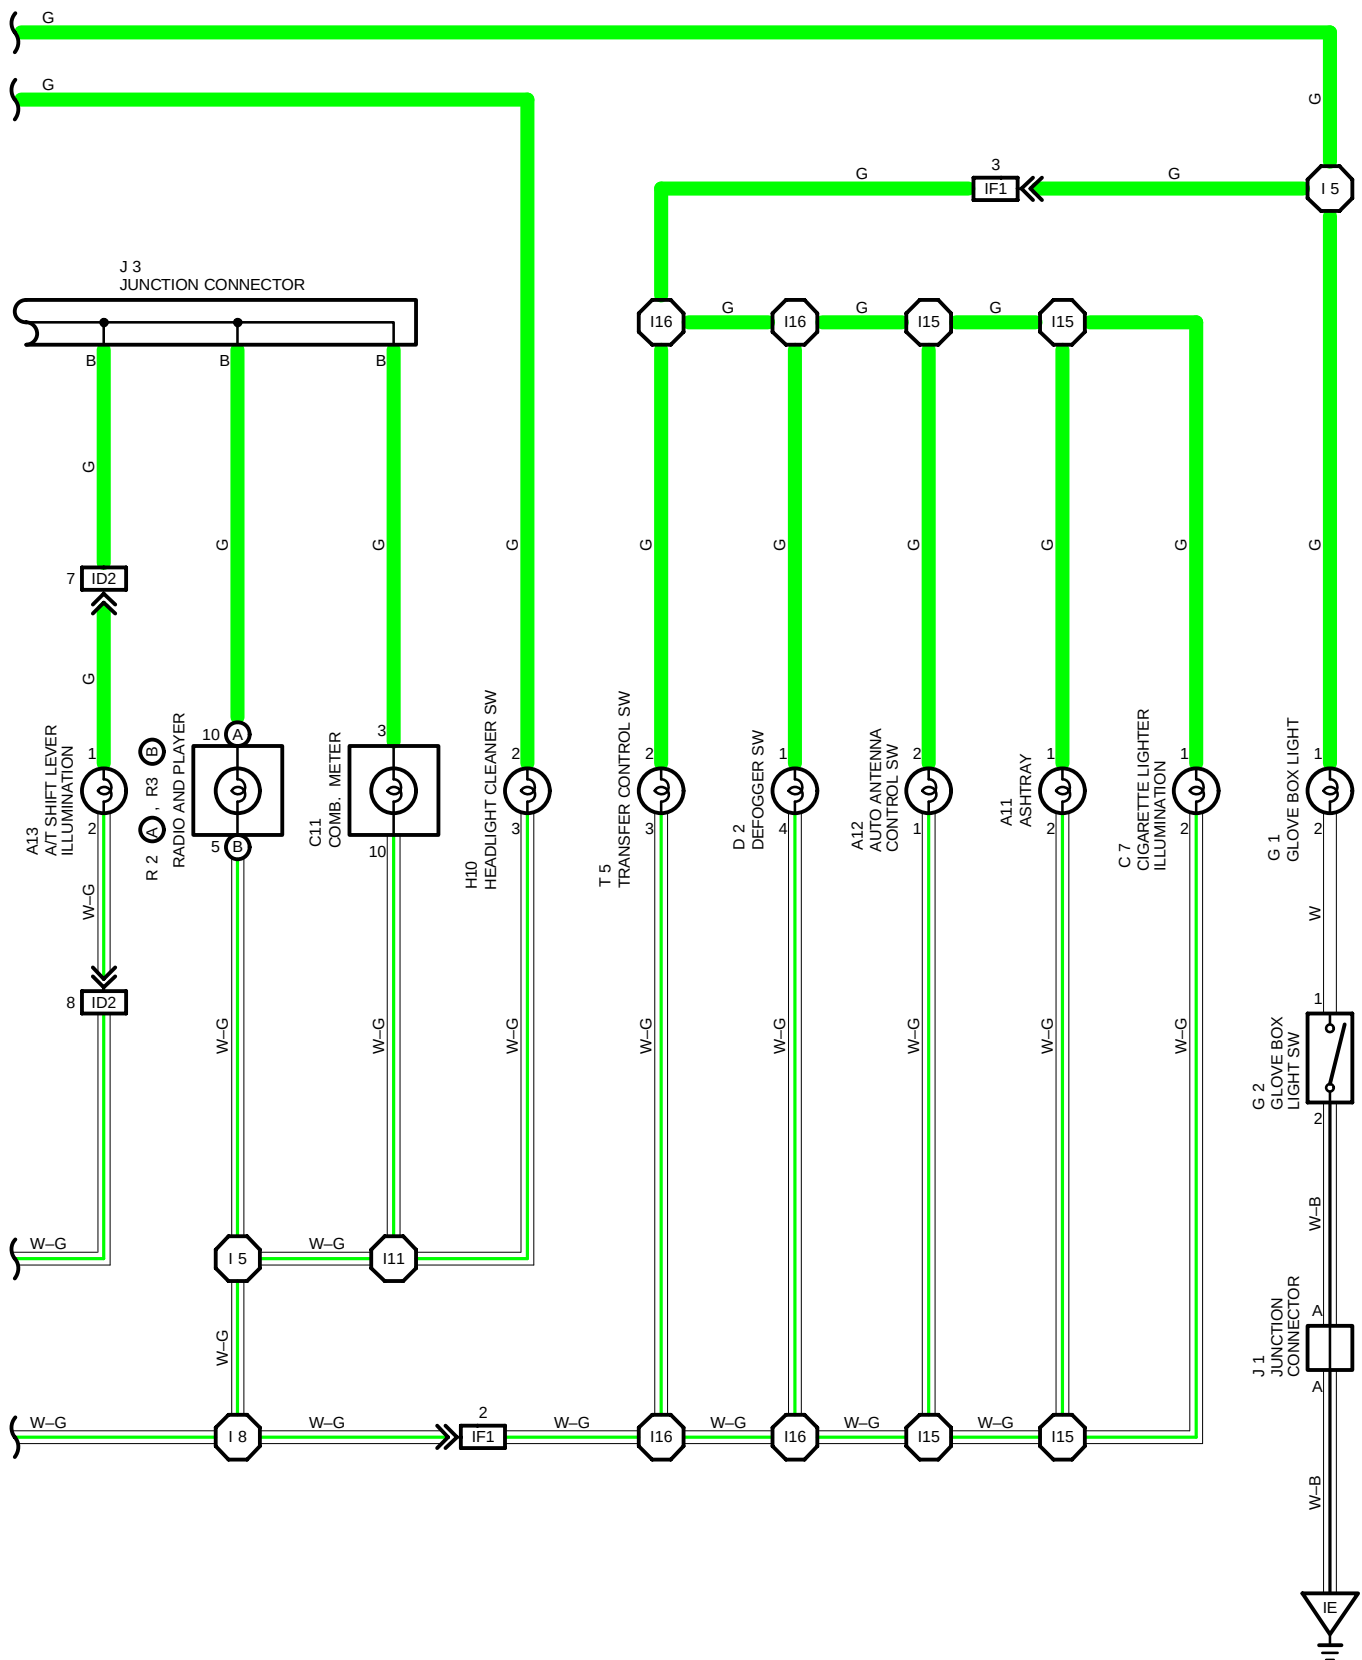

ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

(1) 2 – (1) 3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)

R 7 RHEOSTAT

1–2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0**VOLTS WITH FULLY TURNED CLOCKWISE

⊖ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| A11  | 22       | F10  | 21       | J 2  | 22       |
| A12  | 22       | F13  | 22       | J 3  | 22       |
| A13  | 23       | G 1  | 22       | J 5  | 22       |
| C 7  | 22       | G 2  | 22       | R 2  | A 22     |
| C11  | 22       | H 9  | 22       | R 3  | B 22     |
| C14  | 22       | H10  | 22       | R 5  | 22       |
| C15  | 22       | H11  | 22       | R 7  | 22       |
| D 2  | 22       | J 1  | 22       | T 5  | 22       |

⊖ : RELAY BLOCKS

| CODE | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION) |
|------|----------|-------------------------------------|
| 1    | 20       | R/B NO. 1 (LEFT LICK PANEL)         |

⊖ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)    |
|------|----------|---------------------------------------------------------------|
| EA3  | 24       | COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)             |
| ID2  | 26       | COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)              |
| IF1  | 26       | INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER) |

▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| ID   | 26       | LEFT KICK PANEL        |
| IE   | 26       | RIGHT KICK PANEL       |

⊖ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I 5  | 26       | COWL WIRE                       | I11  | 26       | COWL WIRE                       |
| I 7  |          |                                 | I15  | 26       | INSTRUMENT PANEL WIRE           |
| I 8  |          |                                 | I16  |          |                                 |
| I10  |          |                                 |      |          |                                 |

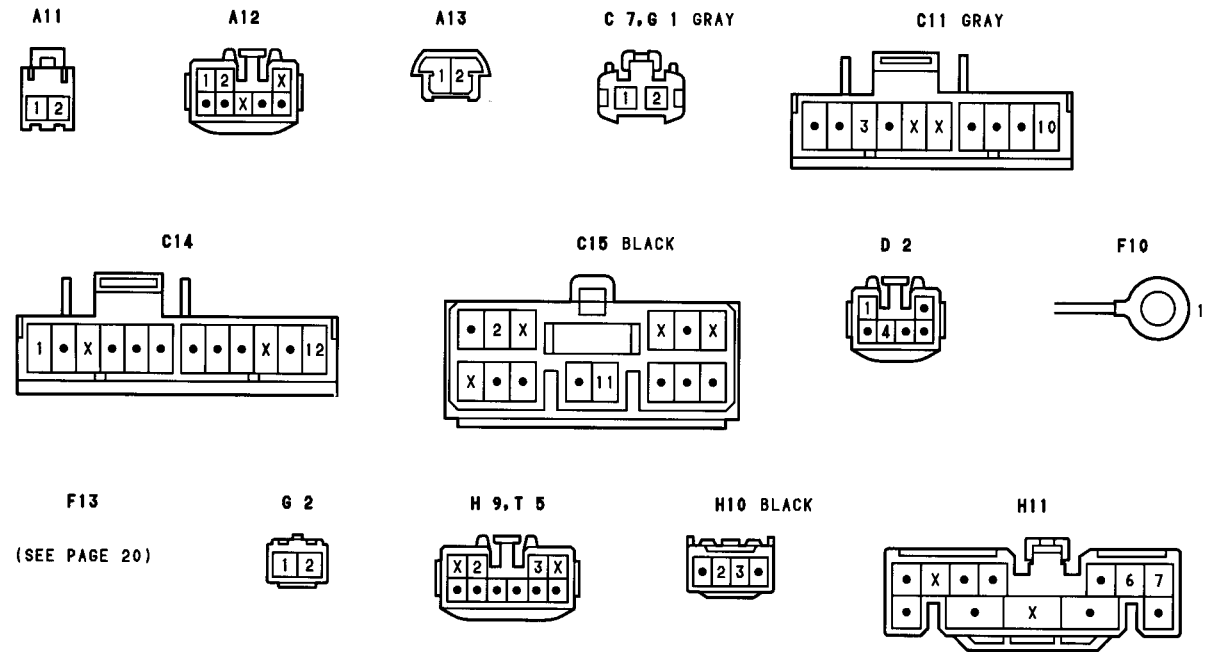


J 1, J 2, J 5




(HINT:SEE PAGE 7)

J 3




(HINT:SEE PAGE 7)


R 2 ①

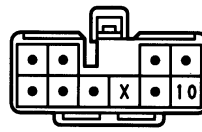

R 3 ⑧

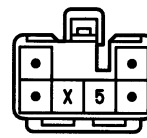

R 5 BLACK



R 7

