


TURN SIGNAL AND HAZARD WARNING SYSTEM PARTS LOCATION

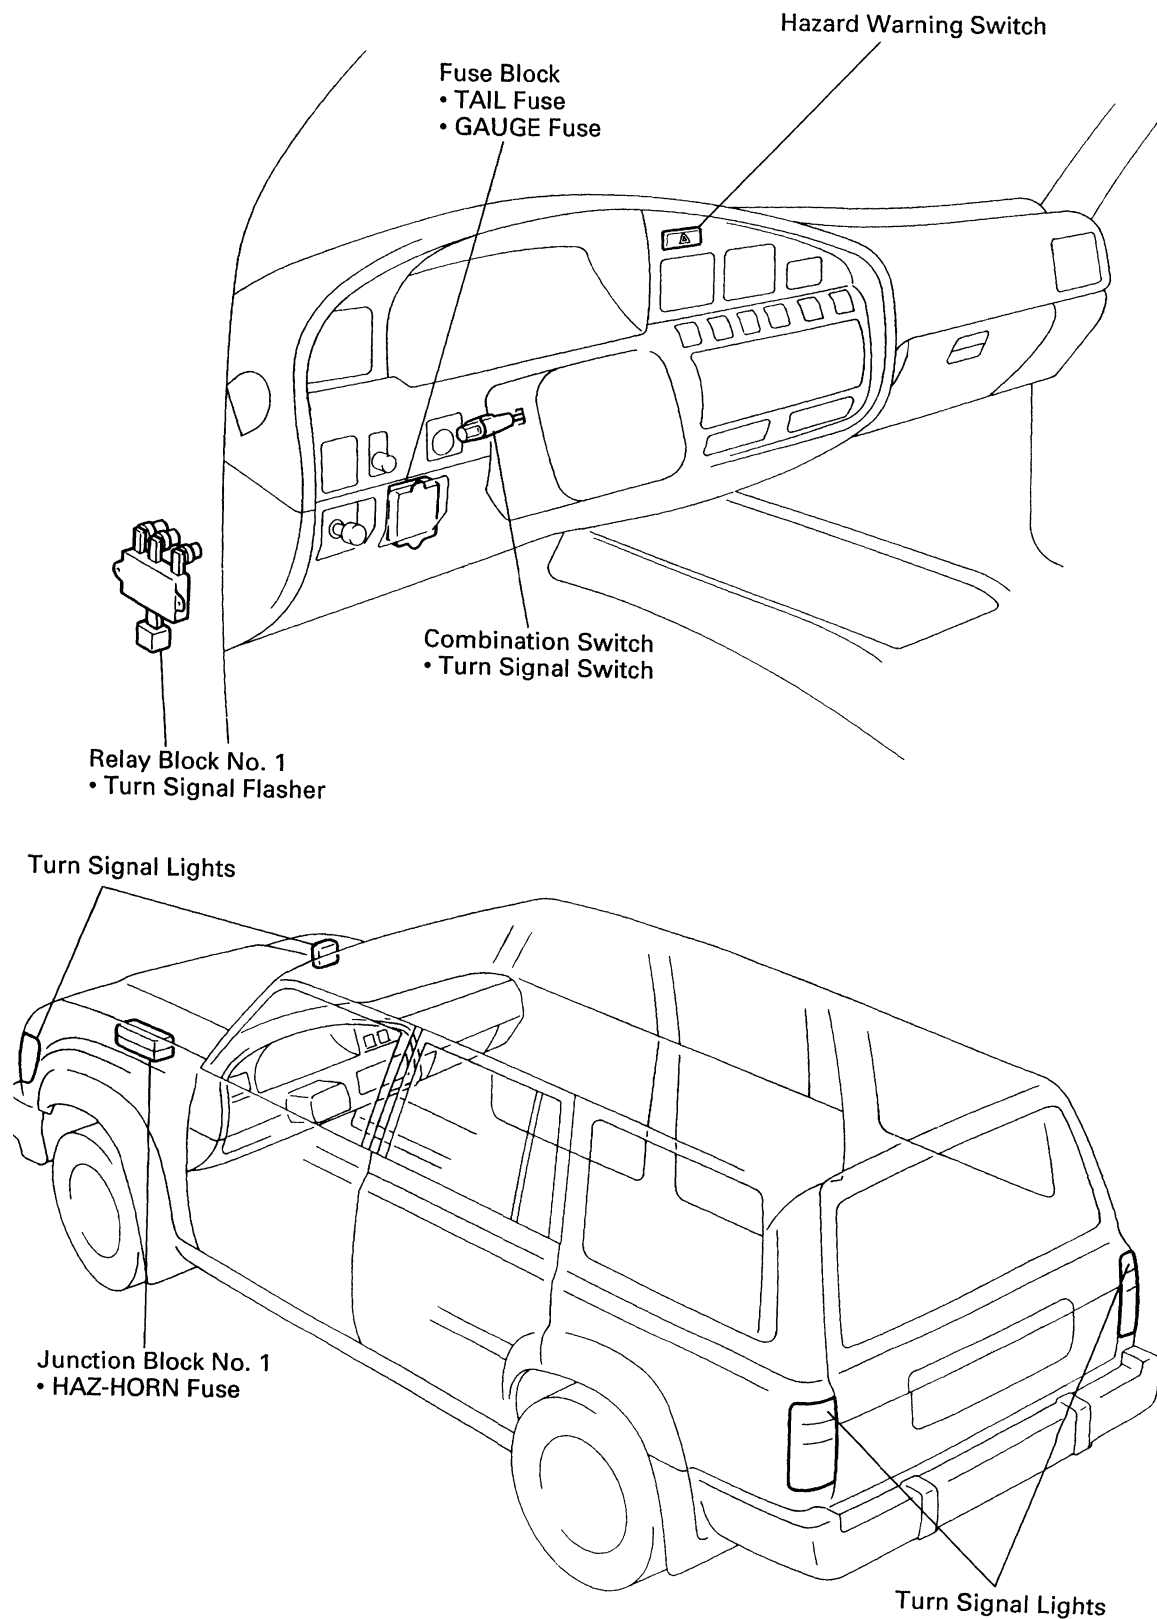

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Part name	See page
Hazard and Turn do not light up.	1. Hazard Warning Switch 2. Turn Signal Flasher 3. Wire Harness	BE-25 BE-25 –
No of blinks for Hazard, Turn is abnormal.	1. Bulb 2. Turn Signal Flasher 3. Wire Harness	– BE-25 –
Hazard does not light up. (Turn is normal.)	1. HAZ-HORN Fuse 2. Wire Harness	BE-6, BE-10 –
Hazard light on one side only does not light up.	1. Hazard Warning Switch 2. Wire Harness	BE-25 –
Turn signal on one side only does not light up.	1. Turn Signal Switch 2. Wire harness	BE-20 –
Only one bulb does not light up for hazard turn.	1. Bulb 2. Wire Harness	– –
*1 Turn signal does not light up.	1. Ignition Switch 2. TURN Fuse 3. Turn Signal Switch 4. Wire Harness	BE-12 BE-6, BE-10 BE-20
*2 Turn signal does not light up.	1. TURN Fuse 2. Turn Signal Switch 3. Wire Harness	BE-6, BE-10 BE-20 –

*1 Combination Meter, Wiper and Washer do not operate.

*2 Combination Meter, Wiper and Washer are normal.


TURN SIGNAL SWITCH

TURN SIGNAL SWITCH INSPECTION


See headlight and taillight system on page [BE-20](#).

HAZARD WARNING SWITCH

HAZARD WARNING SWITCH INSPECTION CONTINUITY

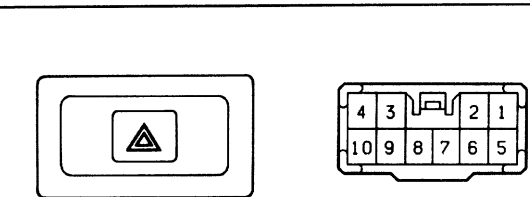	Terminal	4	5	6	7	8	9	10	Illumination	
	Switch position								2	3
	OFF									
	ON									

If continuity is not as specified, replace the switch.

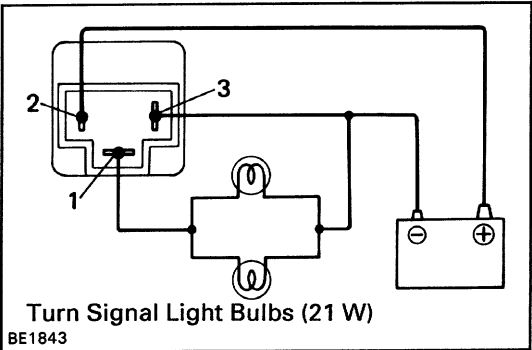

TURN SIGNAL FLASHER

TURN SIGNAL FLASHER INSPECTION

OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3.
- (b) Connect the two turn signal light bulbs parallel to each other to terminals 1 and 3, check that the bulbs flash.

HINT: The turn signal lights should flash 60 to 120 times per minute.

If one of the front or rear turn signal lights has an open circuit, the number of flash rate will be more than 140 per minute.

If operation is not as specified, replace the flasher.