


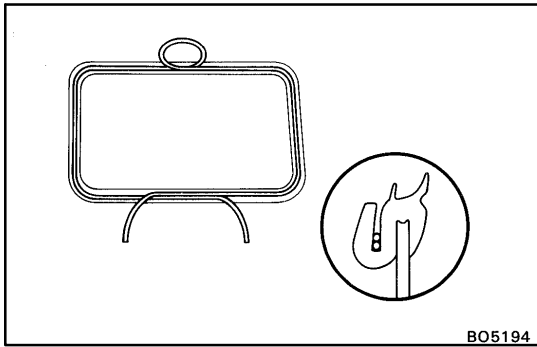

INSTALLATION


1. INSTALL WEATHERSTRIP ON GLASS

- (a) Attach the weatherstrip to the glass.

NOTICE:

If the weatherstrip has hardened, it may develop leaks. Use a new one if possible.

- (b) Insert a cord into the groove of the weatherstrip all the way around with the ends overlapping.

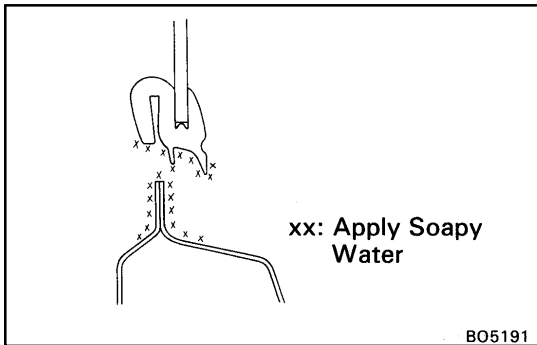


2. INSTALL QUARTER WINDOW GLASS


- (a) Apply soapy water to contact surface of the weatherstrip lip and to the body flange.

HINT:


Begin installation in the middle of the lower part of the quarter window glass.

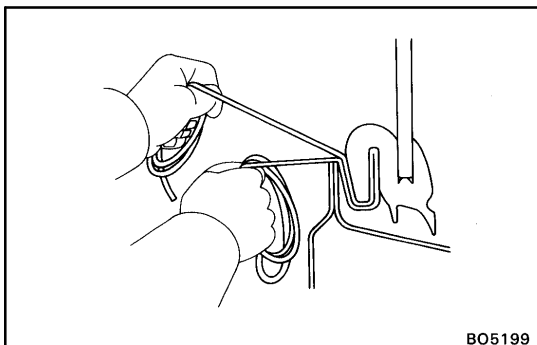

- (b) Hold the glass in position on the body.

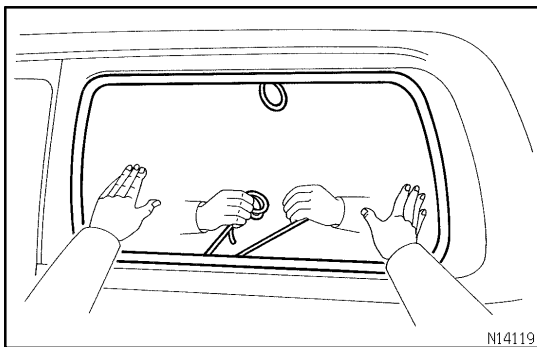

- (c) From the inside, pull on one cord at an angle so it pulls the lip over the flange. From the outside, press the glass along the weatherstrip until the glass is installed.

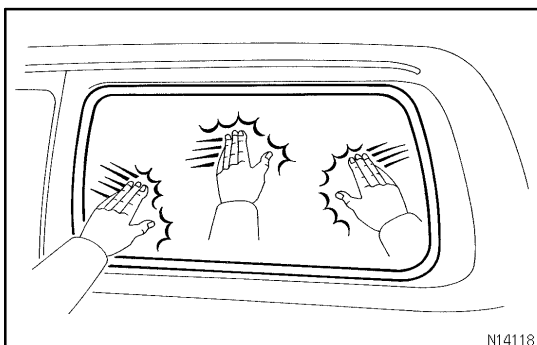

3. FIX IN GLASS

To make the glass fix snugly, tap from the outside with your open hand.

4. INSPECT FOR LEAKS AND REPAIR

- (a) Do a leak test.
(b) Seal any leak with auto glass sealer.

5. INSTALL ROOF HEADLINING

6. INSTALL ASSIST GRIPS

7. INSTALL REAR PILLAR GARNISH

8. INSTALL QUARTER PILLAR GARNISH

- 9. INSTALL REAR DOOR SCUFF PLATE**
- 10. INSTALL REAR SEAT SIDE GARNISH**
- 11. INSTALL QUARTER TRIM**
- 12. INSTALL BACK DOOR SCUFF PLATE**
- 13. w/ No. 2 Rear Seat:
INSTALL NO. 2 REAR SEAT**