



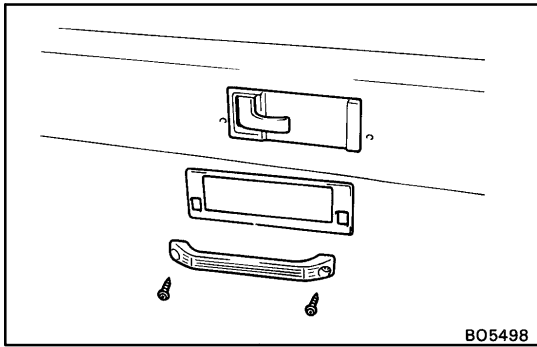

REAR WIPER AND WASHER REMOVAL

BO385-01

1. REMOVE PULL HANDLE AND PULL HANDLE BEZEL

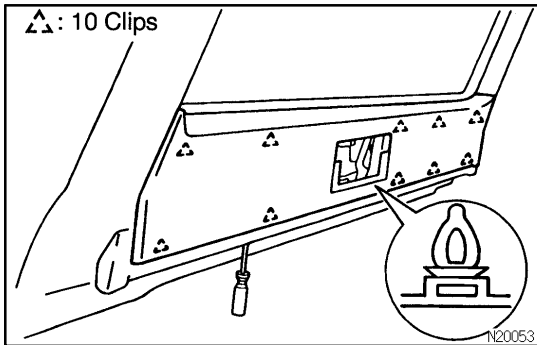


2. REMOVE BACK DOOR TRIM

- (a) Insert a screwdriver between the retainers and door trim to pry it loose.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the back door trim.

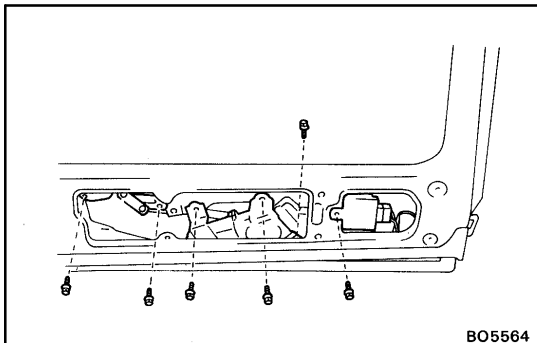

3. REMOVE WIPER ARM, MOTOR AND REAR WIPER CONTROL RELAY

- (a) Open the cap.
 (b) Remove the nut and wiper arm.
 (c) Remove the 5 bolts and motor, then disconnect the connector.
 (d) Remove the bolts and rear wiper control relay, then disconnect the connector.

4. ADJUST REAR WASHER NOZZLE