


BACK DOOR OPENING REINFORCEMENT (CUT)

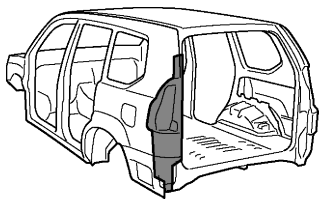

REMOVAL
With the quarter panel removed.

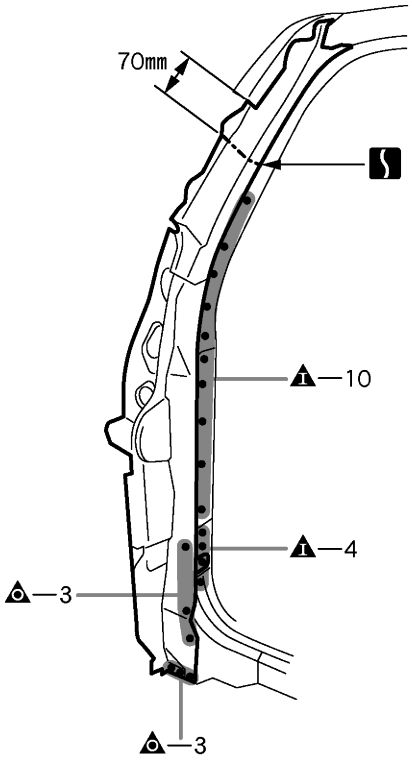


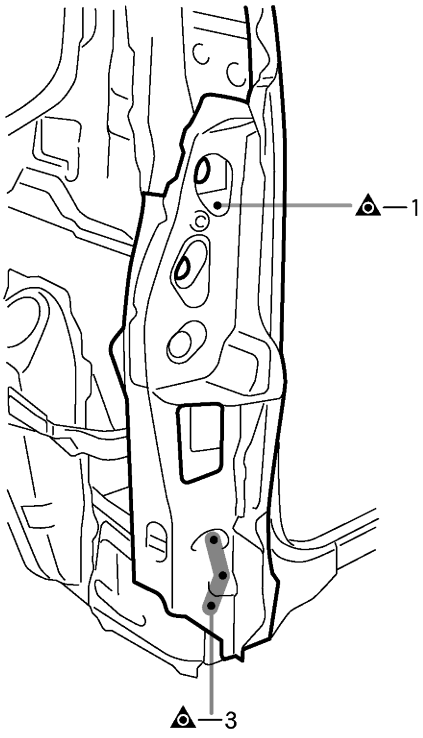


70mm (2.76in.)

[5-Door]

〔LH〕

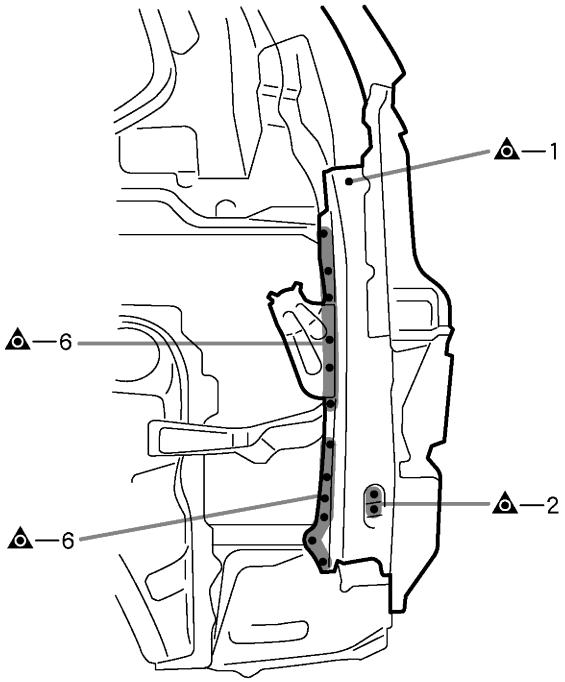


〔RH〕

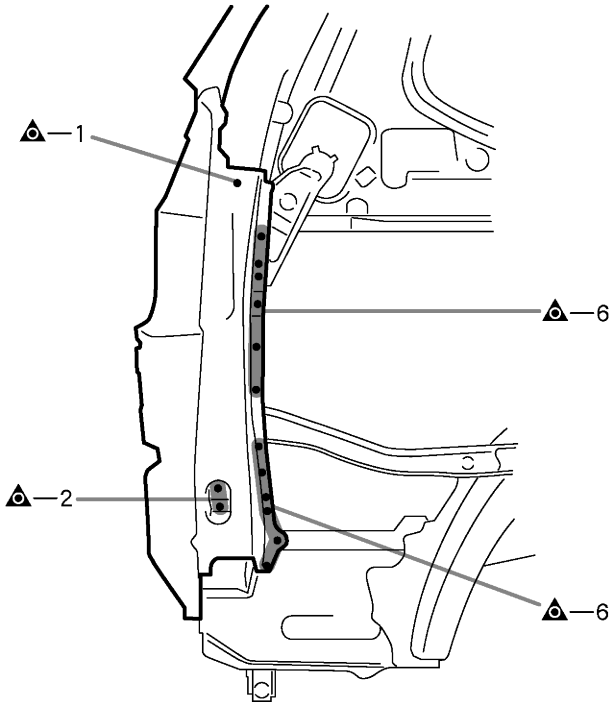


[3-Door]

〔LH〕

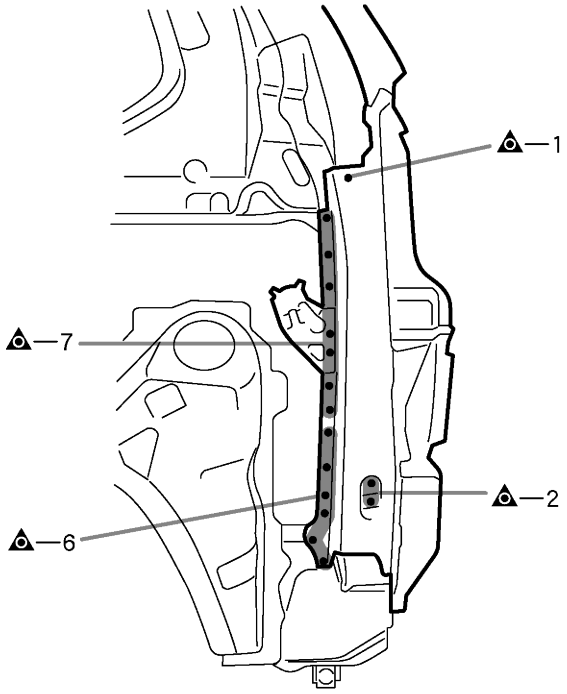



〔RH〕

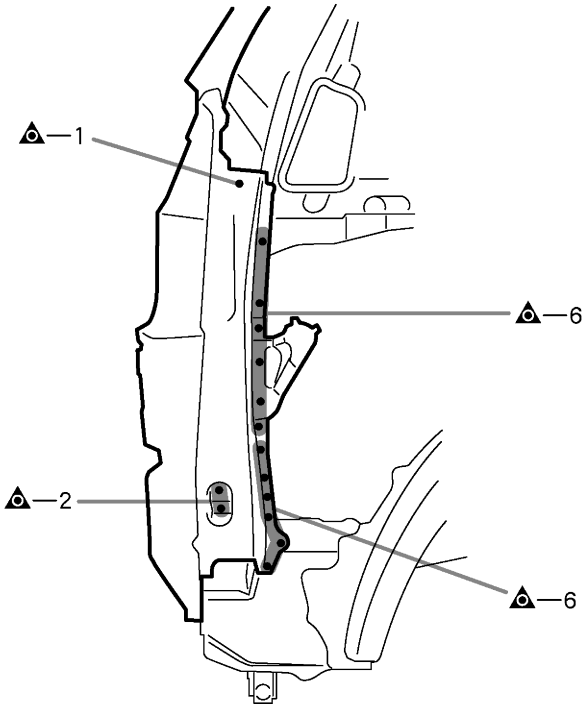

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam with corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

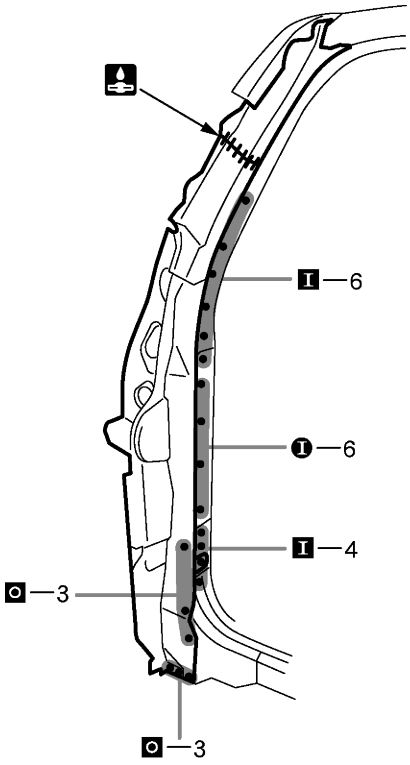

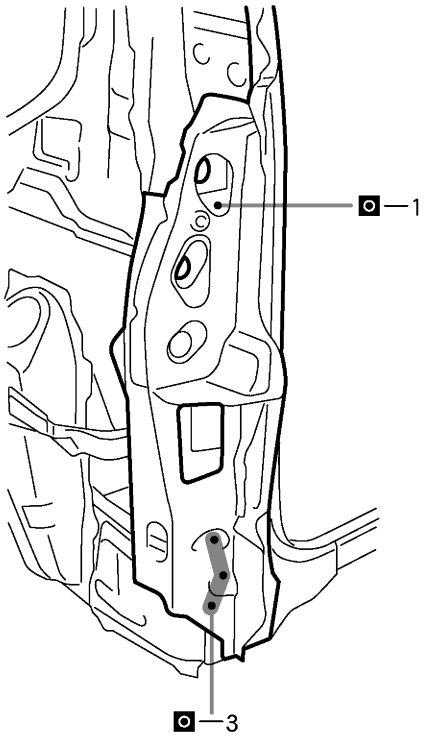


POINT


1 Inspect the fitting of the quarter panel, bark door and rear combination light, etc., before welding, since this affects the appearance of the finish.

[5-Door]

〔LH〕

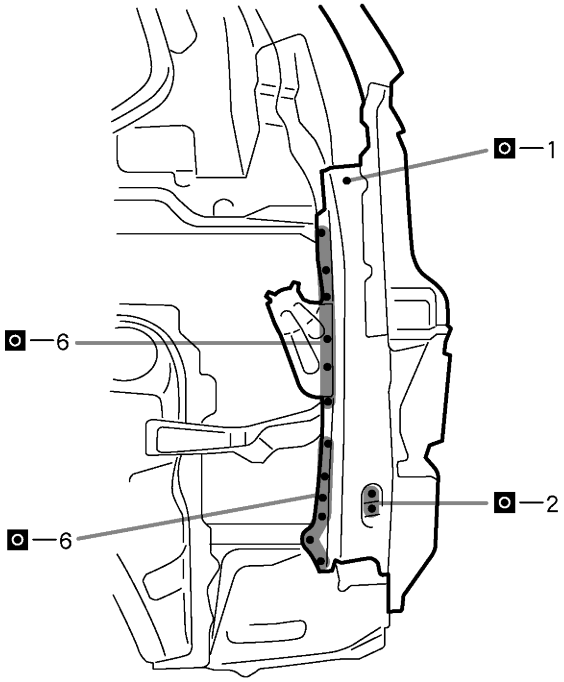


〔RH〕

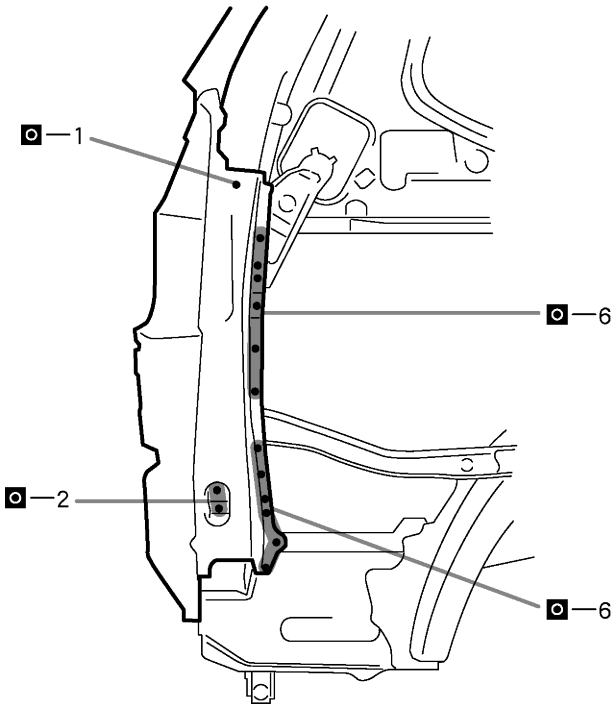

[3-Door]

〔LH〕

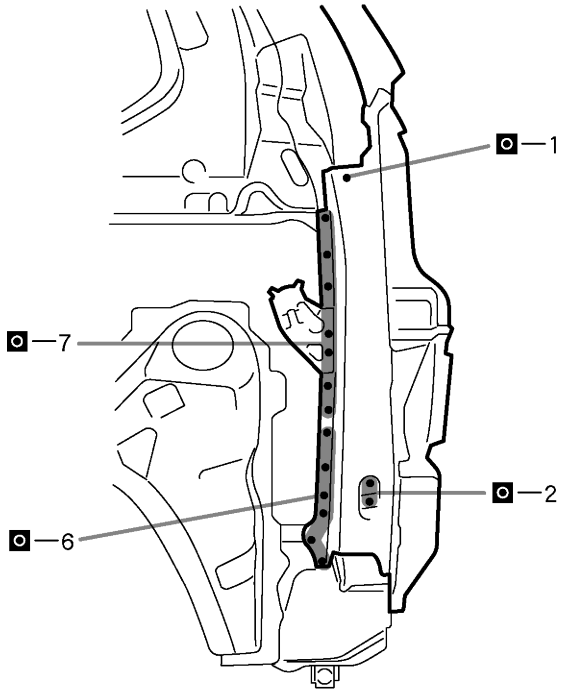

〔RH〕

