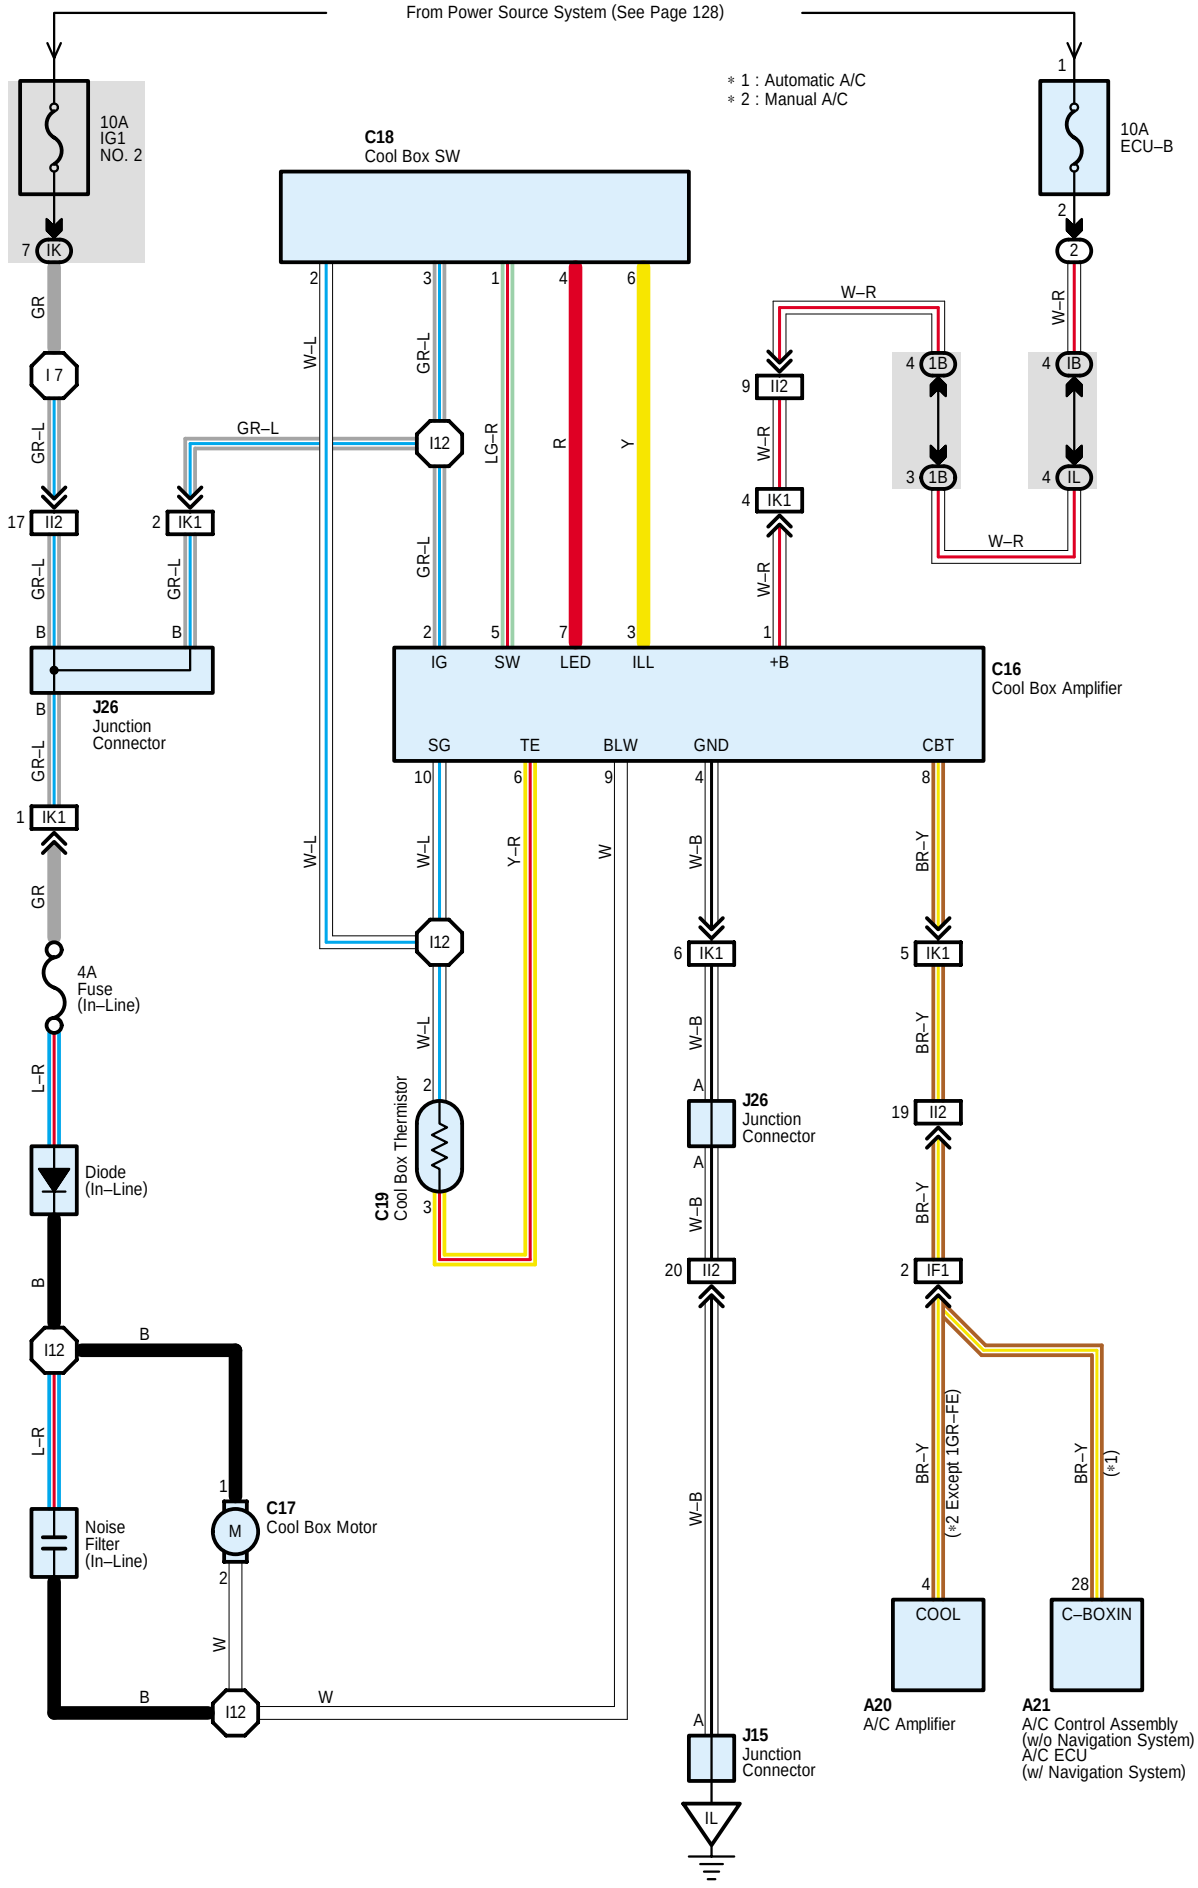
Cooler Box


From Power Source System (See Page 128)
* 1 : Automatic A/C
* 2 : Manual A/C
10A
IG1
NO. 2
10A
ECU–B
C18
Cool Box SW
C16
Cool Box Amplifier
J26
Junction
Connector
4A
Fuse
(In–Line)
Diode
(In–Line)
Noise
Filter
(In–Line)
C17
Cool Box Motor
C19
Cool Box Thermistor
J26
Junction
Connector
J15
Junction
Connector
A20
A/C Amplifier
A21
A/C Control Assembly
(w/o Navigation System)
A/C ECU
(w/ Navigation System)
COOL
C–BOXIN
IG
SW
LED
ILL
+B
SG
TE
BLW
GND
CBT
(*2 Except 1GR–FE)
(*1)