



Combination Meter

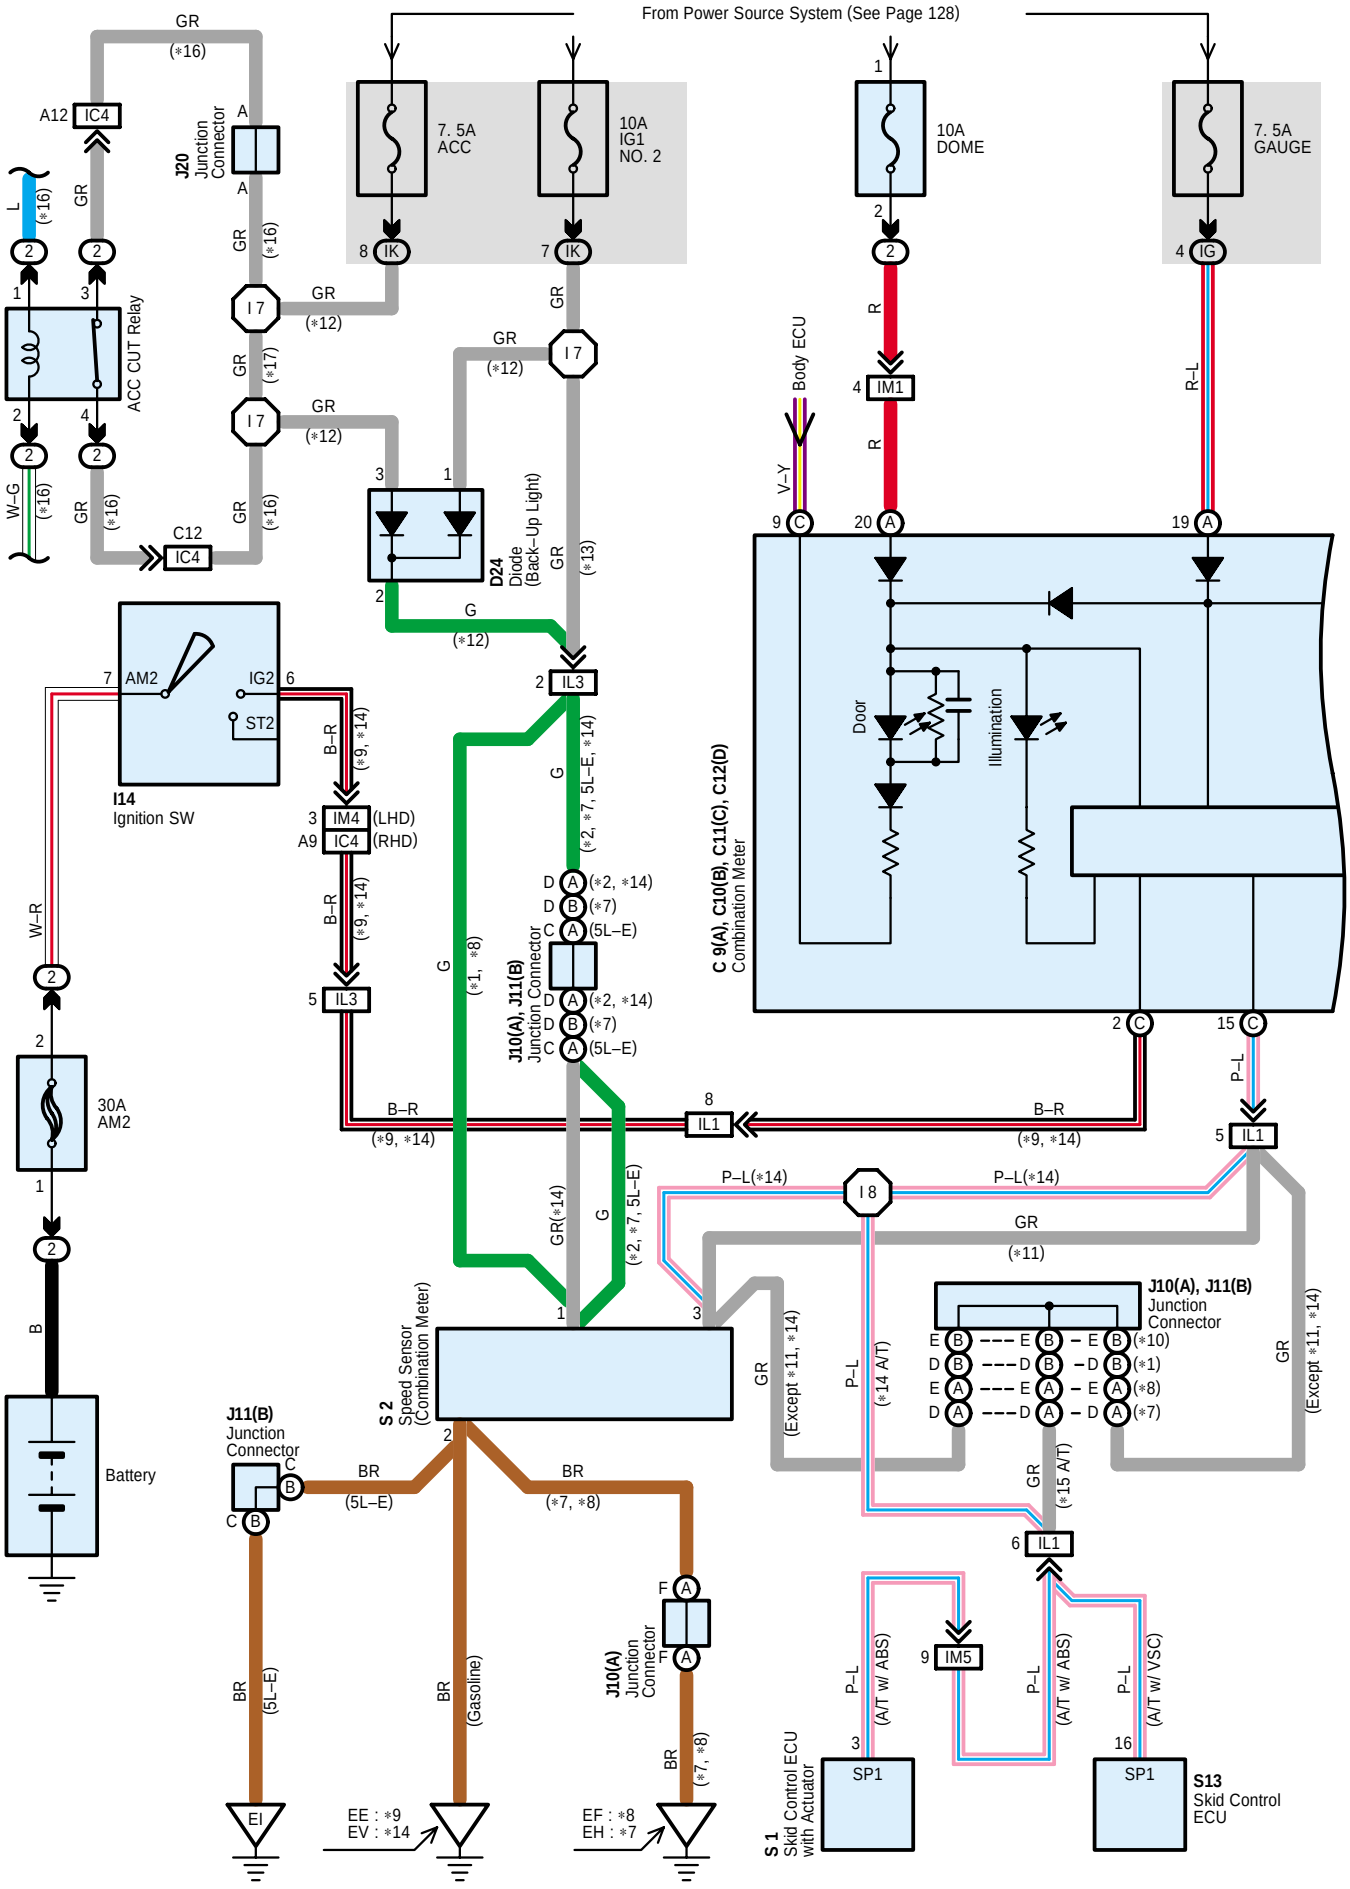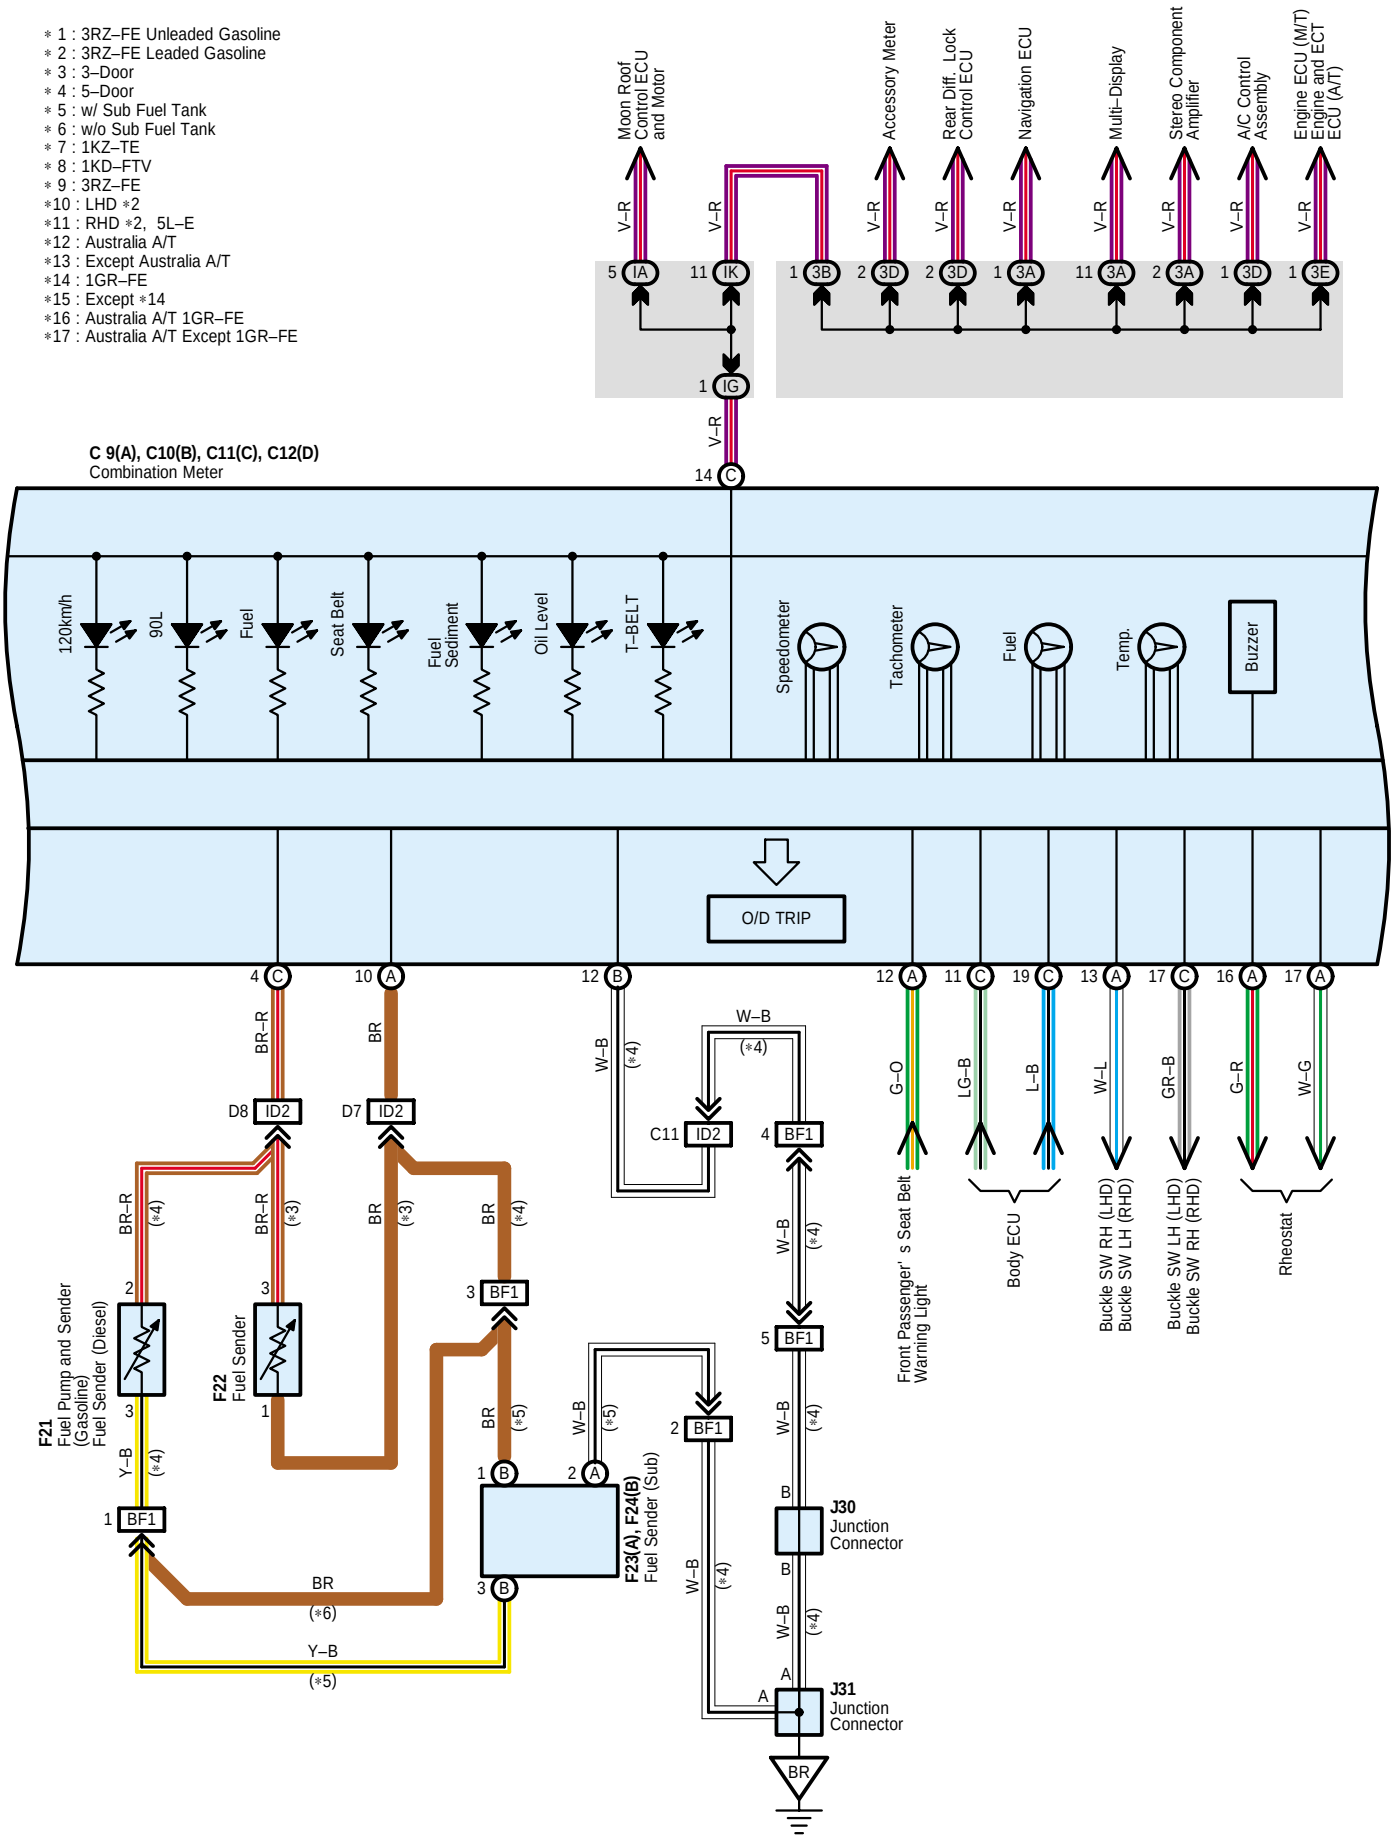

∗ 1 : 3RZ–FE Unleaded Gasoline
∗ 2 : 3RZ–FE Leaded Gasoline
∗ 3 : 3–Door
∗ 4 : 5–Door
∗ 5 : w/ Sub Fuel Tank
∗ 6 : w/o Sub Fuel Tank
∗ 7 : 1KZ–TE
∗ 8 : 1KD–FTV
∗ 9 : 3RZ–FE
∗10 : LHD ∗2
∗11 : RHD ∗2, 5L–E
∗12 : Australia A/T
∗13 : Except Australia A/T
∗14 : 1GR–FE
∗15 : Except ∗14
∗16 : Australia A/T 1GR–FE
∗17 : Australia A/T Except 1GR–FE

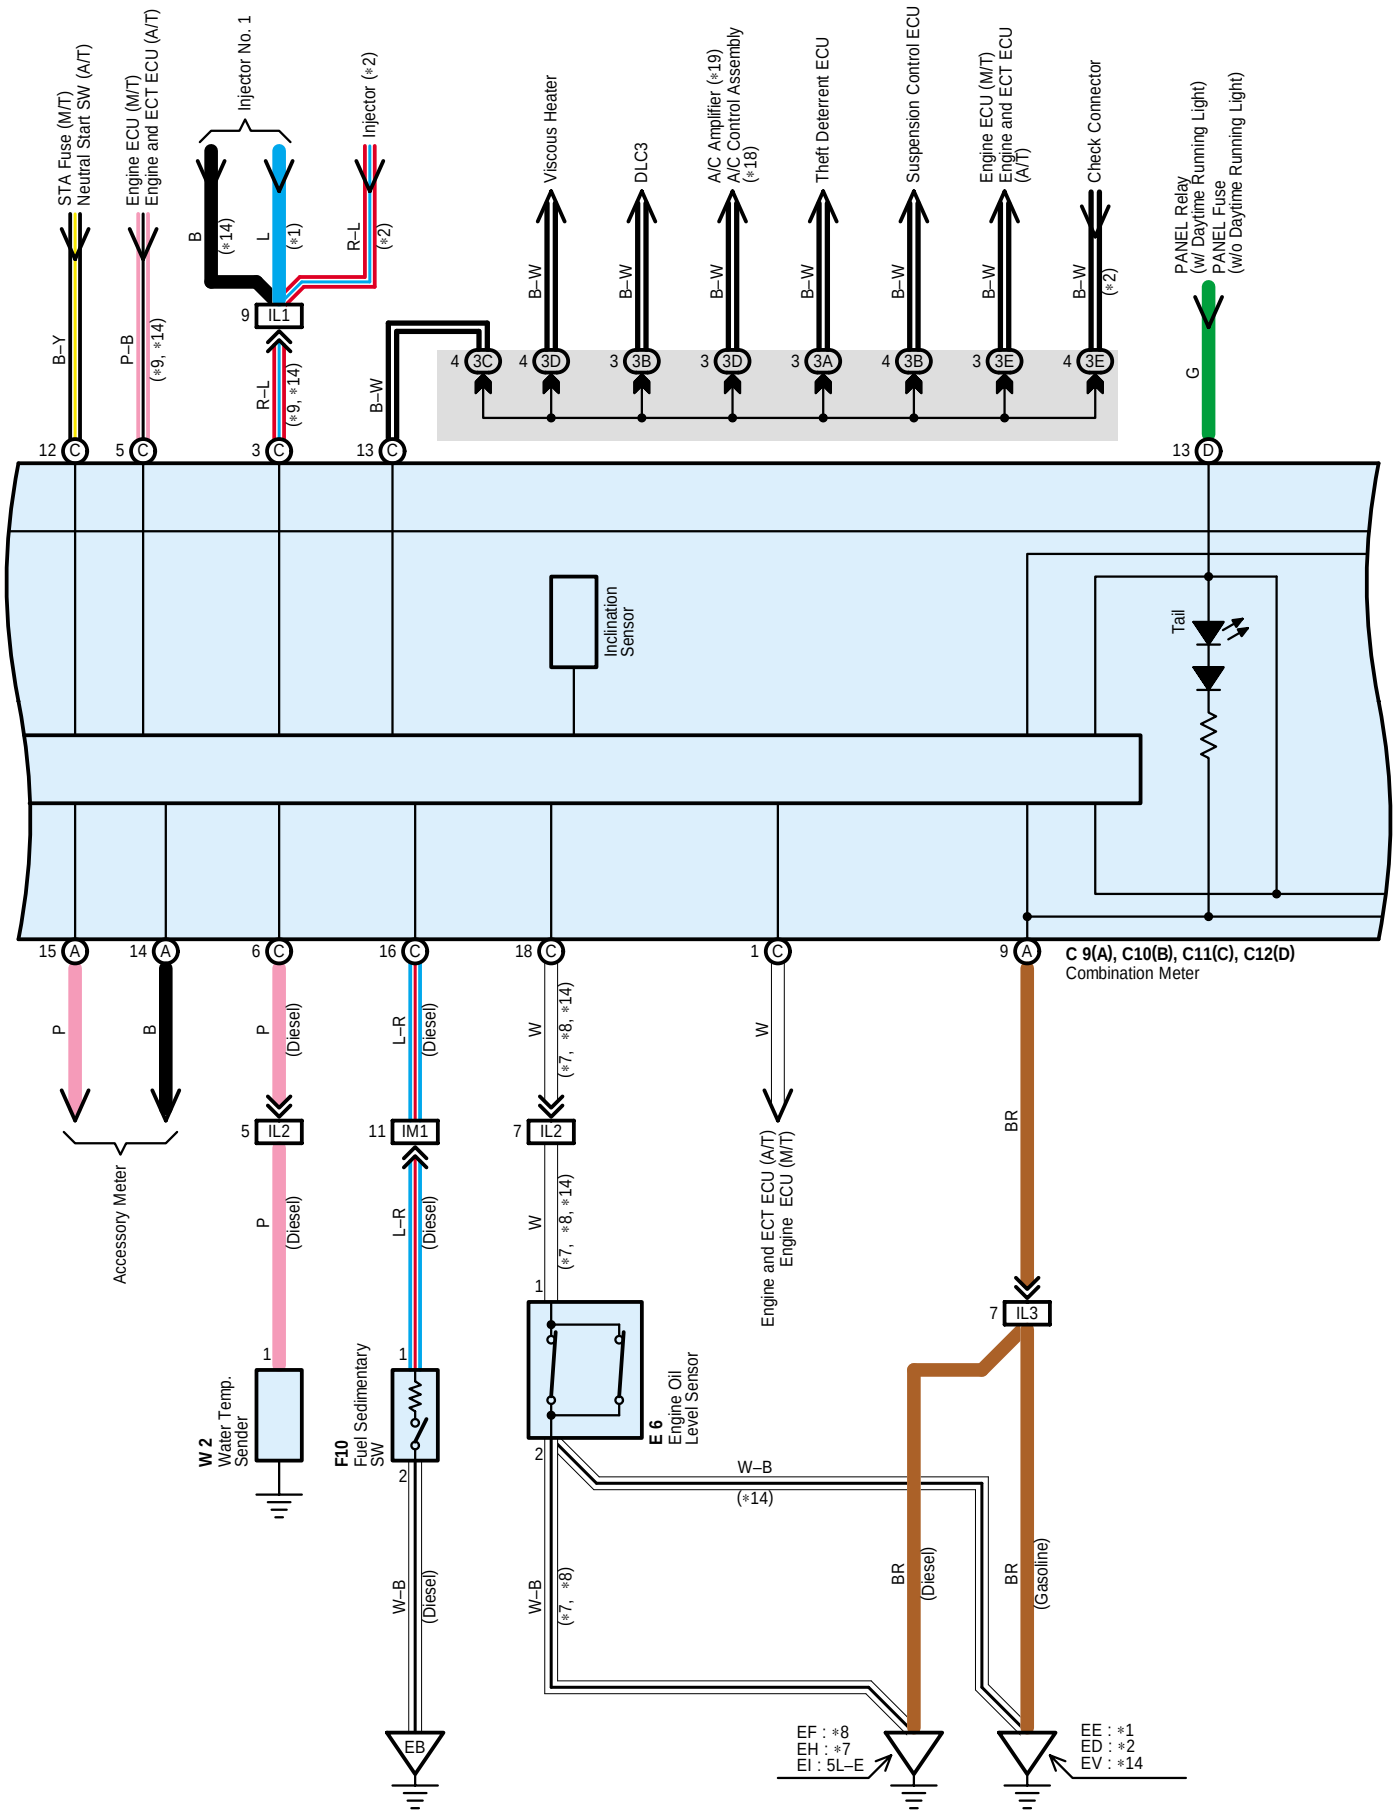




STA Fuse (M/T)
Neutral Start SW (A/T)
Engine ECU (M/T)
Engine and ECT ECU (A/T)
Injector No. 1
Injector (*2)
Viscous Heater
DLC3
A/C Amplifier (*19)
A/C Control Assembly
(*18)
Theft Deterrent ECU
Suspension Control ECU
Engine ECU (M/T)
Engine and ECT ECU
(A/T)
Check Connector
PANEL Relay
(w/ Daytime Running Light)
PANEL Fuse
(w/o Daytime Running Light)
Inclination Sensor
Tail
Accessory Meter
W 2
Water Temp. Sender
F10
Fuel Sedimentary SW
E 6
Engine Oil Level Sensor
Engine and ECT ECU (A/T)
Engine ECU (M/T)
C 9(A), C10(B), C11(C), C12(D)
Combination Meter
EB
EF : *8
EH : *7
EI : 5L–E
EE : *1
ED : *2
EV : *14

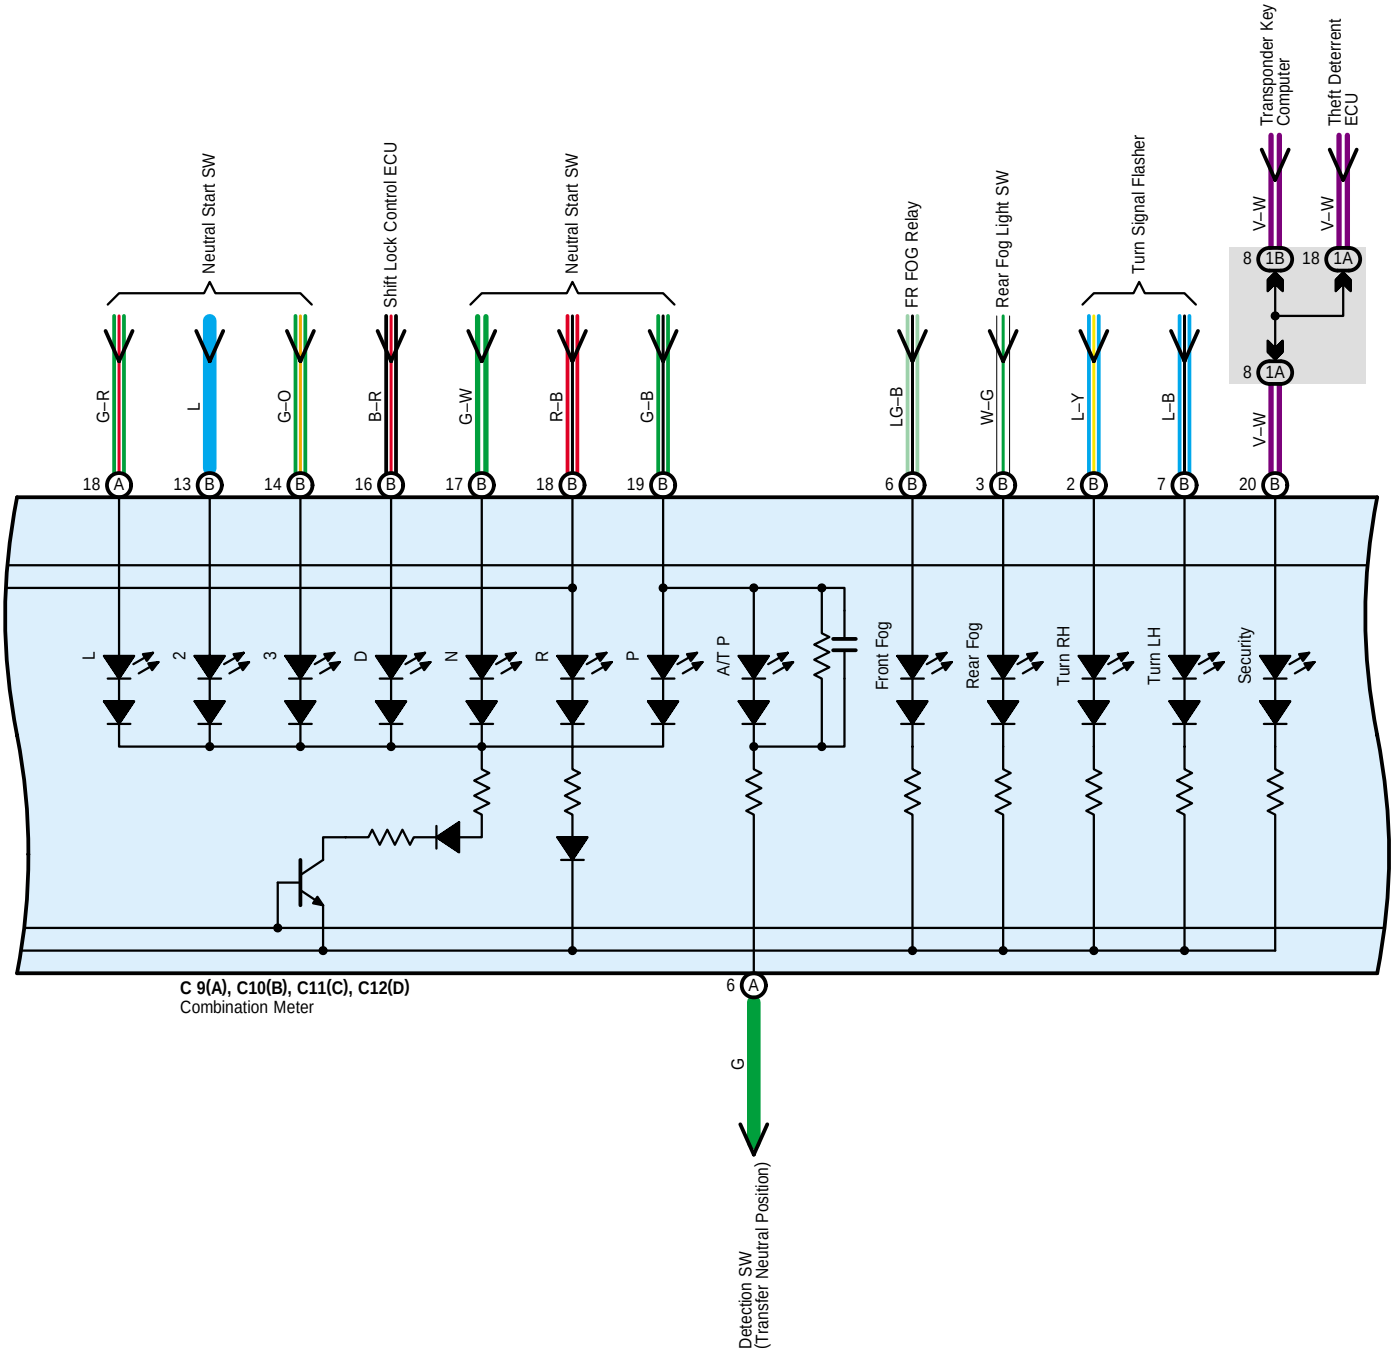


∗ 1 : 3RZ–FE Unleaded Gasoline
∗ 2 : 3RZ–FE Leaded Gasoline
∗ 7 : 1KZ–TE
∗ 8 : 1KD–FTV
∗ 9 : 3RZ–FE
∗14 : 1GR–FE
∗18 : Automatic A/C
∗19 : Manual A/C

Combination Meter

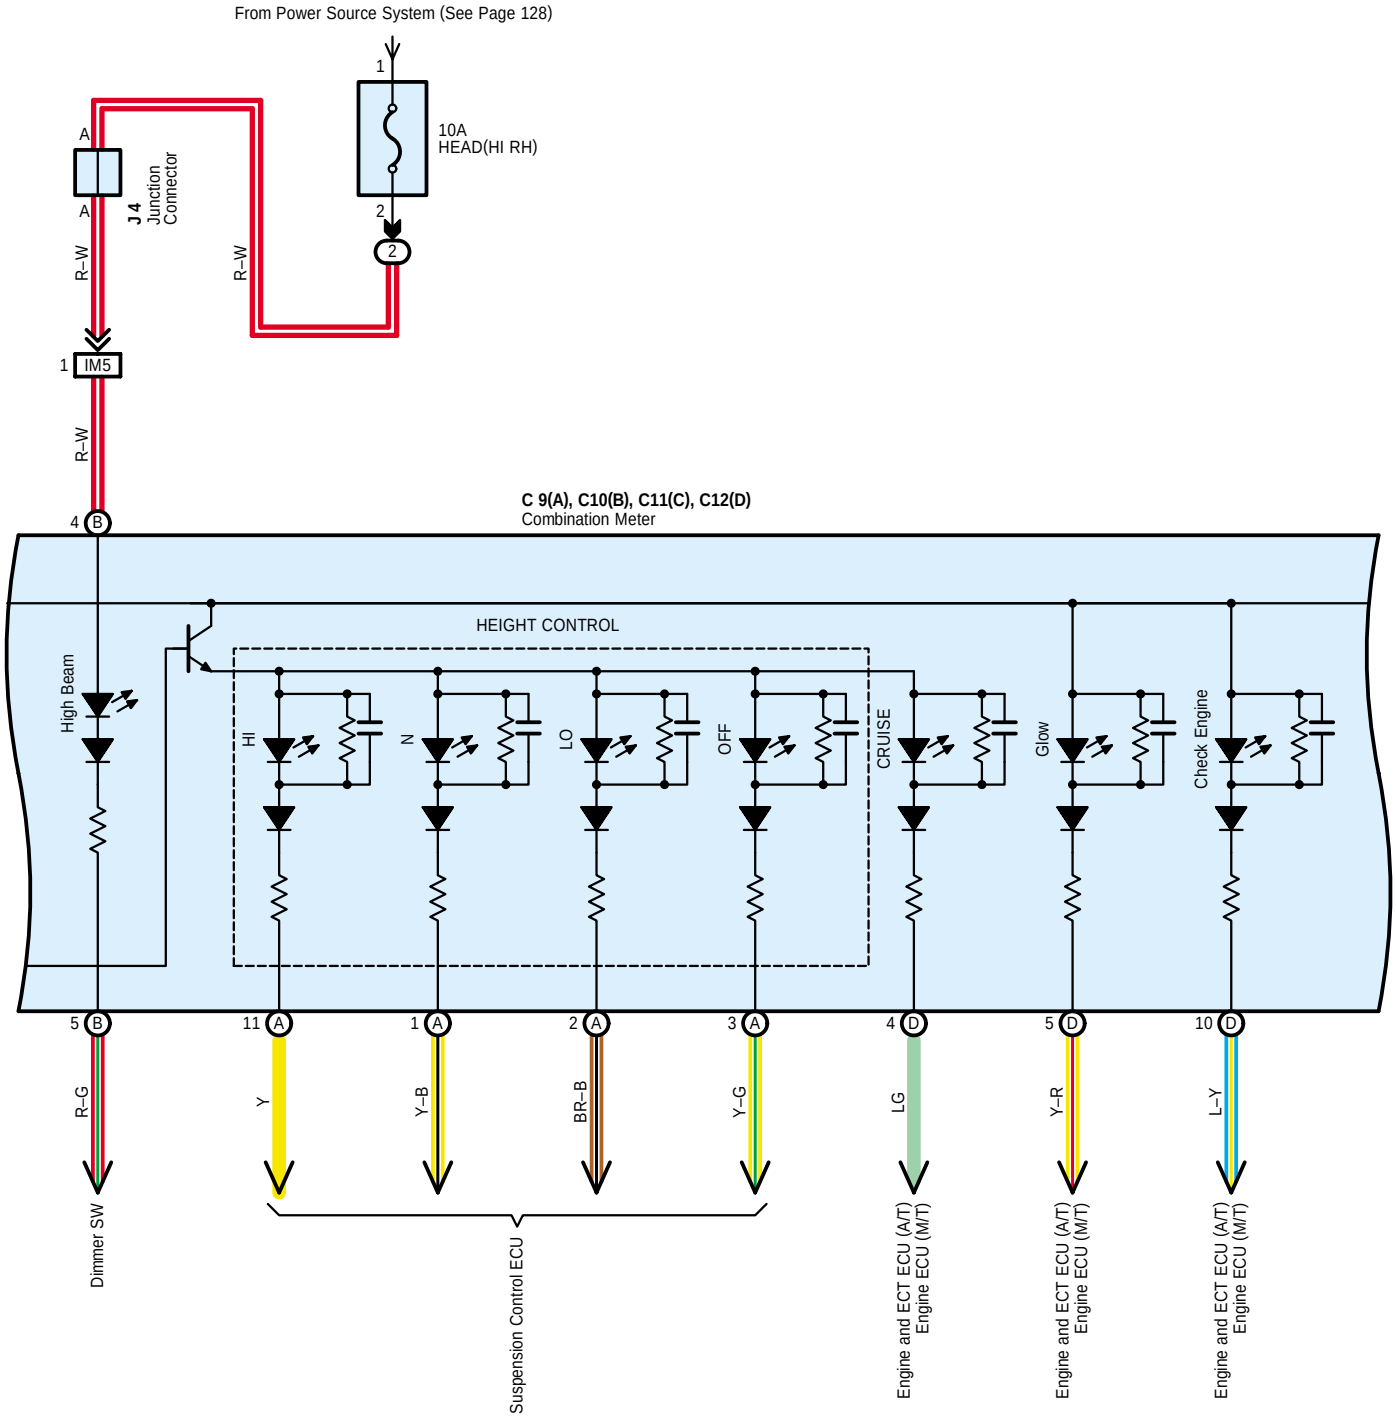

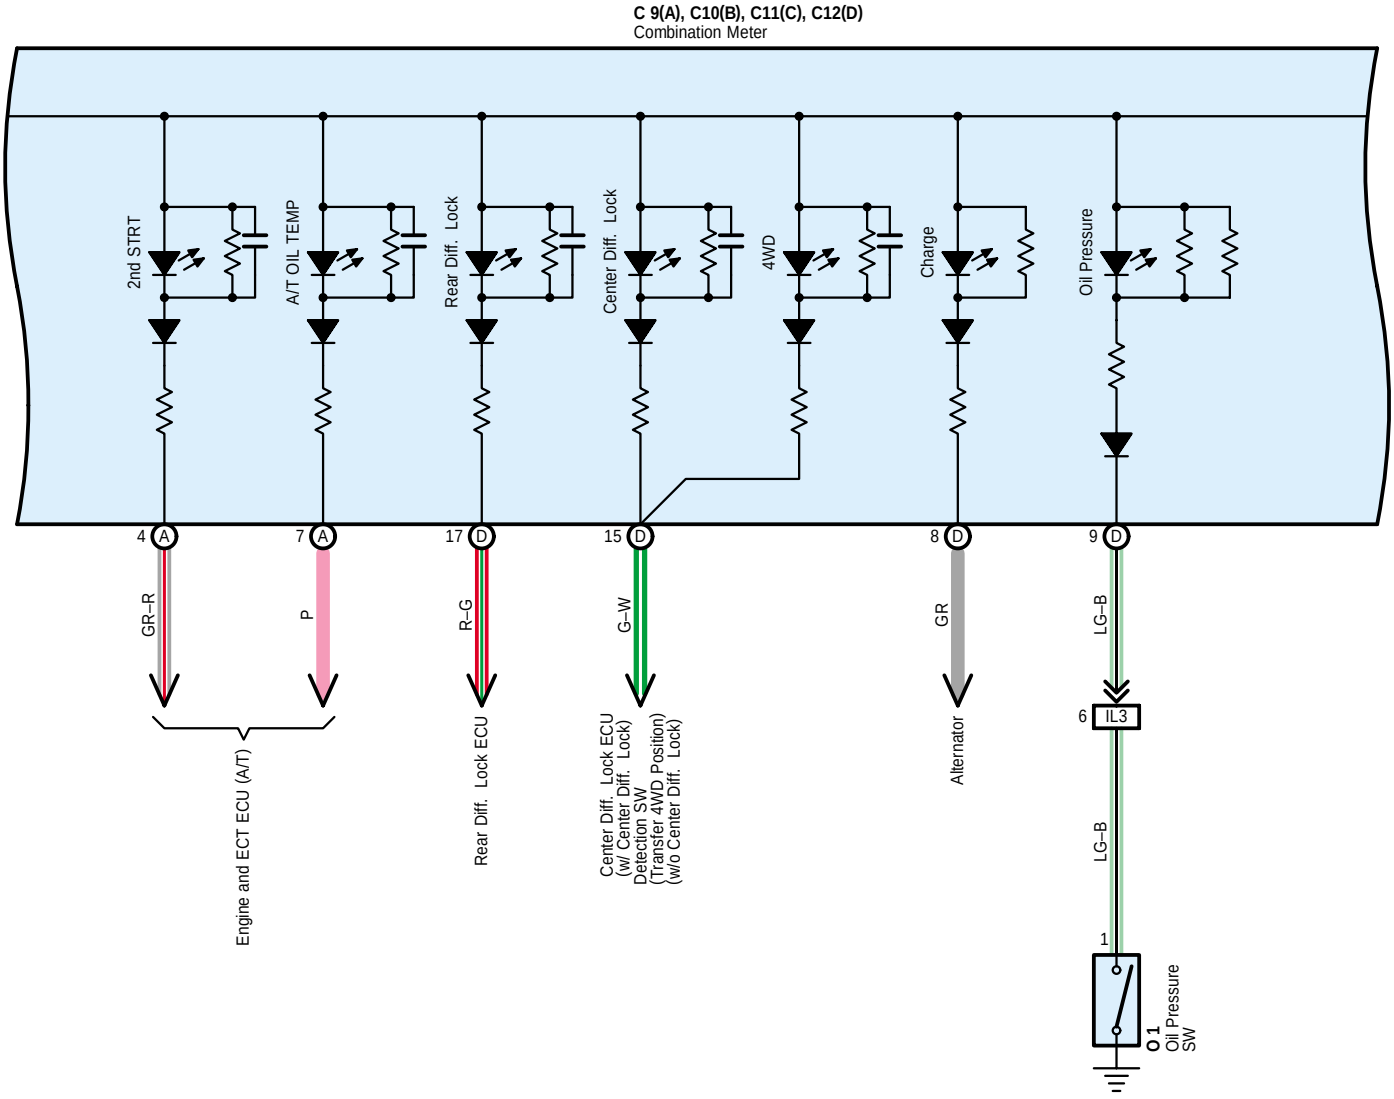
C 9(A), C10(B), C11(C), C12(D)
Combination Meter
2nd STRT
A/T OIL TEMP
Rear Diff. Lock
Center Diff. Lock
4WD
Charge
Oil Pressure
4 A
7 A
17 D
15 D
8 D
9 D
GR–R
P
R–G
G–W
GR
LG–B
Engine and ECT ECU (A/T)
Rear Diff. Lock ECU
Center Diff. Lock ECU (w/ Center Diff. Lock) Detection SW (Transfer 4WD Position) (w/o Center Diff. Lock)
Alternator
6 IL3
LG–B
1
O 1
Oil Pressure SW

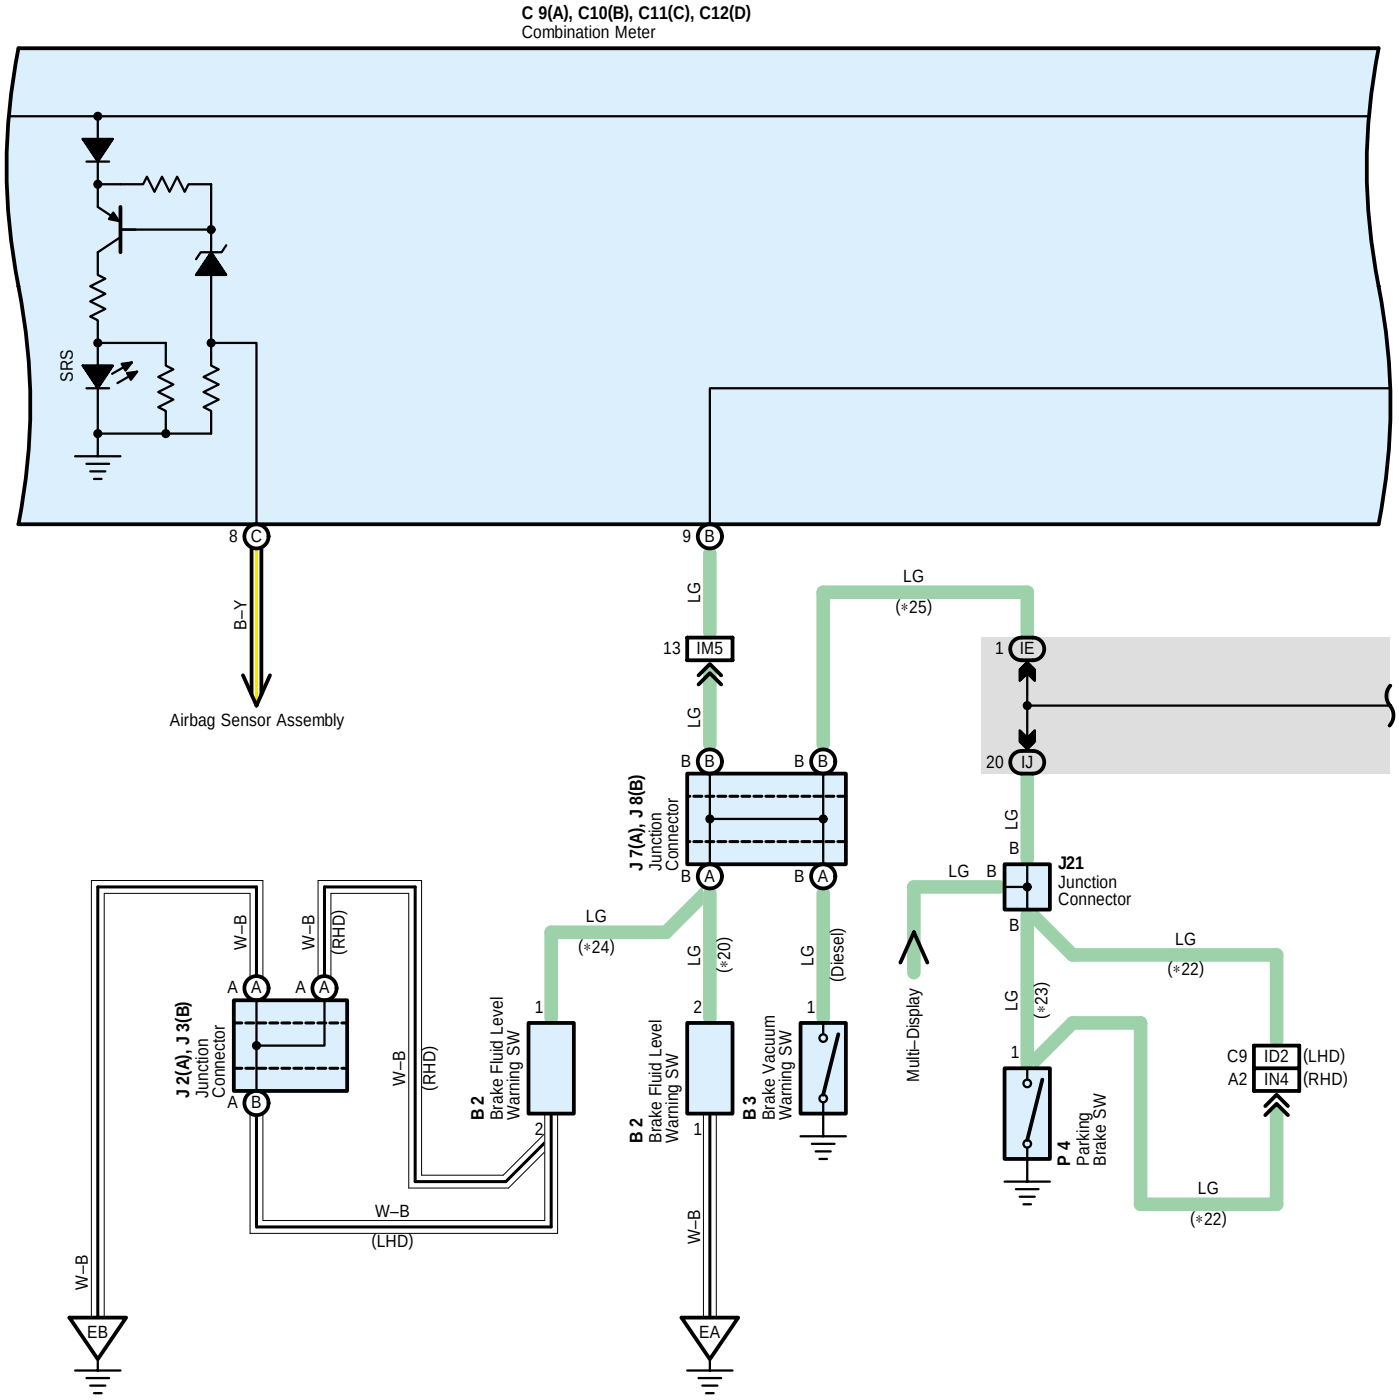
C 9(A), C10(B), C11(C), C12(D)
Combination Meter
SRS
8 C
B–Y
Airbag Sensor Assembly
9 B
LG
13 IM5
LG
LG
(*25)
1 IE
20 IJ
J 7(A), J 8(B)
Junction
Connector
LG
B
J21
Junction
Connector
LG
(*22)
LG
(*23)
Multi–Display
1
P 4
Parking
Brake SW
LG
(*22)
C9 ID2 (LHD)
A2 IN4 (RHD)
LG
(*24)
LG
(*20)
LG
(Diesel)
B 2
Brake Fluid Level
Warning SW
B 2
Brake Fluid Level
Warning SW
B 3
Brake Vacuum
Warning SW
J 2(A), J 3(B)
Junction
Connector
W–B
W–B
(RHD)
W–B
(RHD)
W–B
(LHD)
W–B
EB
W–B
EA

∗20 : w/ VSC
∗21 : w/o VSC w/ ABS
∗22 : Bench Seat
∗23 : Separate Seat
∗24 : w/o VSC
∗25 : w/o VSC w/o ABS

