



Door Lock Control and Theft Deterrent (LHD)

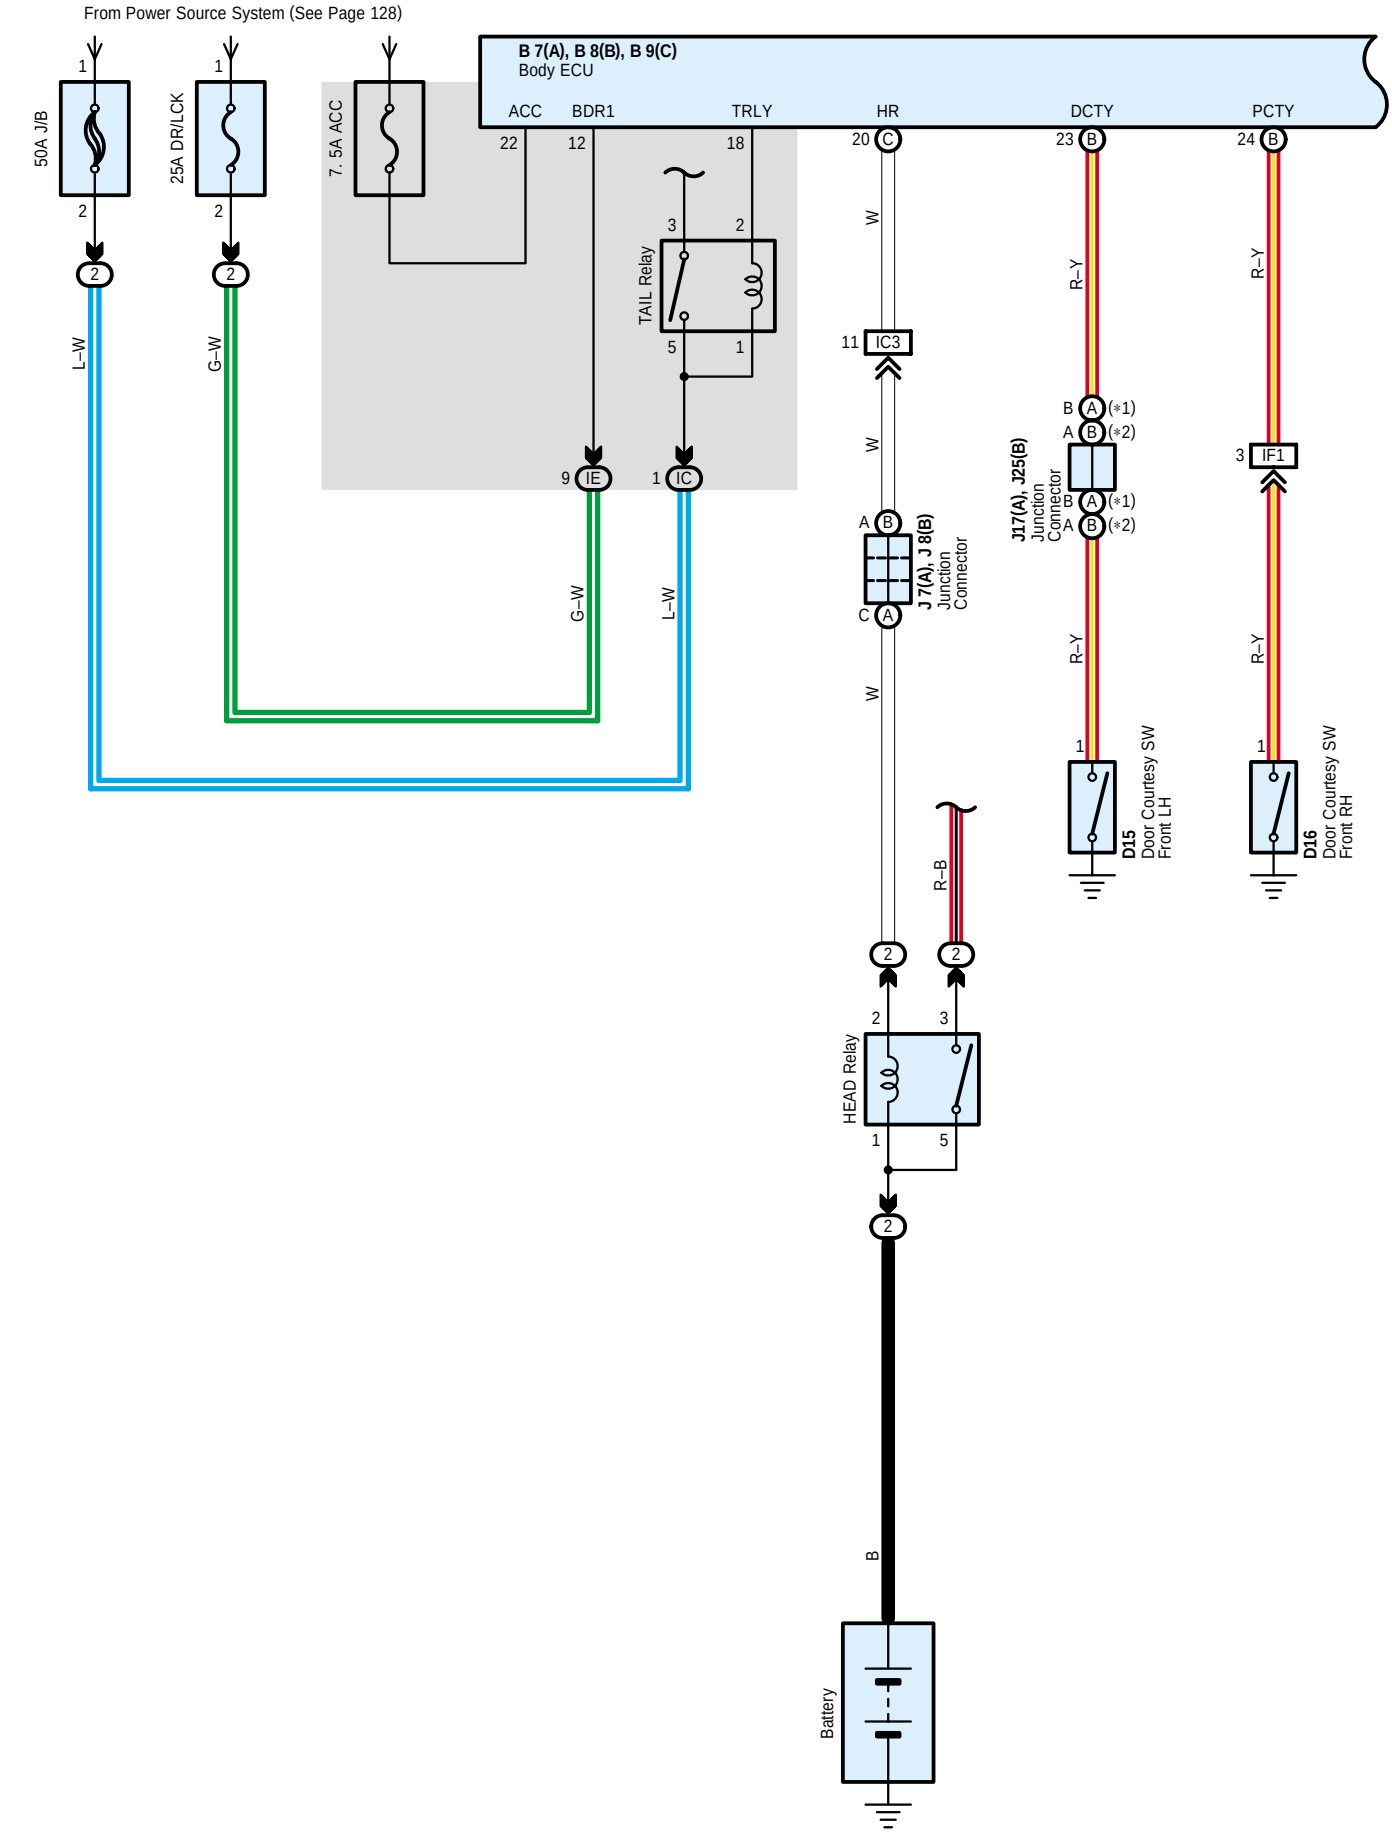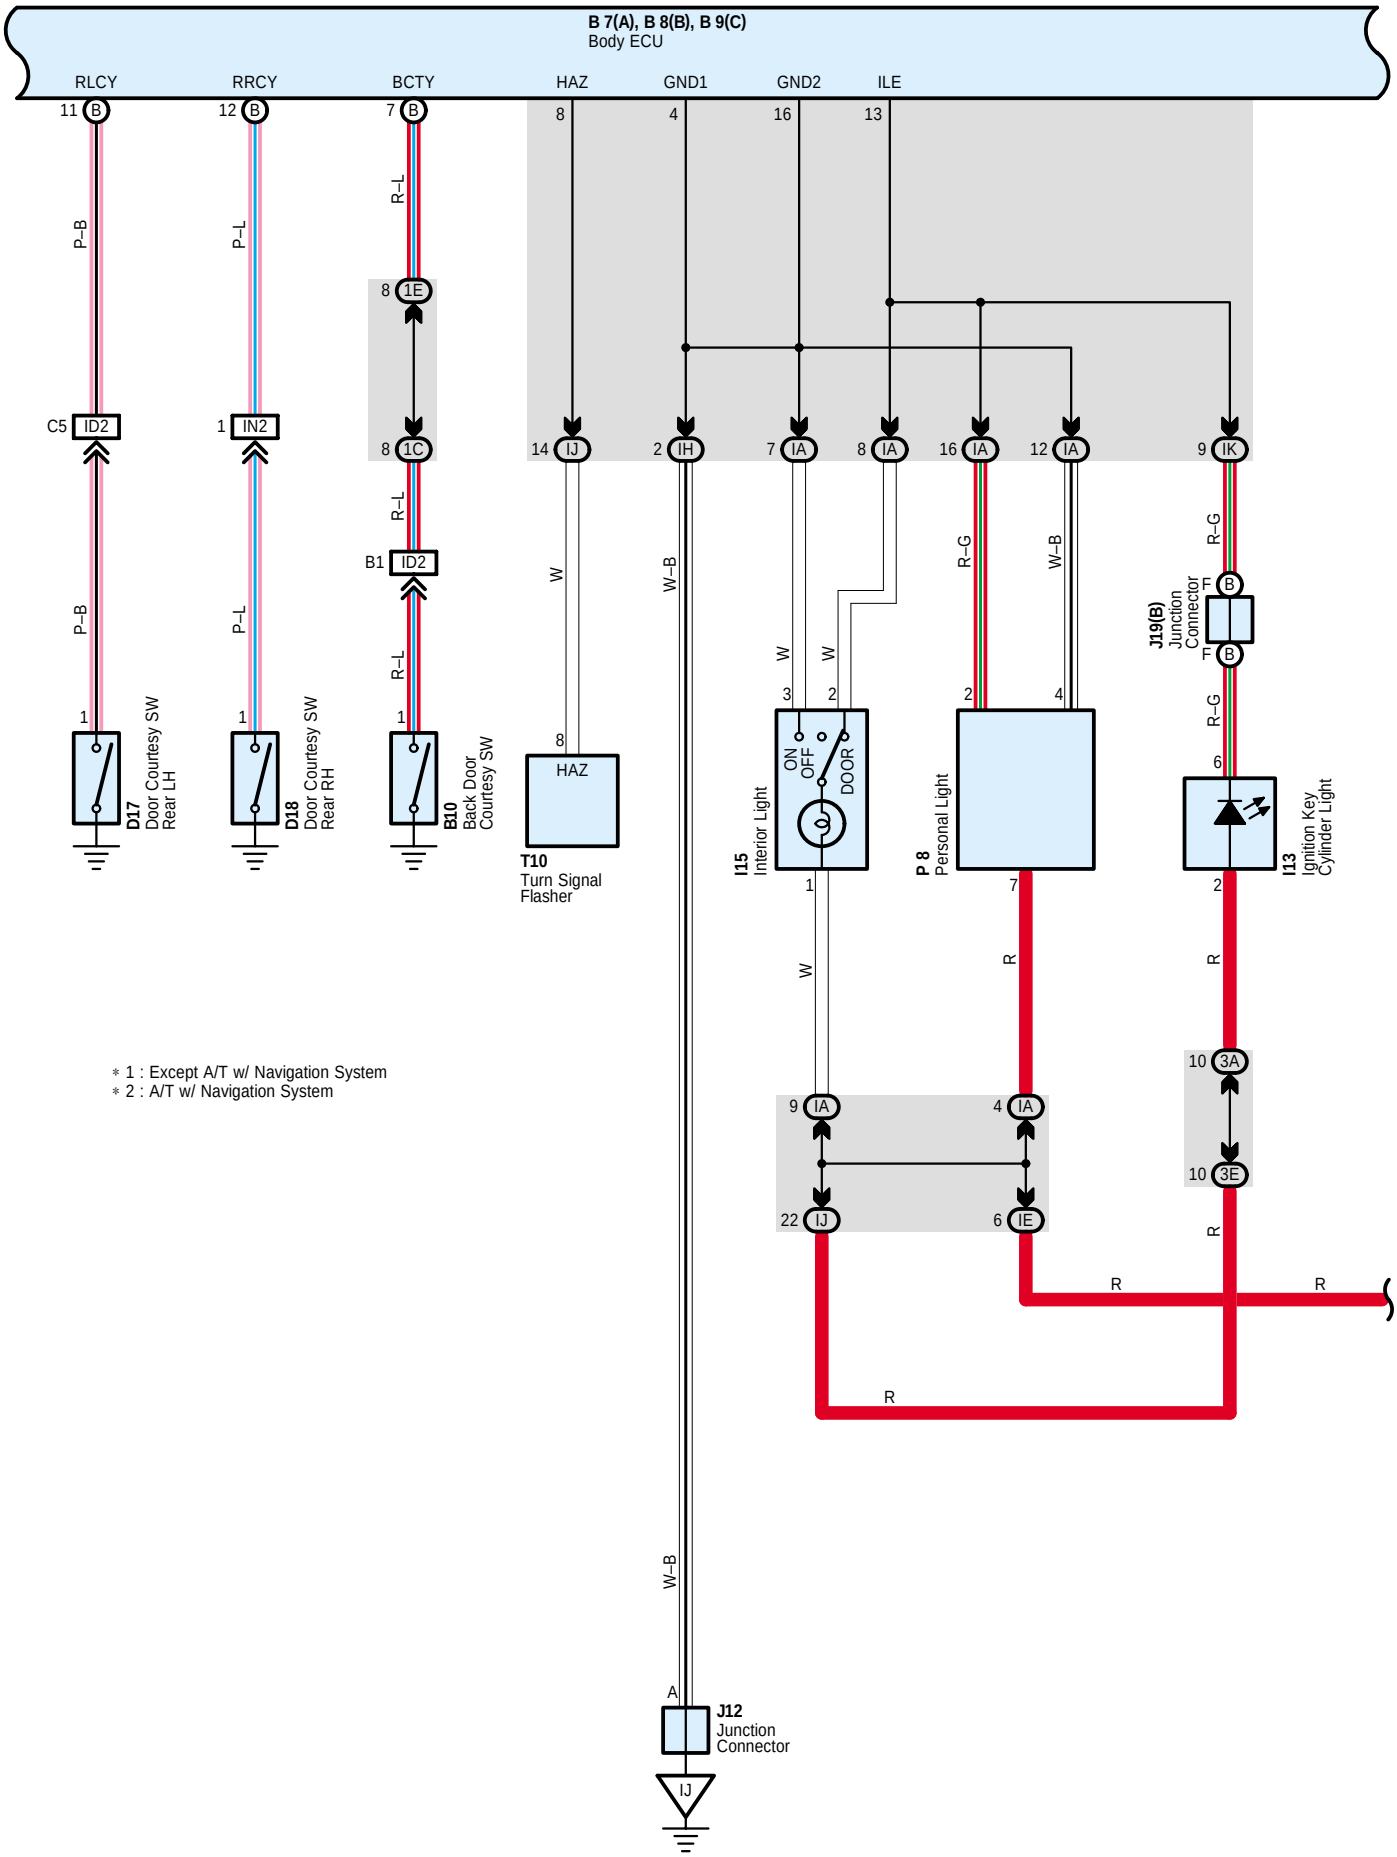


B 7(A), B 8(B), B 9(C)
Body ECU
RLCY
RRCY
BCTY
HAZ
GND1
GND2
ILE
11 B
12 B
7 B
8
4
16
13
P–B
P–L
R–L
8 1E
C5 ID2
1 IN2
8 1C
14 IJ
2 IH
7 IA
8 IA
16 IA
12 IA
9 IK
R–L
B1 ID2
W
W–B
W
W
R–G
W–B
R–G
J19(B)
Junction
Connector
F B
F B
R–G
D17
Door Courtesy SW
Rear LH
D18
Door Courtesy SW
Rear RH
B10
Back Door
Courtesy SW
8
HAZ
T10
Turn Signal
Flasher
I15
Interior Light
ON
OFF
DOOR
P 8
Personal Light
I13
Ignition Key
Cylinder Light
10 3A
10 3E
9 IA
4 IA
22 IJ
6 IE
R
R
R
R
A
J12
Junction
Connector
IJ
∗ 1 : Except A/T w/ Navigation System
∗ 2 : A/T w/ Navigation System


Door Lock Control and Theft Deterrent (LHD)

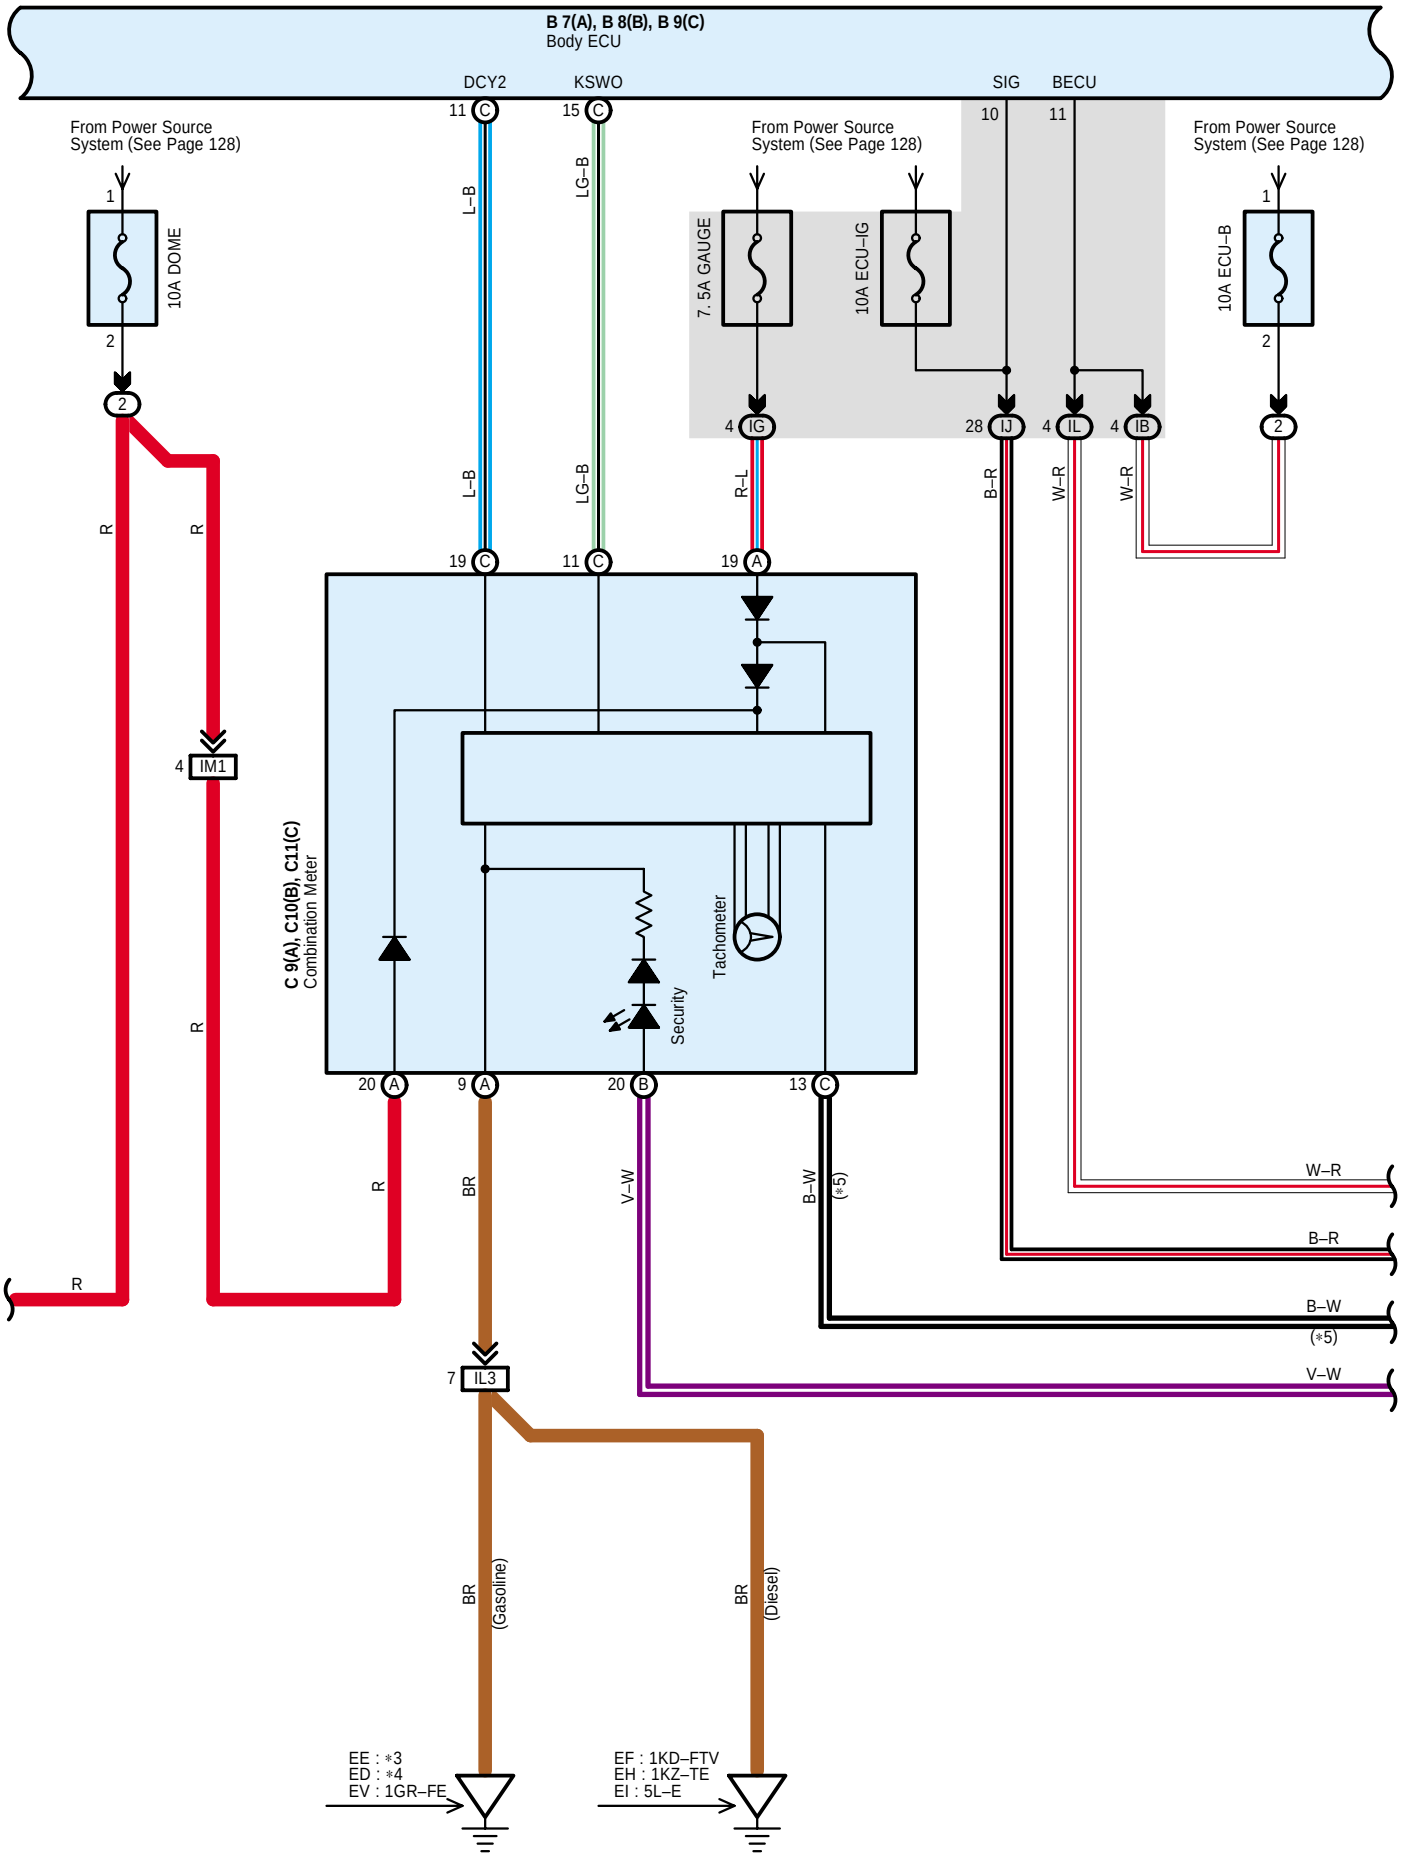


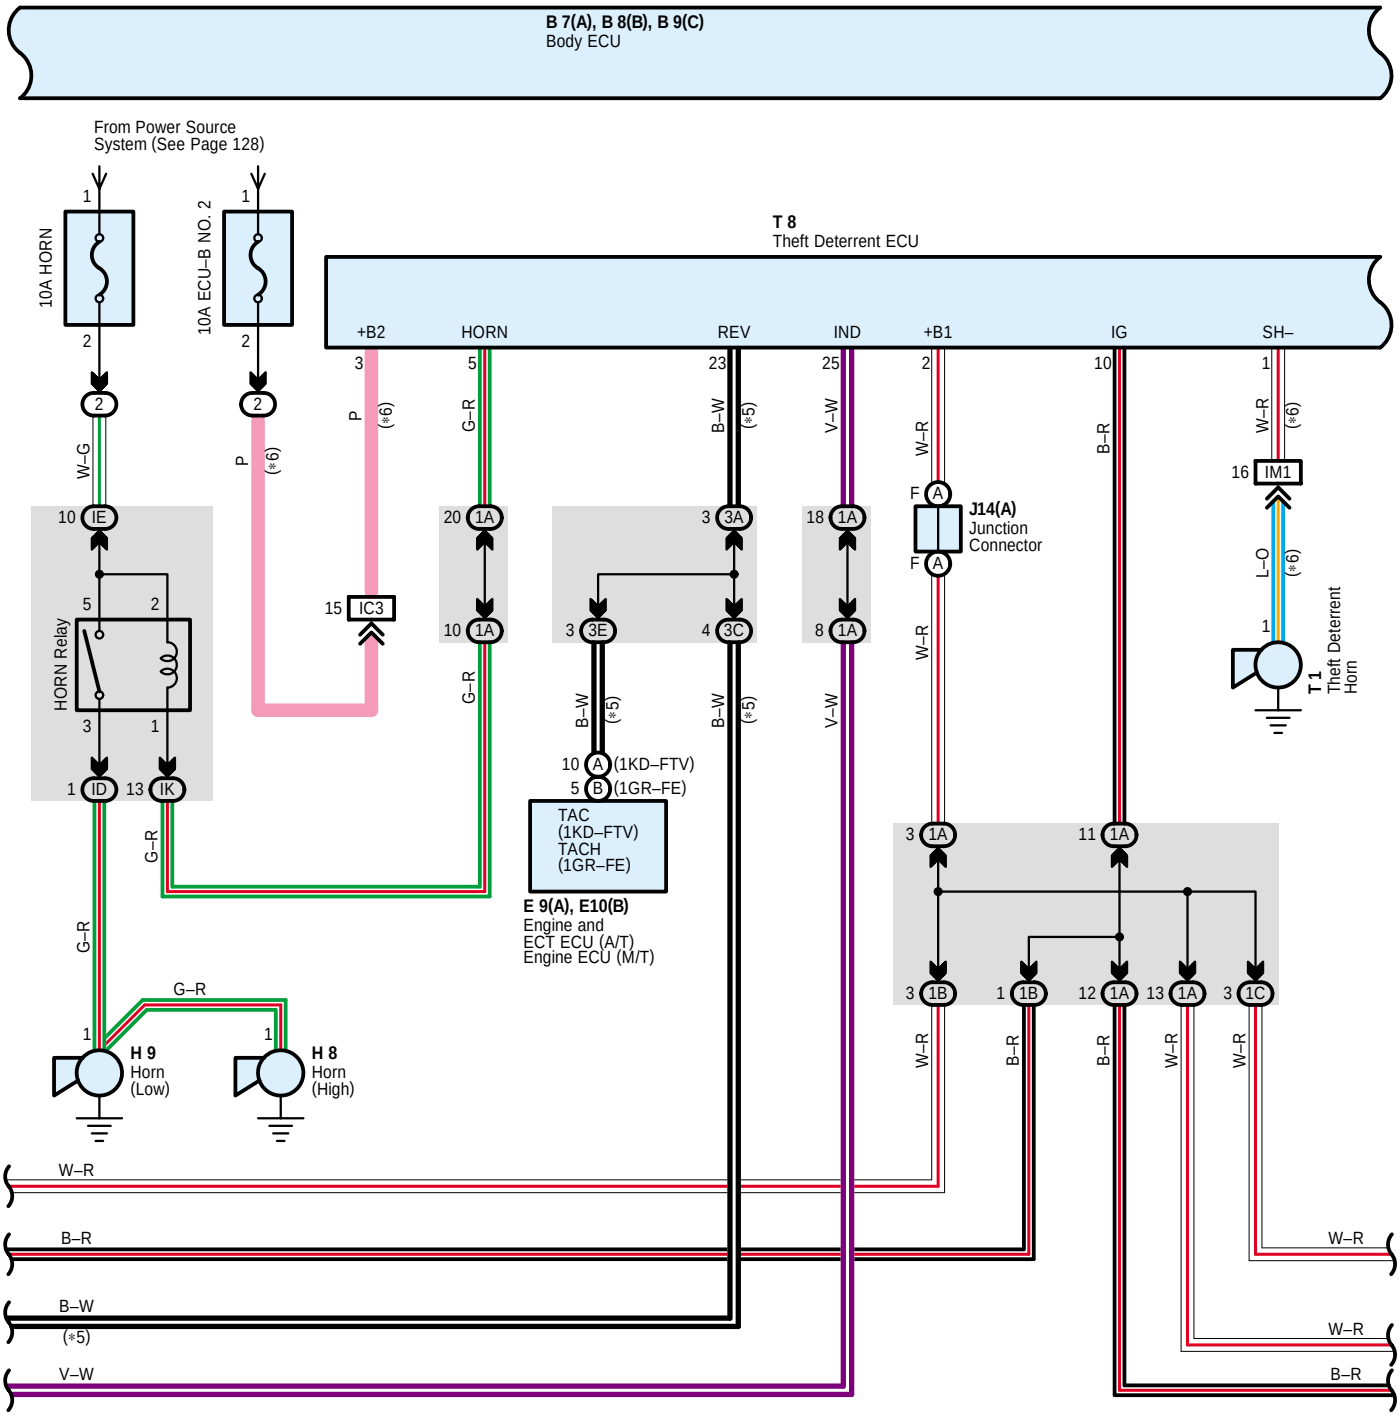


* 3 : 3RZ–FE Unleaded Gasoline
* 4 : 3RZ–FE Leaded Gasoline
* 5 : Europe
* 6 : Except Europe


Door Lock Control and Theft Deterrent (LHD)

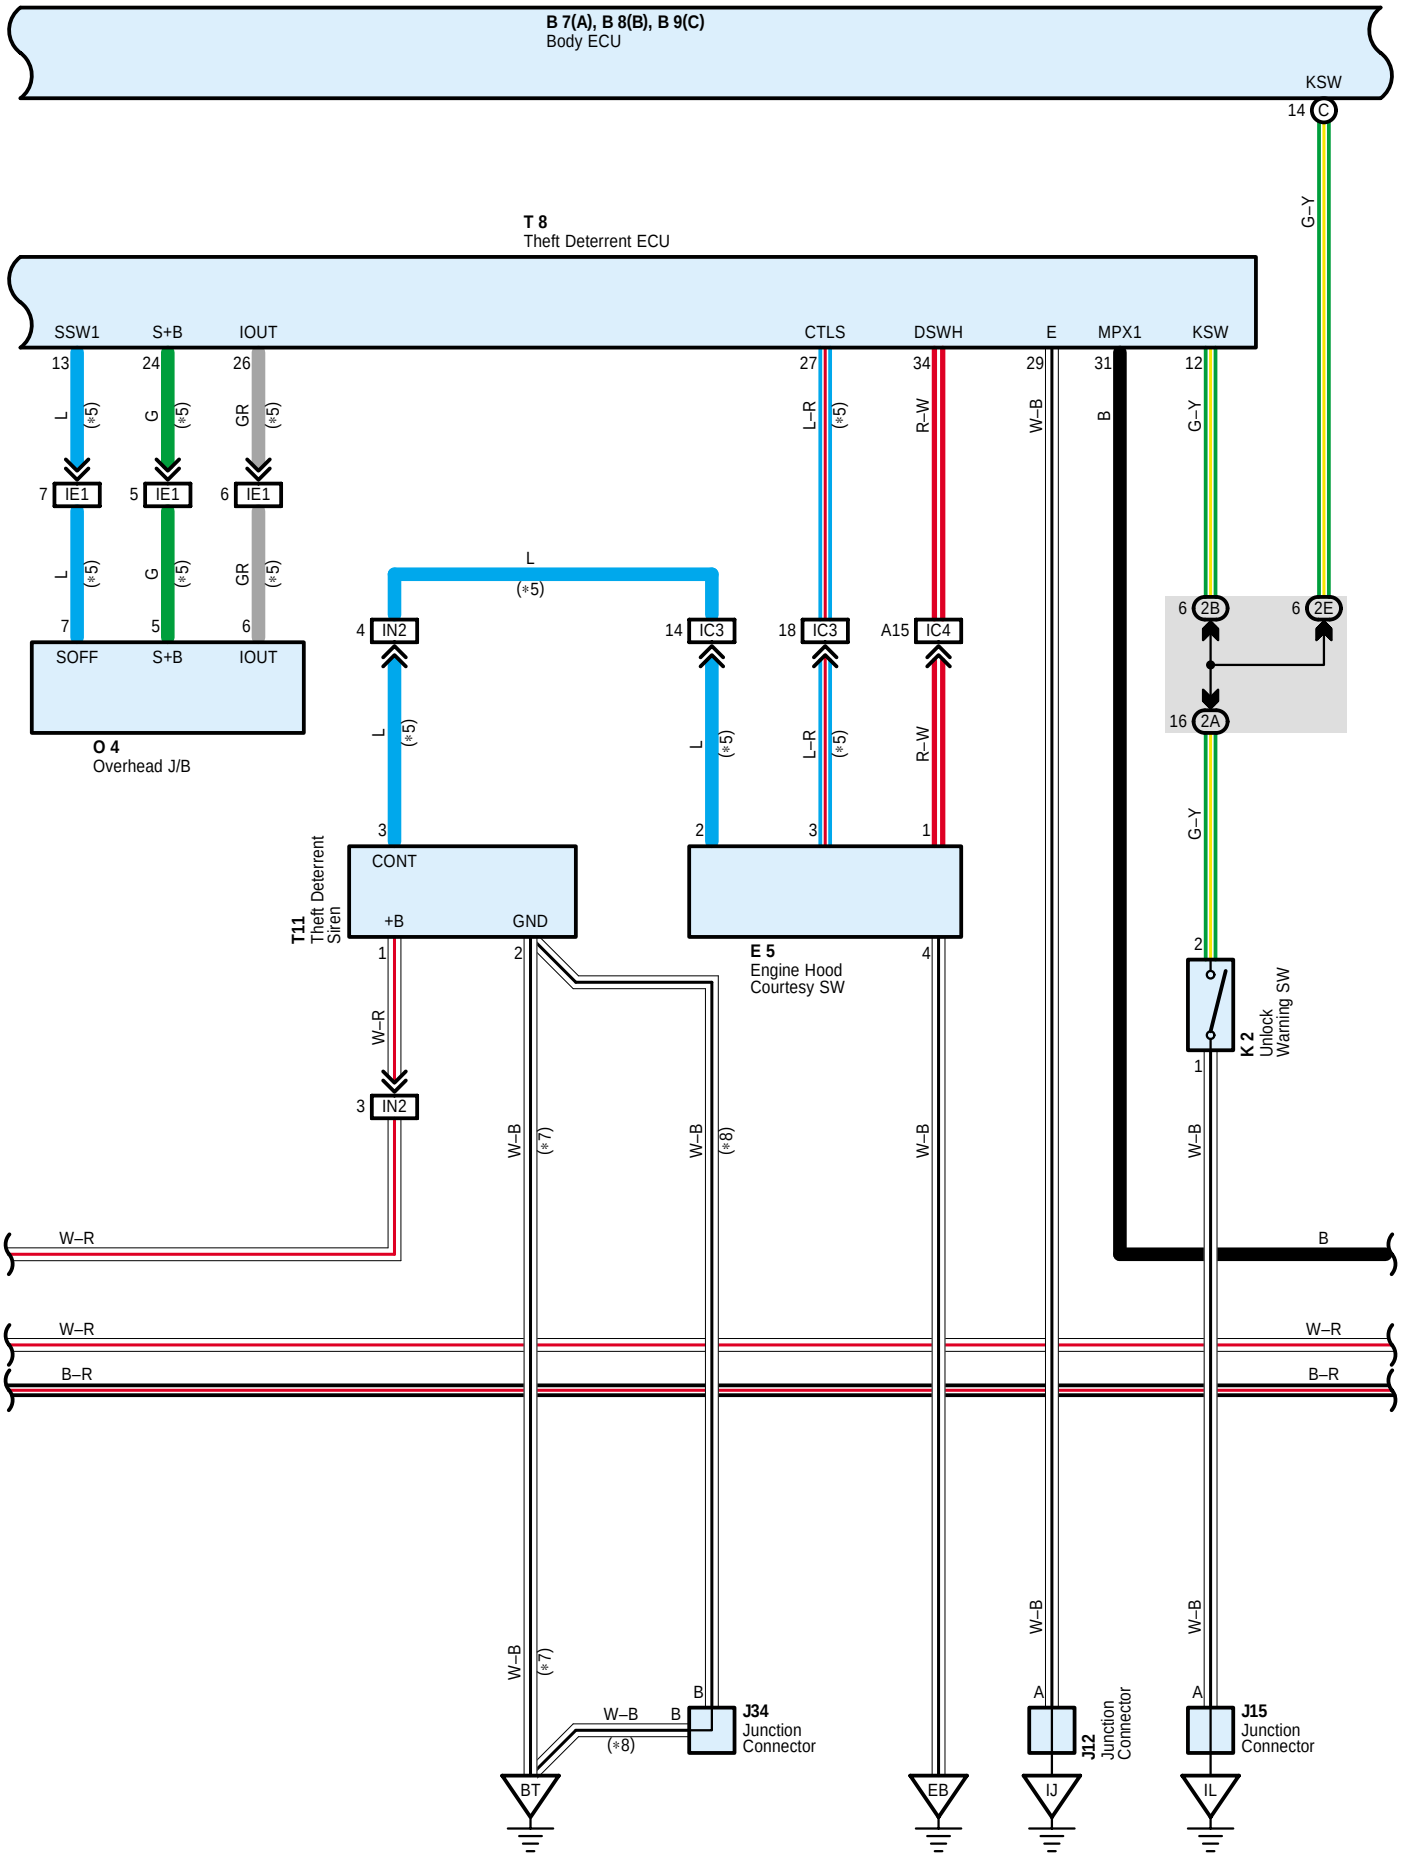

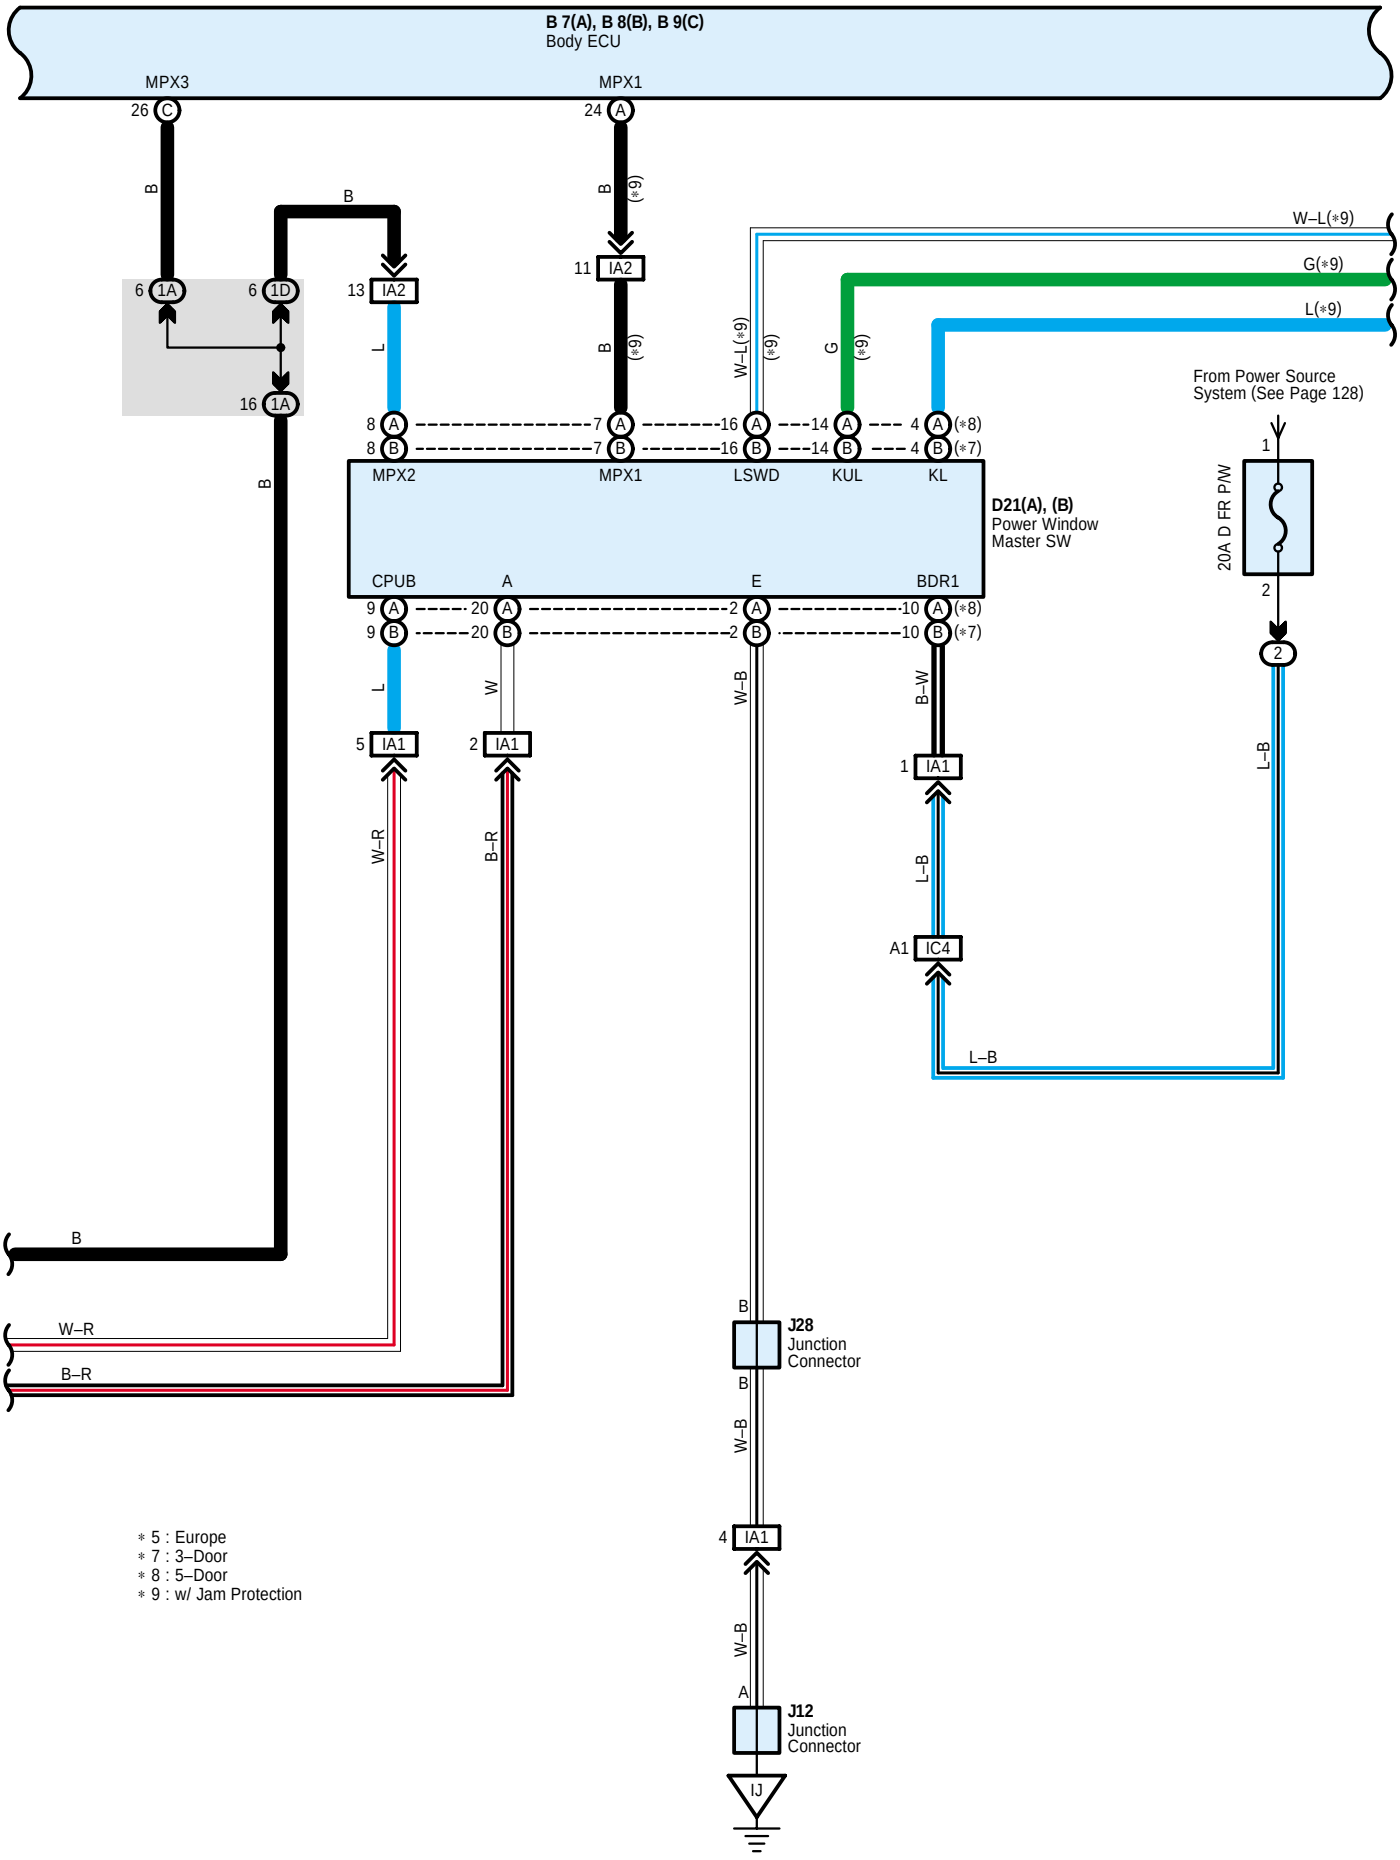
B 7(A), B 8(B), B 9(C)
Body ECU
MPX3
MPX1
26 C
24 A
B
(*9)
11 IA2
6 1A
6 1D
13 IA2
16 1A
L
W–L(*9)
G
G(*9)
L(*9)
From Power Source System (See Page 128)
8 A
8 B
7 A
7 B
16 A
16 B
14 A
14 B
4 A (*8)
4 B (*7)
MPX2
MPX1
LSWD
KUL
KL
D21(A), (B)
Power Window Master SW
CPUB
A
E
BDR1
9 A
9 B
20 A
20 B
2 A
2 B
10 A (*8)
10 B (*7)
W
W–B
B–W
5 IA1
2 IA1
1 IA1
W–R
B–R
L–B
A1 IC4
1
20A D FR P/W
2
2
B
W–R
B–R
J28
Junction Connector
4 IA1
J12
Junction Connector
IJ
* 5 : Europe
* 7 : 3–Door
* 8 : 5–Door
* 9 : w/ Jam Protection

Door Lock Control and Theft Deterrent (LHD)

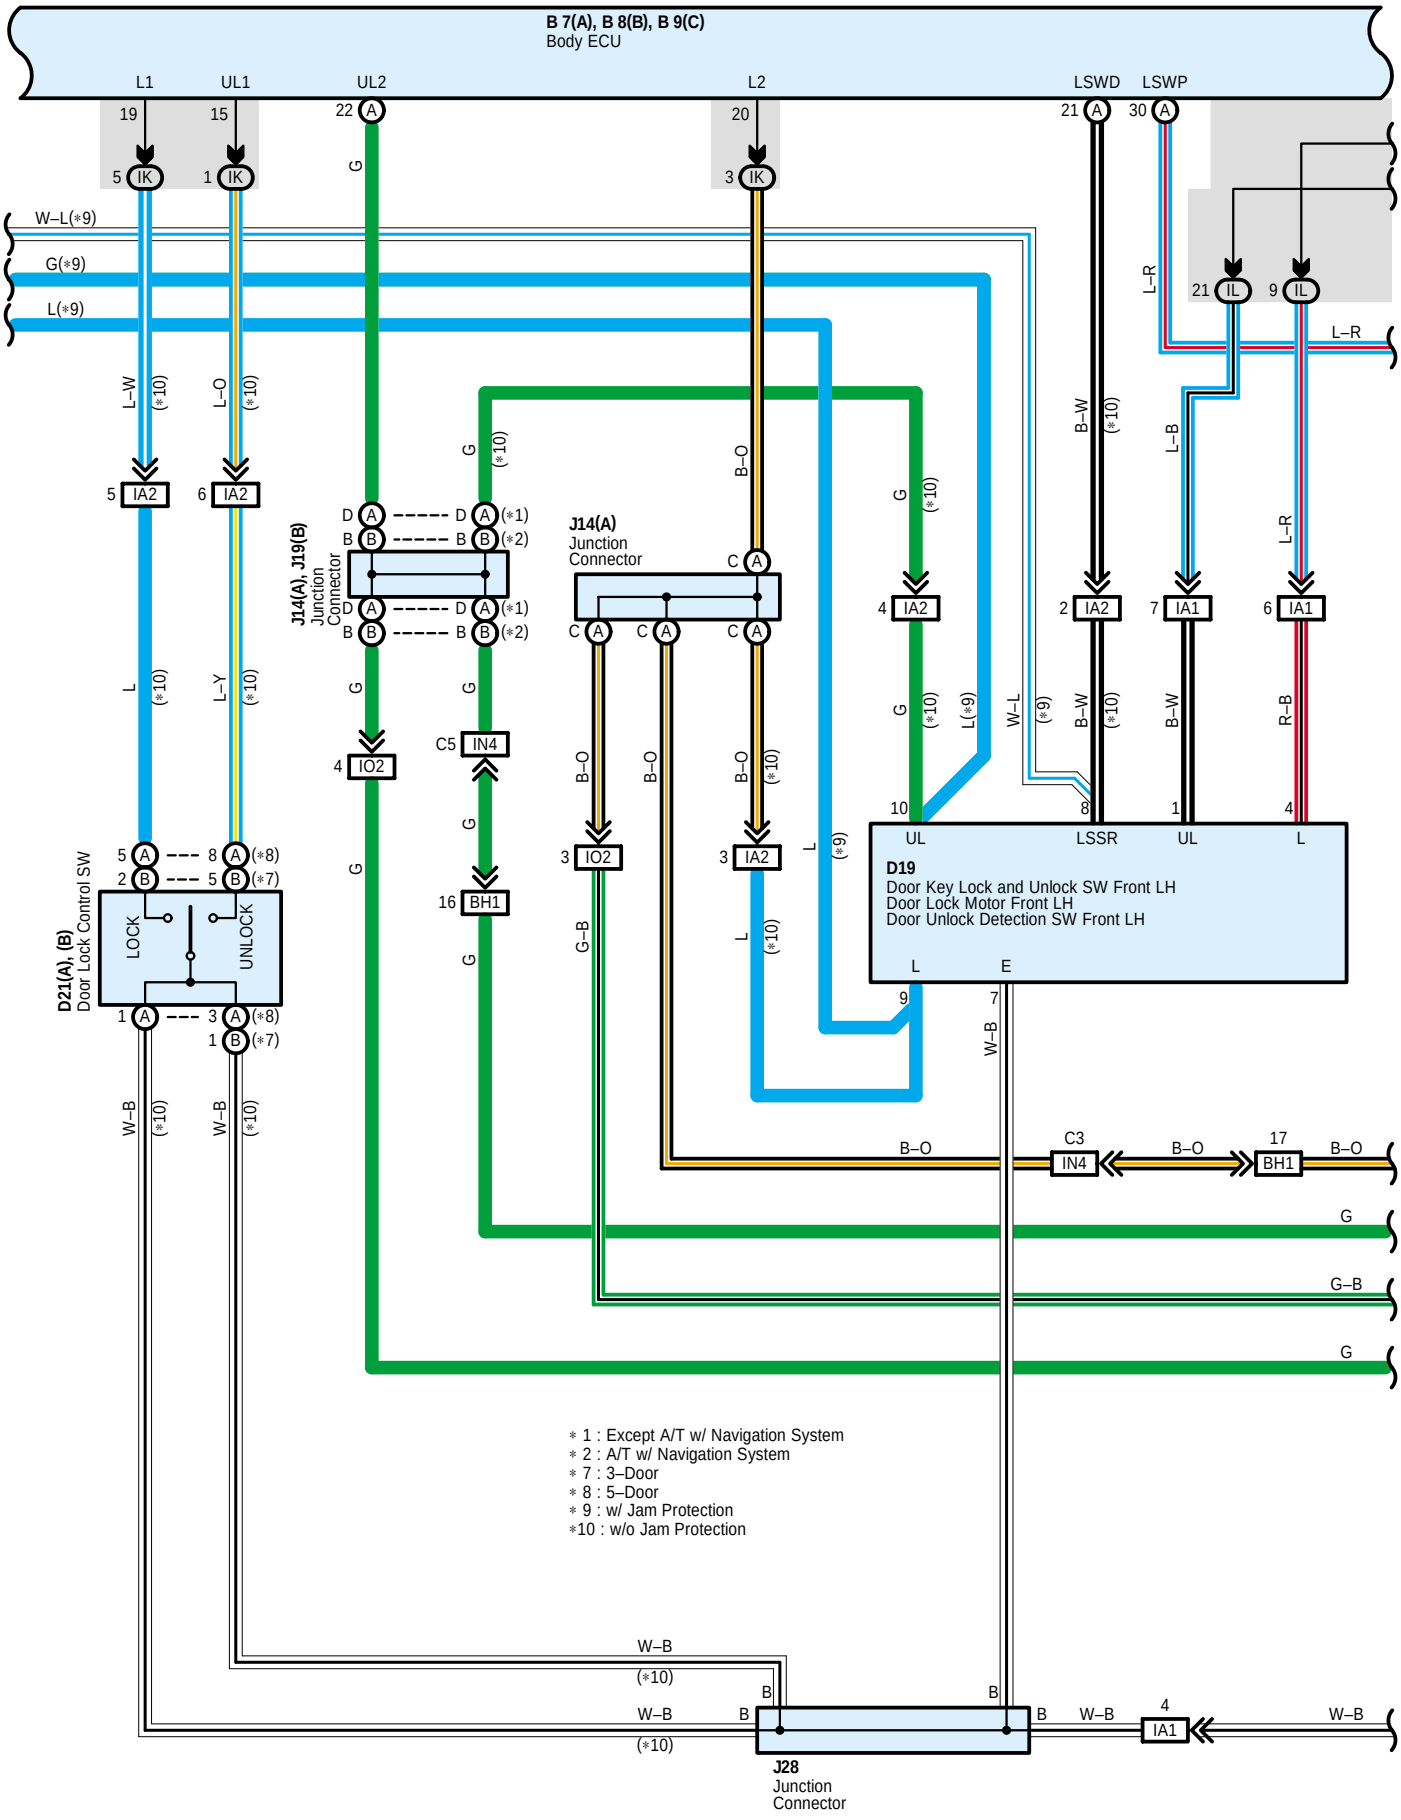

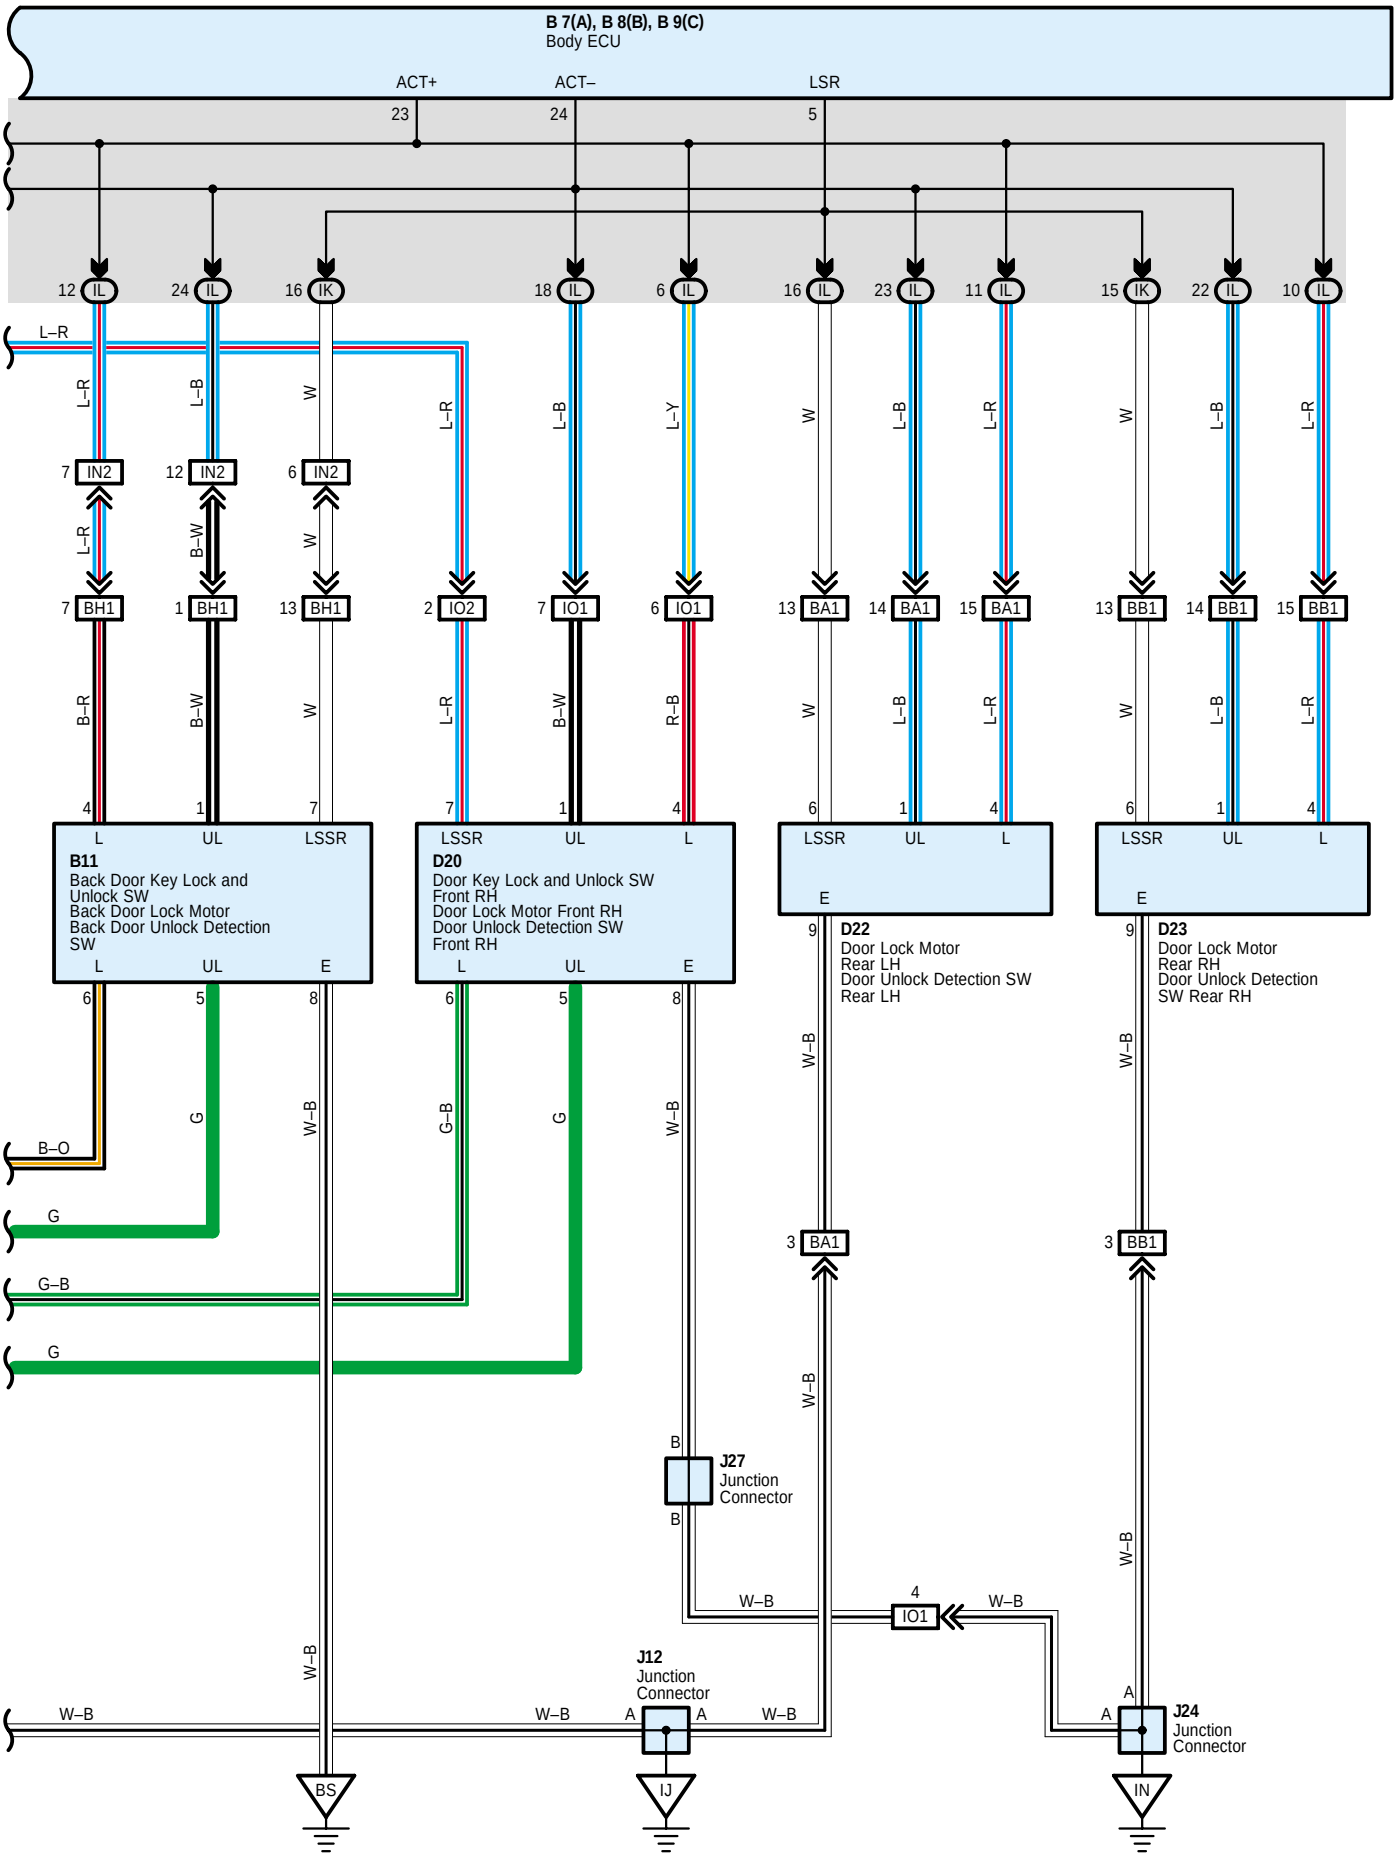
B 7(A), B 8(B), B 9(C)
Body ECU
ACT+
ACT–
LSR
23
24
5
12 IL
24 IL
16 IK
18 IL
6 IL
16 IL
23 IL
11 IL
15 IK
22 IL
10 IL
L–R
L–B
W
L–Y
7 IN2
12 IN2
6 IN2
B–W
7 BH1
1 BH1
13 BH1
2 IO2
7 IO1
6 IO1
13 BA1
14 BA1
15 BA1
13 BB1
14 BB1
15 BB1
B–R
R–B
4
1
7
6
L
UL
LSSR
E
B11
Back Door Key Lock and Unlock SW
Back Door Lock Motor
Back Door Unlock Detection SW
D20
Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
D22
Door Lock Motor Rear LH
Door Unlock Detection SW Rear LH
D23
Door Lock Motor Rear RH
Door Unlock Detection SW Rear RH
9
6
5
8
B–O
G
G–B
W–B
3 BA1
3 BB1
B
J27
Junction Connector
4 IO1
J12
Junction Connector
A
J24
Junction Connector
BS
IJ
IN