

Headlight (w/o Daytime Running Light)

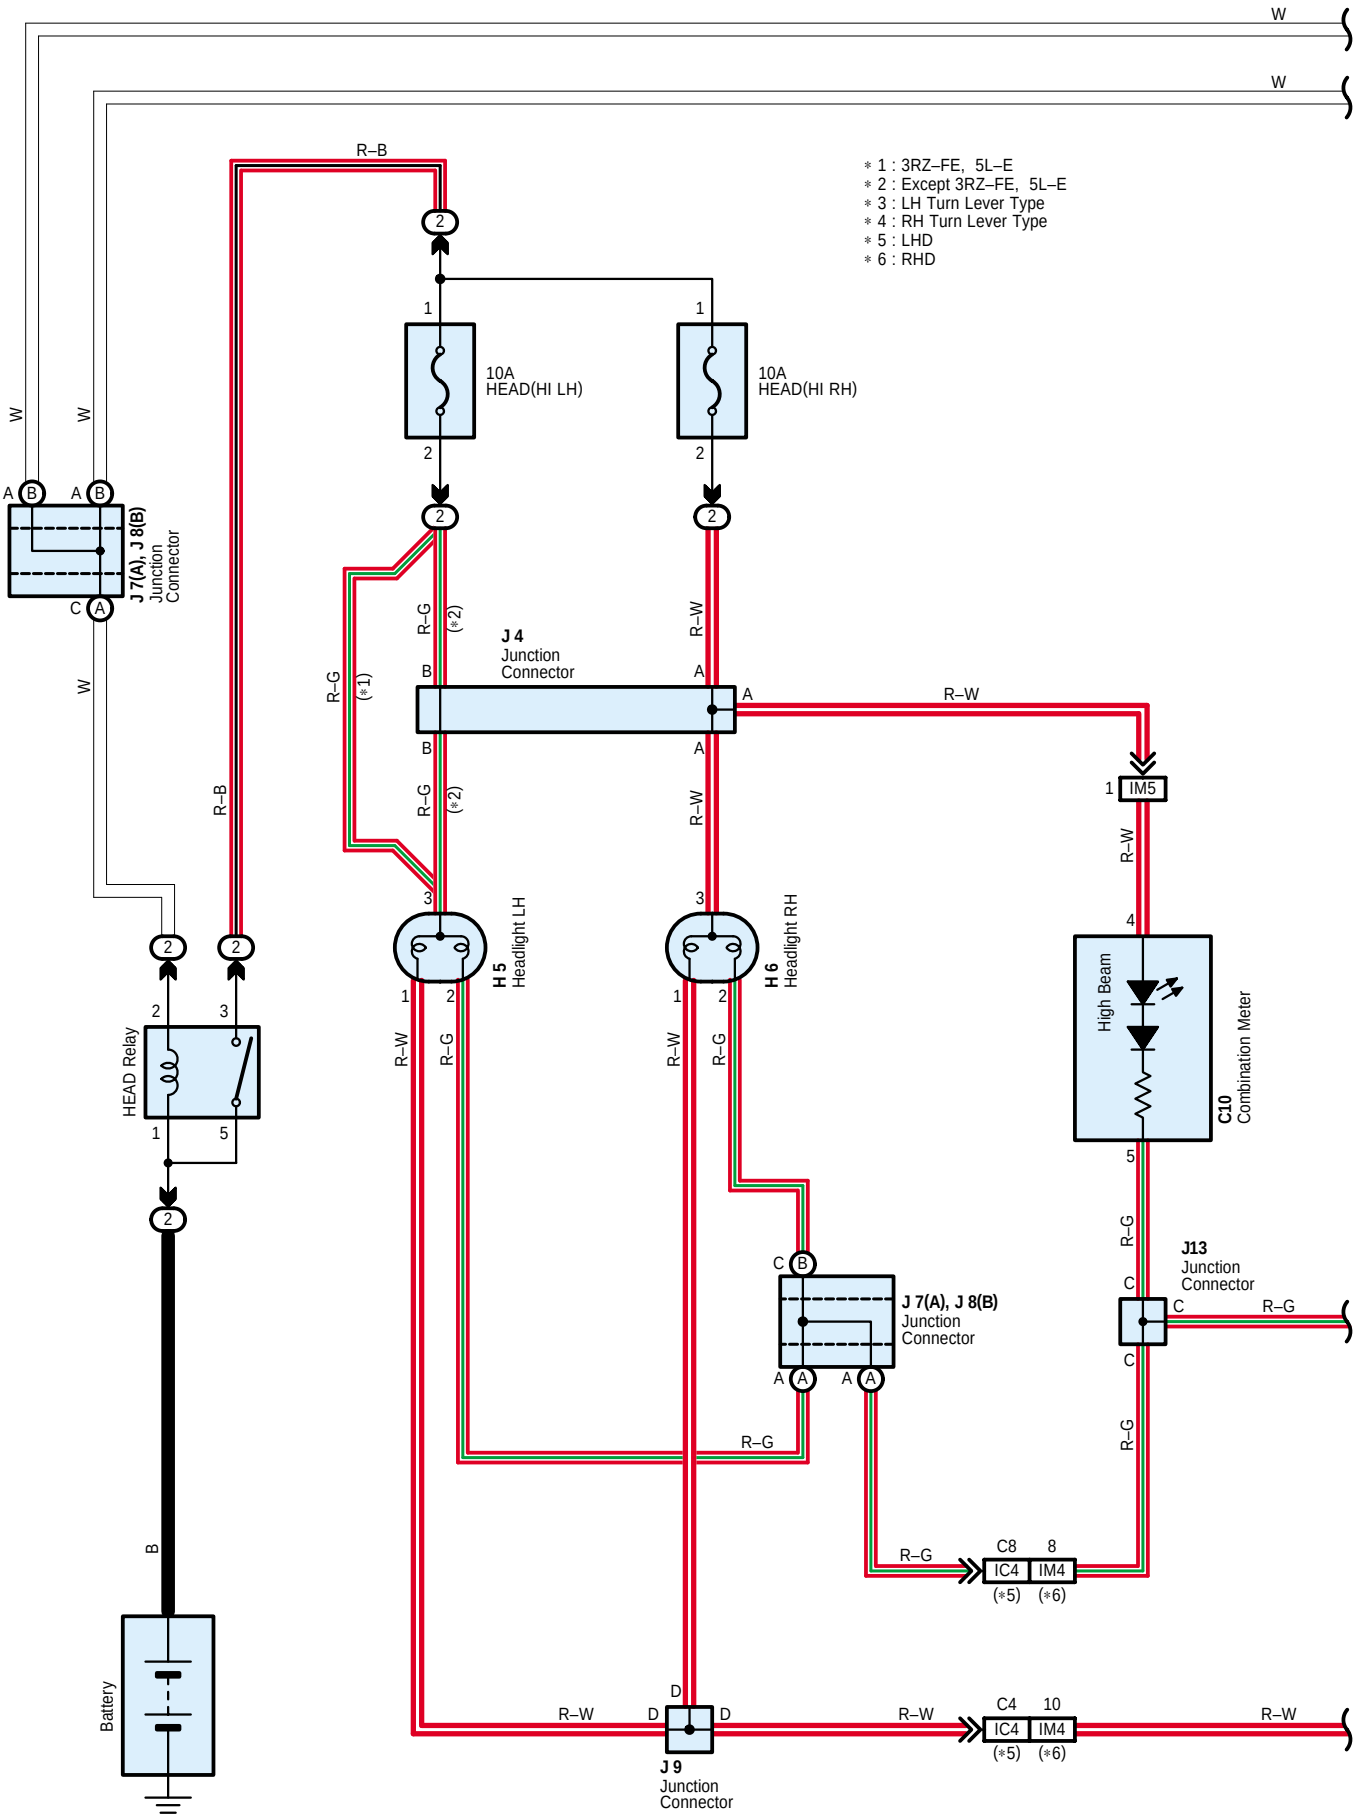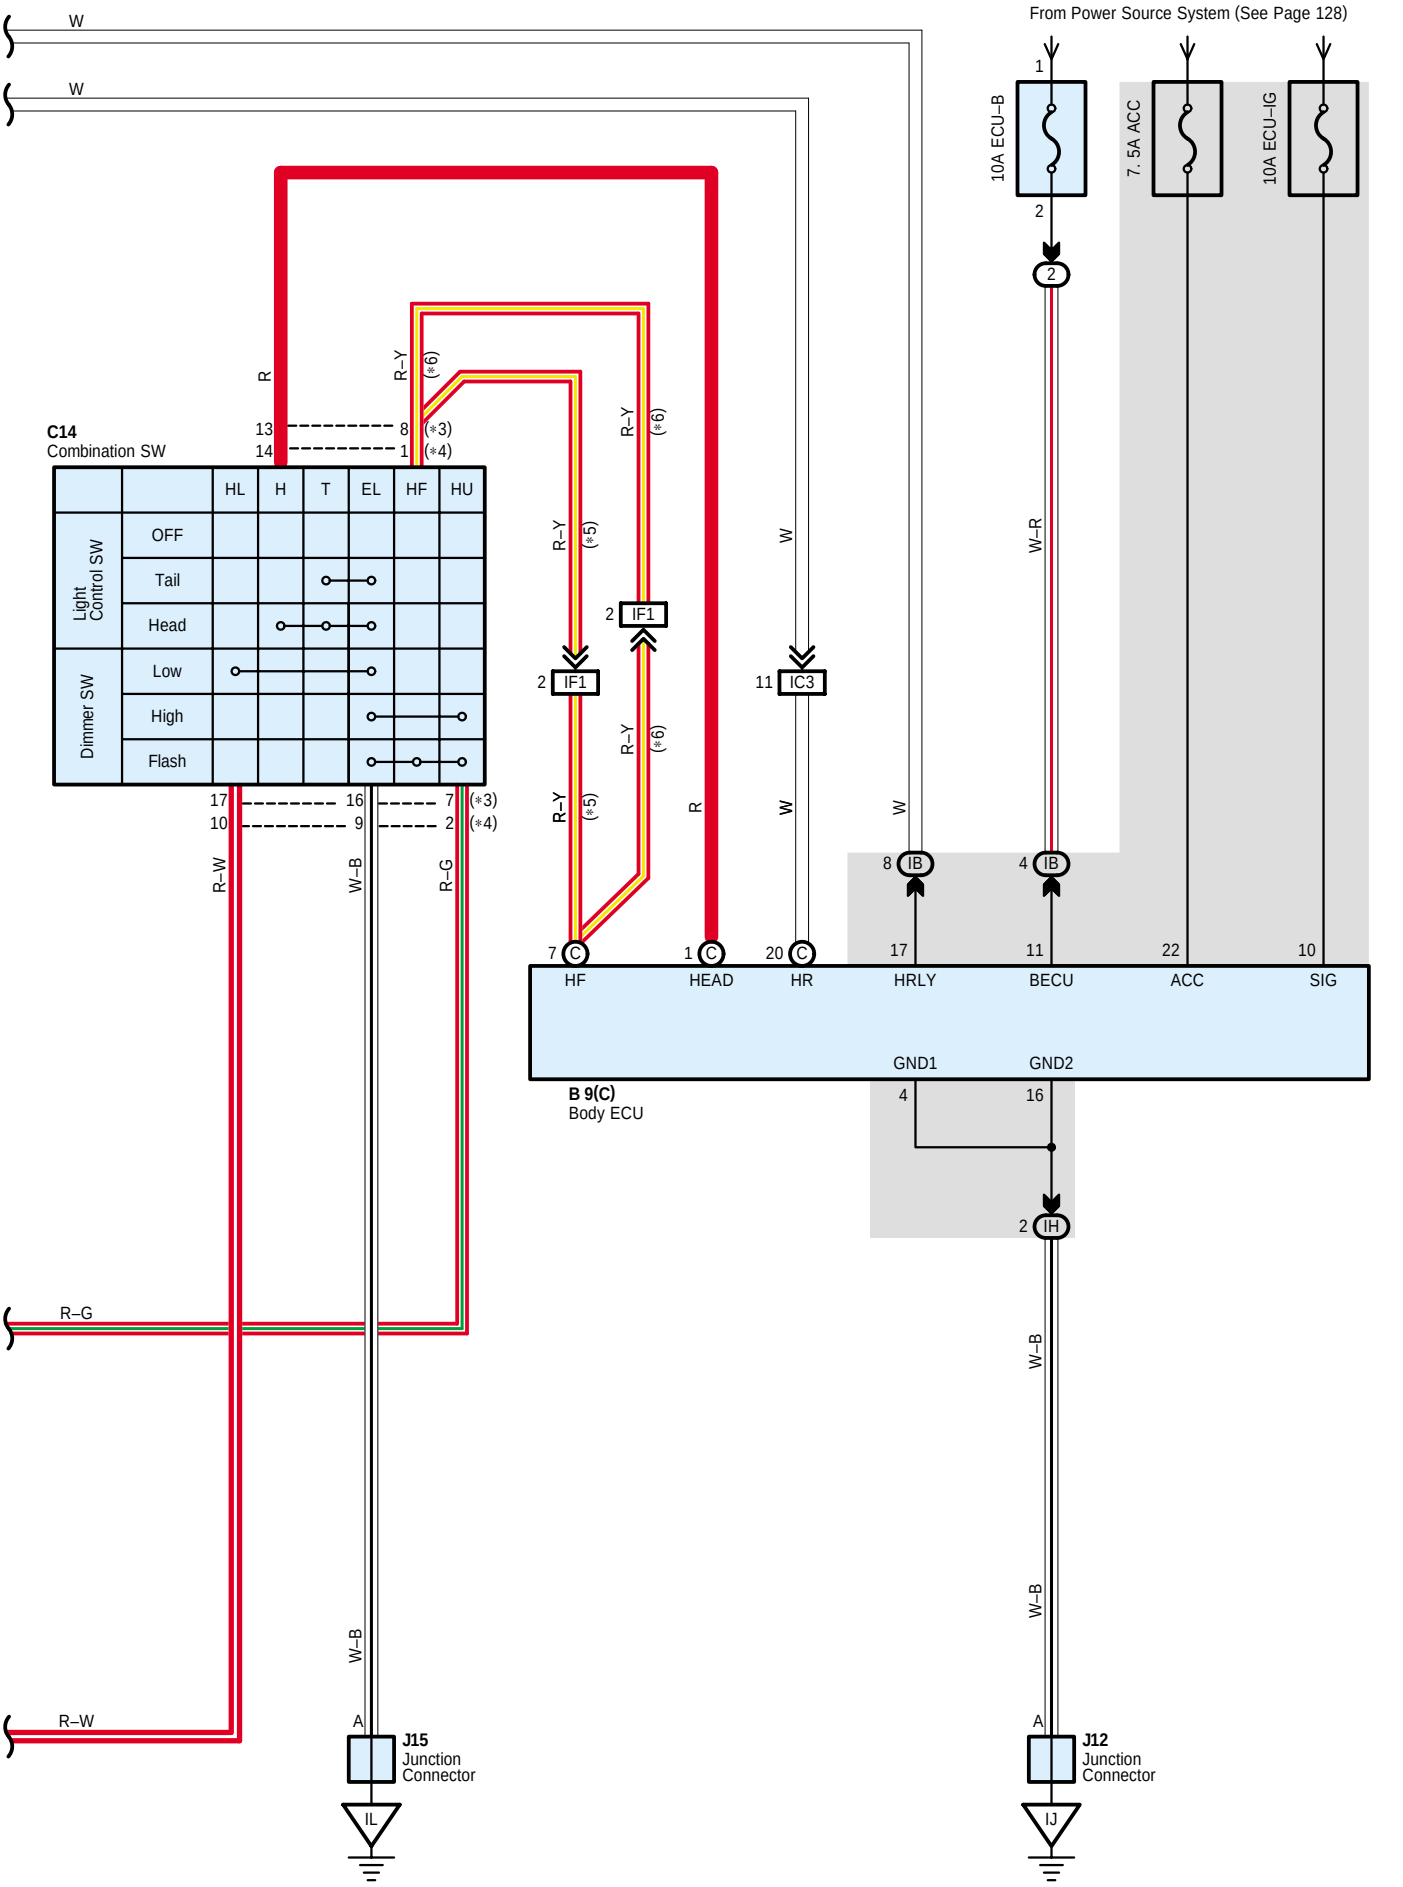


From Power Source System (See Page 128)
W
W
10A ECU–B
7. 5A ACC
10A ECU–IG
1
2
2
W–R
R
R–Y
(*6)
C14
Combination SW
13
14
8
1
(*3)
(*4)
HL
H
T
EL
HF
HU
Light Control SW
OFF
Tail
Head
Dimmer SW
Low
High
Flash
R–Y
(*5)
2 IF1
2 IF1
11 IC3
W
R
W
17
10
16
9
7
2
(*3)
(*4)
R–W
W–B
R–G
8 IB
4 IB
7 C
1 C
20 C
17
11
22
10
HF
HEAD
HR
HRLY
BECU
ACC
SIG
GND1
GND2
4
16
B 9(C)
Body ECU
2 IH
R–G
W–B
R–W
W–B
A
J15
Junction Connector
IL
A
J12
Junction Connector
IJ