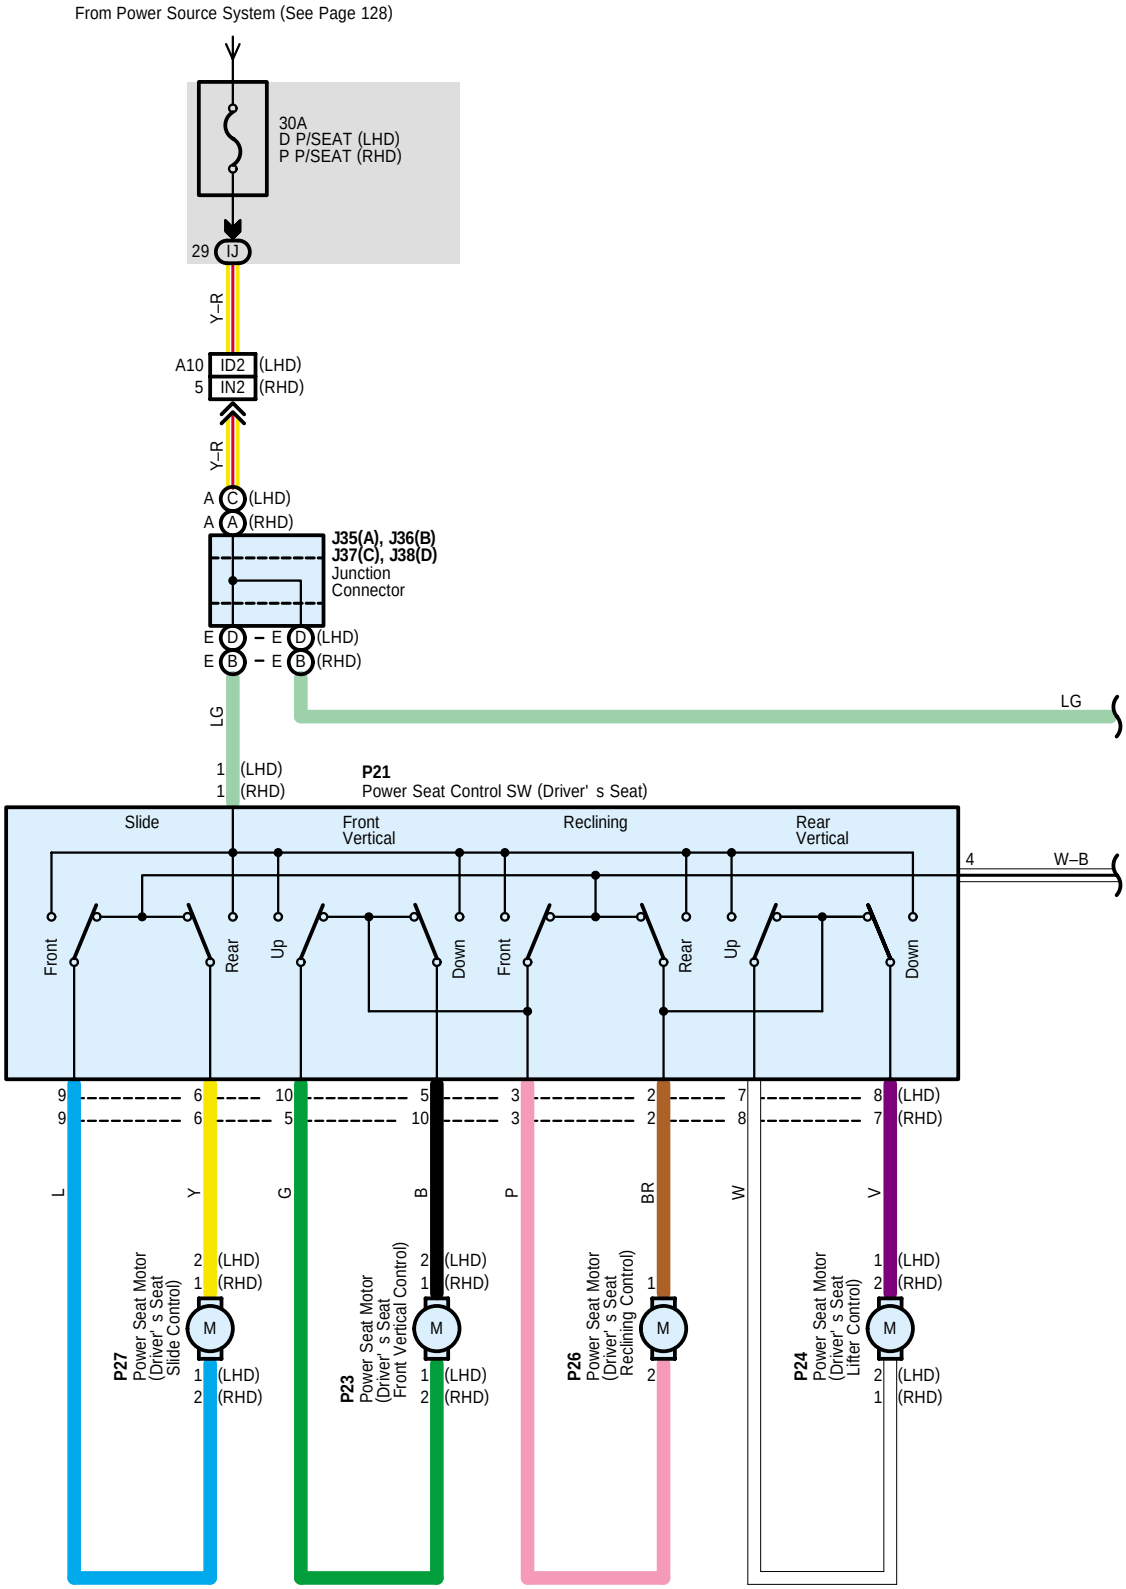

From Power Source System (See Page 128)
30A
D P/SEAT (LHD)
P P/SEAT (RHD)
29 IJ
Y–R
A10 ID2 (LHD)
5 IN2 (RHD)
Y–R
A C (LHD)
A A (RHD)
J35(A), J36(B)
J37(C), J38(D)
Junction
Connector
E D – E D (LHD)
E B – E B (RHD)
LG
LG
1 (LHD)
1 (RHD)
P21
Power Seat Control SW (Driver' s Seat)
Slide
Front
Vertical
Reclining
Rear
Vertical
4
W–B
Front
Rear
Up
Down
Front
Rear
Up
Down
9 6 10 5 3 2 7 8 (LHD)
9 6 5 10 3 2 8 7 (RHD)
L
Y
G
B
P
BR
W
V
P27
Power Seat Motor
(Driver' s Seat
Slide Control)
2 (LHD)
1 (RHD)
1 (LHD)
2 (RHD)
P23
Power Seat Motor
(Driver' s Seat
Front Vertical Control)
2 (LHD)
1 (RHD)
1 (LHD)
2 (RHD)
P26
Power Seat Motor
(Driver' s Seat
Reclining Control)
1
2
P24
Power Seat Motor
(Driver' s Seat
Lifter Control)
1 (LHD)
2 (RHD)
2 (LHD)
1 (RHD)
M

From Power Source System (See Page 128)

