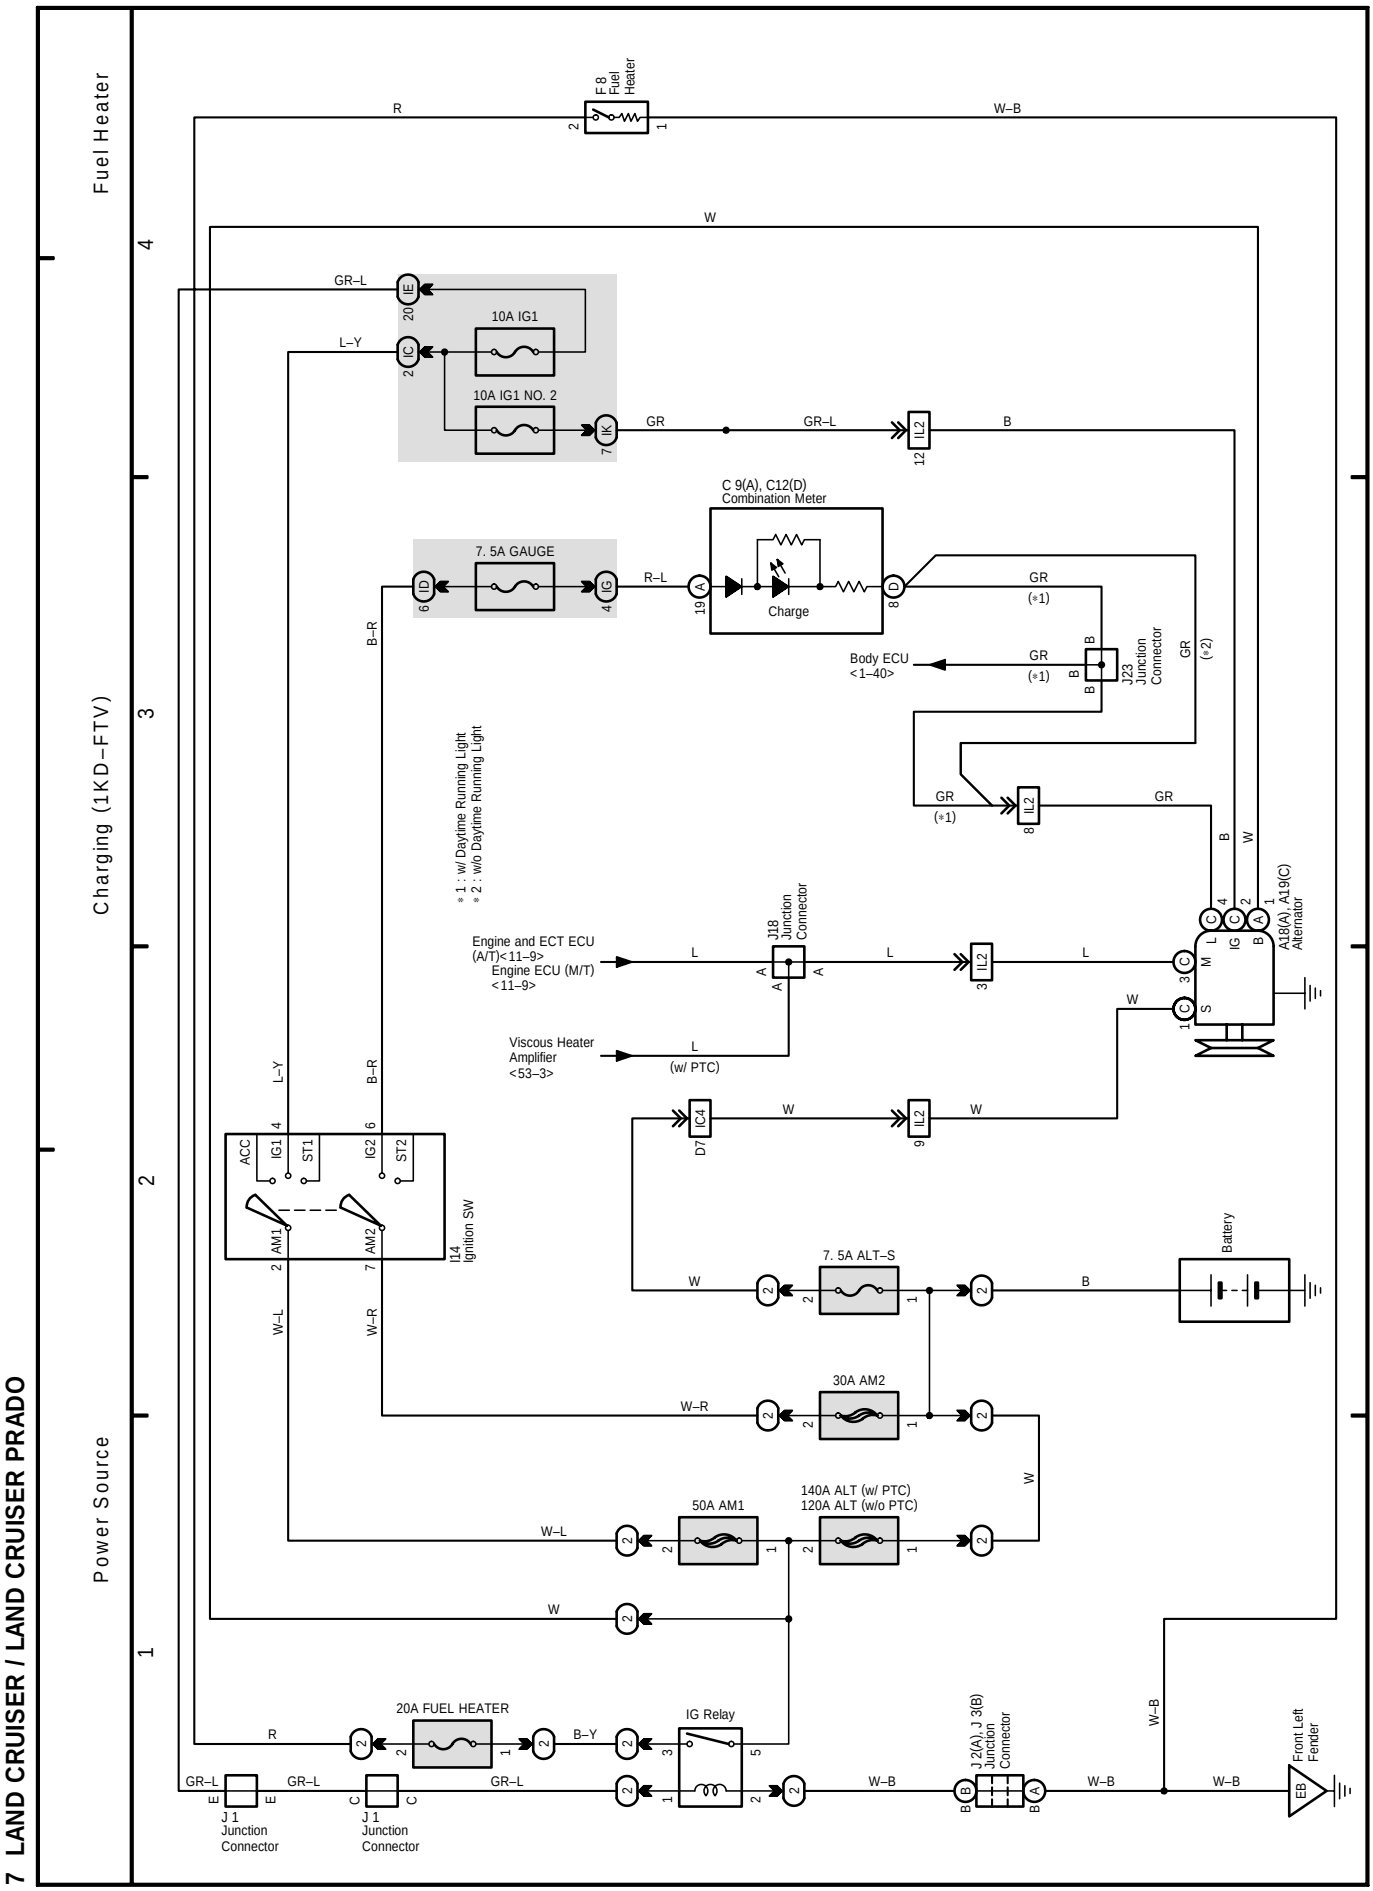

7 LAND CRUISER / LAND CRUISER PRADO
Power Source
Charging (1KD–FTV)
Fuel Heater
F 8 Fuel Heater
10A IG1
10A IG1 NO. 2
7. 5A GAUGE
C 9(A), C12(D) Combination Meter
Charge
Body ECU <1–40>
J23 Junction Connector
J18 Junction Connector
Engine and ECT ECU (A/T)<11–9> Engine ECU (M/T) <11–9>
Viscous Heater Amplifier <53–3>
A18(A), A19(C) Alternator
I14 Ignition SW
7. 5A ALT–S
Battery
30A AM2
50A AM1
140A ALT (w/ PTC) 120A ALT (w/o PTC)
20A FUEL HEATER
IG Relay
J 2(A), J 3(B) Junction Connector
J 1 Junction Connector
J 1 Junction Connector
Front Left Fender
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light