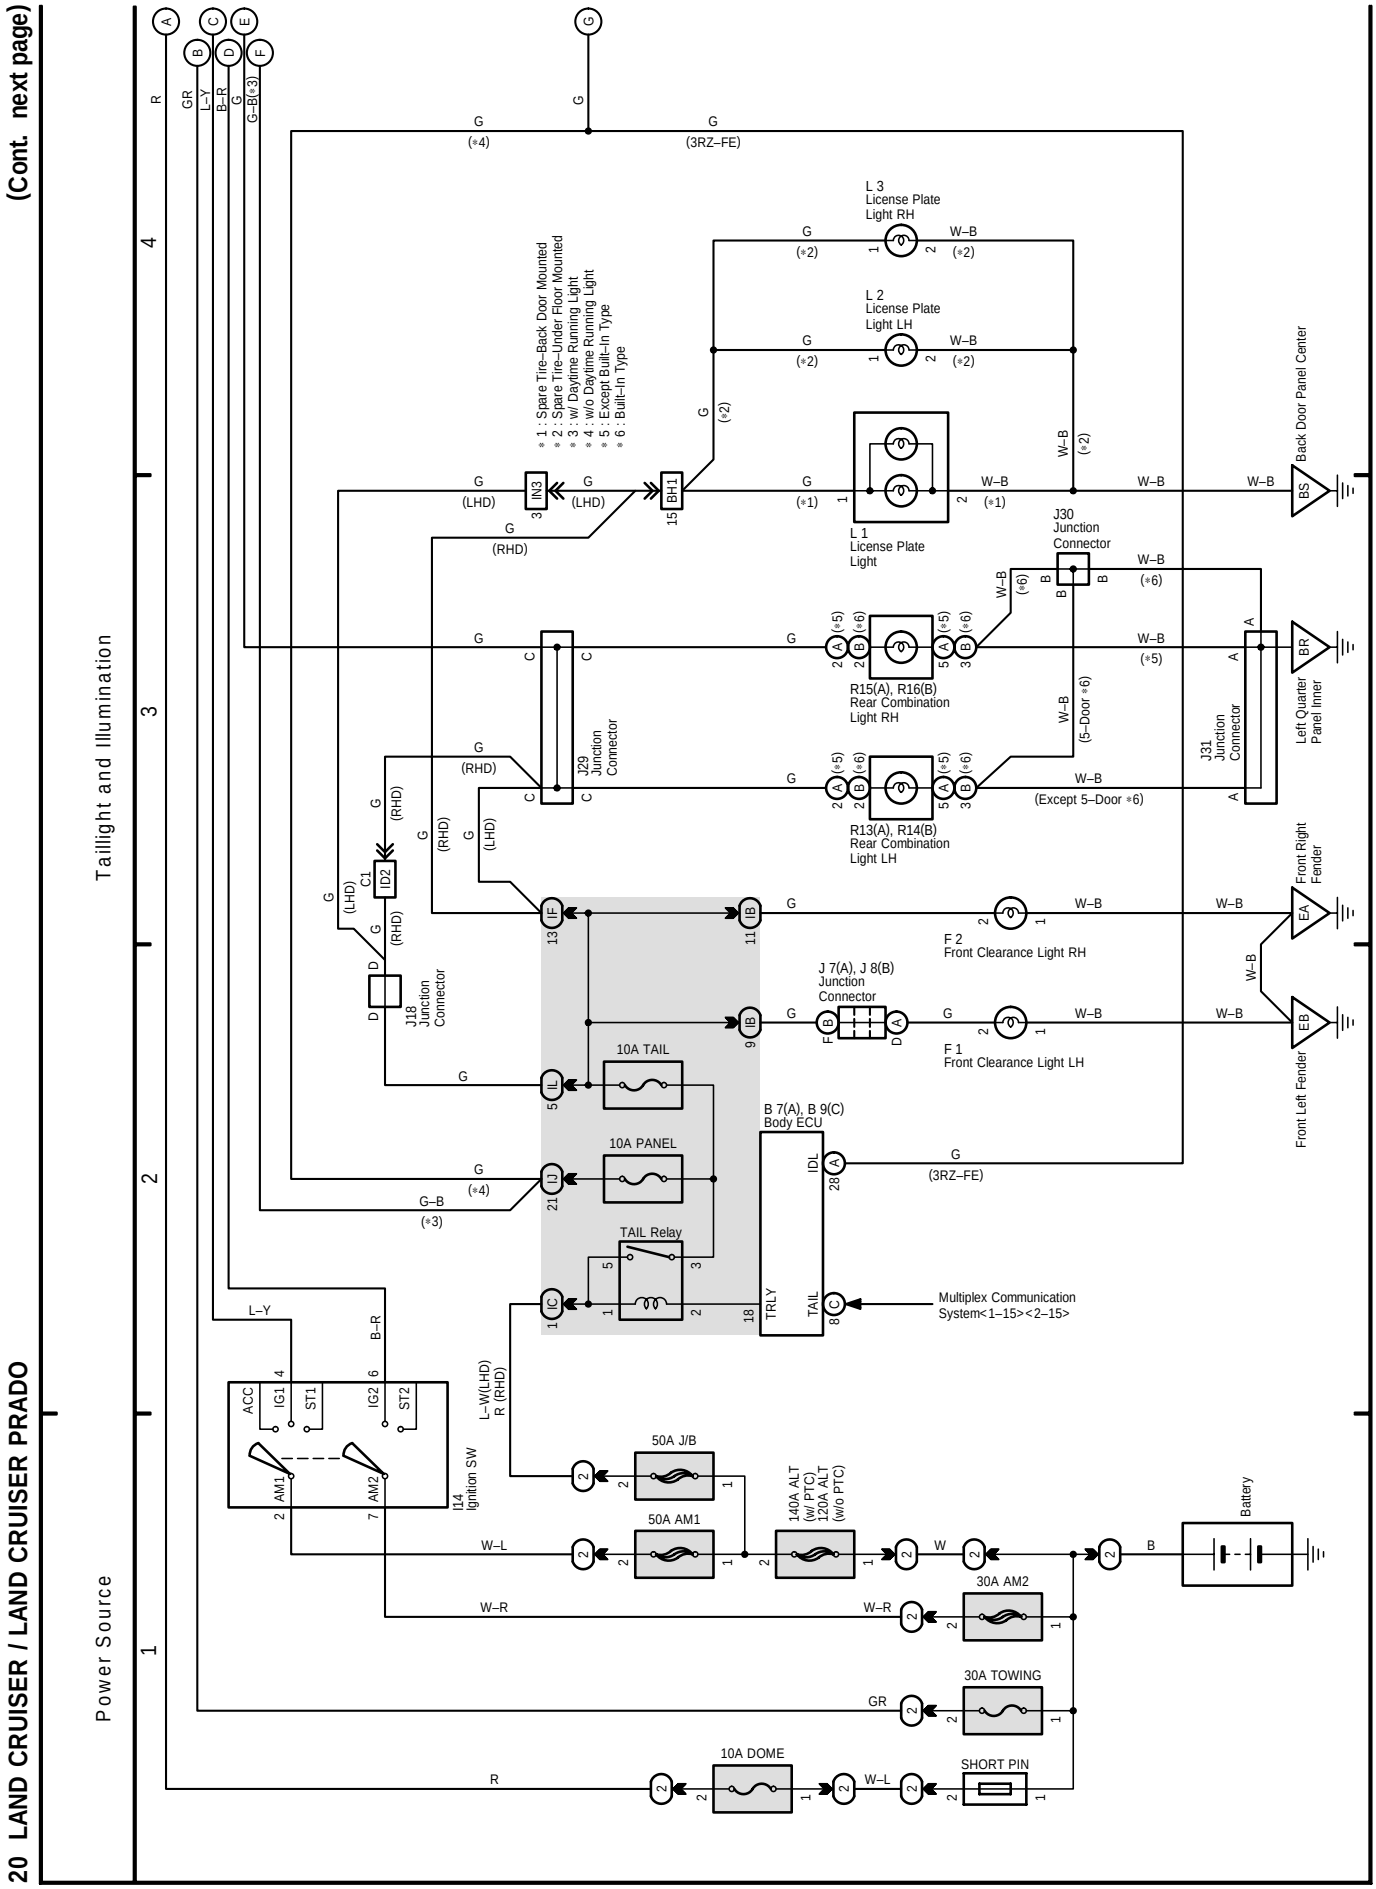
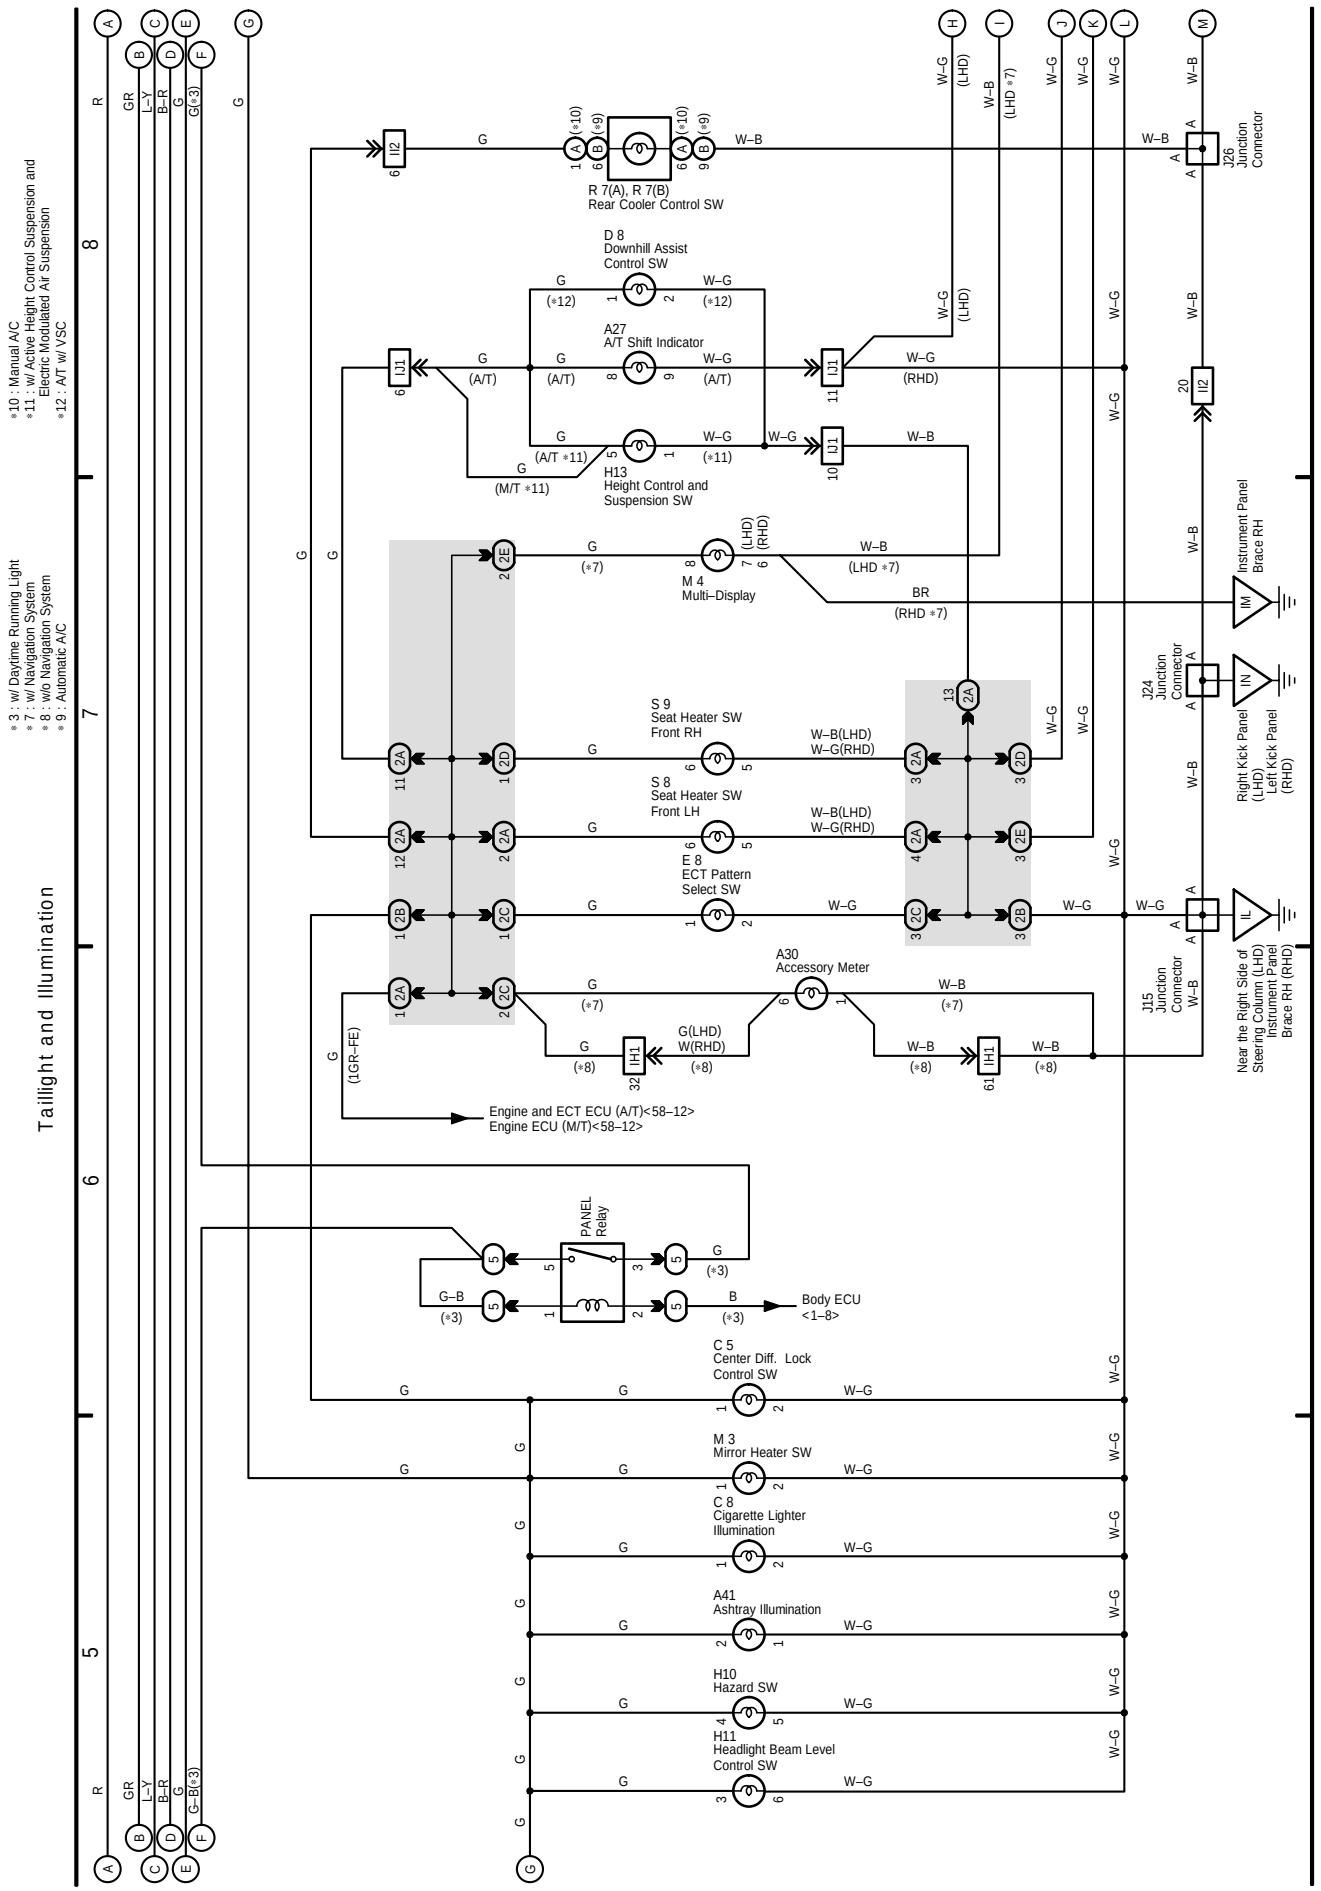
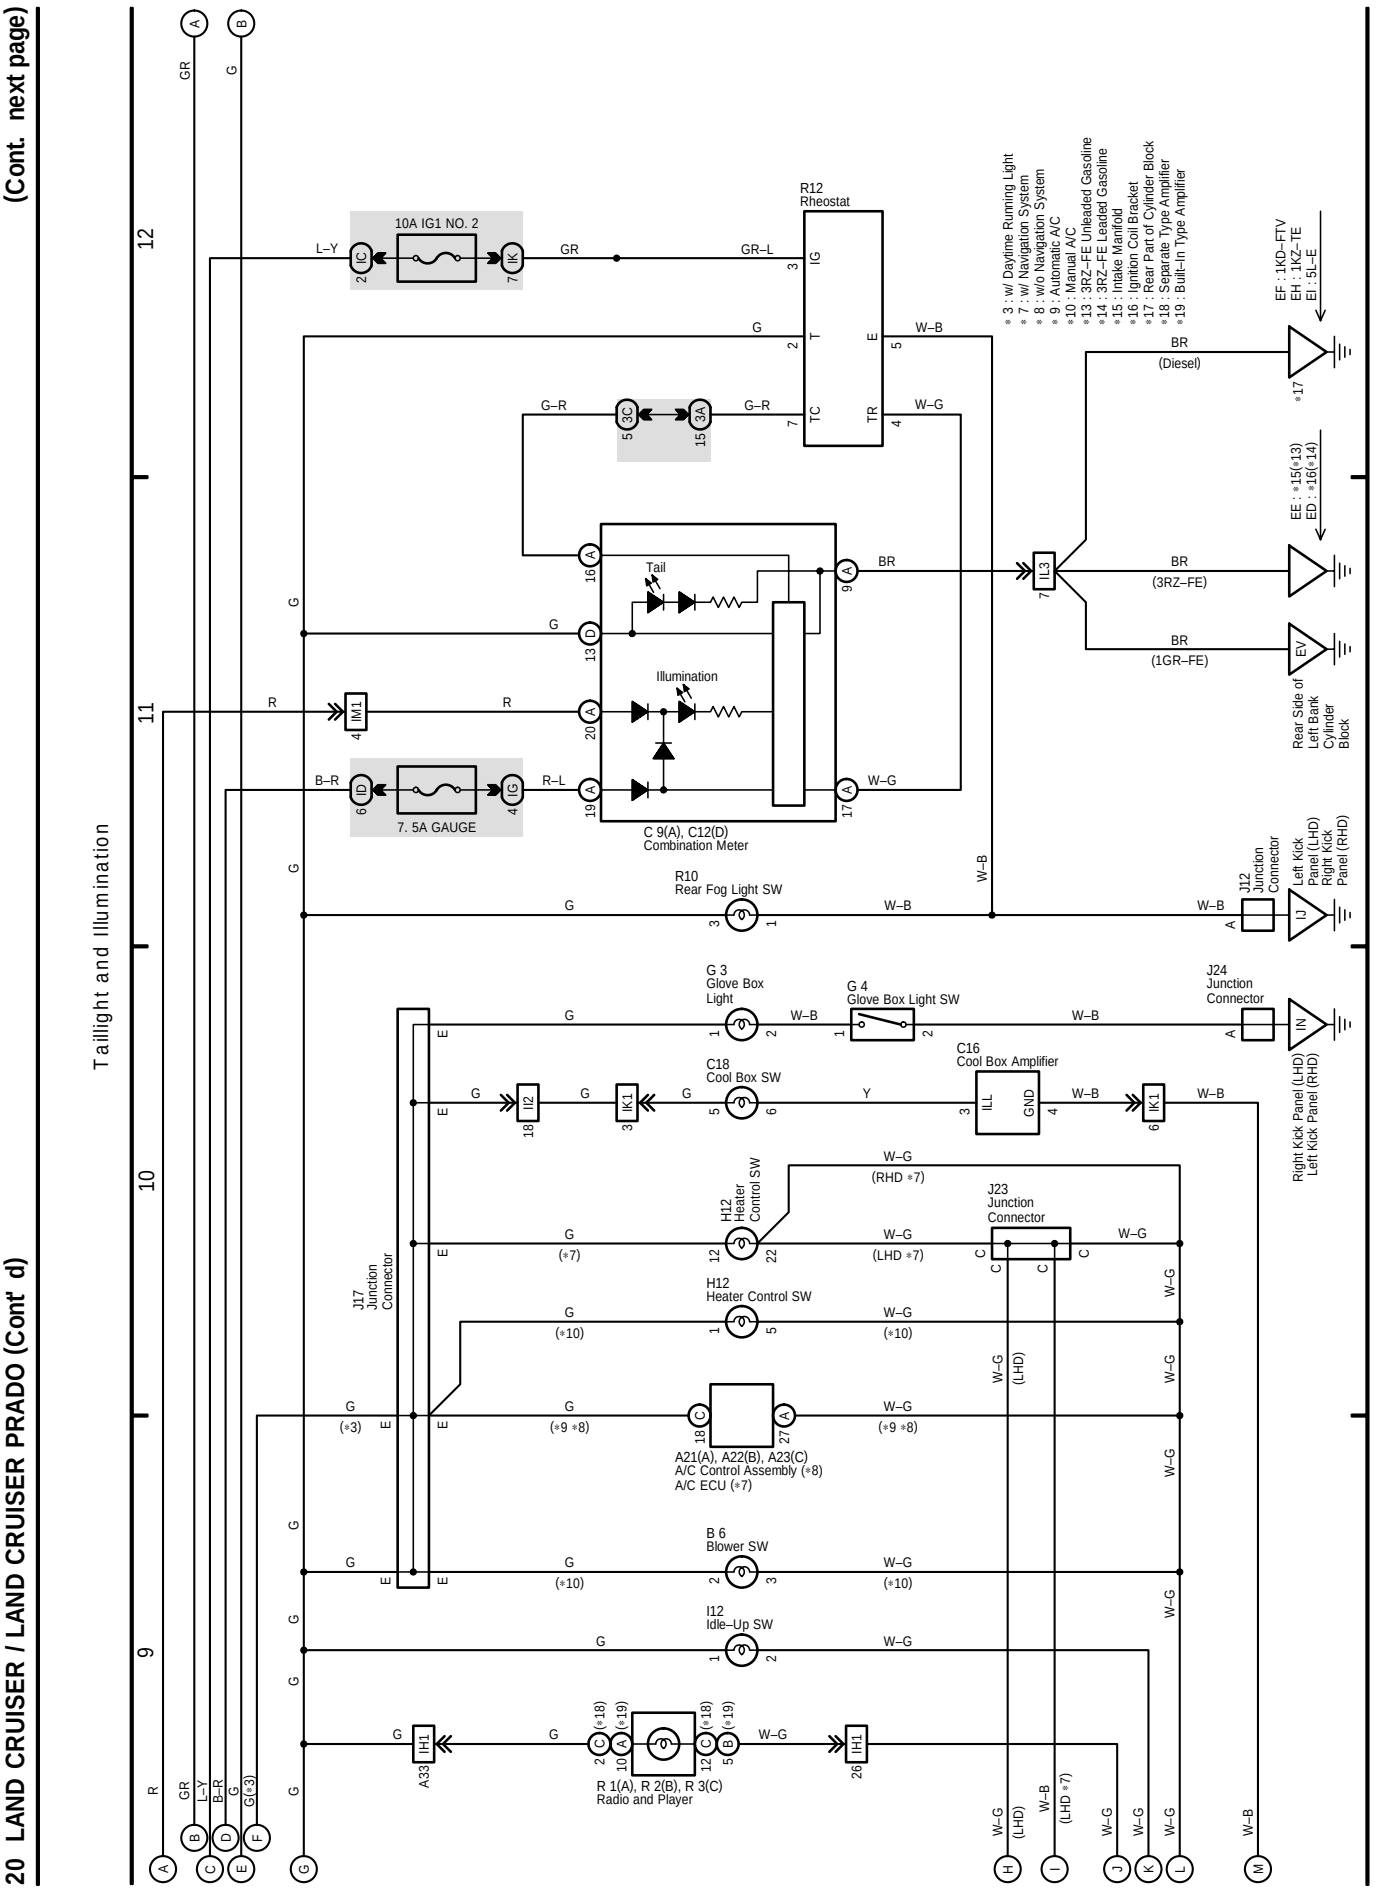

(Cont. next page)
20 LAND CRUISER / LAND CRUISER PRADO
Taillight and Illumination
Power Source
1
2
3
4
* 1 : Spare Tire–Back Door Mounted
* 2 : Spare Tire–Under Floor Mounted
* 3 : w/ Daytime Running Light
* 4 : w/o Daytime Running Light
* 5 : Except Built–In Type
* 6 : Built–In Type
L 3 License Plate Light RH
L 2 License Plate Light LH
L 1 License Plate Light
J30 Junction Connector
Back Door Panel Center
R15(A), R16(B) Rear Combination Light RH
R13(A), R14(B) Rear Combination Light LH
J29 Junction Connector
J31 Junction Connector
Left Quarter Panel Inner
J18 Junction Connector
J 7(A), J 8(B) Junction Connector
F 2 Front Clearance Light RH
F 1 Front Clearance Light LH
Front Right Fender
Front Left Fender
10A TAIL
10A PANEL
TAIL Relay
B 7(A), B 9(C) Body ECU
Multiplex Communication System<1–15><2–15>
I14 Ignition SW
50A J/B
50A AM1
140A ALT (w/ PTC) 120A ALT (w/o PTC)
Battery
30A AM2
30A TOWING
10A DOME
SHORT PIN

(Cont. next page)




(Cont. next page)
20 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Taillight and Illumination
10A IG1 NO. 2
7. 5A GAUGE
R12
Rheostat
C 9(A), C12(D)
Combination Meter
Tail
Illumination
R10
Rear Fog Light SW
G 3
Glove Box
Light
G 4
Glove Box Light SW
C18
Cool Box SW
C16
Cool Box Amplifier
H12
Heater
Control SW
H12
Heater Control SW
J23
Junction
Connector
J17
Junction
Connector
A21(A), A22(B), A23(C)
A/C Control Assembly (*8)
A/C ECU (*7)
B 6
Blower SW
I12
Idle–Up SW
R 1(A), R 2(B), R 3(C)
Radio and Player
J12
Junction
Connector
J24
Junction
Connector
Left Kick
Panel (LHD)
Right Kick
Panel (RHD)
Right Kick Panel (LHD)
Left Kick Panel (RHD)
Rear Side of
Left Bank
Cylinder
Block
*3 : w/ Daytime Running Light
*7 : w/ Navigation System
*8 : w/o Navigation System
*9 : Automatic A/C
*10 : Manual A/C
*13 : 3RZ–FE Unleaded Gasoline
*14 : 3RZ–FE Leaded Gasoline
*15 : Intake Manifold
*16 : Ignition Coil Bracket
*17 : Rear Part of Cylinder Block
*18 : Separate Type Amplifier
*19 : Built–in Type Amplifier
EF : 1KD–FTV
EH : 1KZ–TE
EI : 5L–E
EE : *15(*13)
ED : *16(*14)
BR
(Diesel)
BR
(3RZ–FE)
BR
(1GR–FE)
W–G
(RHD *7)
W–G
(LHD *7)
W–G
(*10)
W–G
(*9 *8)
W–G
(*7)
W–G
(LHD)
W–B
(LHD *7)

20 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

