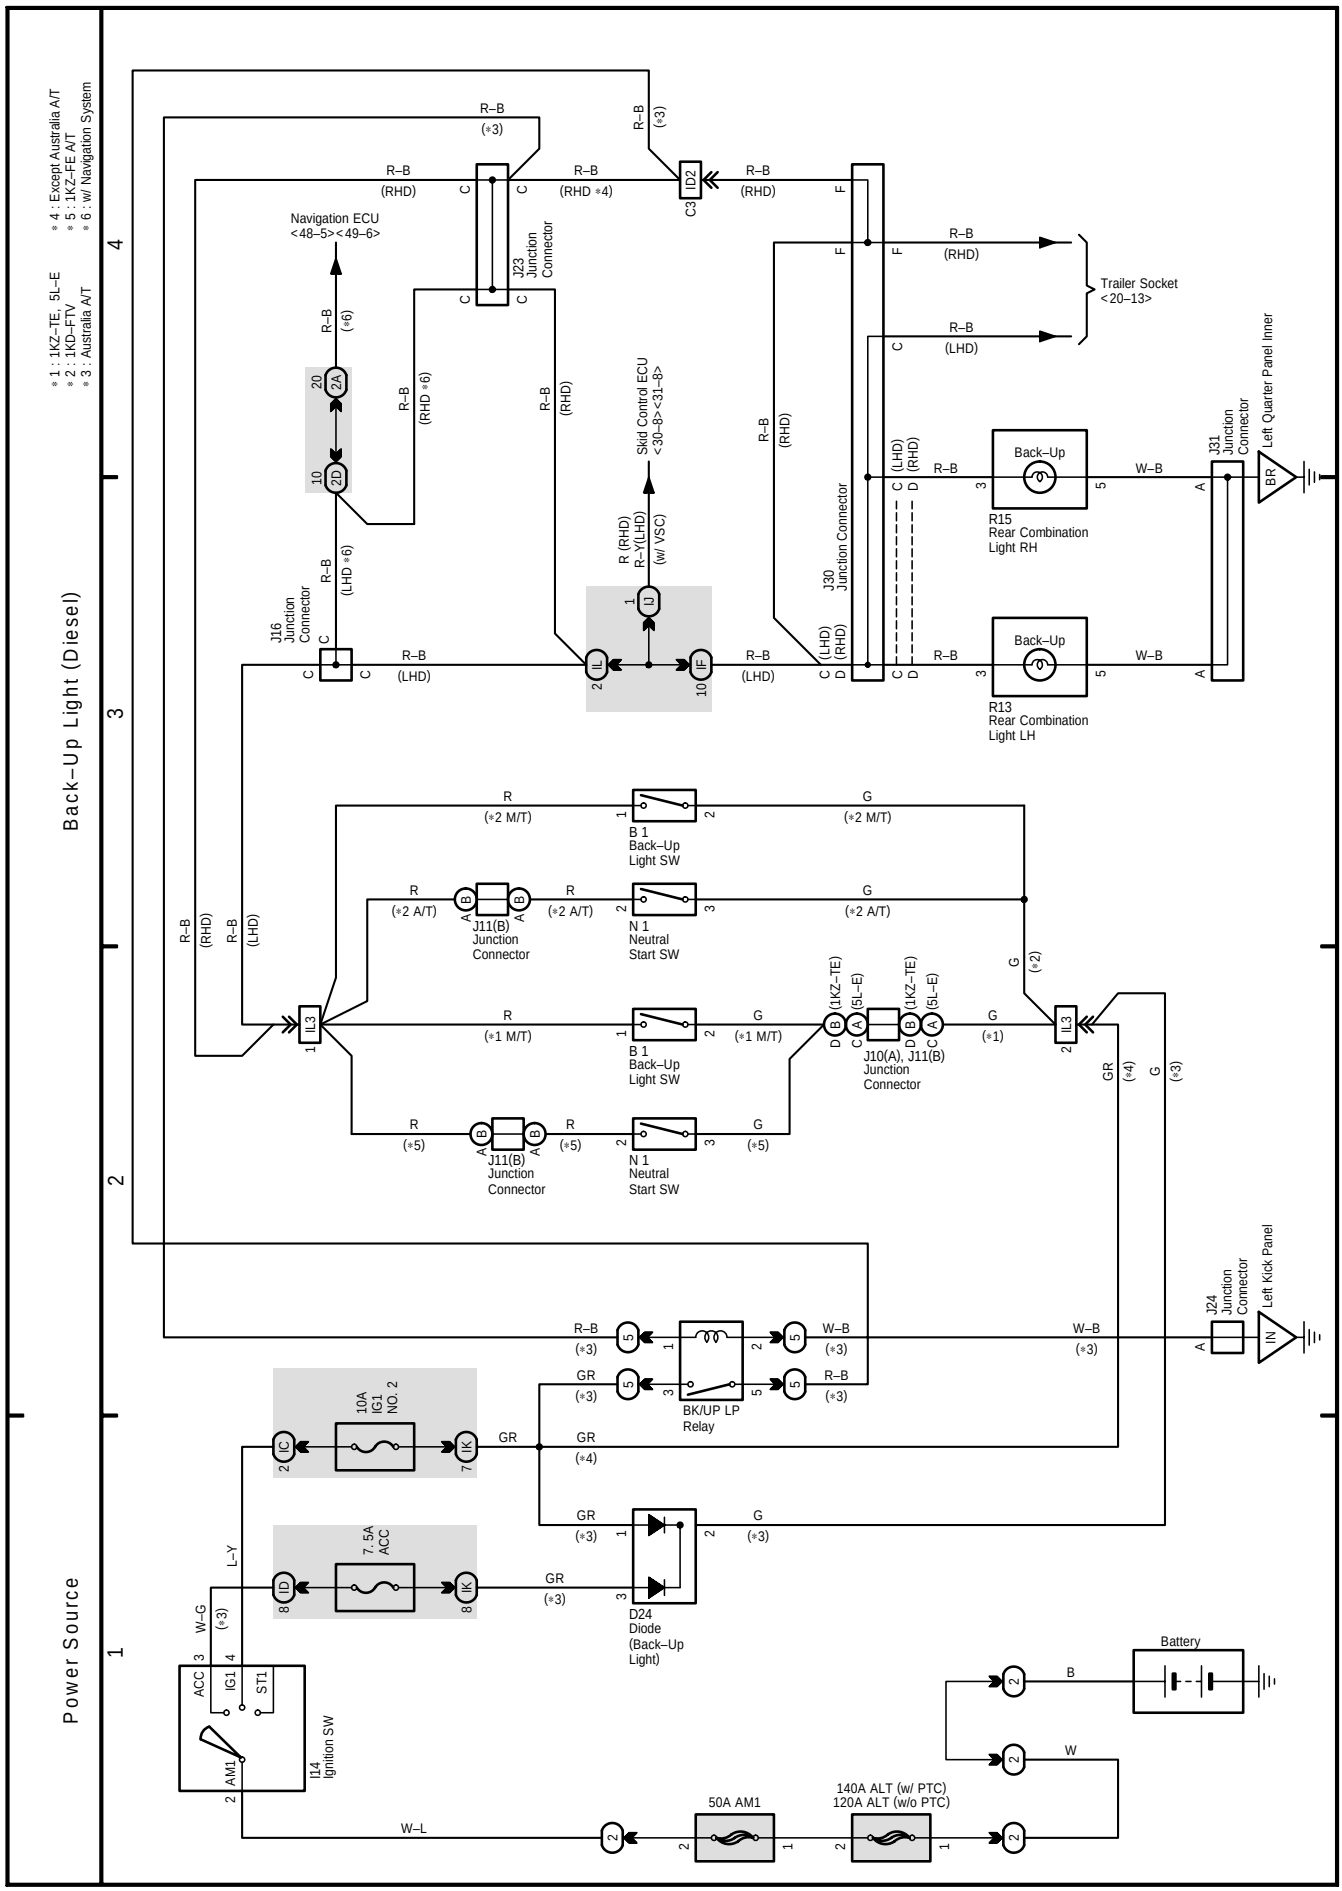

25 LAND CRUISER / LAND CRUISER PRADO
Power Source
Back–Up Light (Diesel)
* 1 : 1KZ–TE, 5L–E
* 2 : 1KD–FTV
* 3 : Australia A/T
* 4 : Except Australia A/T
* 5 : 1KZ–FE A/T
* 6 : w/ Navigation System
Navigation ECU <48–5><49–6>
J23 Junction Connector
Skid Control ECU <30–8><31–8>
R (RHD) R–Y(LHD) (w/ VSC)
J16 Junction Connector
J30 Junction Connector
Trailer Socket <20–13>
J31 Junction Connector
Left Quarter Panel Inner
Back–Up
R15 Rear Combination Light RH
R13 Rear Combination Light LH
B 1 Back–Up Light SW
N 1 Neutral Start SW
J11(B) Junction Connector
J10(A), J11(B) Junction Connector
BK/UP LP Relay
10A IG1 NO. 2
7. 5A ACC
D24 Diode (Back–Up Light)
J24 Junction Connector
Left Kick Panel
I14 Ignition SW
Battery
50A AM1
140A ALT (w/ PTC)
120A ALT (w/o PTC)