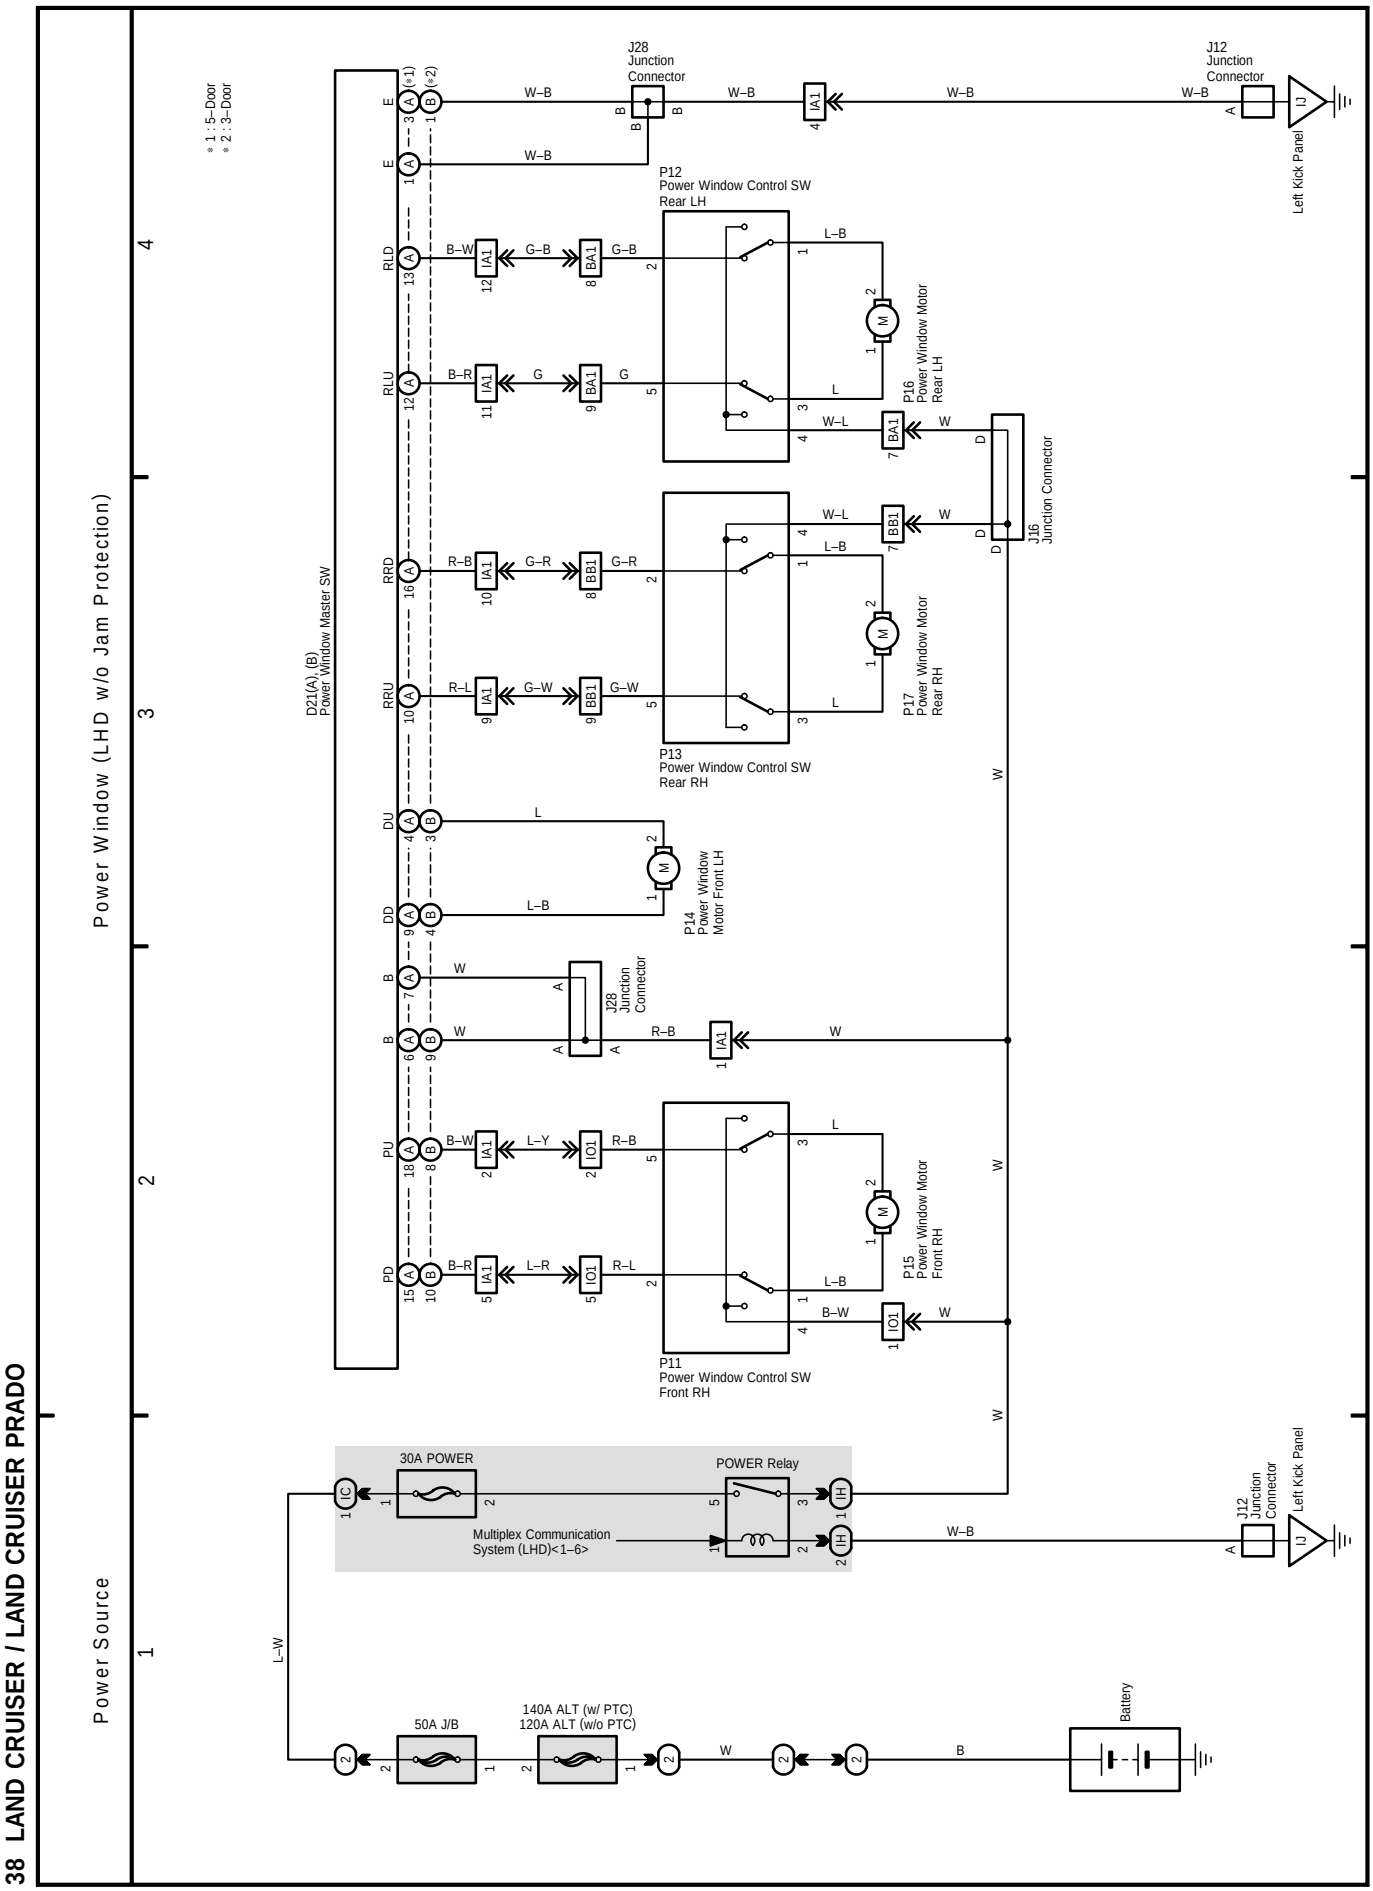

38 LAND CRUISER / LAND CRUISER PRADO
Power Source
Power Window (LHD w/o Jam Protection)
1
2
3
4
* 1 : 5–Door
* 2 : 3–Door
D21(A), (B)
Power Window Master SW
J28
Junction
Connector
J12
Junction
Connector
Left Kick Panel
P12
Power Window Control SW
Rear LH
P16
Power Window Motor
Rear LH
P13
Power Window Control SW
Rear RH
P17
Power Window Motor
Rear RH
J16
Junction Connector
P14
Power Window
Motor Front LH
P11
Power Window Control SW
Front RH
P15
Power Window Motor
Front RH
30A POWER
POWER Relay
Multiplex Communication
System (LHD)<1–6>
50A J/B
140A ALT (w/ PTC)
120A ALT (w/o PTC)
Battery