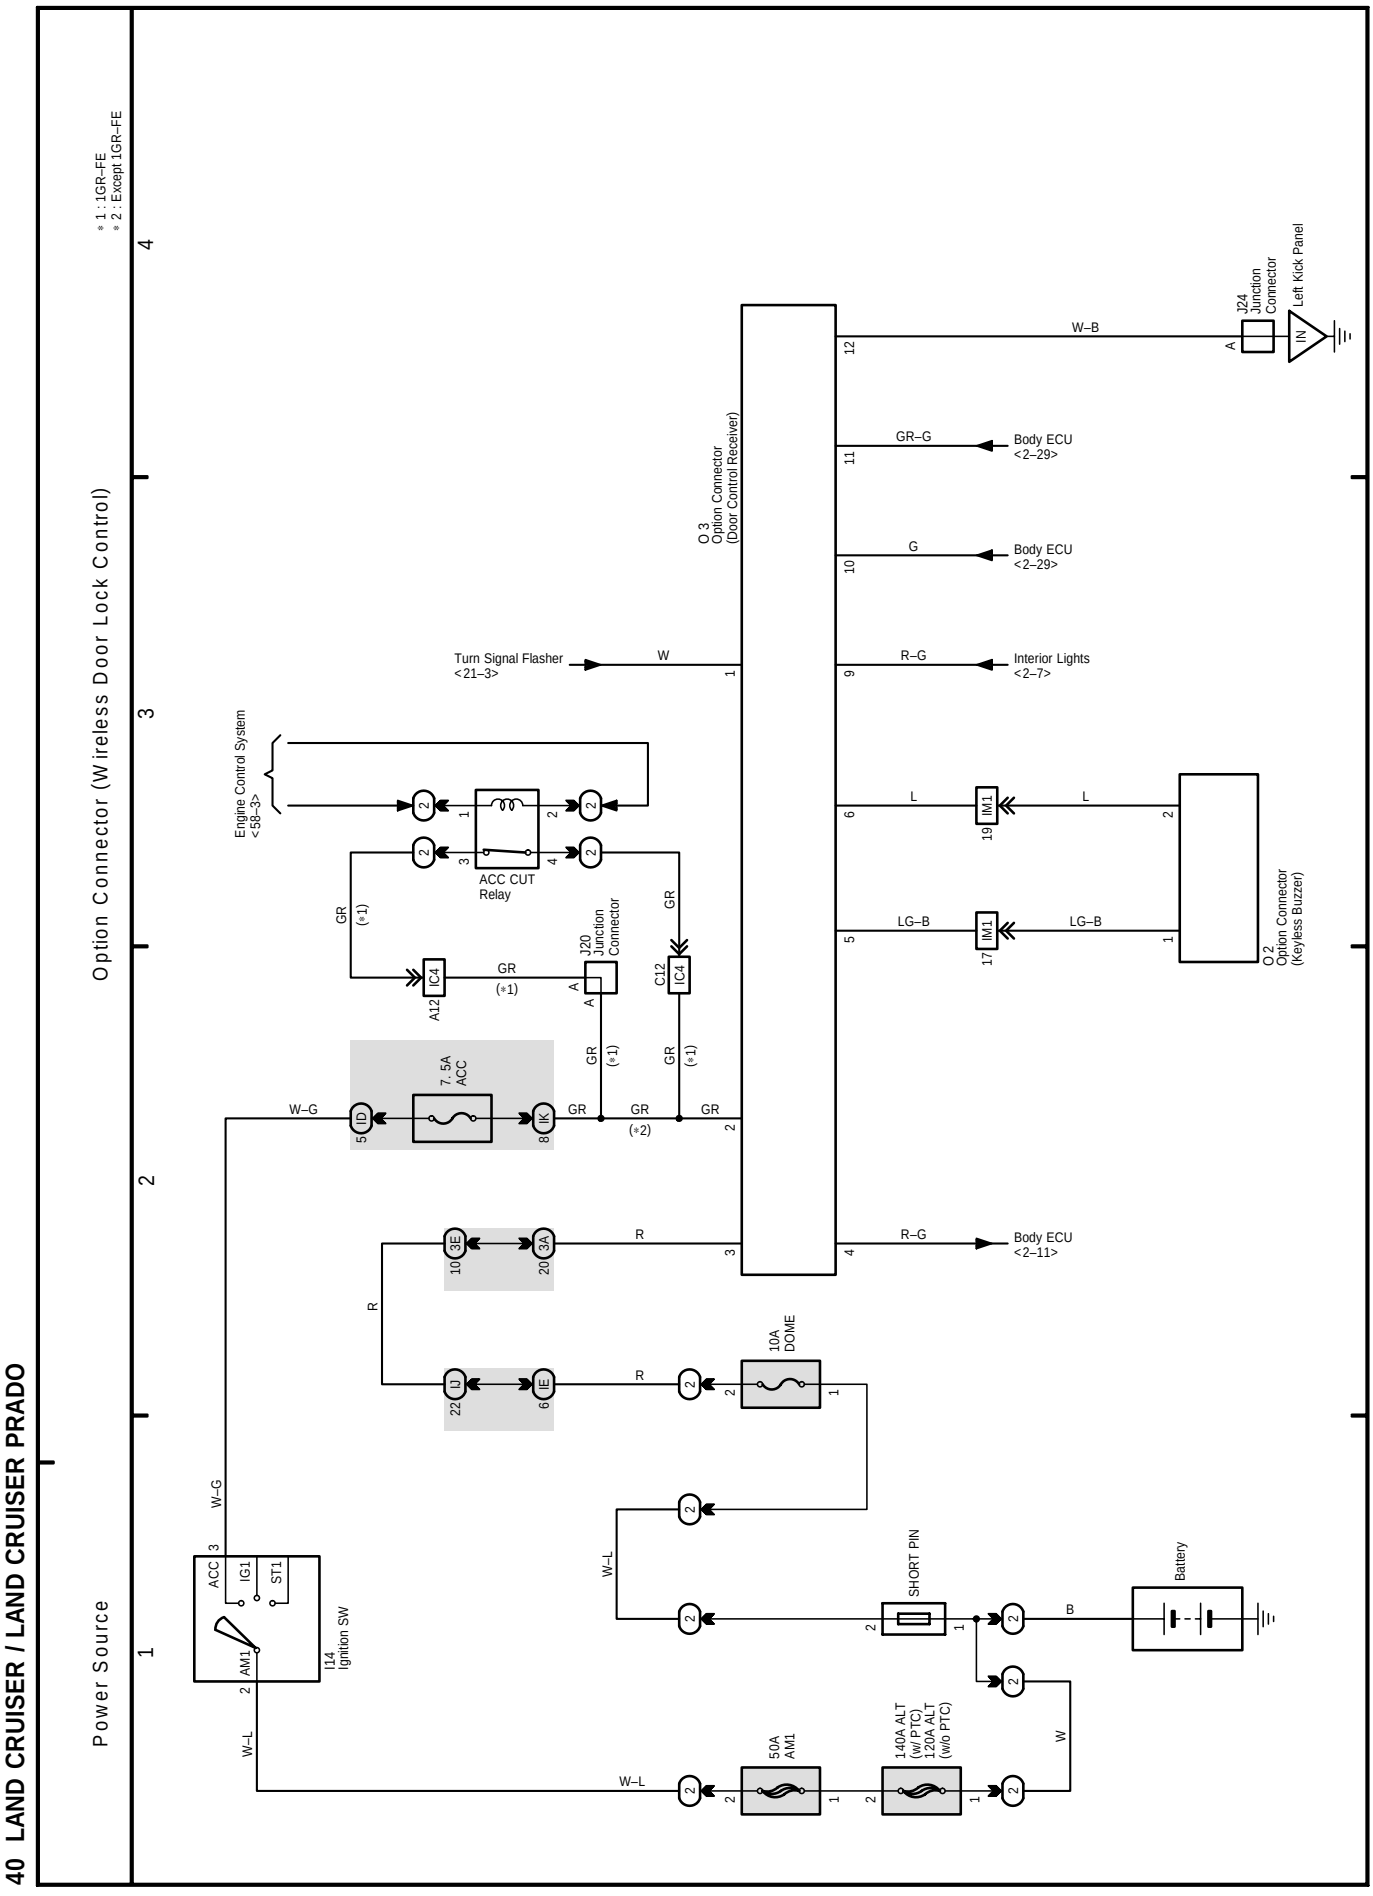

40 LAND CRUISER / LAND CRUISER PRADO
Power Source
Option Connector (Wireless Door Lock Control)
1
2
3
4
* 1 : 1GR–FE
* 2 : Except 1GR–FE
I14 Ignition SW
ACC
IG1
ST1
AM1
W–G
W–L
7. 5A ACC
10A DOME
50A AM1
140A ALT (w/ PTC) 120A ALT (w/o PTC)
SHORT PIN
Battery
B
ACC CUT Relay
Engine Control System <58–3>
Turn Signal Flasher <21–3>
W
O 3 Option Connector (Door Control Receiver)
GR–G
Body ECU <2–29>
G
Body ECU <2–29>
R–G
Interior Lights <2–7>
L
LG–B
O 2 Option Connector (Keyless Buzzer)
R
Body ECU <2–11>
J20 Junction Connector
J24 Junction Connector
Left Kick Panel
W–B
GR
(*1)
(*2)