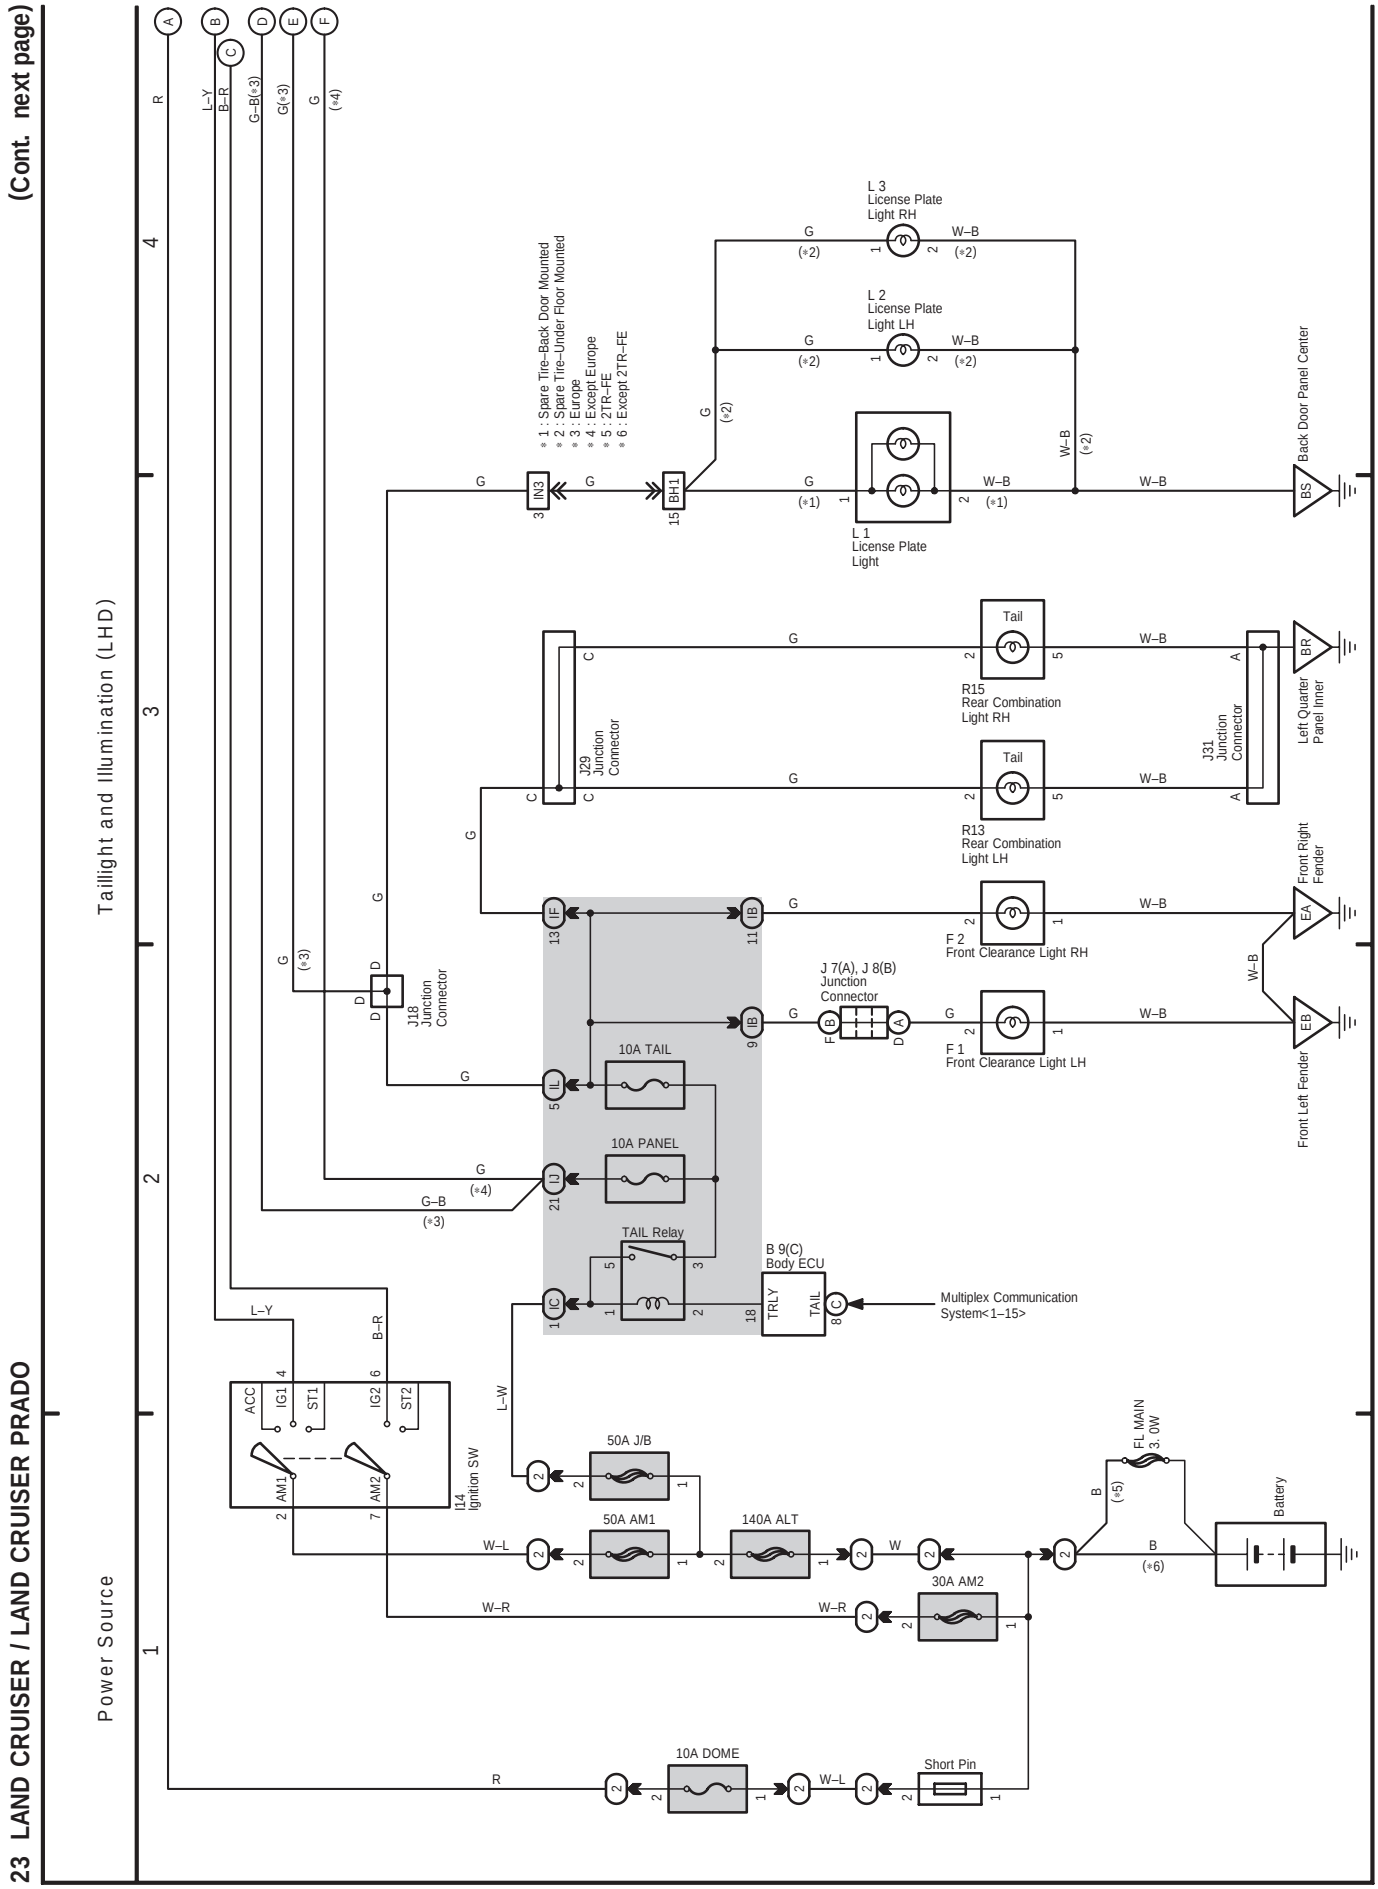
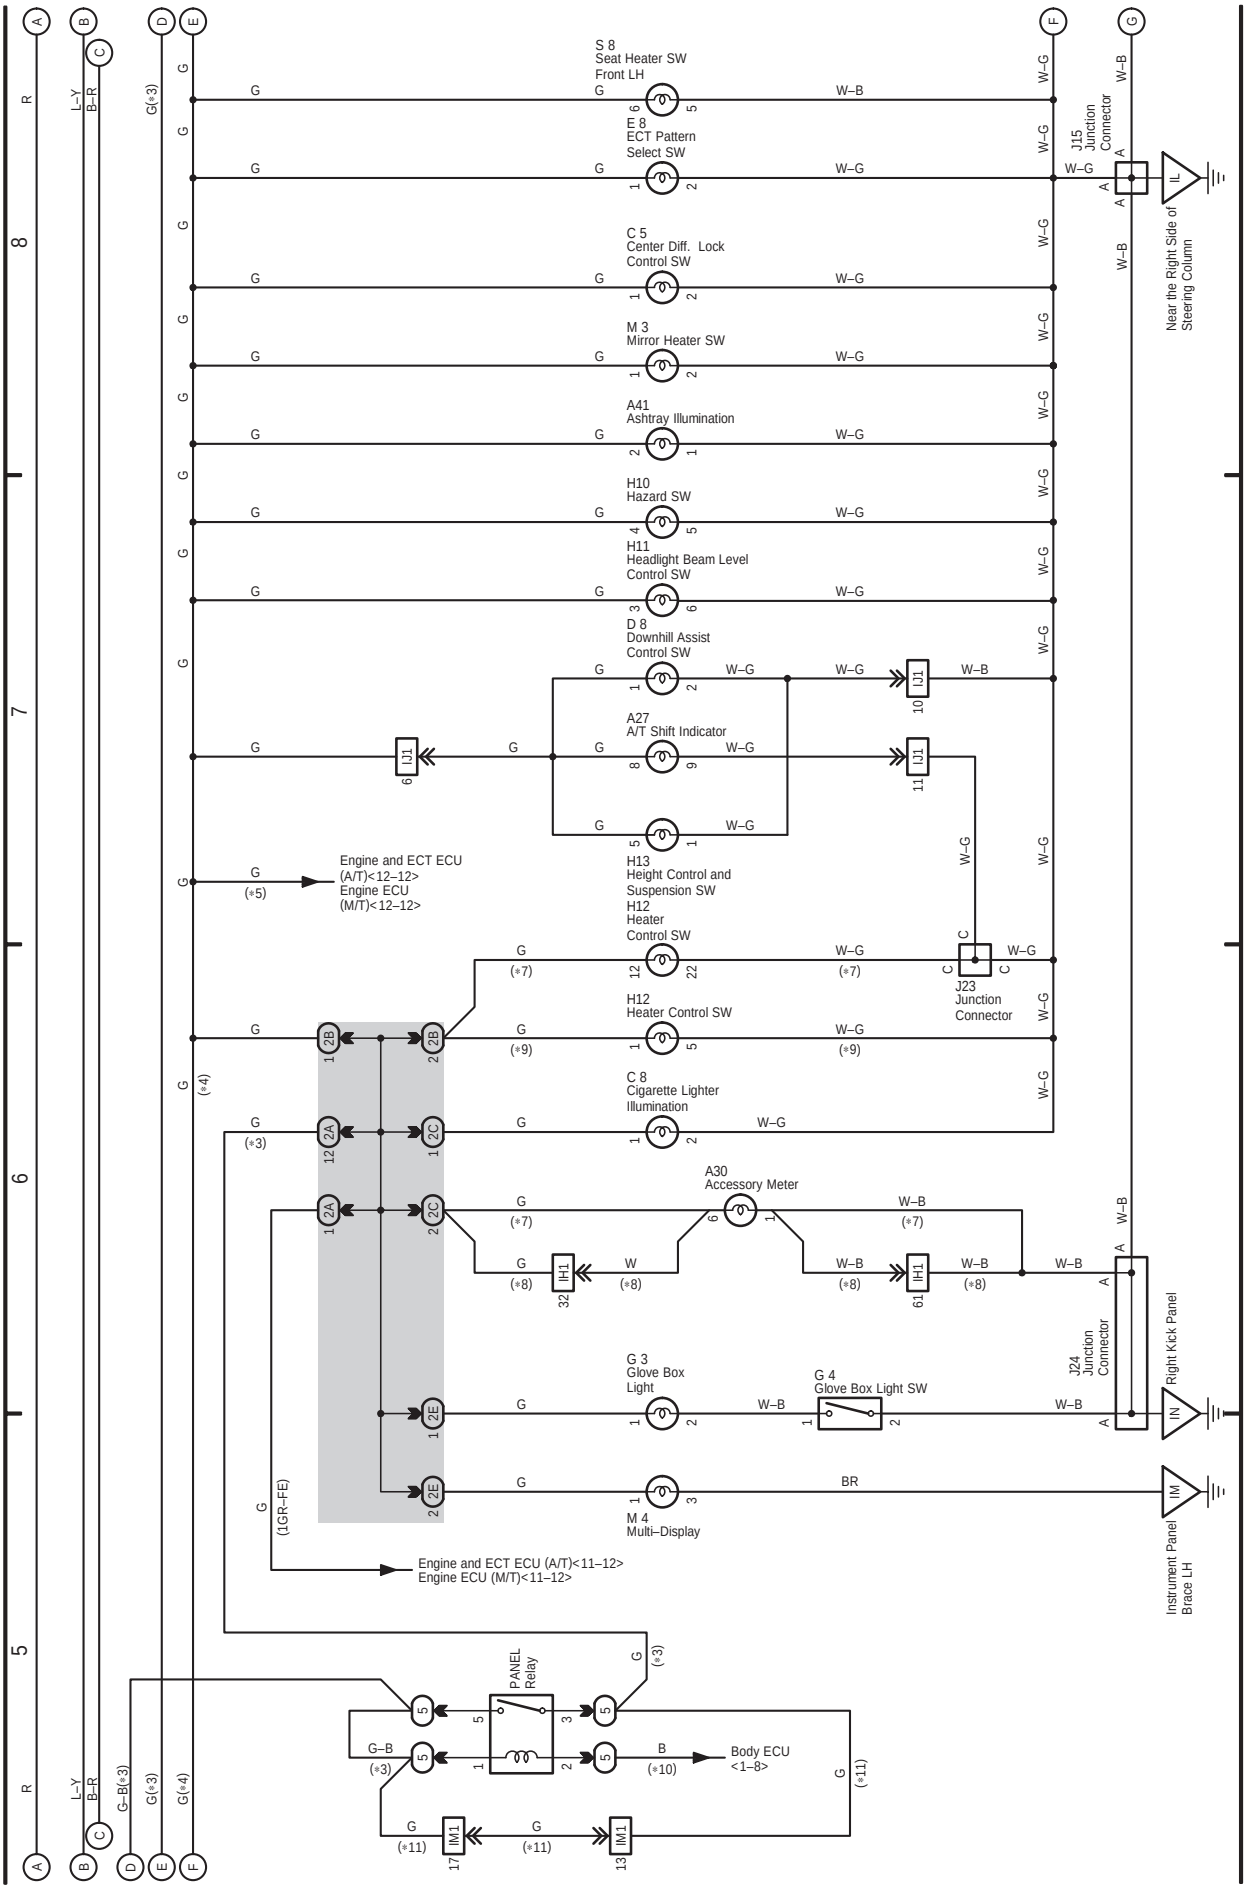
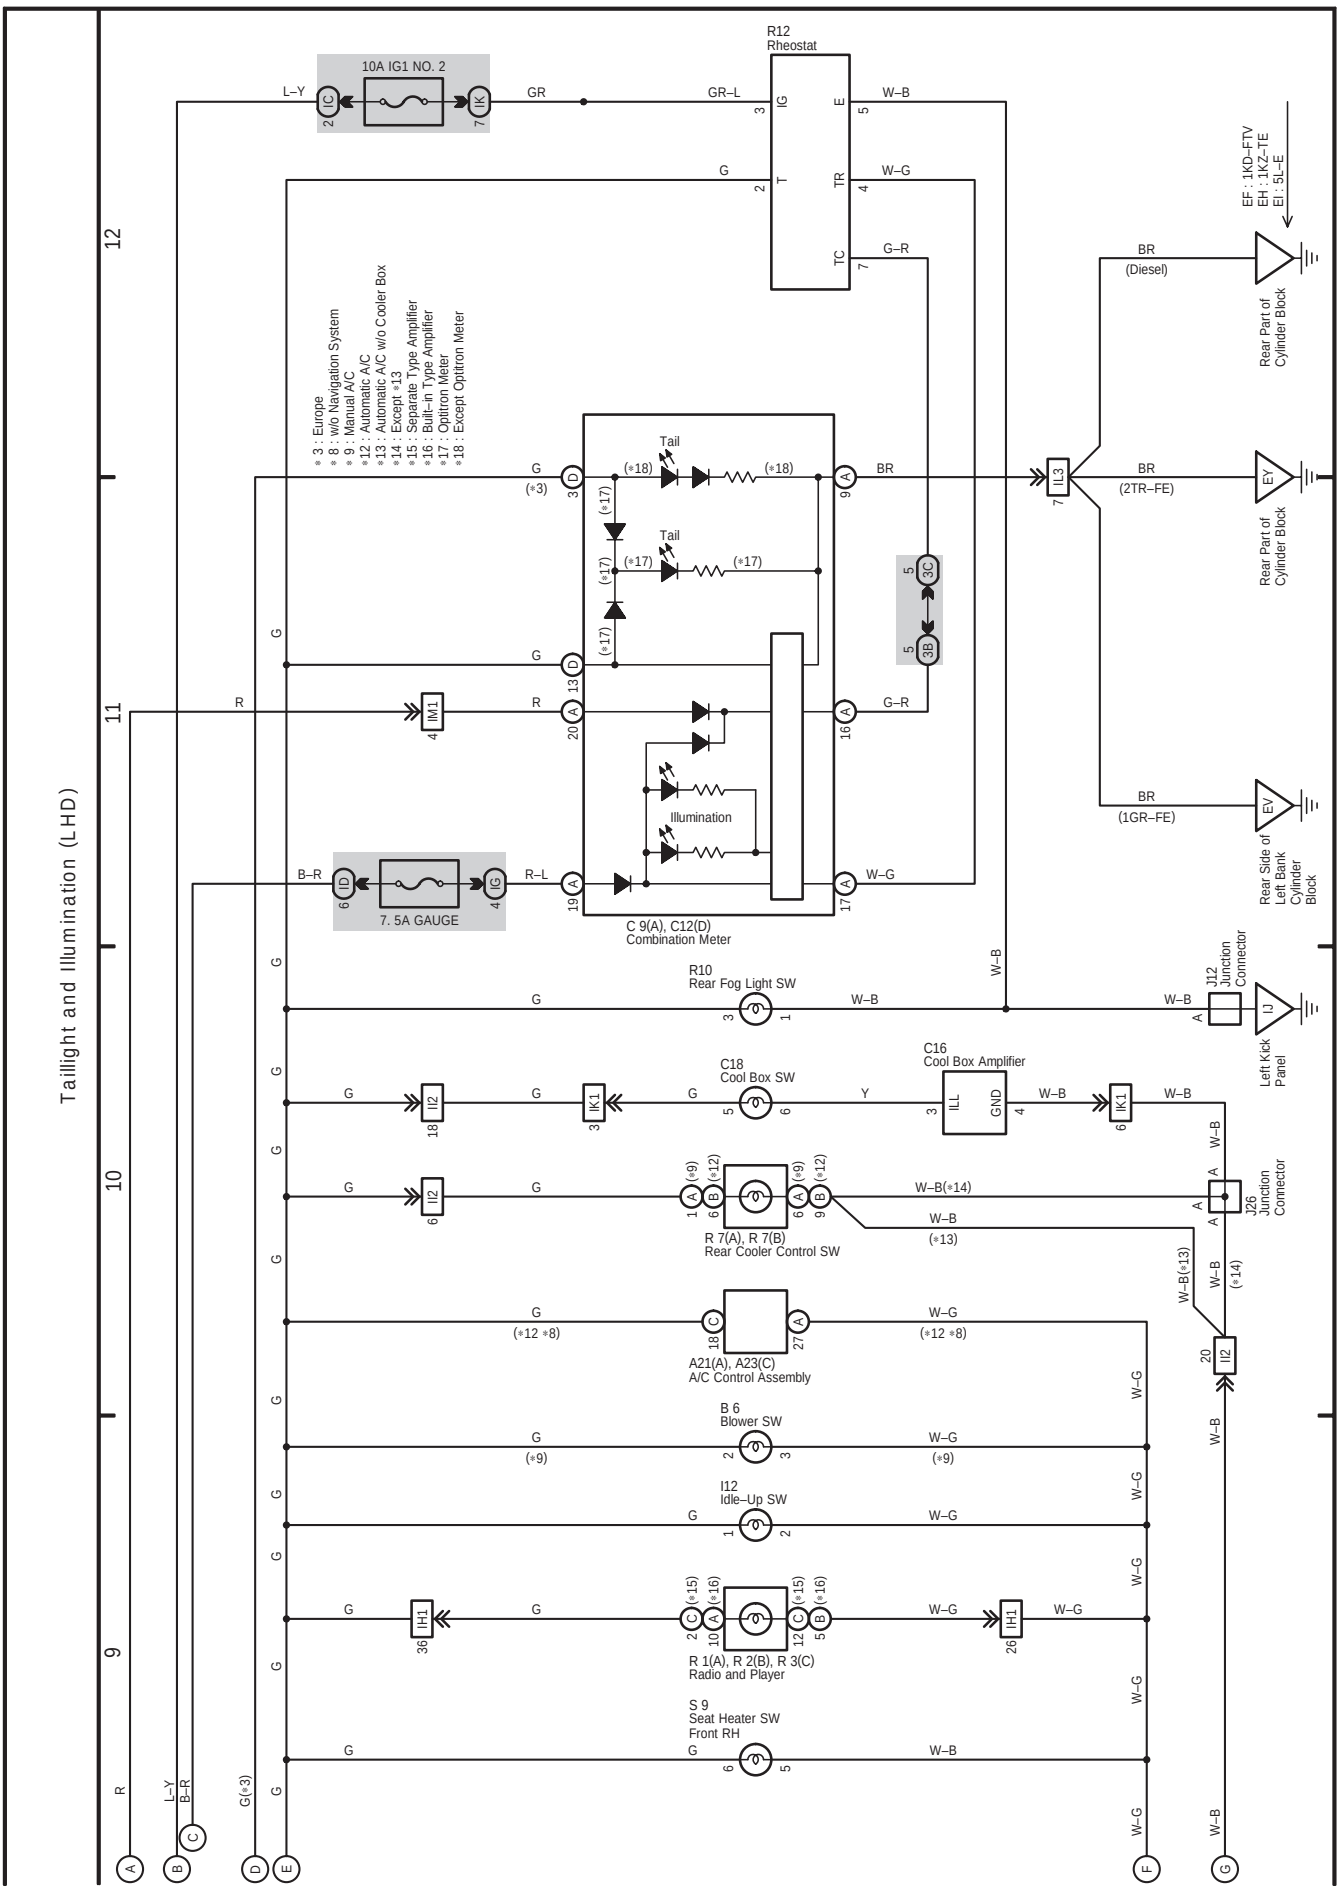

(Cont. next page)
23 LAND CRUISER / LAND CRUISER PRADO
Power Source
Taillight and Illumination (LHD)
* 1 : Spare Tire–Back Door Mounted
* 2 : Spare Tire–Under Floor Mounted
* 3 : Europe
* 4 : Except Europe
* 5 : 2TR–FE
* 6 : Except 2TR–FE
L 3 License Plate Light RH
L 2 License Plate Light LH
L 1 License Plate Light
Back Door Panel Center
Tail
R15 Rear Combination Light RH
R13 Rear Combination Light LH
J29 Junction Connector
J31 Junction Connector
Left Quarter Panel Inner
J18 Junction Connector
J 7(A), J 8(B) Junction Connector
F 2 Front Clearance Light RH
F 1 Front Clearance Light LH
Front Right Fender
Front Left Fender
10A TAIL
10A PANEL
TAIL Relay
B 9(C) Body ECU
Multiplex Communication System<1–15>
I14 Ignition SW
50A J/B
50A AM1
140A ALT
30A AM2
FL MAIN 3. 0W
Battery
10A DOME
Short Pin

(Cont. next page)




Taillight and Illumination (LHD)
23 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
10A IG1 NO. 2
7. 5A GAUGE
R12
Rheostat
C 9(A), C12(D)
Combination Meter
Illumination
Tail
R10
Rear Fog Light SW
C18
Cool Box SW
C16
Cool Box Amplifier
R 7(A), R 7(B)
Rear Cooler Control SW
A21(A), A23(C)
A/C Control Assembly
B 6
Blower SW
I12
Idle–Up SW
R 1(A), R 2(B), R 3(C)
Radio and Player
S 9
Seat Heater SW
Front RH
J12
Junction Connector
J26
Junction Connector
Left Kick Panel
Rear Part of Cylinder Block
Rear Side of Left Bank Cylinder Block
EF : 1KD–FTV
EH : 1KZ–TE
EI : 5L–E
BR
(Diesel)
BR
(2TR–FE)
BR
(1GR–FE)
* 3 : Europe
* 8 : w/o Navigation System
* 9 : Manual A/C
*12 : Automatic A/C
*13 : Automatic A/C w/o Cooler Box
*14 : Except *13
*15 : Separate Type Amplifier
*16 : Built–in Type Amplifier
*17 : Optitron Meter
*18 : Except Optitron Meter