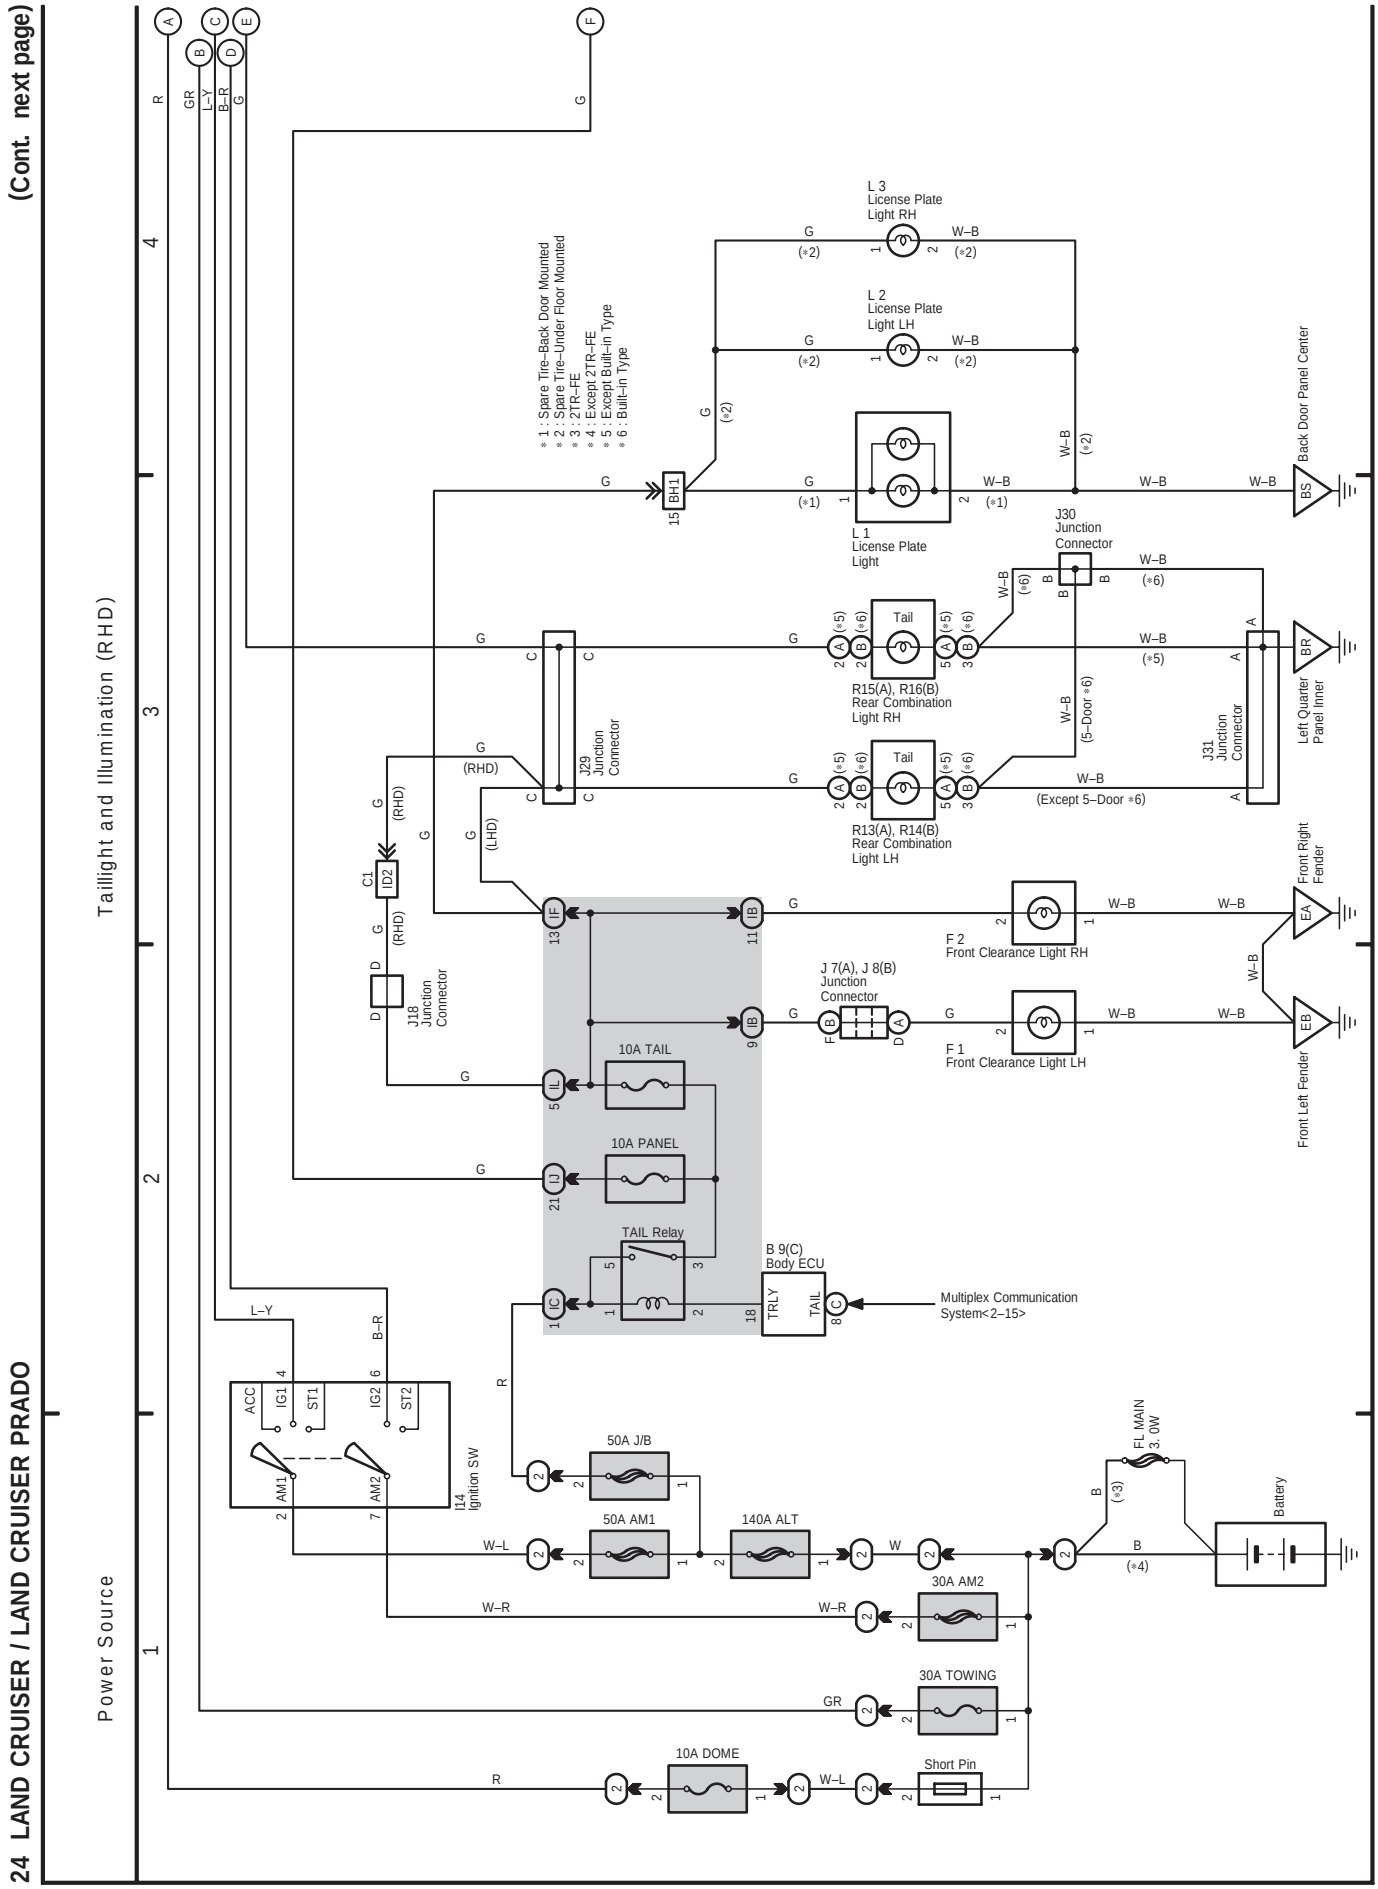
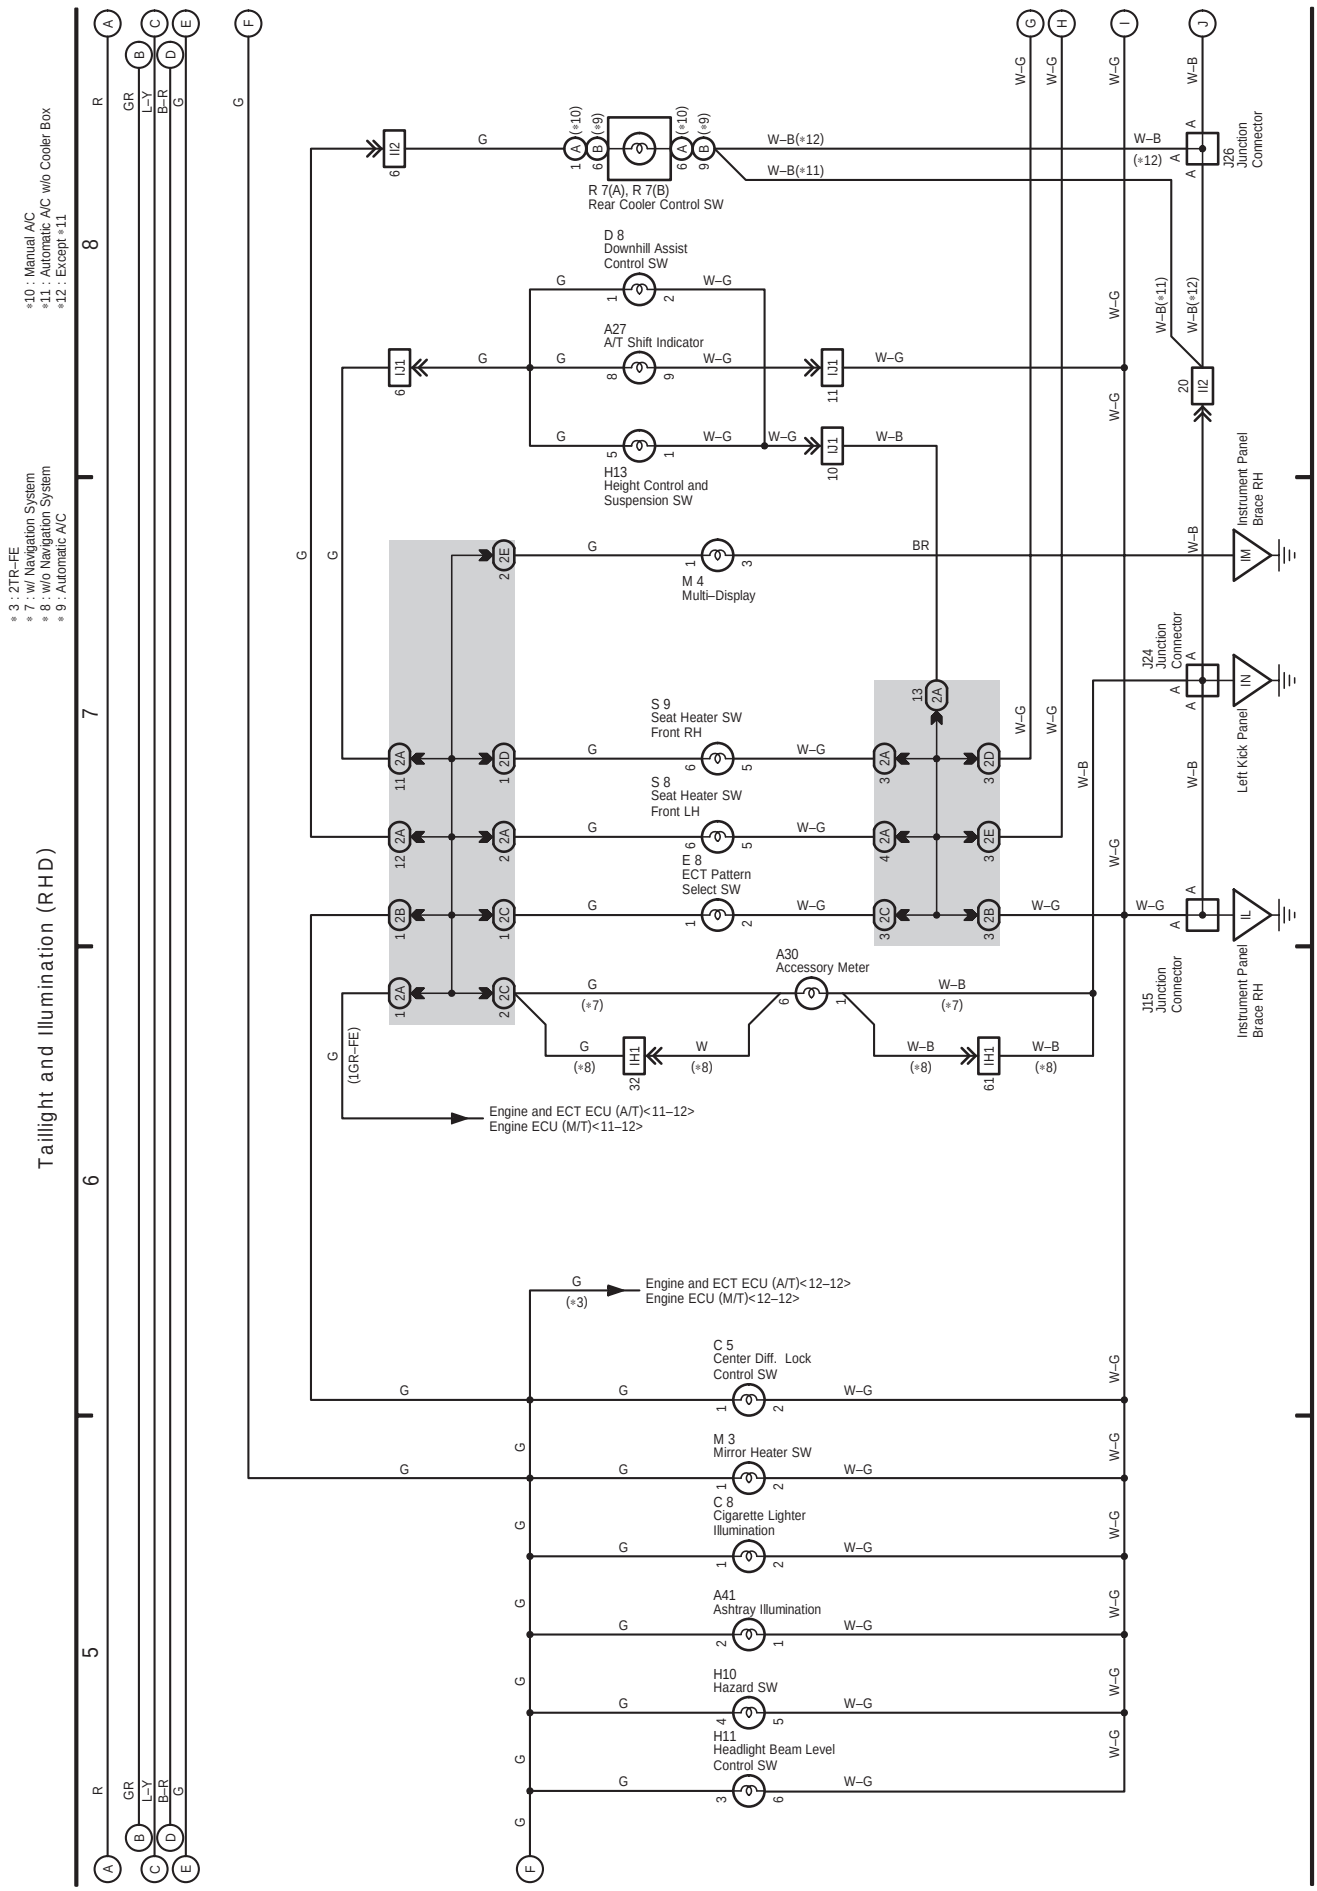
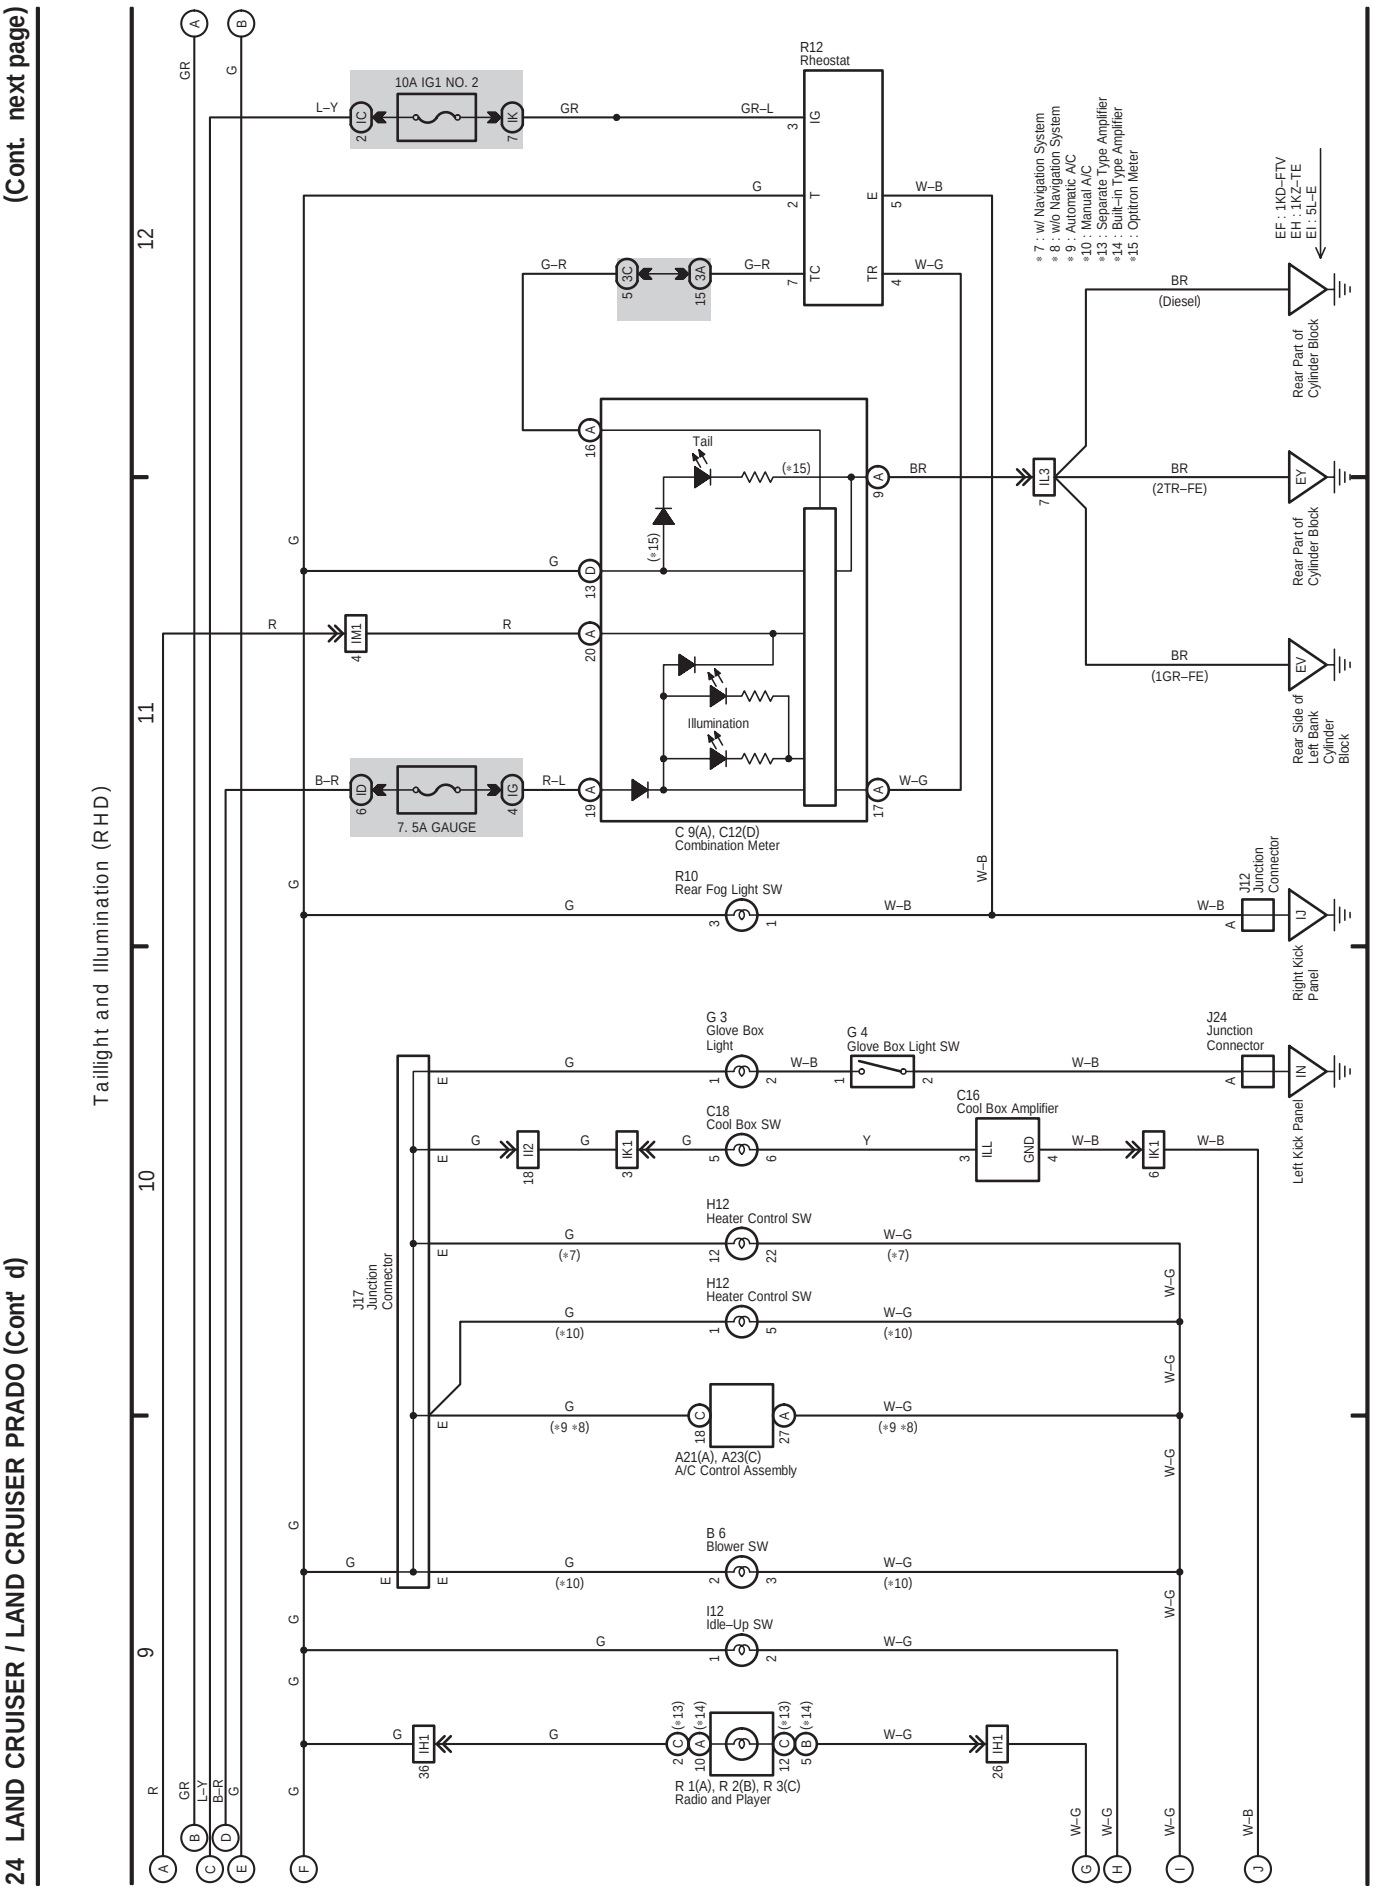
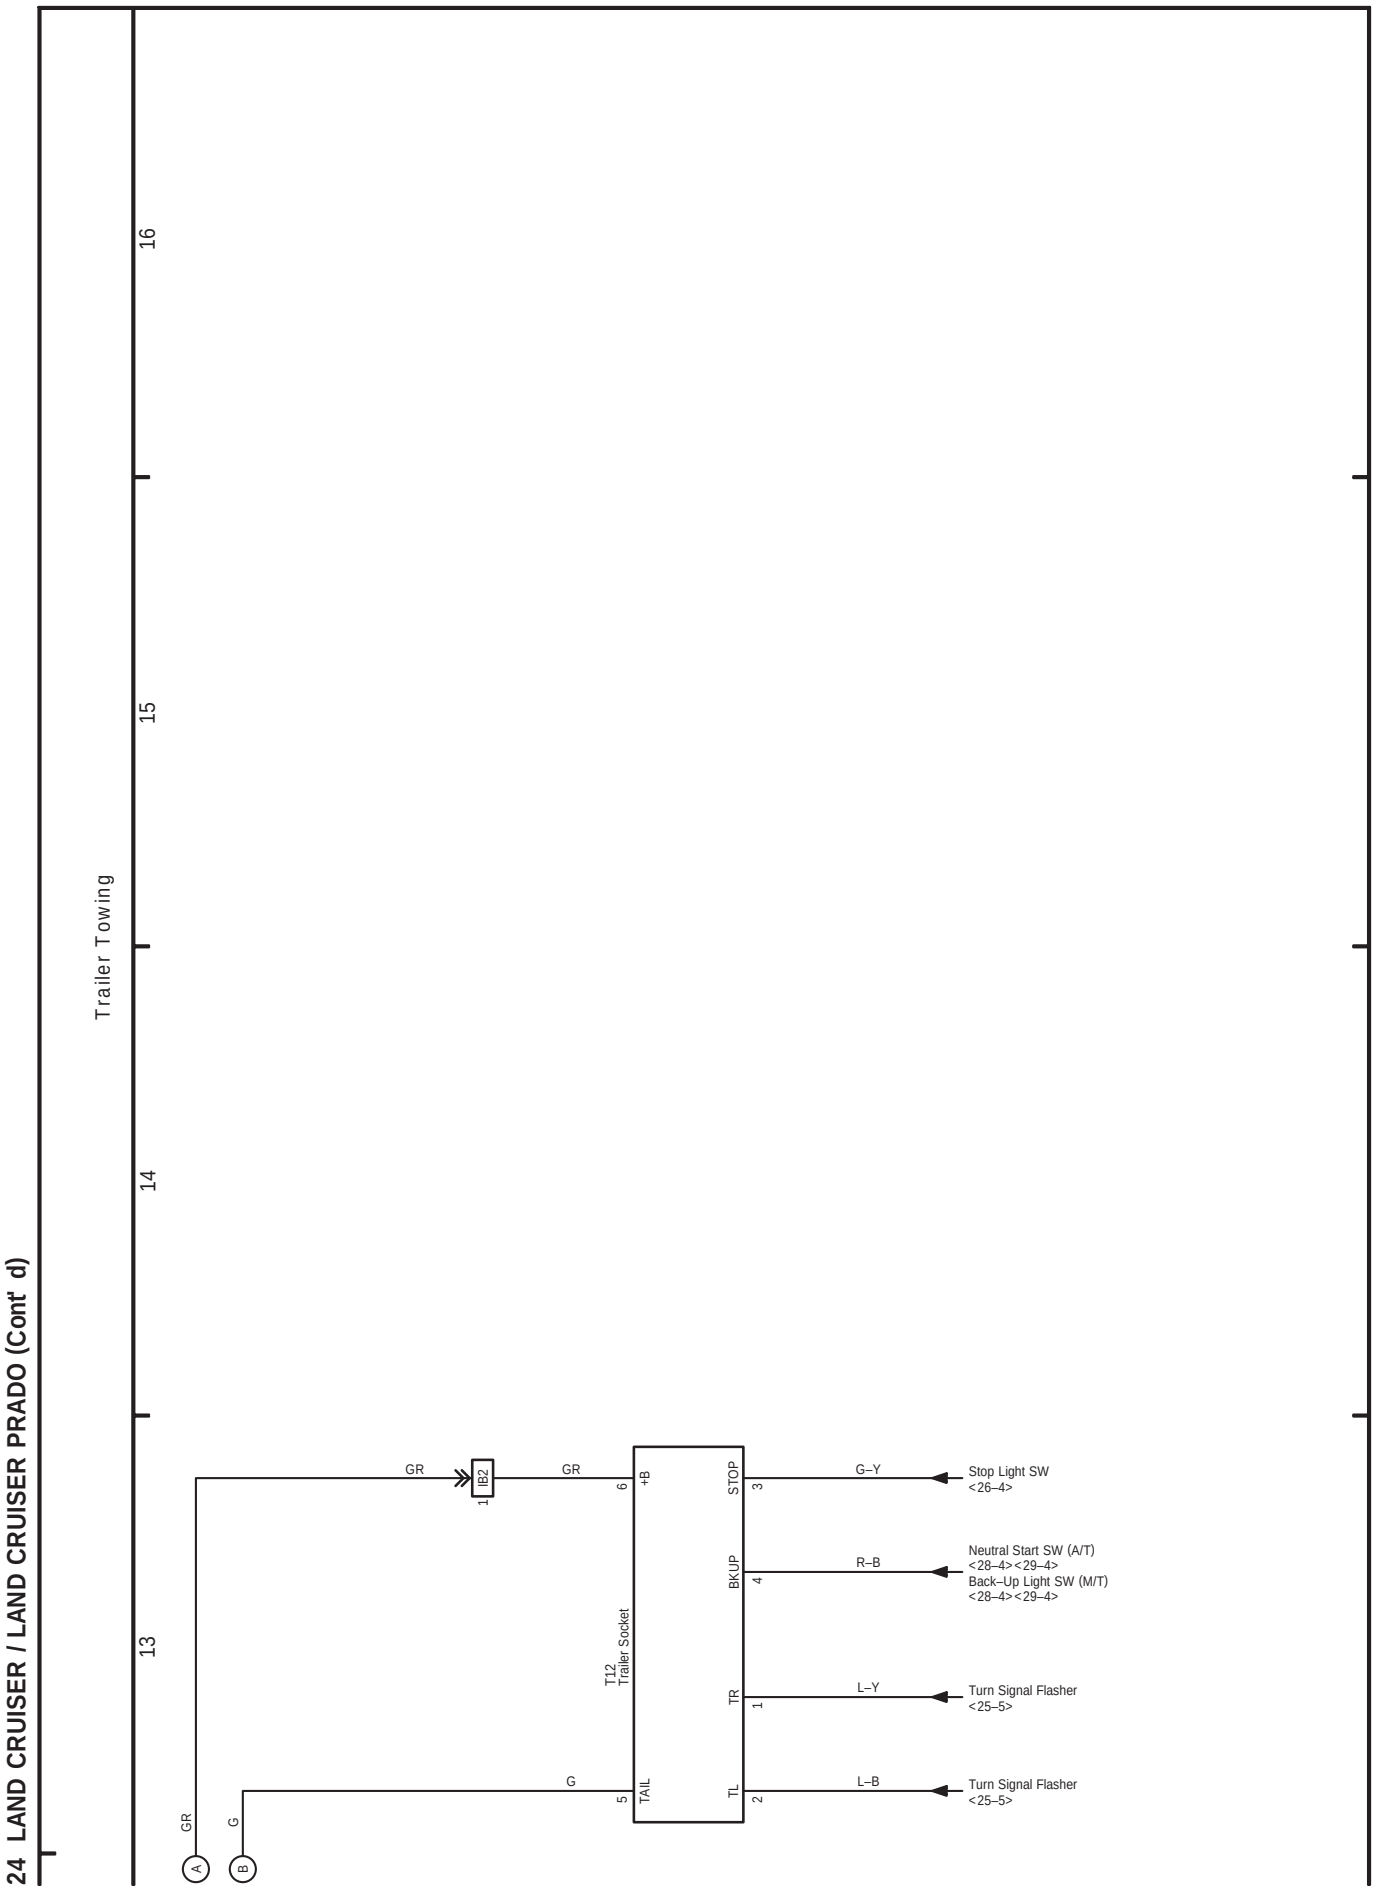

(Cont. next page)
24 LAND CRUISER / LAND CRUISER PRADO
Power Source
Taillight and Illumination (RHD)
1
2
3
4
A
B
C
D
E
F
R
GR
L–Y
B–R
G
* 1 : Spare Tire–Back Door Mounted
* 2 : Spare Tire–Under Floor Mounted
* 3 : 2TR–FE
* 4 : Except 2TR–FE
* 5 : Except Built–in Type
* 6 : Built–in Type
L 3
License Plate
Light RH
L 2
License Plate
Light LH
L 1
License Plate
Light
Back Door Panel Center
BS
BH1
J30
Junction
Connector
Tail
R15(A), R16(B)
Rear Combination
Light RH
R13(A), R14(B)
Rear Combination
Light LH
J29
Junction
Connector
J31
Junction
Connector
Left Quarter
Panel Inner
BR
(RHD)
(LHD)
(5–Door *6)
(Except 5–Door *6)
C1
ID2
J18
Junction
Connector
J 7(A), J 8(B)
Junction
Connector
F 2
Front Clearance Light RH
F 1
Front Clearance Light LH
Front Right
Fender
Front Left Fender
EA
EB
10A TAIL
10A PANEL
TAIL Relay
B 9(C)
Body ECU
TRLY
TAIL
Multiplex Communication
System< 2–15>
ACC
IG1
ST1
IG2
ST2
AM1
AM2
I14
Ignition SW
50A J/B
50A AM1
140A ALT
30A AM2
30A TOWING
10A DOME
Short Pin
FL MAIN
3. 0W
Battery
W–L
W–R
W–B
W
B

(Cont. next page)




(Cont. next page)
24 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Taillight and Illumination (RHD)
12
11
10
9
10A IG1 NO. 2
7. 5A GAUGE
R12
Rheostat
IG
T
E
TC
TR
* 7 : w/ Navigation System
* 8 : w/o Navigation System
* 9 : Automatic A/C
*10 : Manual A/C
*13 : Separate Type Amplifier
*14 : Built–in Type Amplifier
*15 : Optitron Meter
EF : 1KD–FTV
EH : 1KZ–TE
EI : 5L–E
Tail
Illumination
C 9(A), C12(D)
Combination Meter
R10
Rear Fog Light SW
G 3
Glove Box
Light
G 4
Glove Box Light SW
J24
Junction
Connector
C16
Cool Box Amplifier
C18
Cool Box SW
H12
Heater Control SW
J17
Junction
Connector
A21(A), A23(C)
A/C Control Assembly
B 6
Blower SW
I12
Idle–Up SW
R 1(A), R 2(B), R 3(C)
Radio and Player
J12
Junction
Connector
Rear Part of
Cylinder Block
Rear Side of
Left Bank
Cylinder
Block
Right Kick
Panel
Left Kick Panel


24 LAND CRUISER / LAND CRUISER PRADO (Cont' d)
Trailer Towing
16
15
14
13
GR
IB2
1
GR
6
+B
T12
Trailer Socket
TAIL
5
G
STOP
3
G–Y
Stop Light SW
<26–4>
BKUP
4
R–B
Neutral Start SW (A/T)
<28–4><29–4>
Back–Up Light SW (M/T)
<28–4><29–4>
TR
1
L–Y
Turn Signal Flasher
<25–5>
TL
2
L–B
Turn Signal Flasher
<25–5>
GR
G
A
B