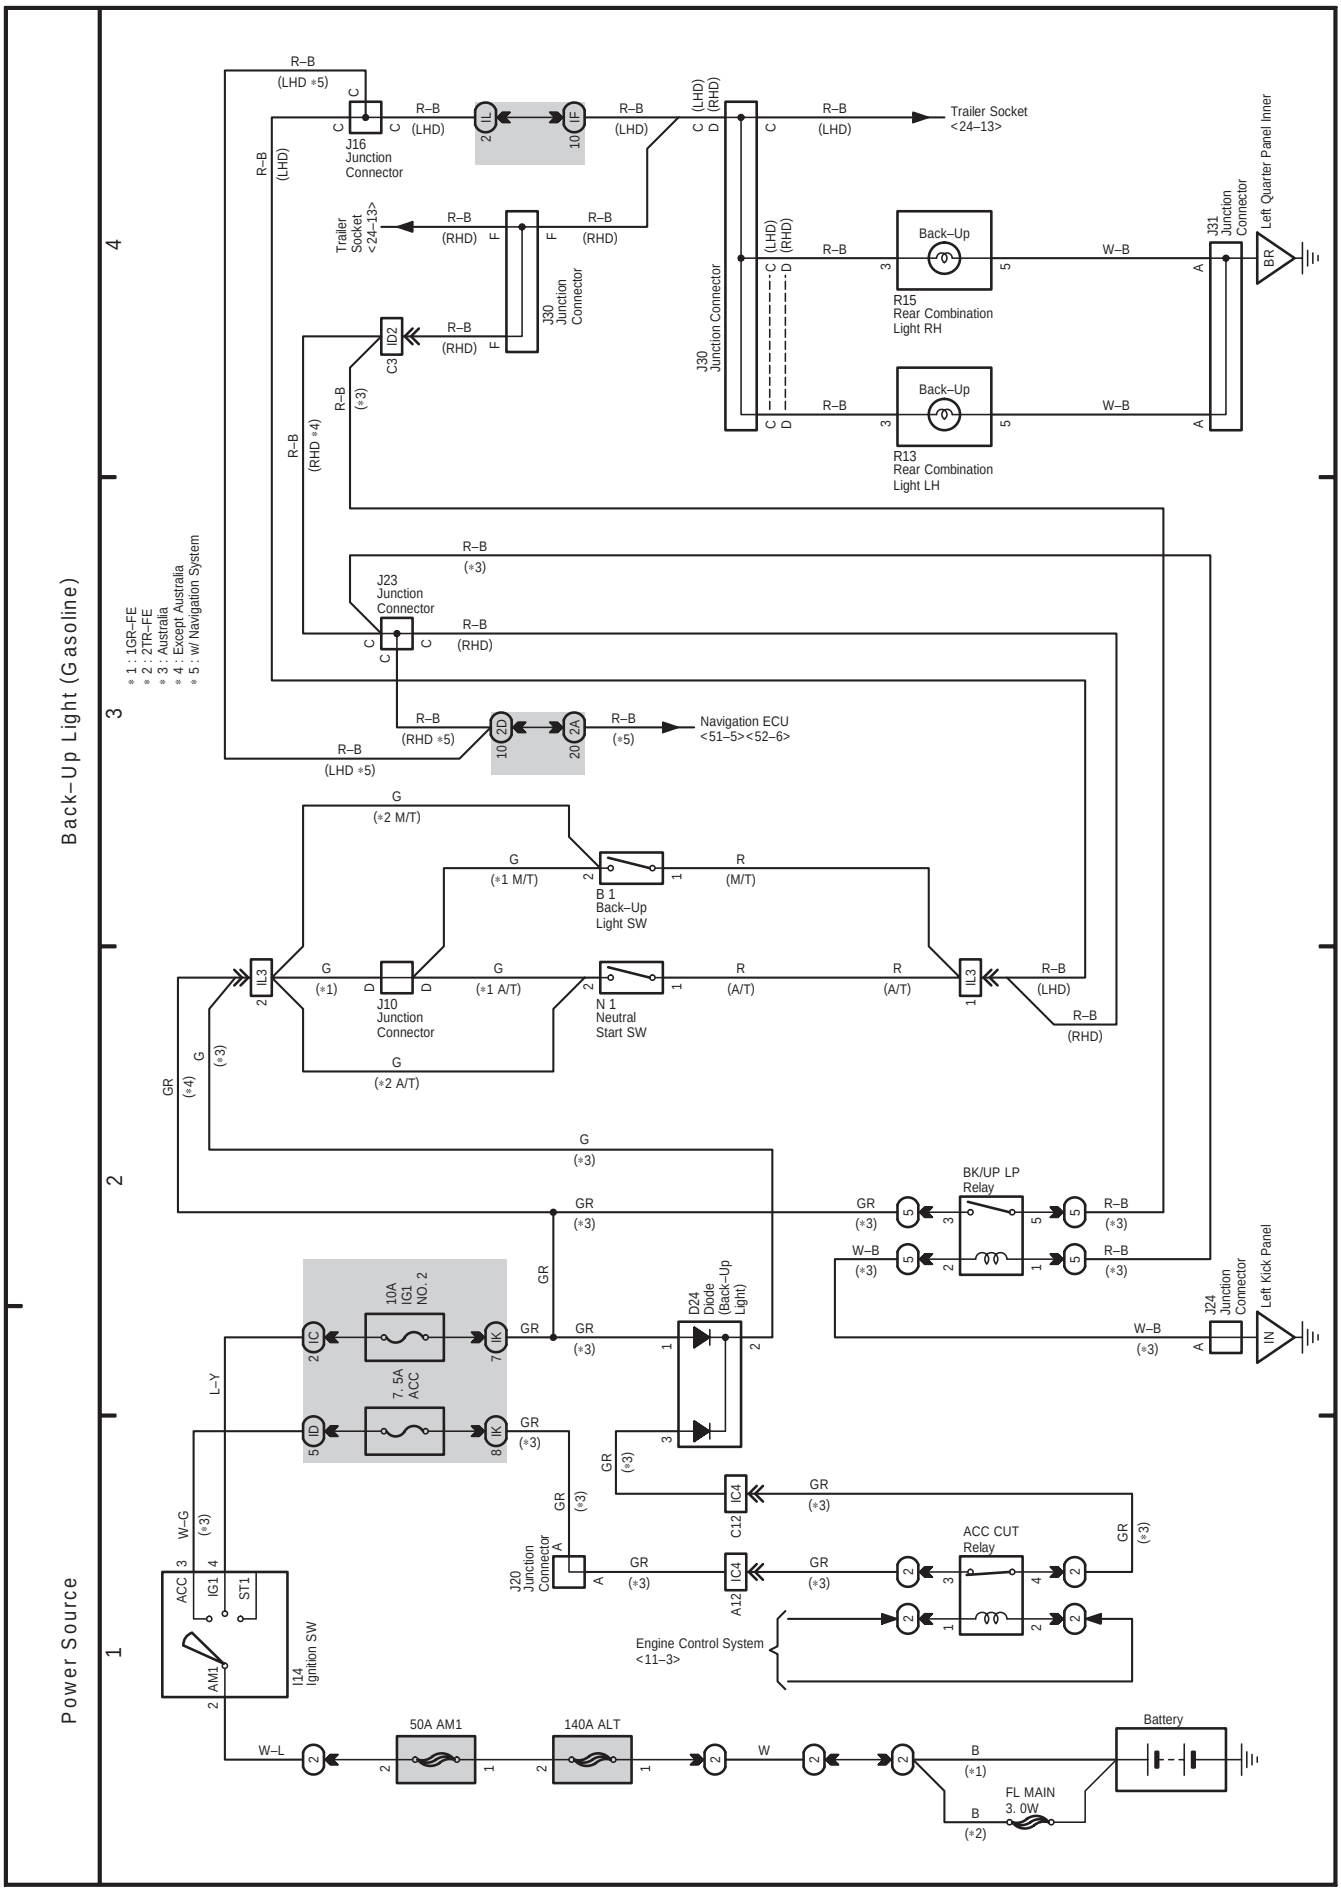

28 LAND CRUISER / LAND CRUISER PRADO
Back–Up Light (Gasoline)
Power Source
* 1 : 1GR–FE
* 2 : 2TR–FE
* 3 : Australia
* 4 : Except Australia
* 5 : w/ Navigation System
J16 Junction Connector
Trailer Socket <24–13>
J30 Junction Connector
J31 Junction Connector
Left Quarter Panel Inner
Back–Up
R15 Rear Combination Light RH
R13 Rear Combination Light LH
J23 Junction Connector
Navigation ECU <51–5><52–6>
B 1 Back–Up Light SW
N 1 Neutral Start SW
J10 Junction Connector
BK/UP LP Relay
D24 Diode (Back–Up Light)
J24 Junction Connector
Left Kick Panel
10A IG1 NO. 2
7. 5A ACC
ACC CUT Relay
J20 Junction Connector
Engine Control System <11–3>
I14 Ignition SW
50A AM1
140A ALT
Battery
FL MAIN 3. 0W