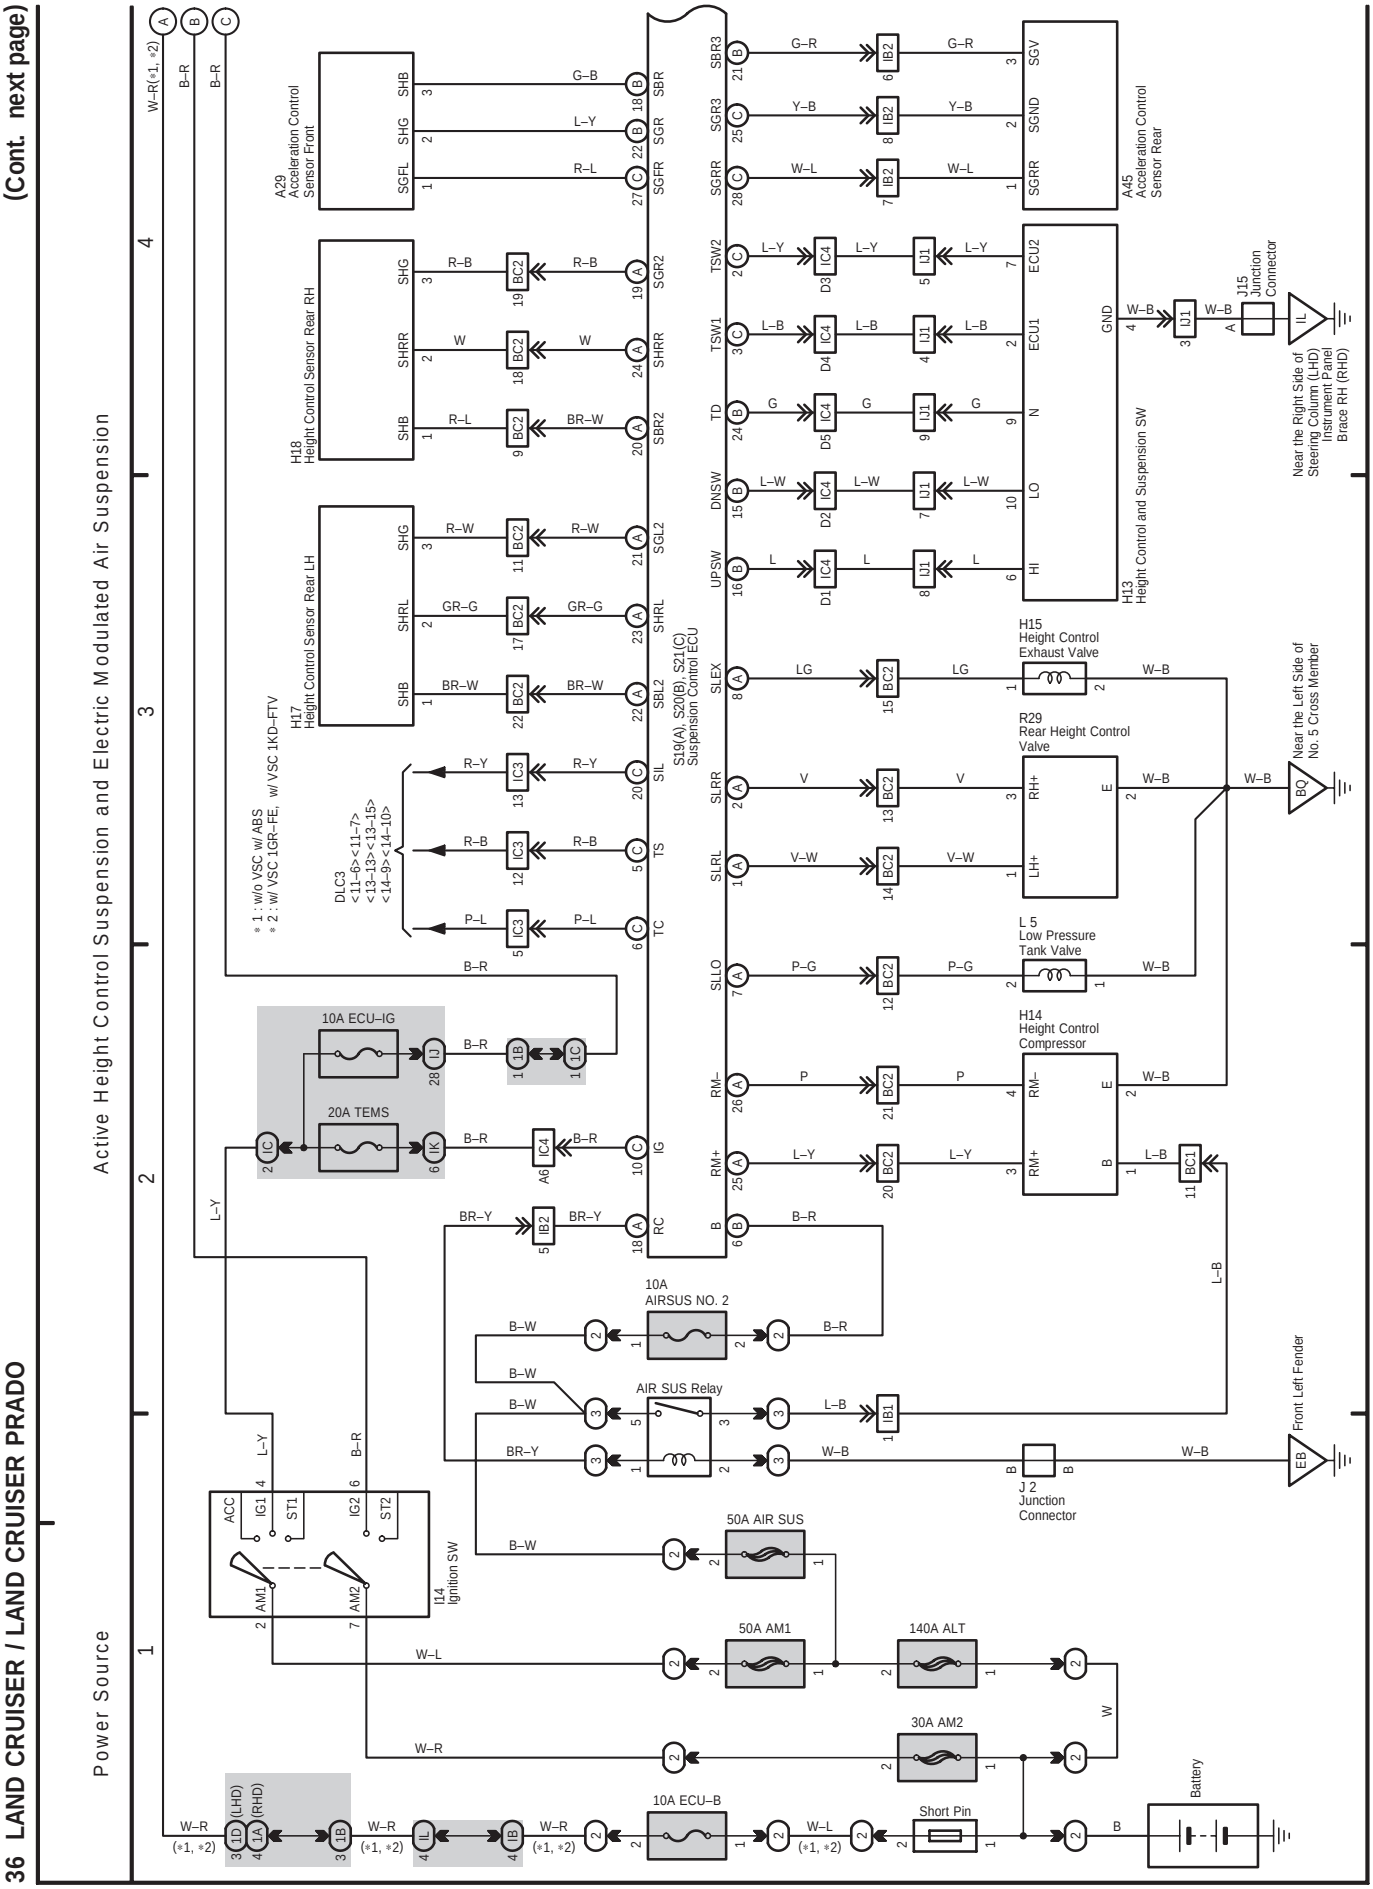

(Cont. next page)
36 LAND CRUISER / LAND CRUISER PRADO
Power Source
Active Height Control Suspension and Electric Modulated Air Suspension
A29 Acceleration Control Sensor Front
A45 Acceleration Control Sensor Rear
H18 Height Control Sensor Rear RH
H17 Height Control Sensor Rear LH
H13 Height Control and Suspension SW
H15 Height Control Exhaust Valve
R29 Rear Height Control Valve
L 5 Low Pressure Tank Valve
H14 Height Control Compressor
S19(A), S20(B), S21(C) Suspension Control ECU
DLC3
* 1 : w/o VSC w/ ABS
* 2 : w/ VSC 1GR–FE, w/ VSC 1KD–FTV
10A ECU–IG
20A TEMS
10A AIRSUS NO. 2
AIR SUS Relay
50A AIR SUS
50A AM1
140A ALT
30A AM2
10A ECU–B
Short Pin
Battery
I14 Ignition SW
J15 Junction Connector
J 2 Junction Connector
Near the Right Side of Steering Column (LHD) Instrument Panel Brace RH (RHD)
Near the Left Side of No. 5 Cross Member
Front Left Fender

36 LAND CRUISER / LAND CRUISER PRADO (Cont' d)

