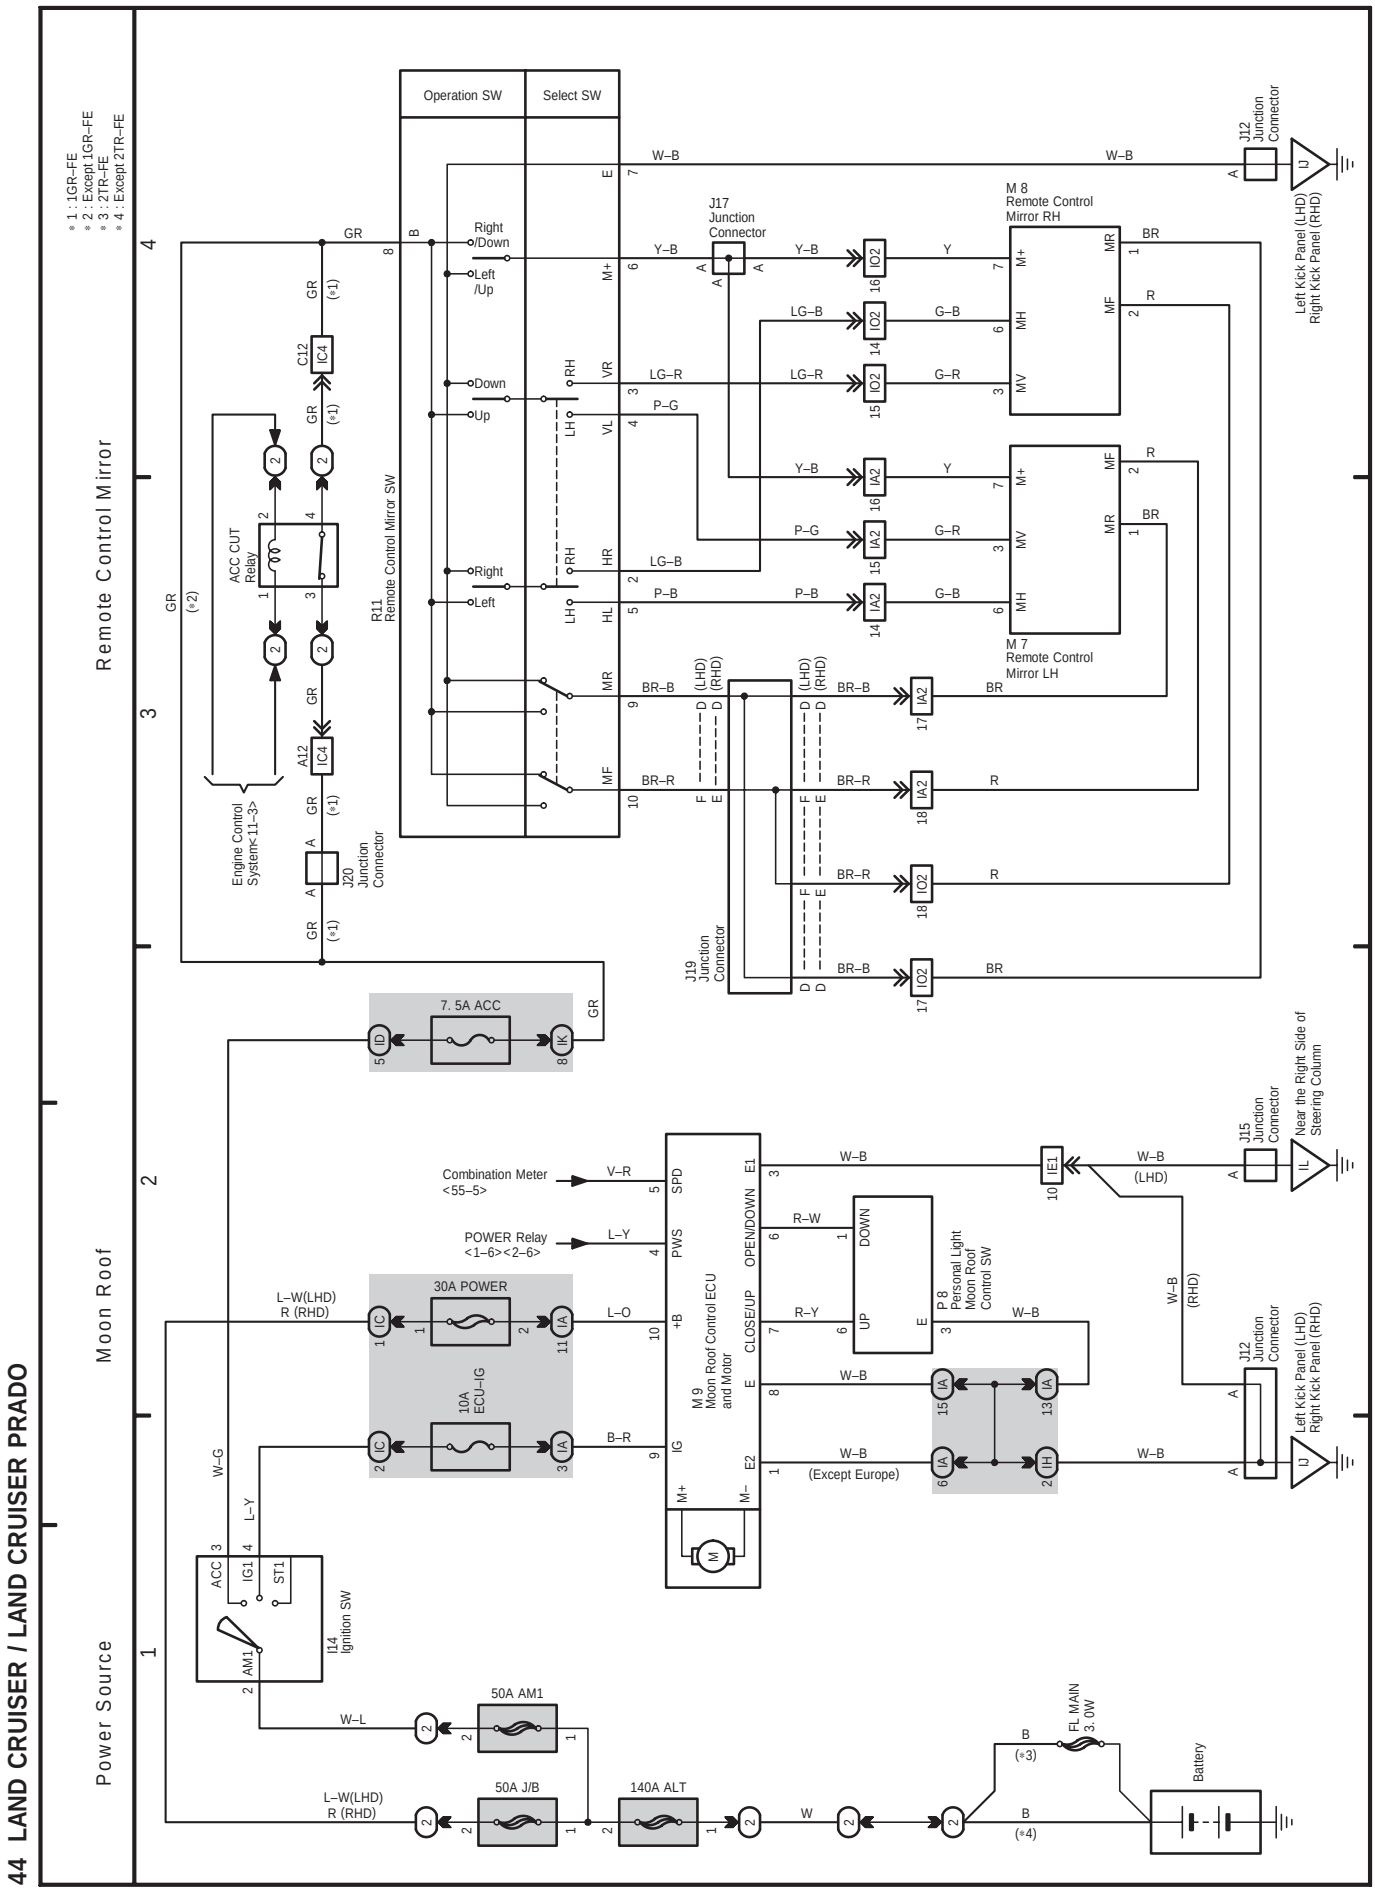

44 LAND CRUISER / LAND CRUISER PRADO
Power Source
Moon Roof
Remote Control Mirror
* 1 : 1GR–FE
* 2 : Except 1GR–FE
* 3 : 2TR–FE
* 4 : Except 2TR–FE
Operation SW
Select SW
R11 Remote Control Mirror SW
Right /Down
Left /Up
Down
Up
Right
Left
ACC CUT Relay
Engine Control System<1–3>
J20 Junction Connector
J17 Junction Connector
J19 Junction Connector
J12 Junction Connector
Left Kick Panel (LHD) Right Kick Panel (RHD)
M 8 Remote Control Mirror RH
M 7 Remote Control Mirror LH
7. 5A ACC
30A POWER
10A ECU–IG
50A AM1
50A J/B
140A ALT
FL MAIN 3. 0W
Battery
Combination Meter <55–5>
POWER Relay <1–6><2–6>
M 9 Moon Roof Control ECU and Motor
P 8 Personal Light Moon Roof Control SW
J15 Junction Connector
Near the Right Side of Steering Column
I14 Ignition SW
ACC
IG1
ST1
AM1
(LHD)
(RHD)
(Except Europe)