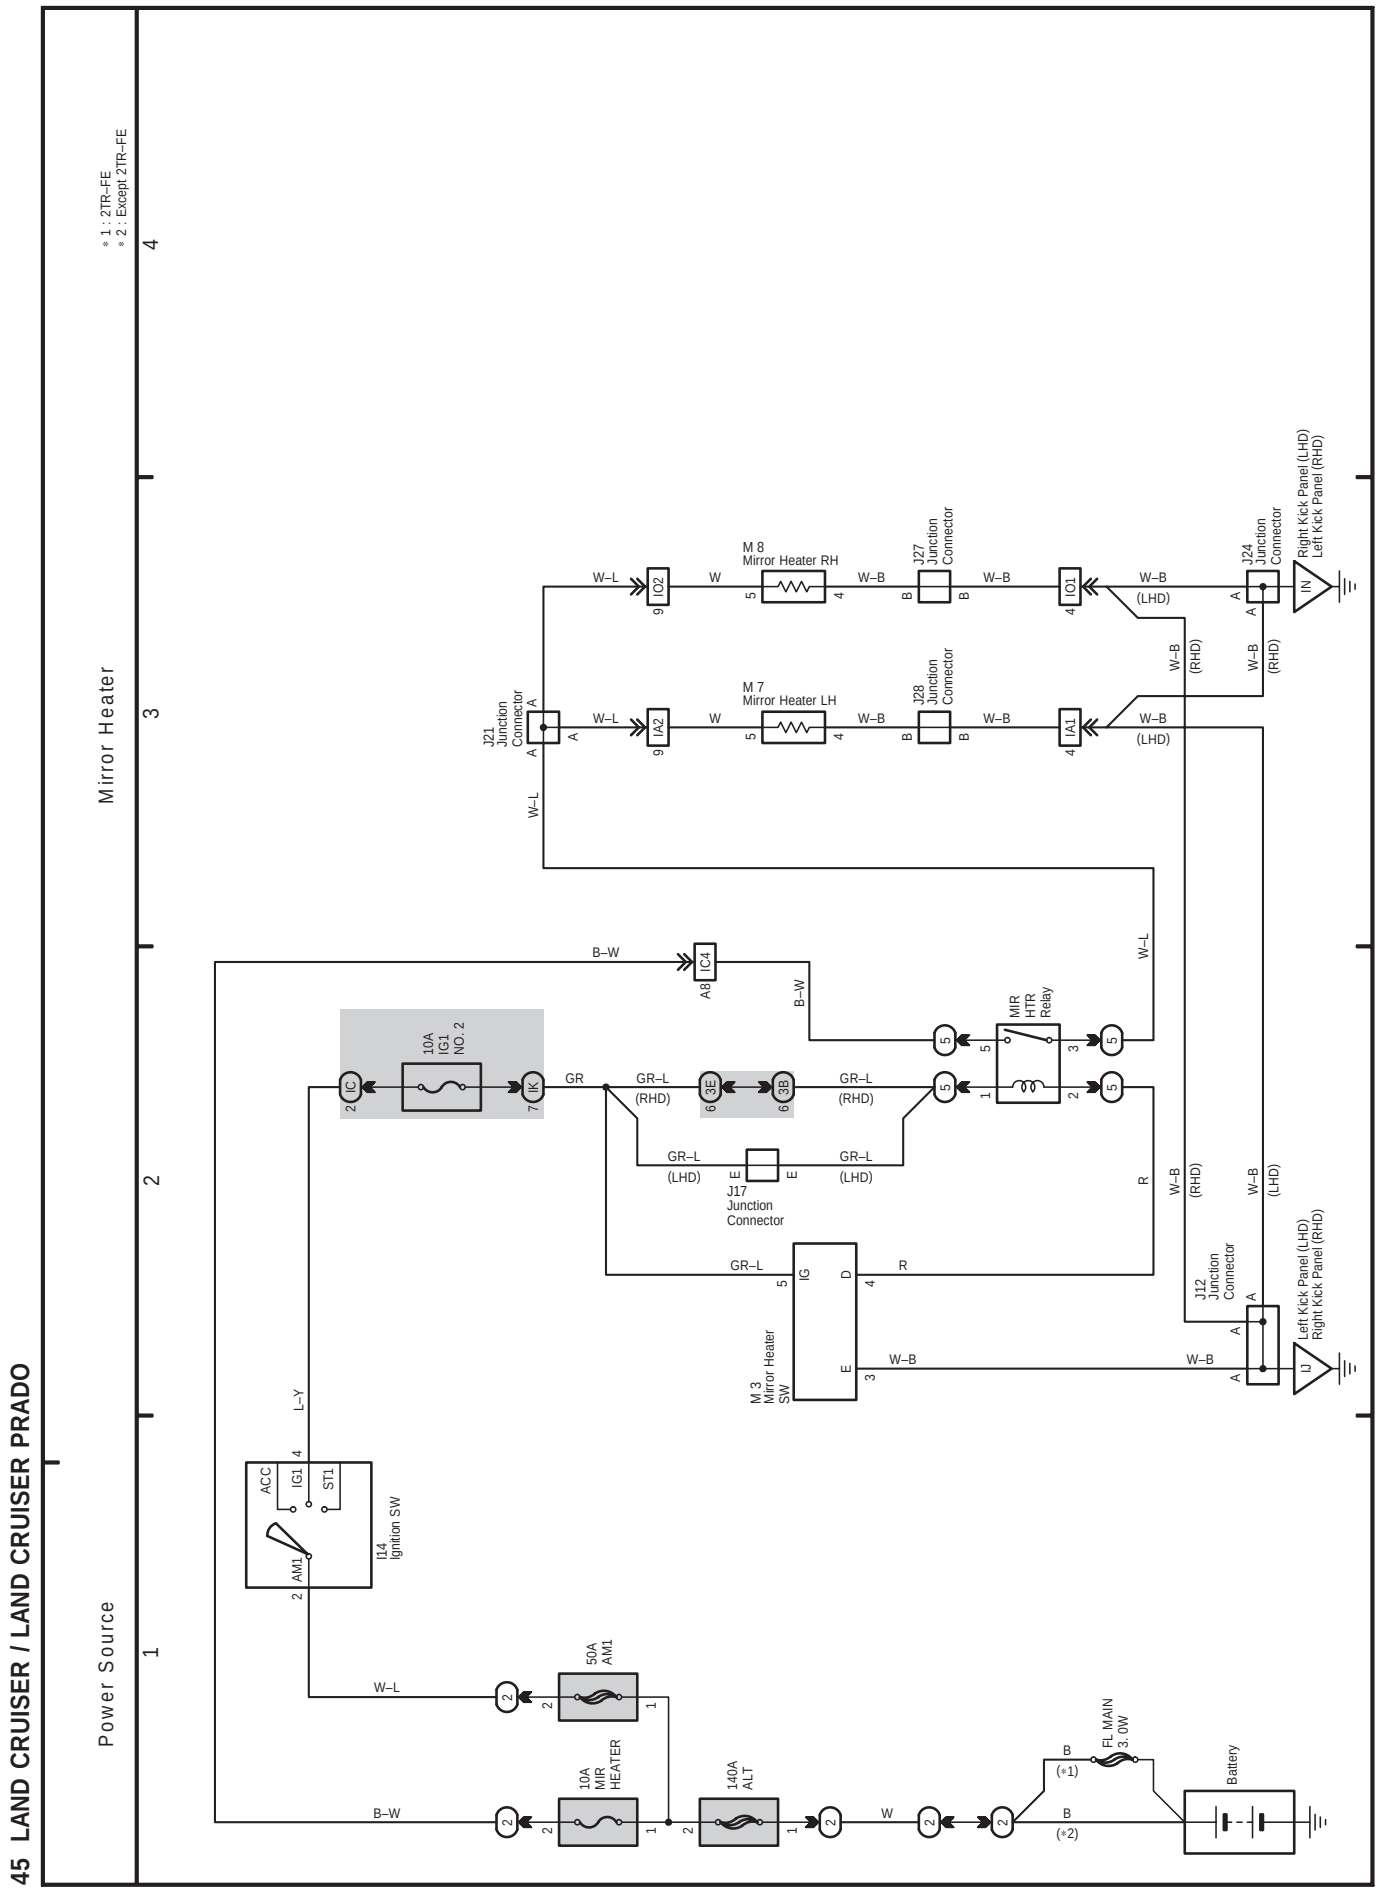

45 LAND CRUISER / LAND CRUISER PRADO
Power Source
Mirror Heater
1
2
3
4
* 1 : 2TR–FE
* 2 : Except 2TR–FE
M 8
Mirror Heater RH
M 7
Mirror Heater LH
J21 Junction Connector
J27 Junction Connector
J28 Junction Connector
J24 Junction Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
J17 Junction Connector
J12 Junction Connector
Left Kick Panel (LHD)
Right Kick Panel (RHD)
MIR HTR Relay
M 3 Mirror Heater SW
I14 Ignition SW
ACC
IG1
ST1
AM1
10A IG1 NO. 2
50A AM1
10A MIR HEATER
140A ALT
FL MAIN 3. 0W
Battery
W–L
W
W–B
B–W
GR
GR–L
L–Y
R
B
(RHD)
(LHD)
(*1)
(*2)