ECM (1GR–FE)


100DD–02

REPLACEMENT

1. REMOVE INSTRUMENT PANEL UNDER COVER NO.2 (See Pub. No. RM990E on page 71–12)

2. REMOVE INSTRUMENT PANEL ORNAMENT (See Pub. No. RM990E on page 71–12)

3. REMOVE GLOVE COMPARTMENT DOOR ASSY (See Pub. No. RM990E on pahe 71–12)

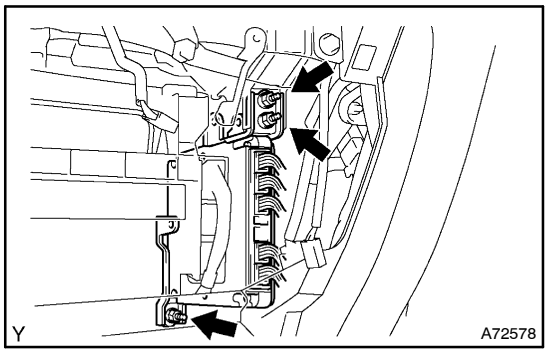

4. REMOVE ECM

(a) Disconnect the 5 ECM connectors from the ECM.
(b) Remove the 3 nuts shown in the illustration.
(c) Remove the ECM.
(d) Remove the 2 screws to separate the ECM bracket No. 1 from the ECM.
(e) Remove the 2 screws to separate the ECM bracket No. 2 from the ECM.

5. INSTALL ECM

(a) Install the ECM bracket No. 2 with the 2 screws to the ECM.
(b) Install the ECM bracket No. 1 with the 2 screws to the ECM.
(c) Install the ECM with the 3 nuts.
Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)
(d) Connect the 5 connectors to the ECM.