


CHAIN SUB–ASSY (1GR–FE)


COMPONENTS

1415V–02

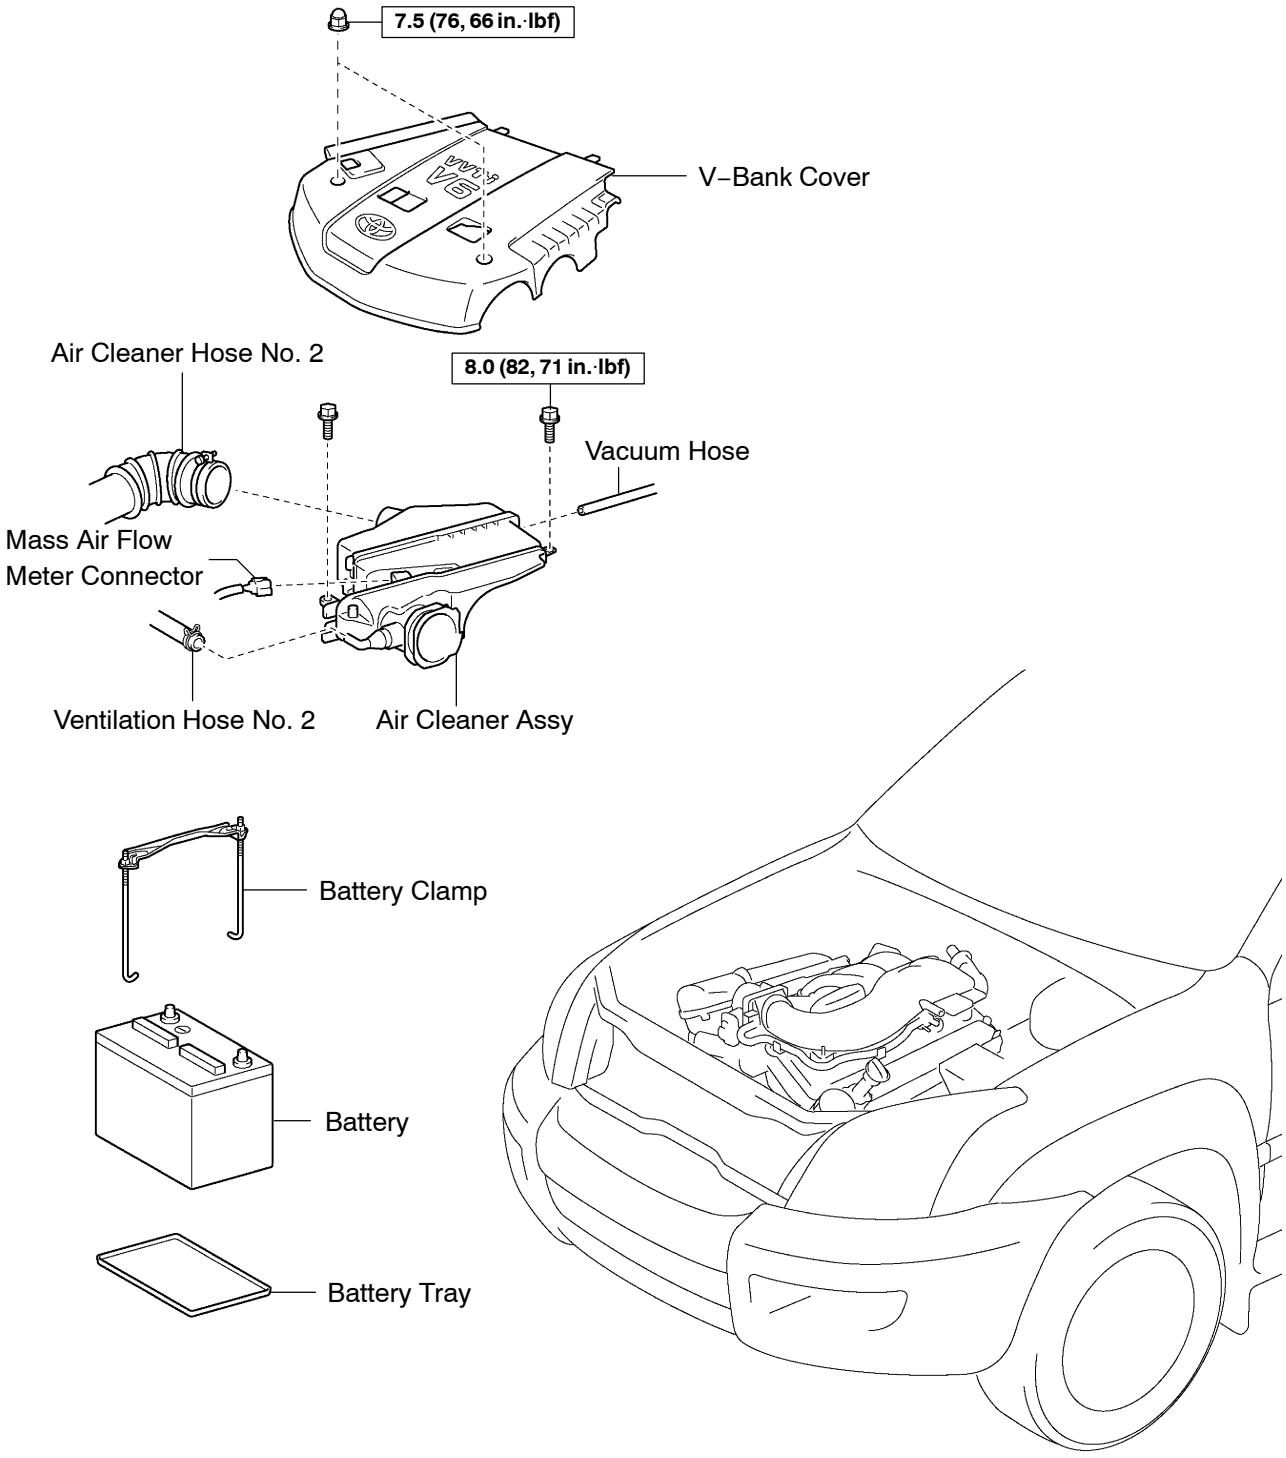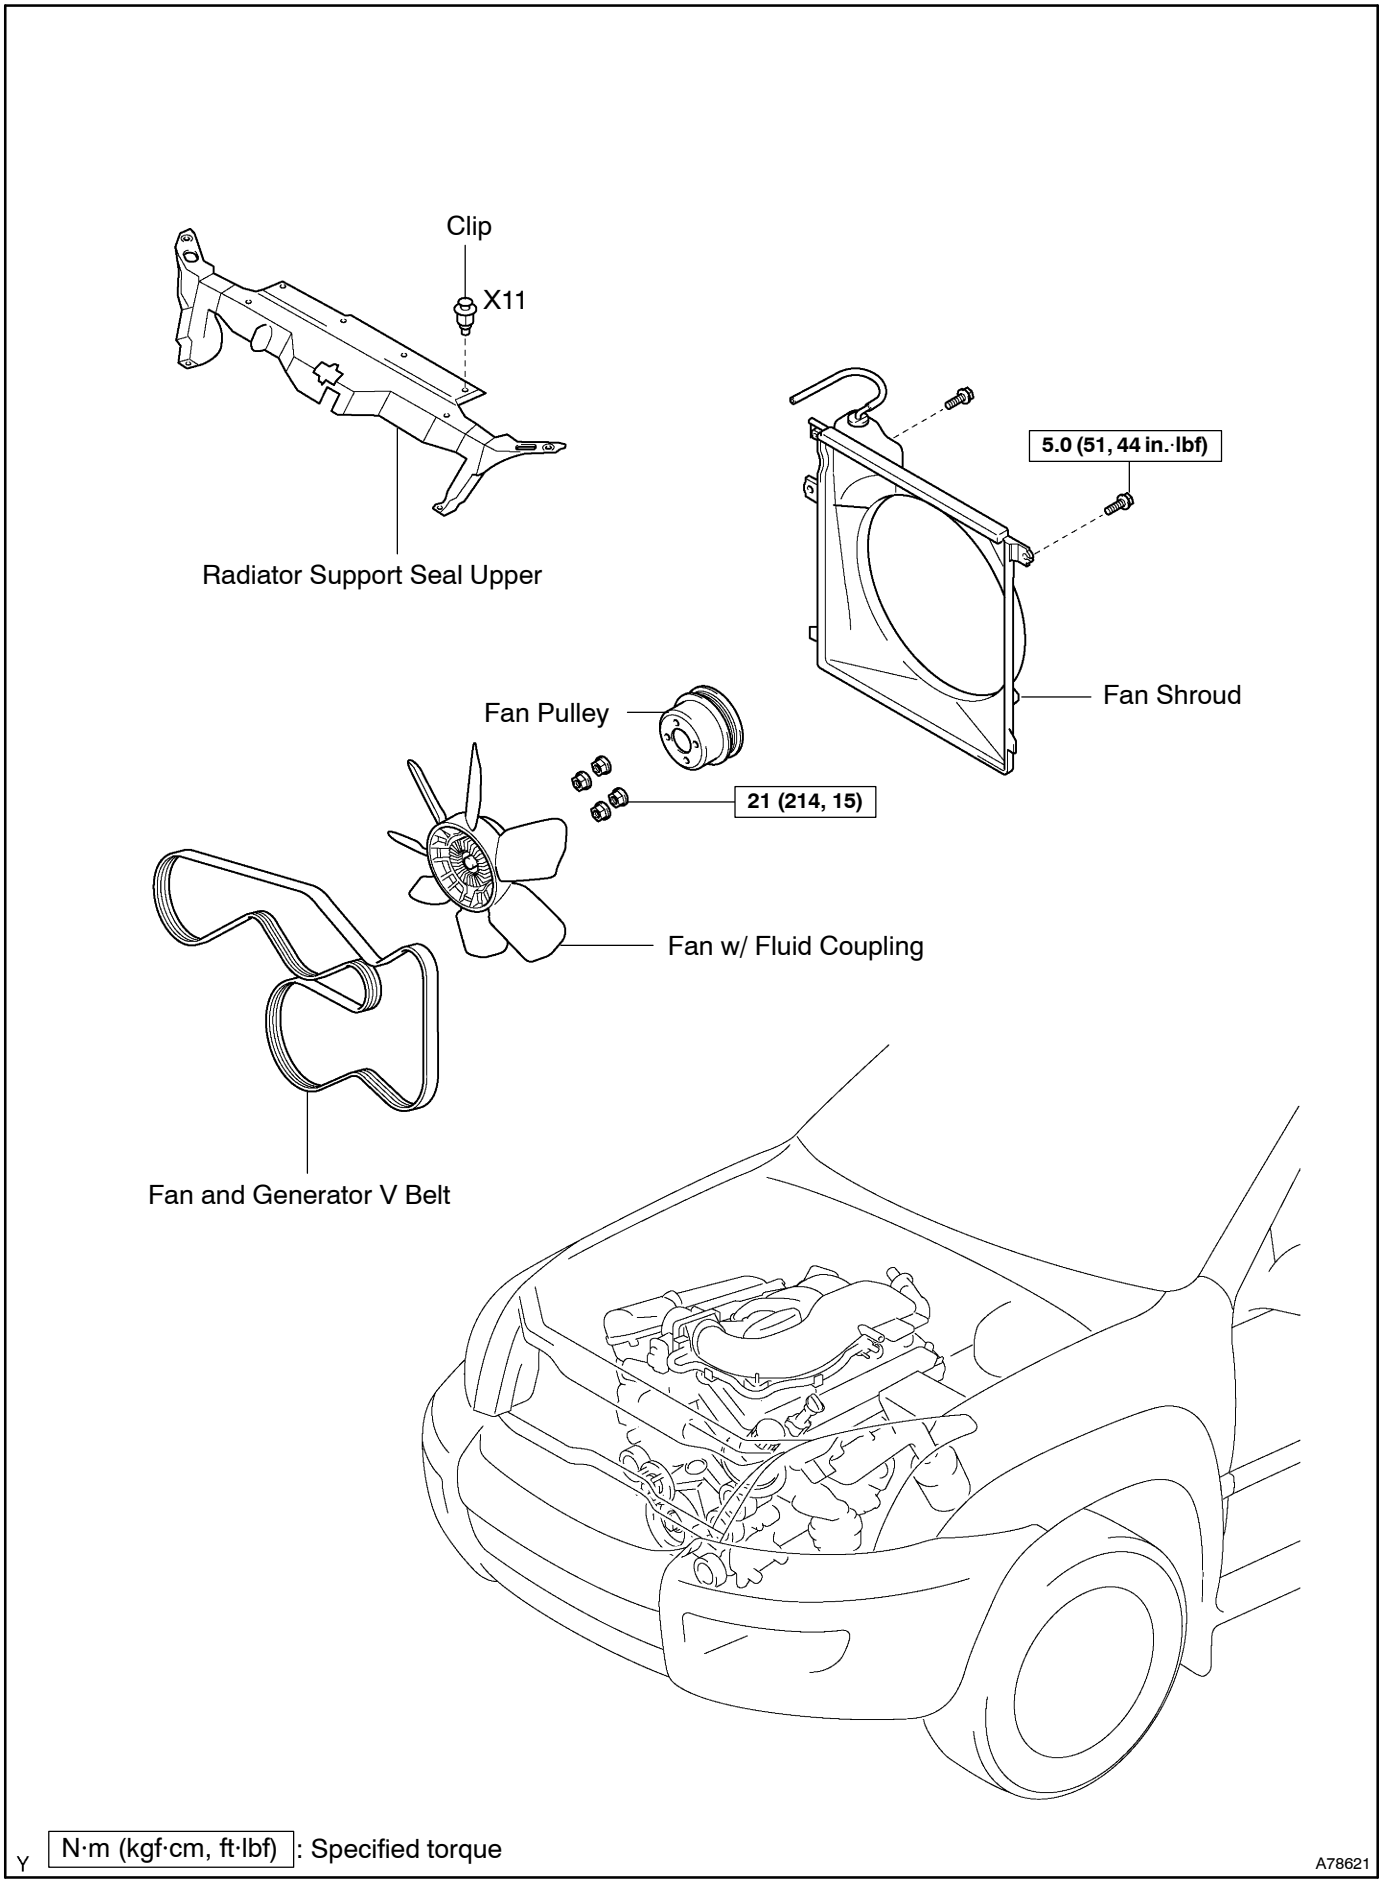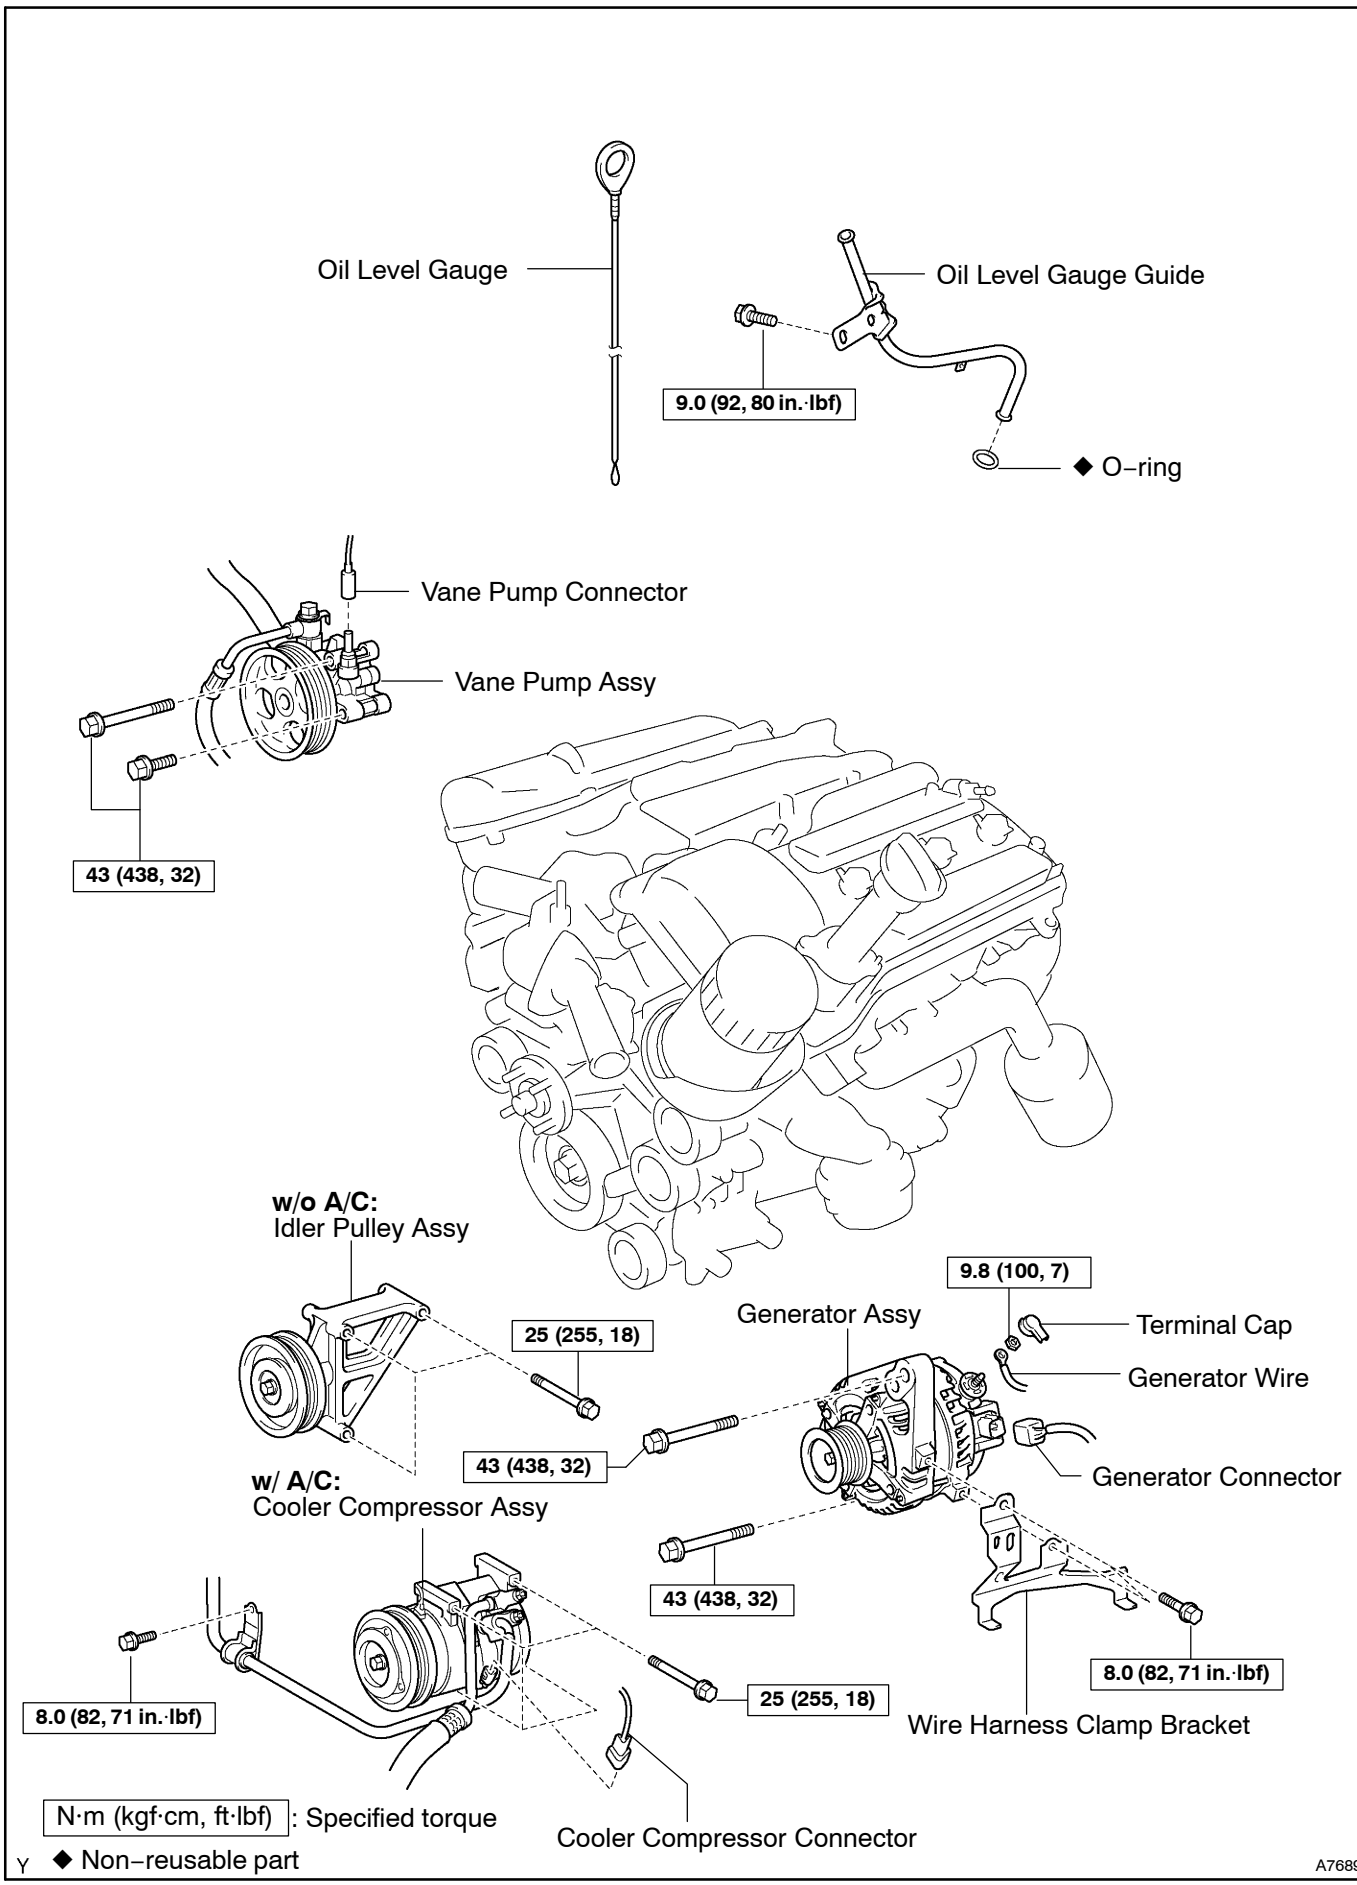


Clip
X11
Radiator Support Seal Upper
5.0 (51, 44 in.·lbf)
Fan Shroud
Fan Pulley
21 (214, 15)
Fan w/ Fluid Coupling
Fan and Generator V Belt
Y
N·m (kgf·cm, ft·lbf)
: Specified torque
A78621



Oil Level Gauge
Oil Level Gauge Guide
9.0 (92, 80 in.·lbf)
◆ O–ring
Vane Pump Connector
Vane Pump Assy
43 (438, 32)
w/o A/C:
Idler Pulley Assy
25 (255, 18)
43 (438, 32)
9.8 (100, 7)
Generator Assy
Terminal Cap
Generator Wire
Generator Connector
w/ A/C:
Cooler Compressor Assy
43 (438, 32)
8.0 (82, 71 in.·lbf)
25 (255, 18)
8.0 (82, 71 in.·lbf)
Wire Harness Clamp Bracket
N·m (kgf·cm, ft·lbf): Specified torque
Cooler Compressor Connector
◆ Non–reusable part
A76896

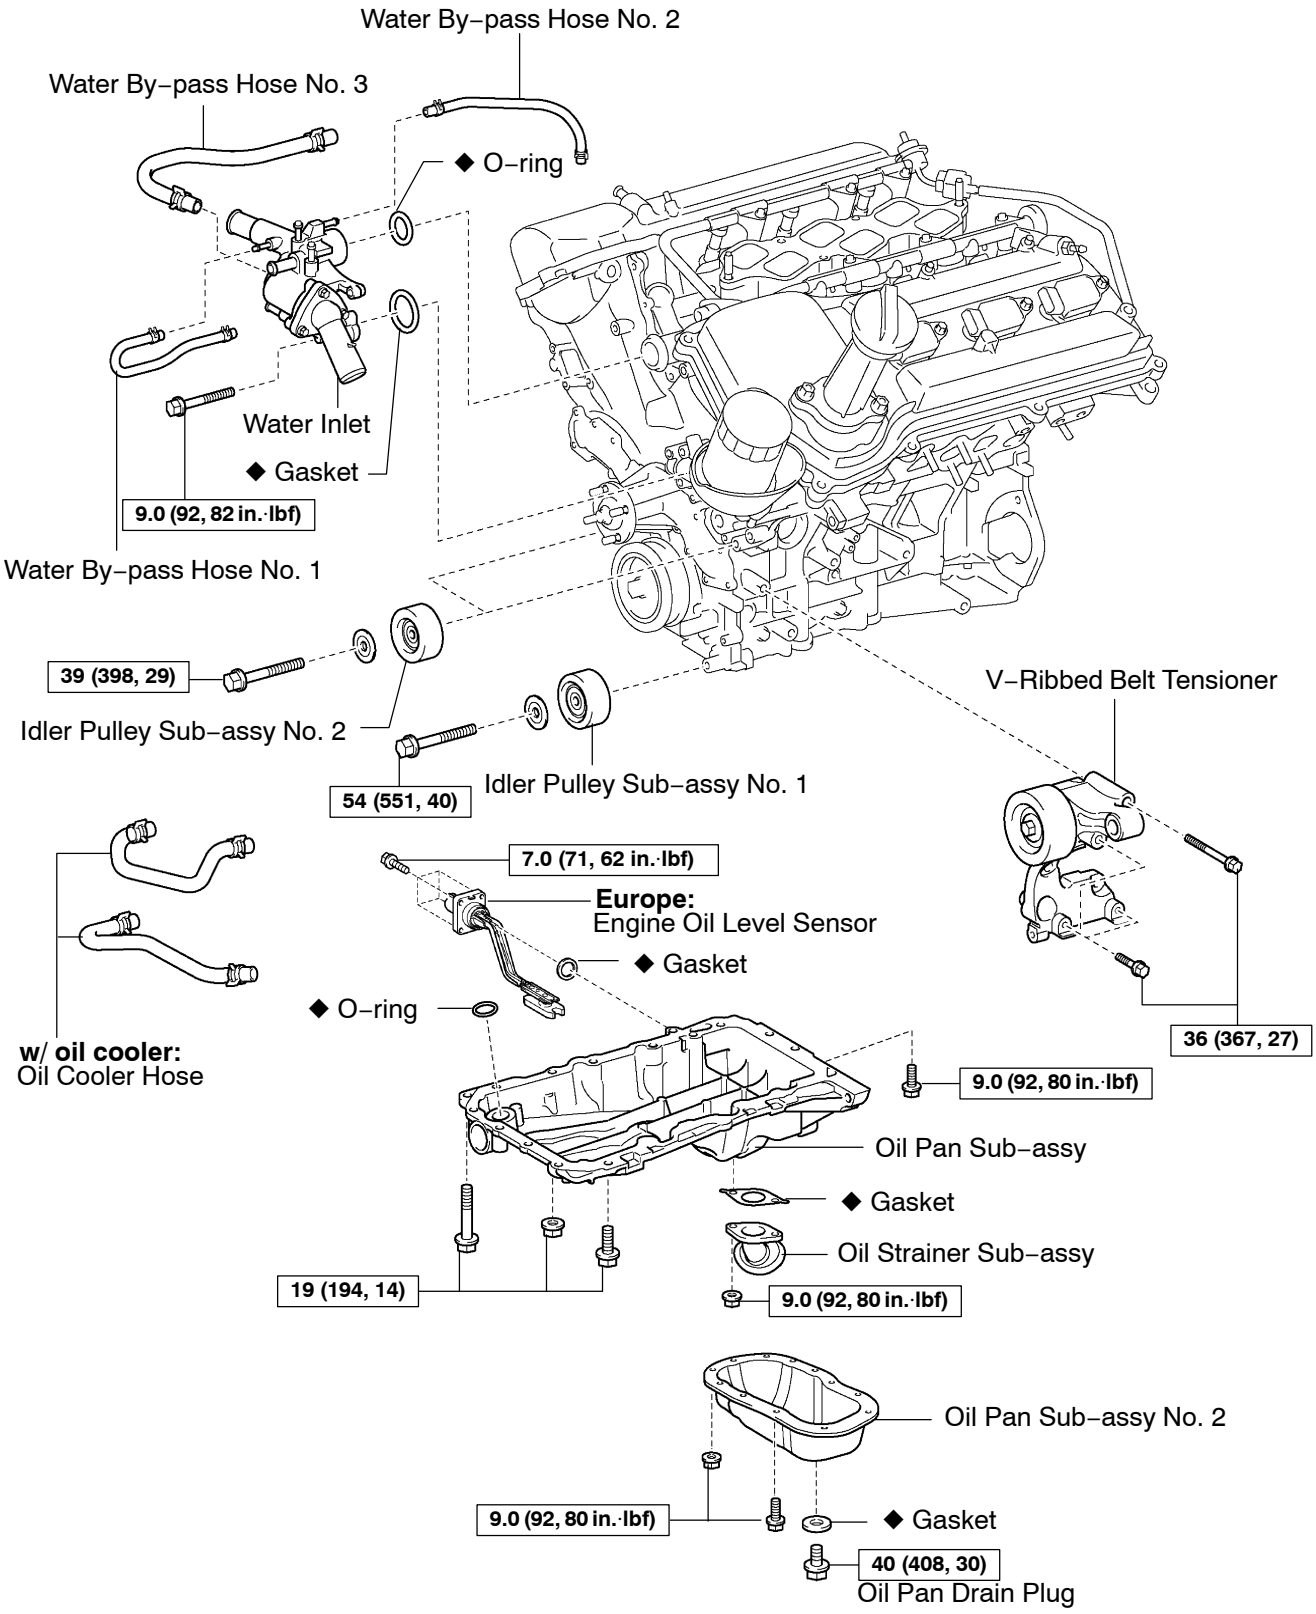


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

A76897

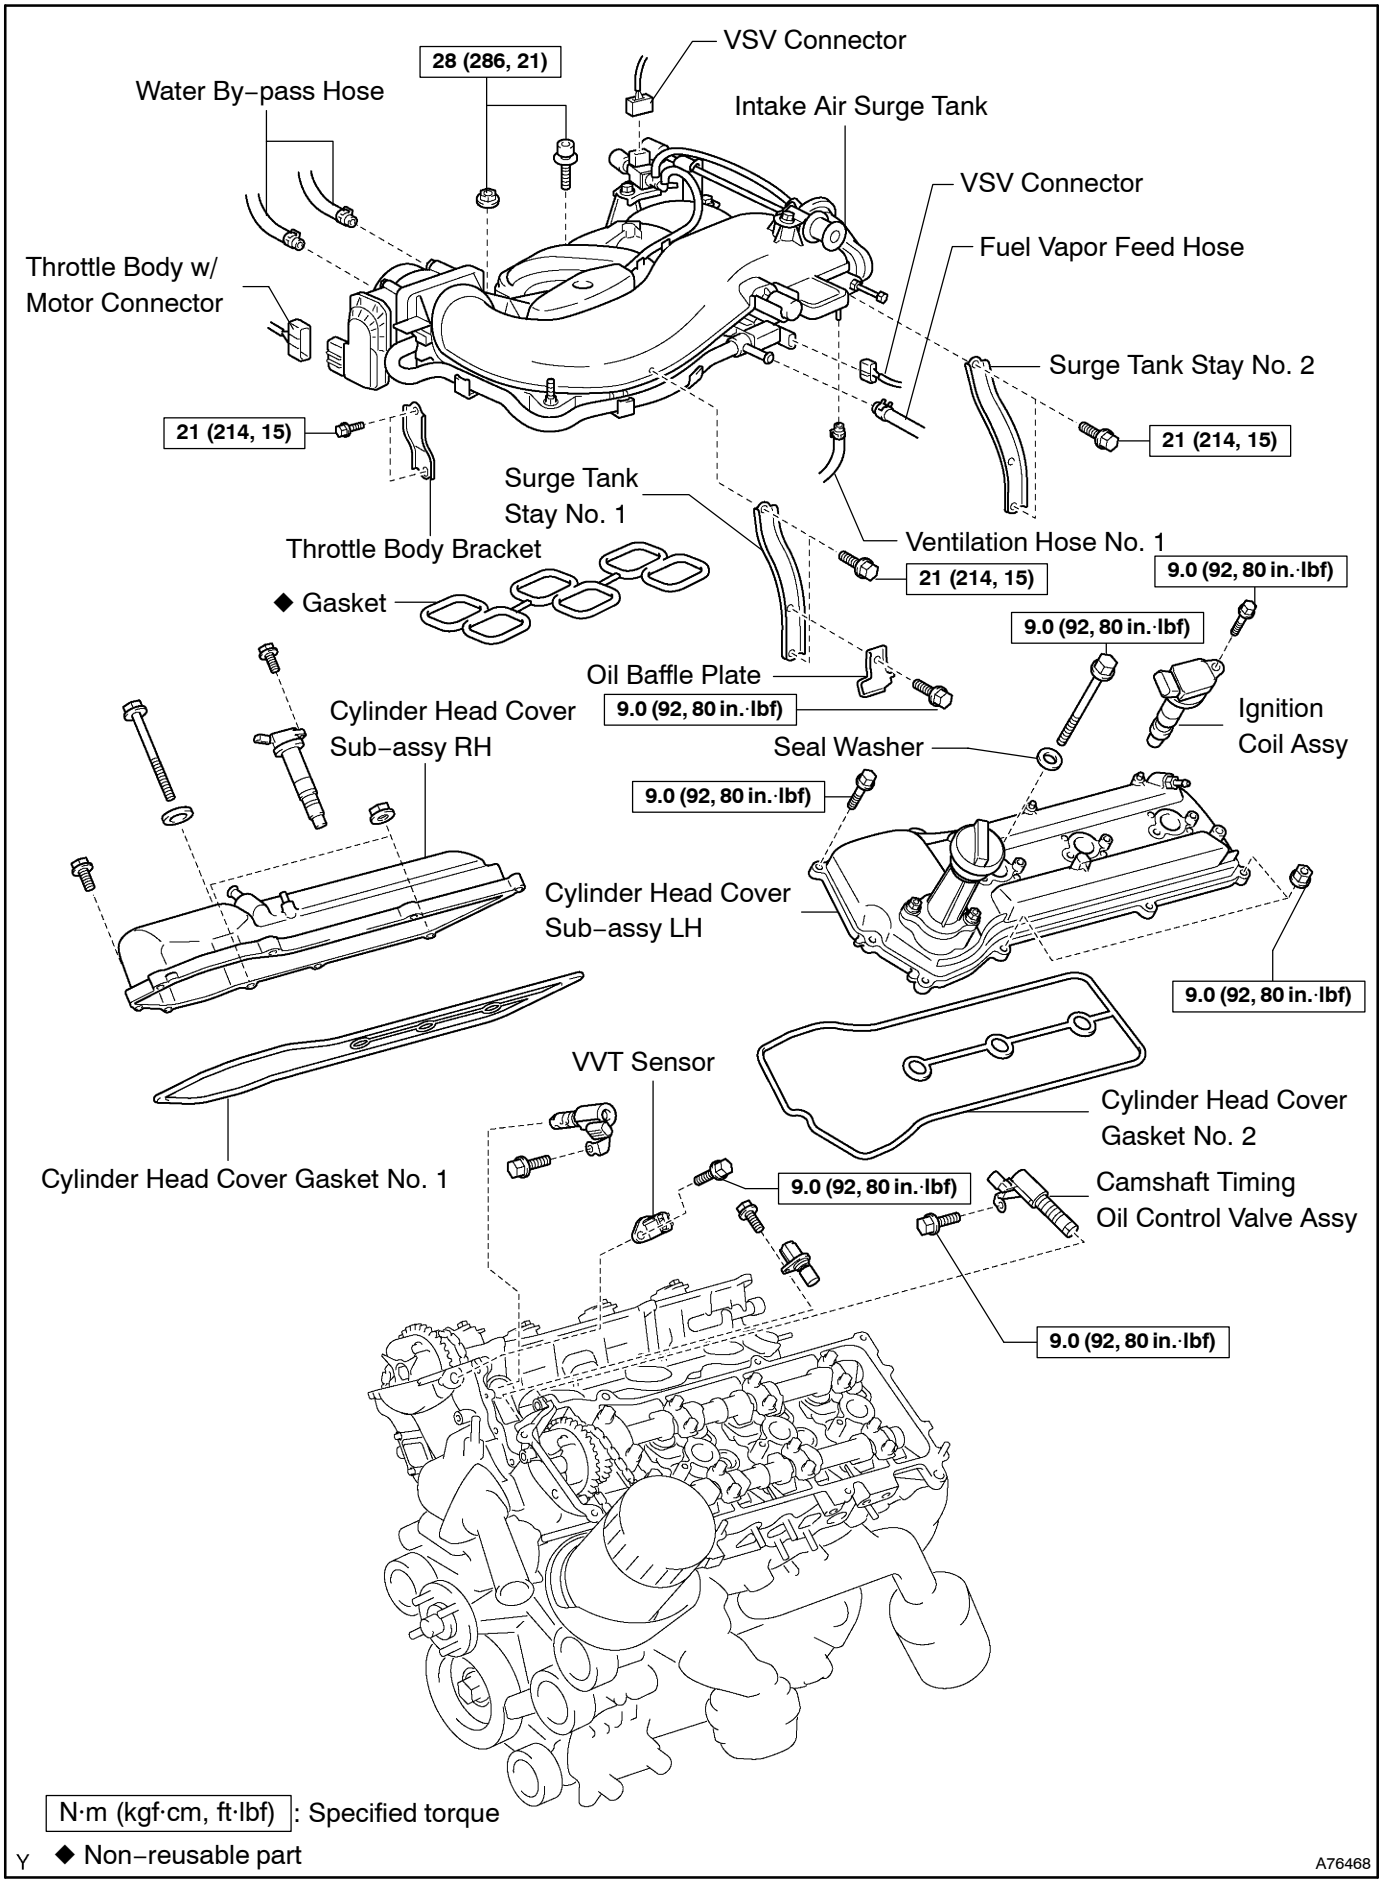
VSV Connector
28 (286, 21)
Water By–pass Hose
Intake Air Surge Tank
VSV Connector
Fuel Vapor Feed Hose
Throttle Body w/
Motor Connector
Surge Tank Stay No. 2
21 (214, 15)
21 (214, 15)
Surge Tank
Stay No. 1
Ventilation Hose No. 1
Throttle Body Bracket
21 (214, 15)
9.0 (92, 80 in.·lbf)
◆ Gasket
9.0 (92, 80 in.·lbf)
Oil Baffle Plate
9.0 (92, 80 in.·lbf)
Cylinder Head Cover
Sub–assy RH
Seal Washer
Ignition
Coil Assy
9.0 (92, 80 in.·lbf)
Cylinder Head Cover
Sub–assy LH
9.0 (92, 80 in.·lbf)
VVT Sensor
Cylinder Head Cover
Gasket No. 2
Cylinder Head Cover Gasket No. 1
9.0 (92, 80 in.·lbf)
Camshaft Timing
Oil Control Valve Assy
9.0 (92, 80 in.·lbf)
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
A76468

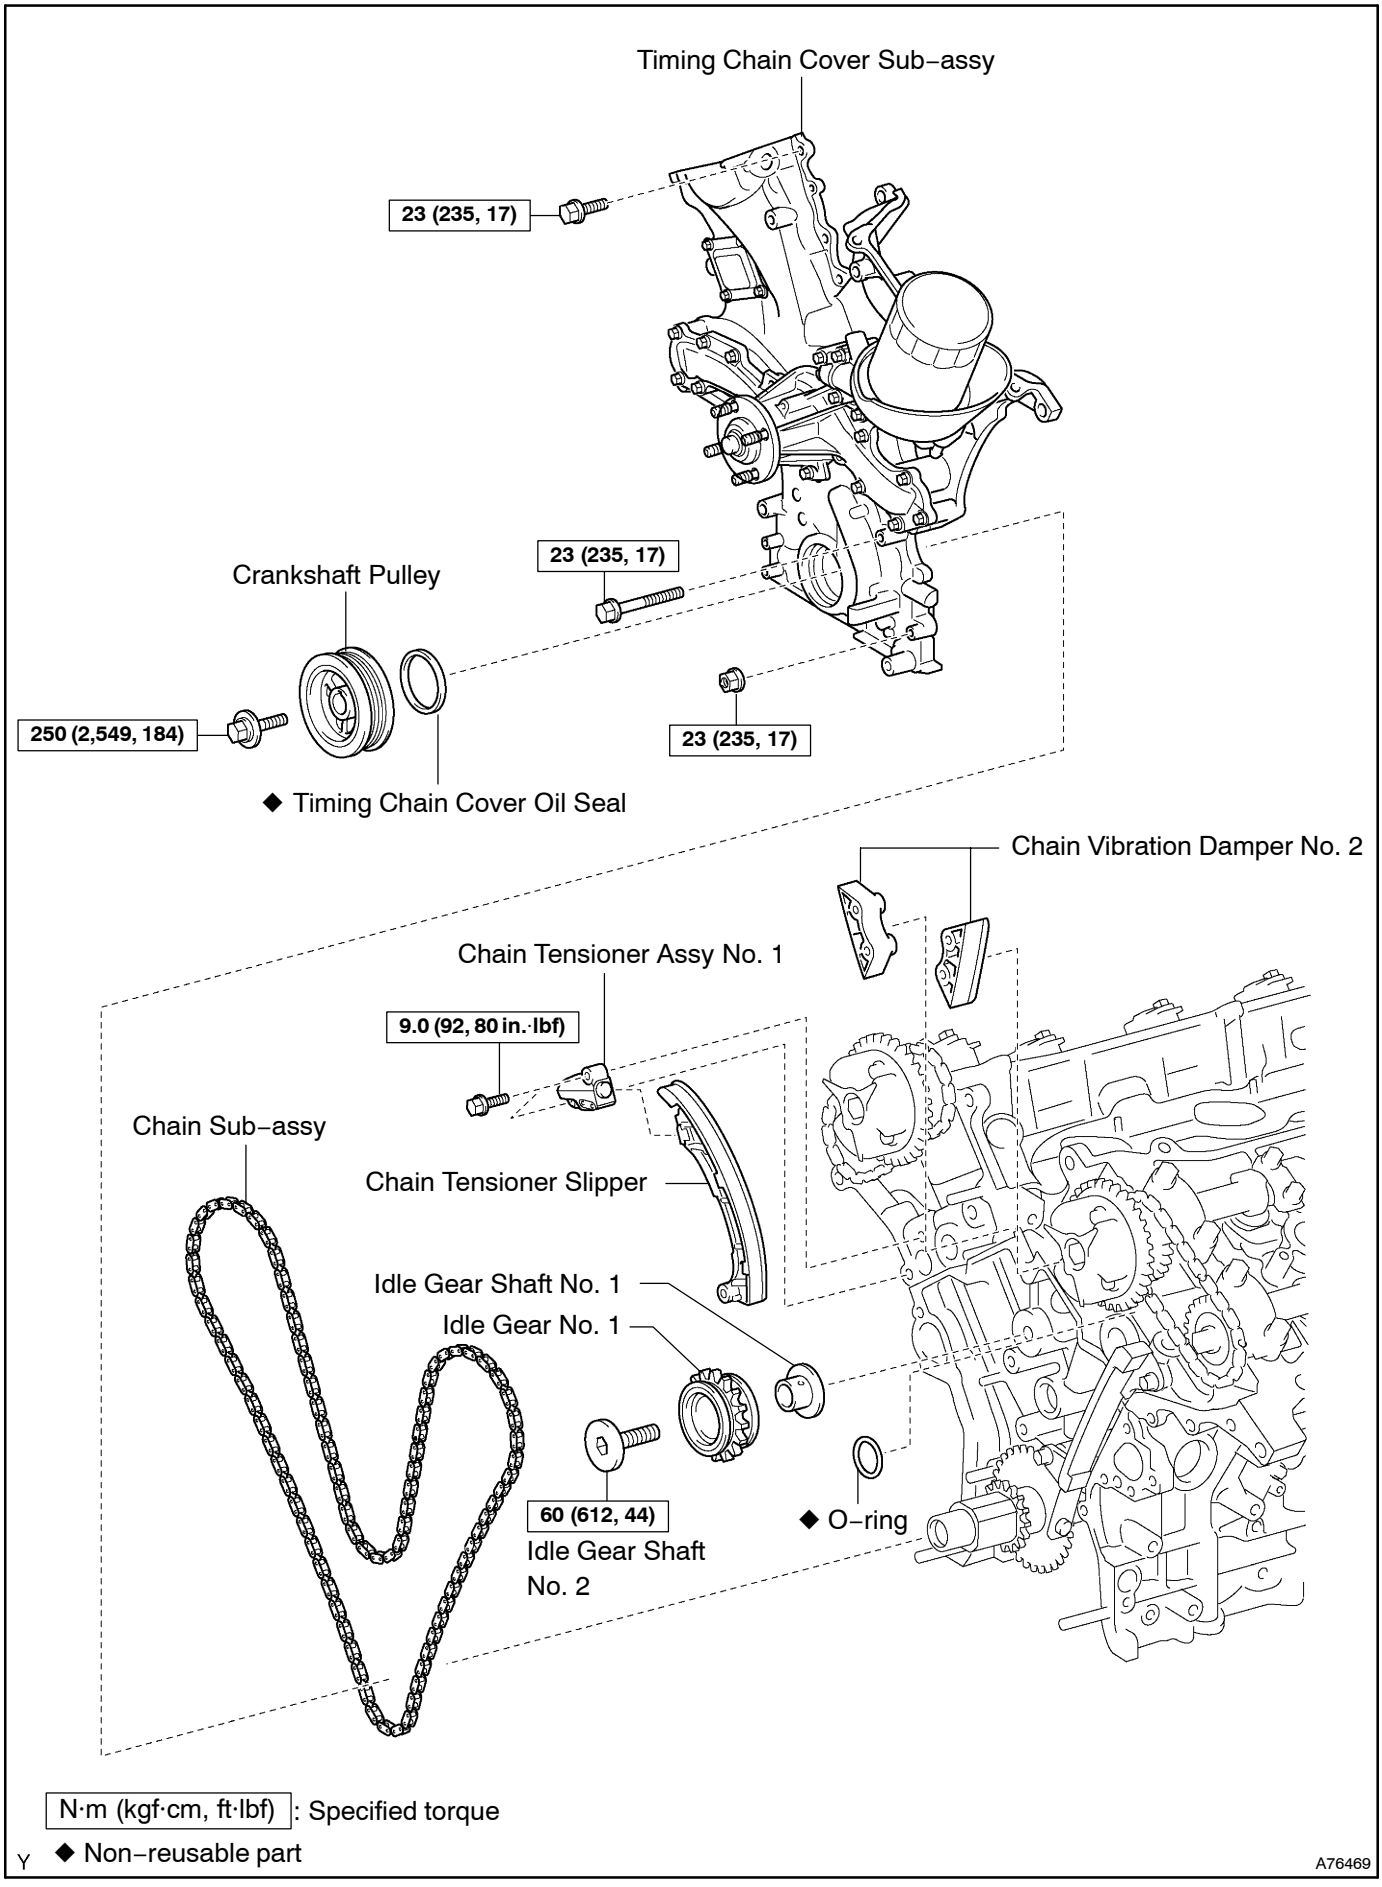
Timing Chain Cover Sub–assy
23 (235, 17)
Crankshaft Pulley
23 (235, 17)
250 (2,549, 184)
23 (235, 17)
◆ Timing Chain Cover Oil Seal
Chain Vibration Damper No. 2
Chain Tensioner Assy No. 1
9.0 (92, 80 in.·lbf)
Chain Sub–assy
Chain Tensioner Slipper
Idle Gear Shaft No. 1
Idle Gear No. 1
60 (612, 44)
Idle Gear Shaft No. 2
◆ O–ring
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A76469