

MANUAL TRANSMISSION UNIT ASSY (1GR–FE)

410DO–01

COMPONENTS

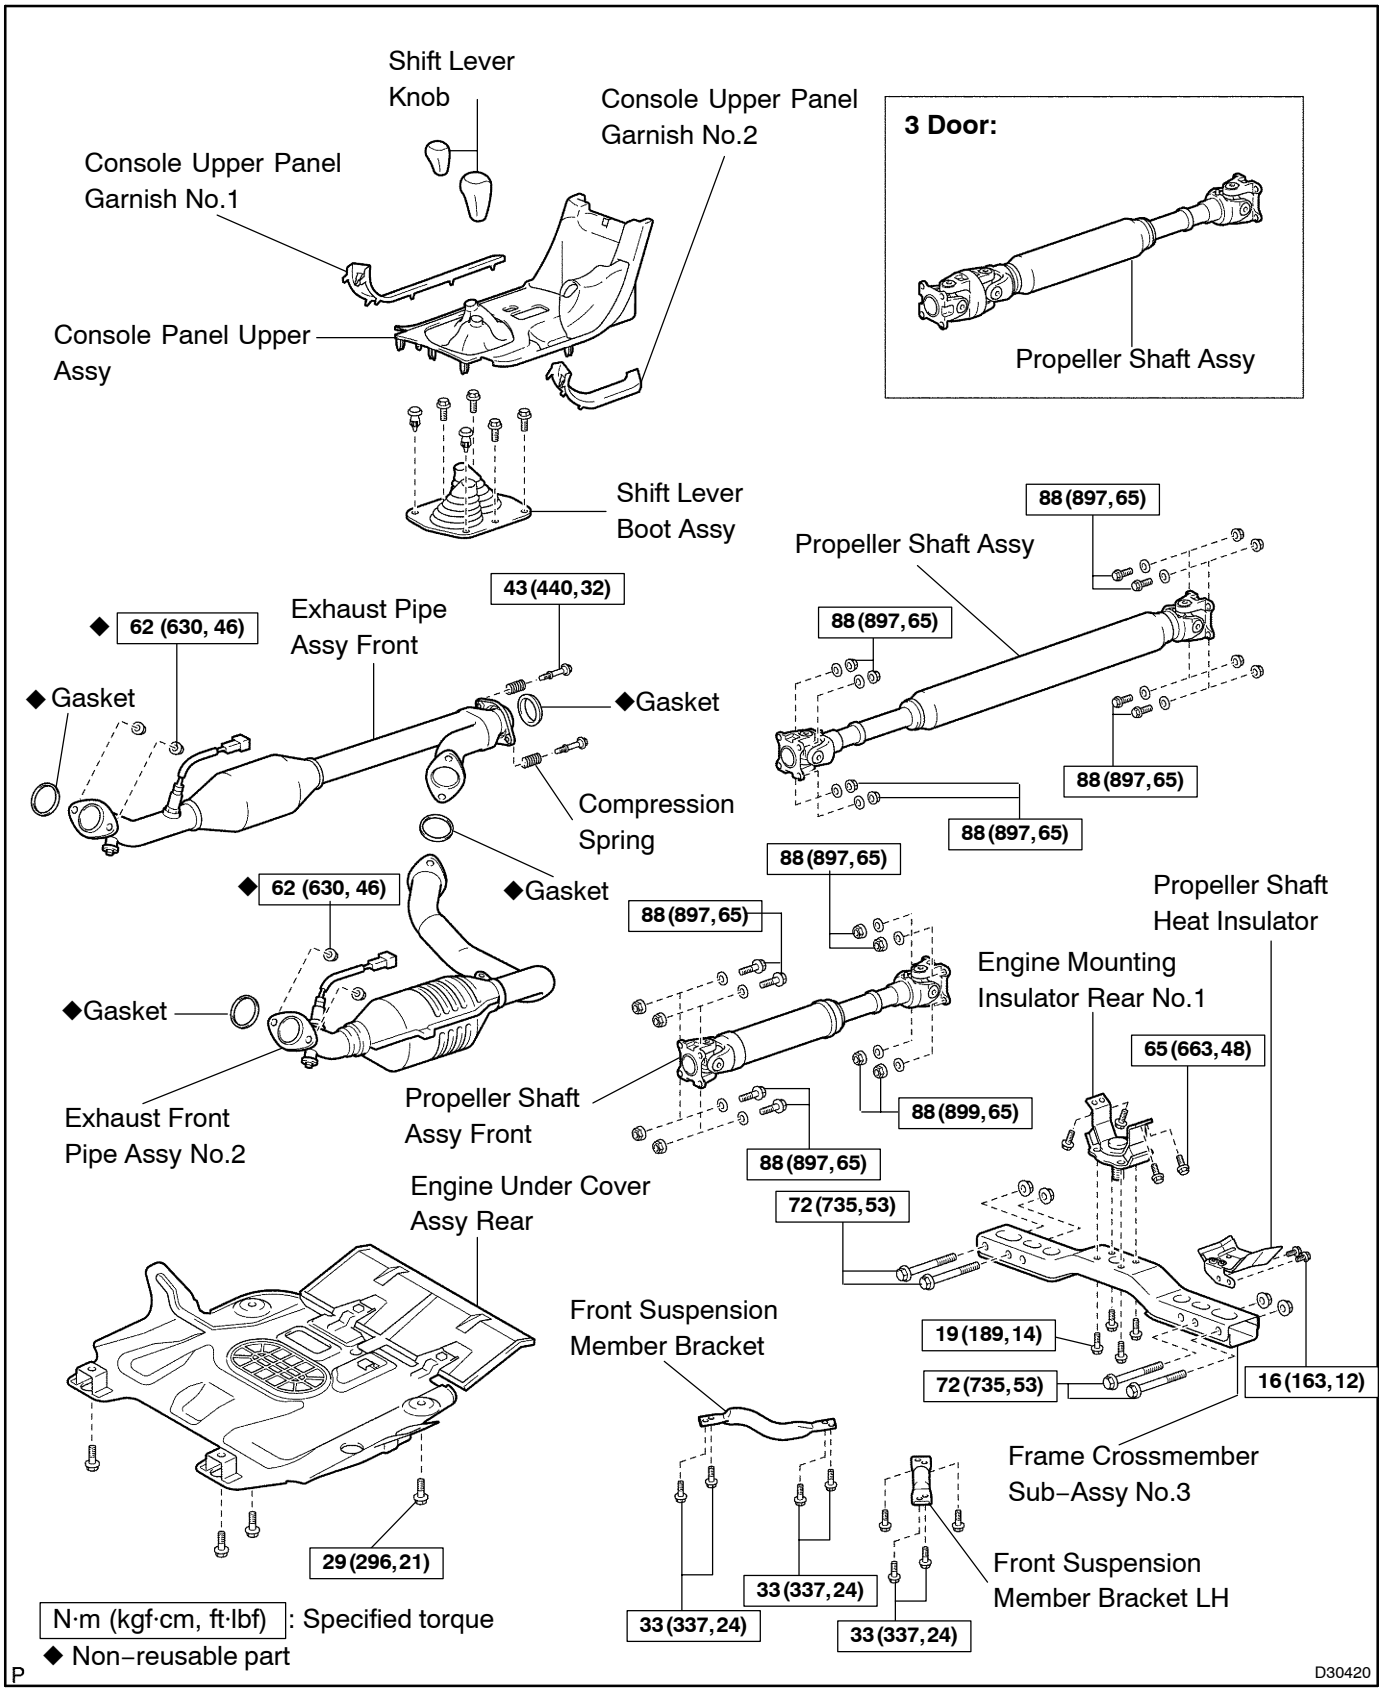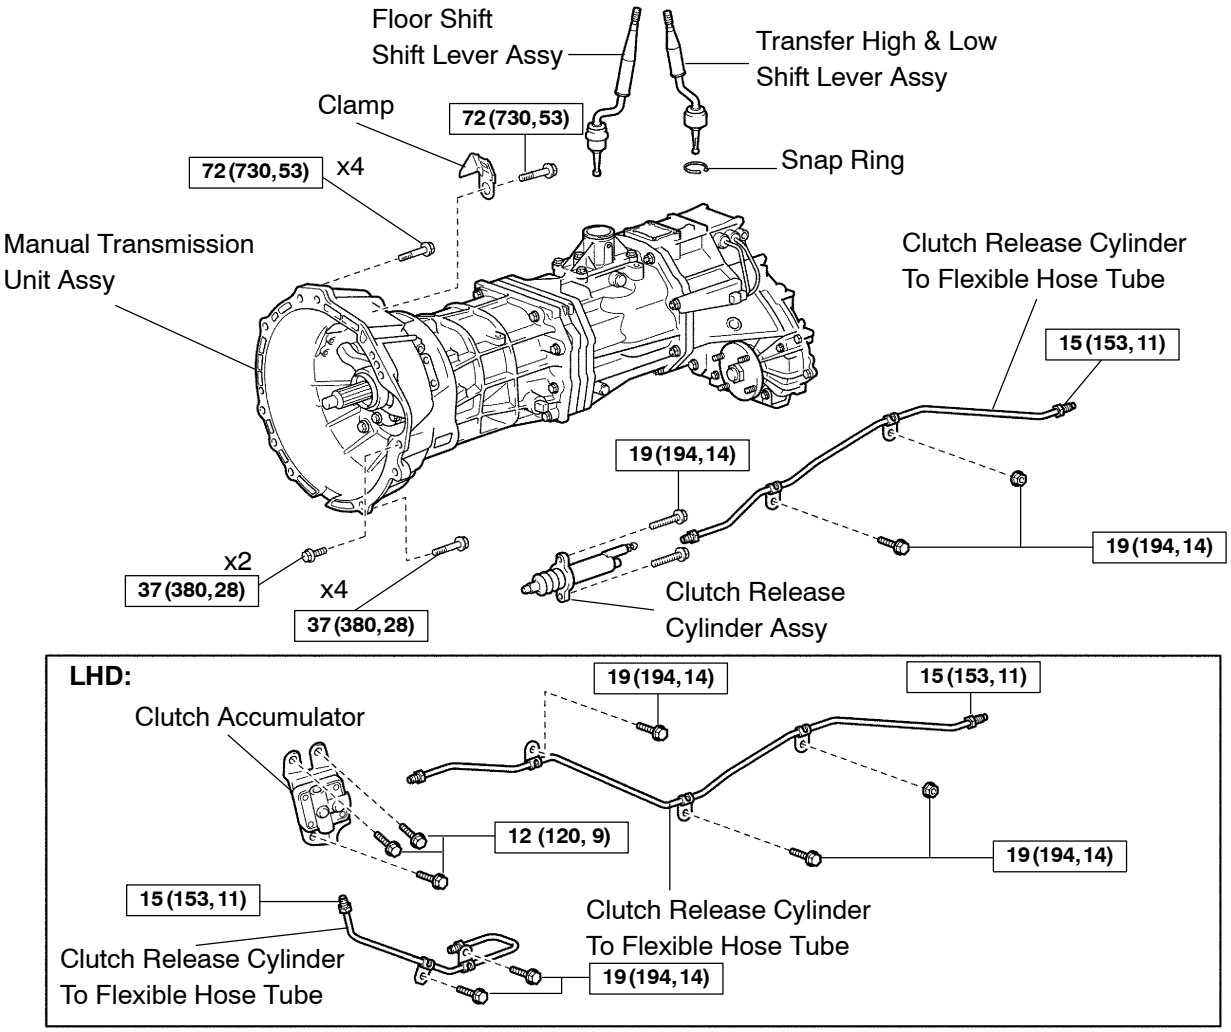


Floor Shift
Shift Lever Assy
Transfer High & Low
Shift Lever Assy
Clamp
72 (730, 53)
72 (730, 53) x4
Snap Ring
Manual Transmission
Unit Assy
Clutch Release Cylinder
To Flexible Hose Tube
15 (153, 11)
19 (194, 14)
19 (194, 14)
x2
37 (380, 28)
x4
37 (380, 28)
Clutch Release
Cylinder Assy
LHD:
19 (194, 14)
15 (153, 11)
Clutch Accumulator
12 (120, 9)
19 (194, 14)
15 (153, 11)
Clutch Release Cylinder
To Flexible Hose Tube
Clutch Release Cylinder
To Flexible Hose Tube
19 (194, 14)
N·m (kgf·cm, ft·lbf) : Specified torque
D30430