
ECM (2TR–FE)

100DD–03

REPLACEMENT

1. **REMOVE INSTRUMENT PANEL UNDER COVER NO.2 (See Pub. No. RM990E, page 71–12)**
2. **REMOVE INSTRUMENT PANEL ORNAMENT (See Pub. No. RM990E, page 71–12)**
3. **REMOVE GLOVE COMPARTMENT DOOR ASSY (See Pub. No. RM990E, page 71–12)**

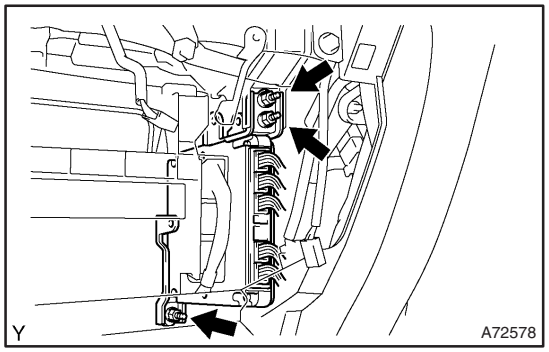

4. **REMOVE ECM**

(a) Disconnect the 5 ECM connectors from the ECM.
(b) Remove the 3 nuts shown in the illustration.
(c) Remove the ECM.
(d) Remove the 2 screws to separate the ECM bracket No.1 from the ECM.
(e) Remove the 2 screws to separate the ECM bracket No.2 from the ECM.

5. **INSTALL ECM**

(a) Install the ECM bracket No.2 with the 2 screws to the ECM.
(b) Install the ECM bracket No.1 with the 2 screws to the ECM.
(c) Install the ECM with the 3 nuts.
Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)
(d) Connect the 5 connectors to the ECM.