

CYLINDER HEAD GASKET (2TR–FE)

COMPONENTS

1420K–01

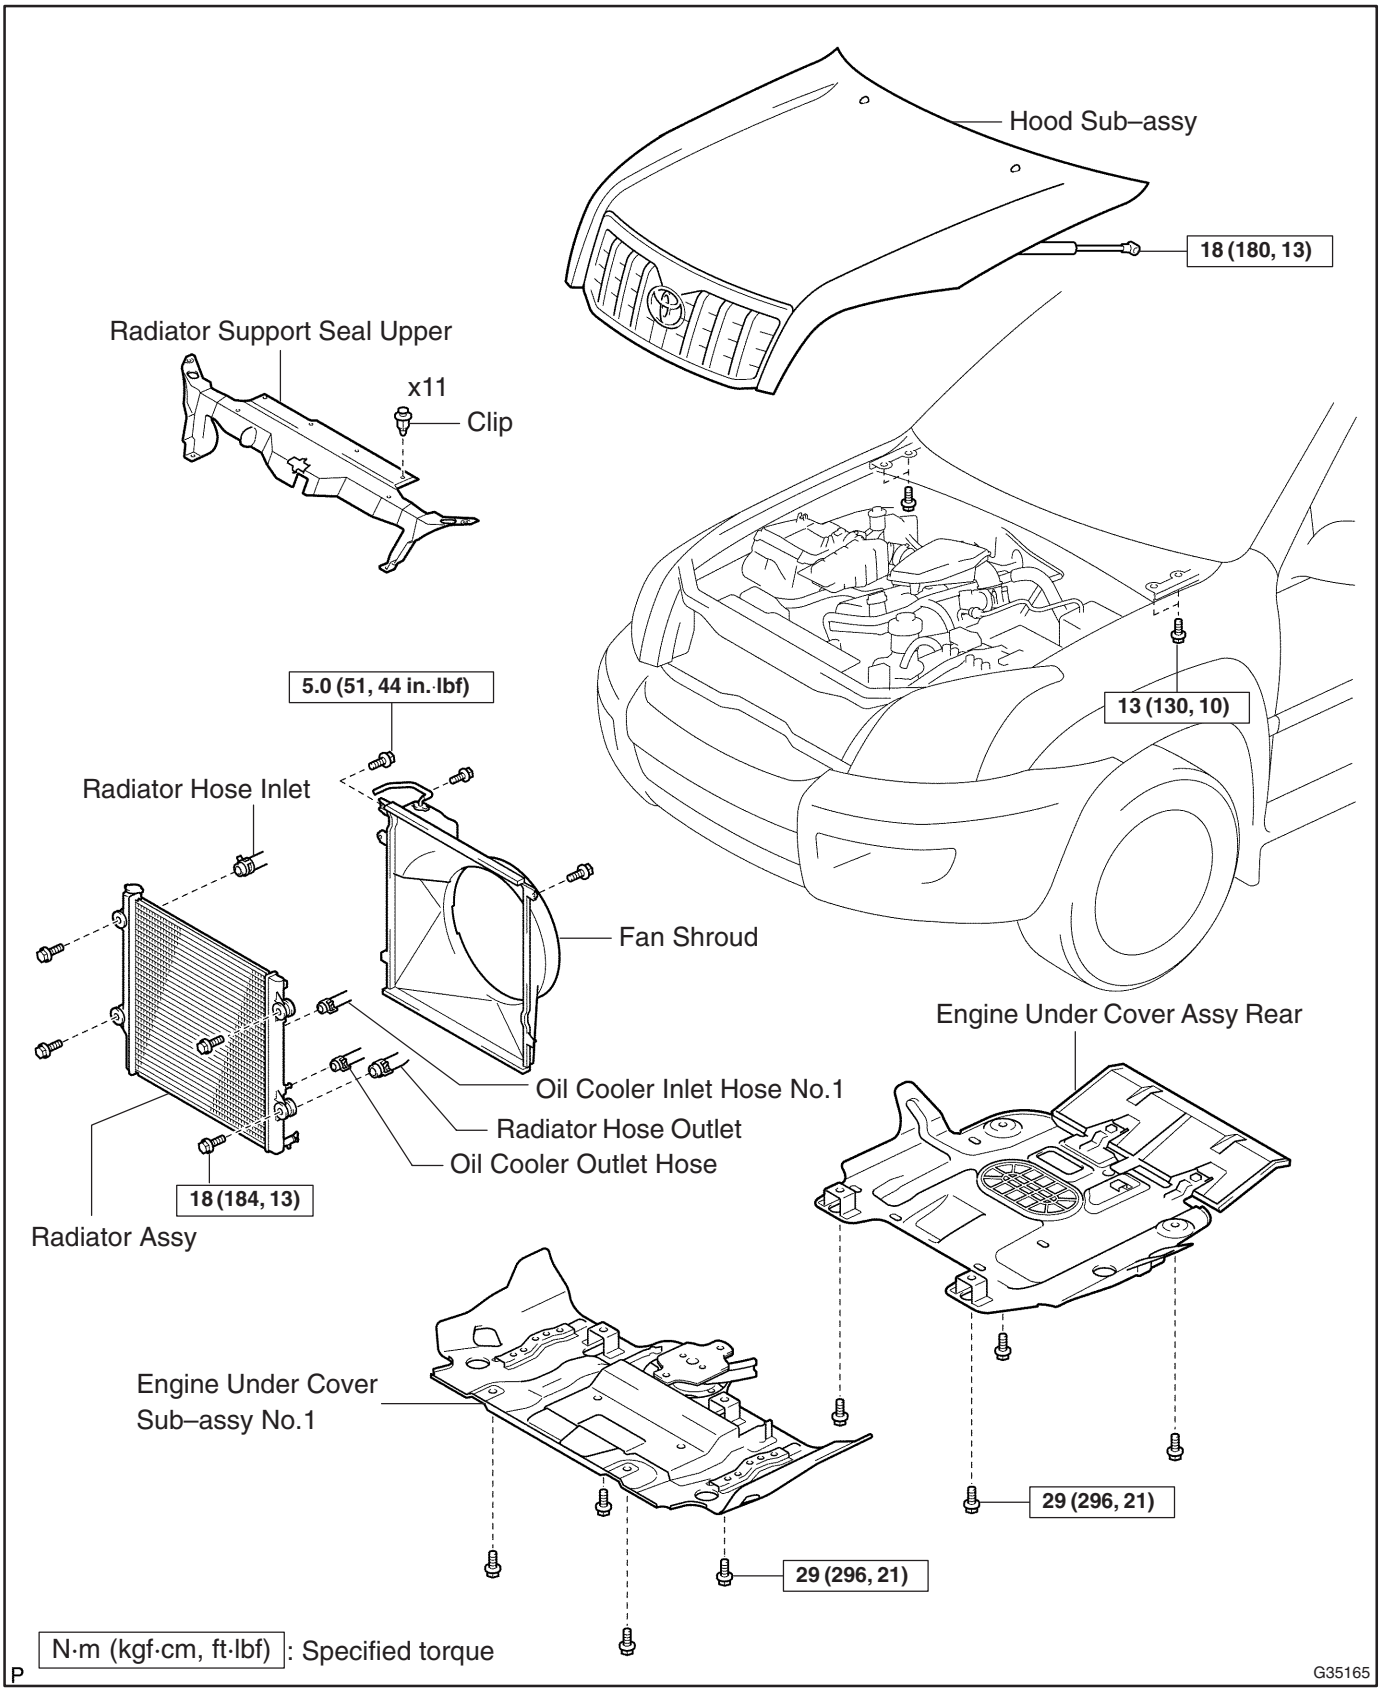


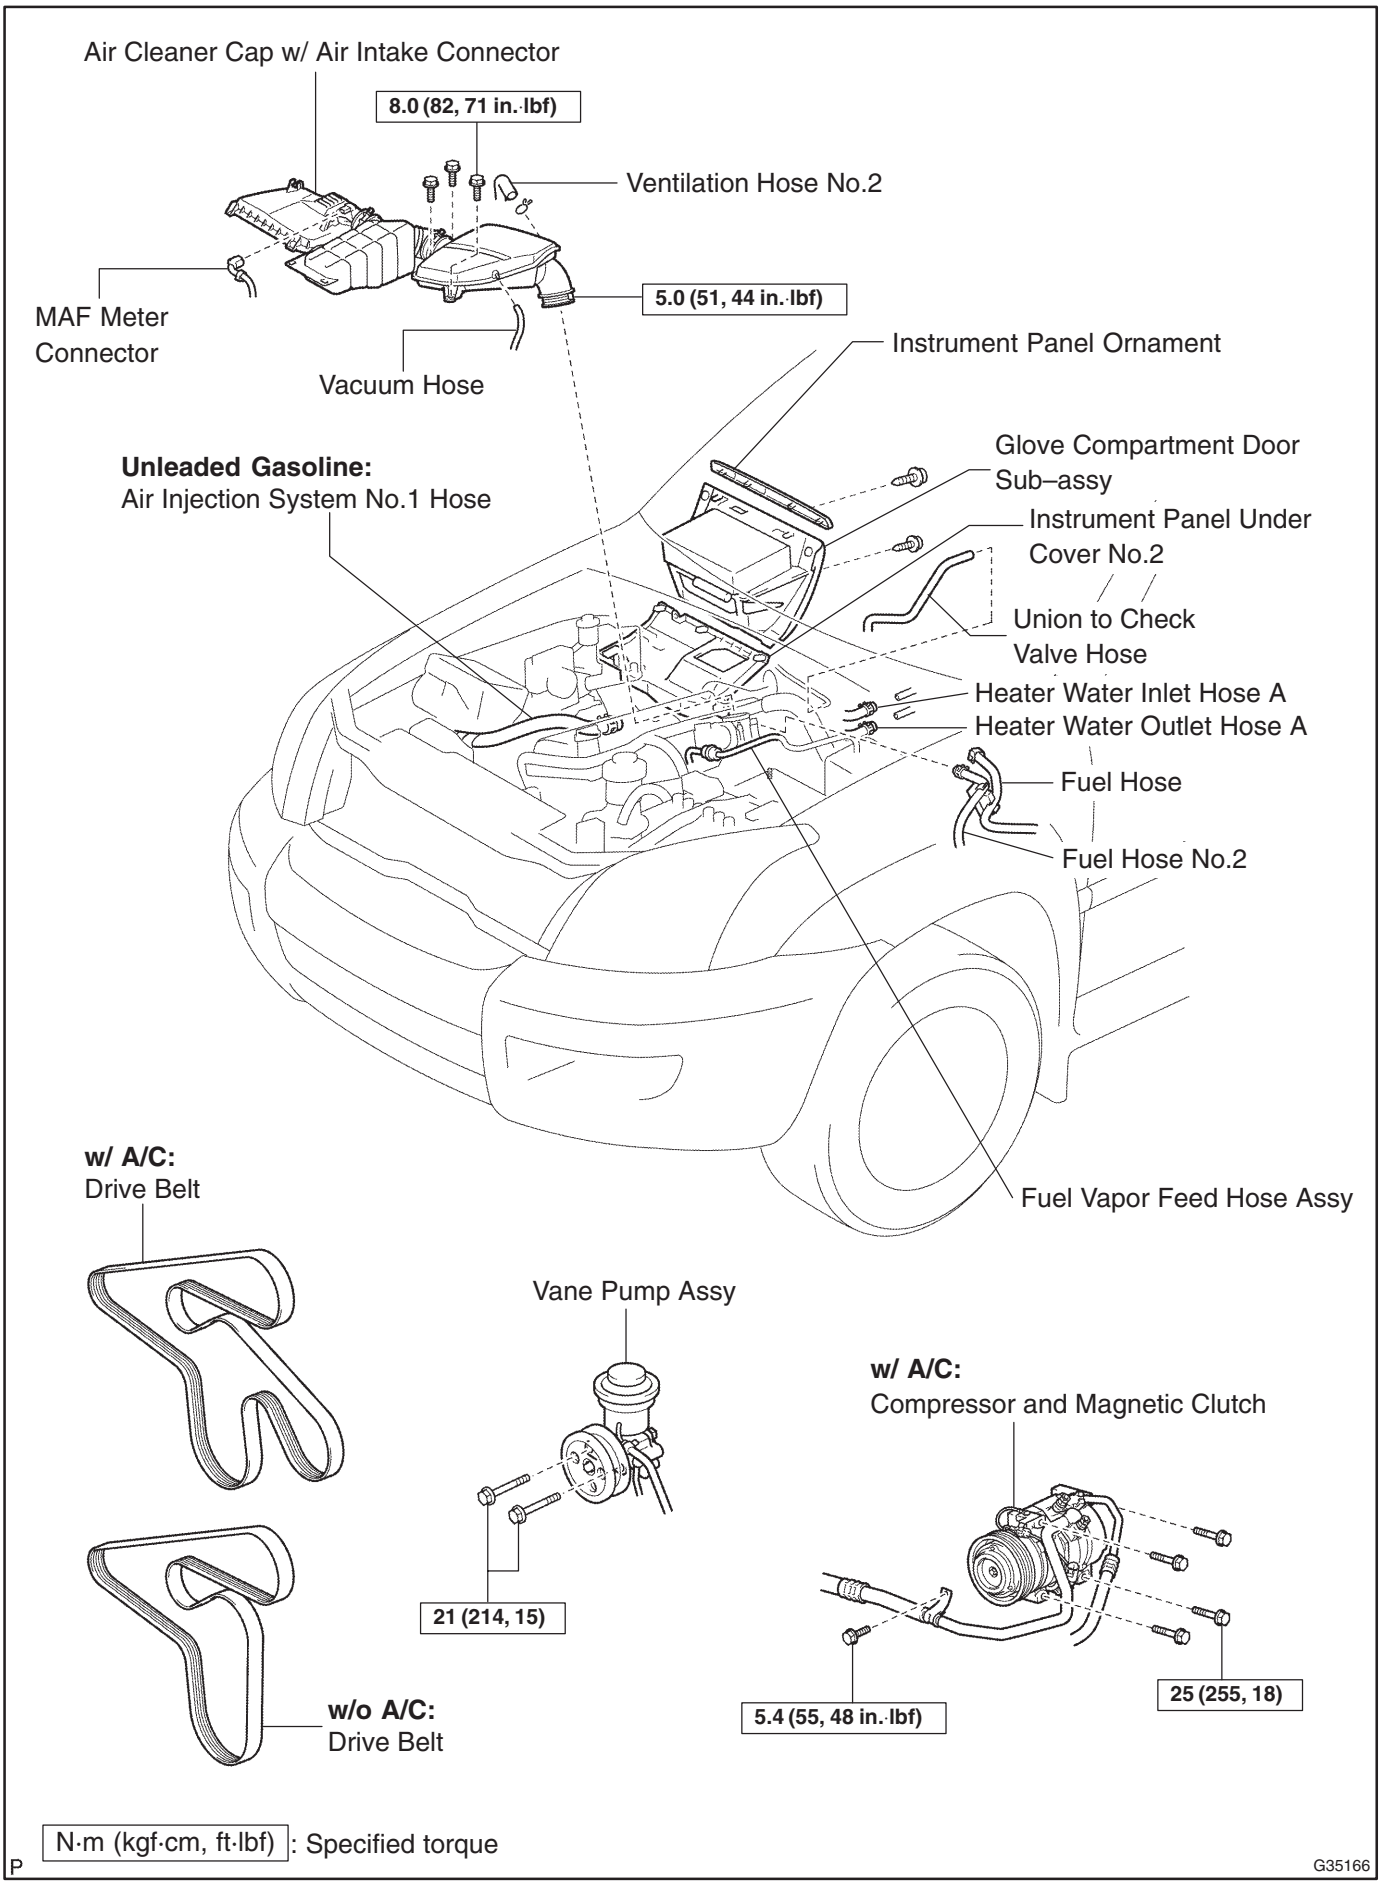

N·m (kgf·cm, ft·lbf) : Specified torque

P

G35166

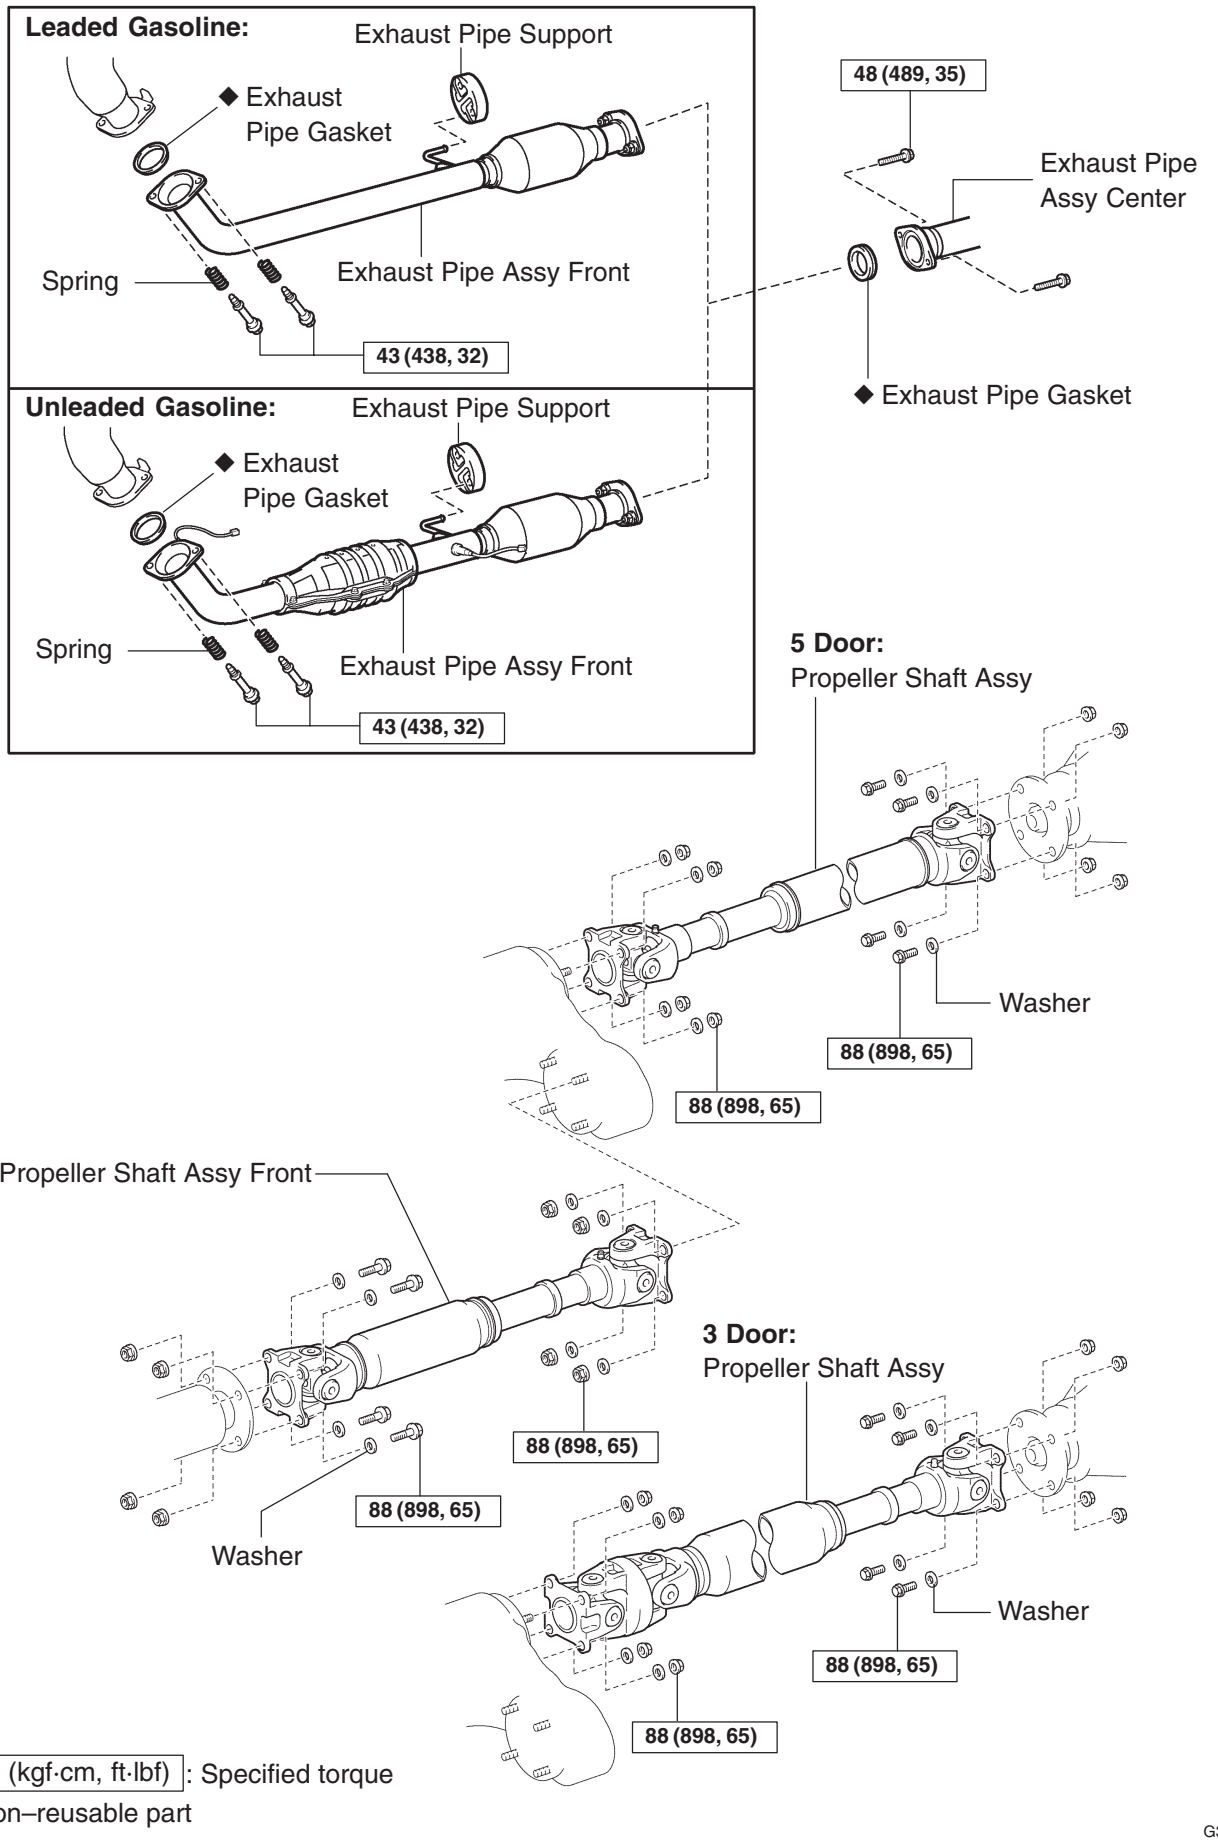



N·m (kgf·cm, ft·lbf): Specified torque


◆ Non–reusable part

G37583

A/T:

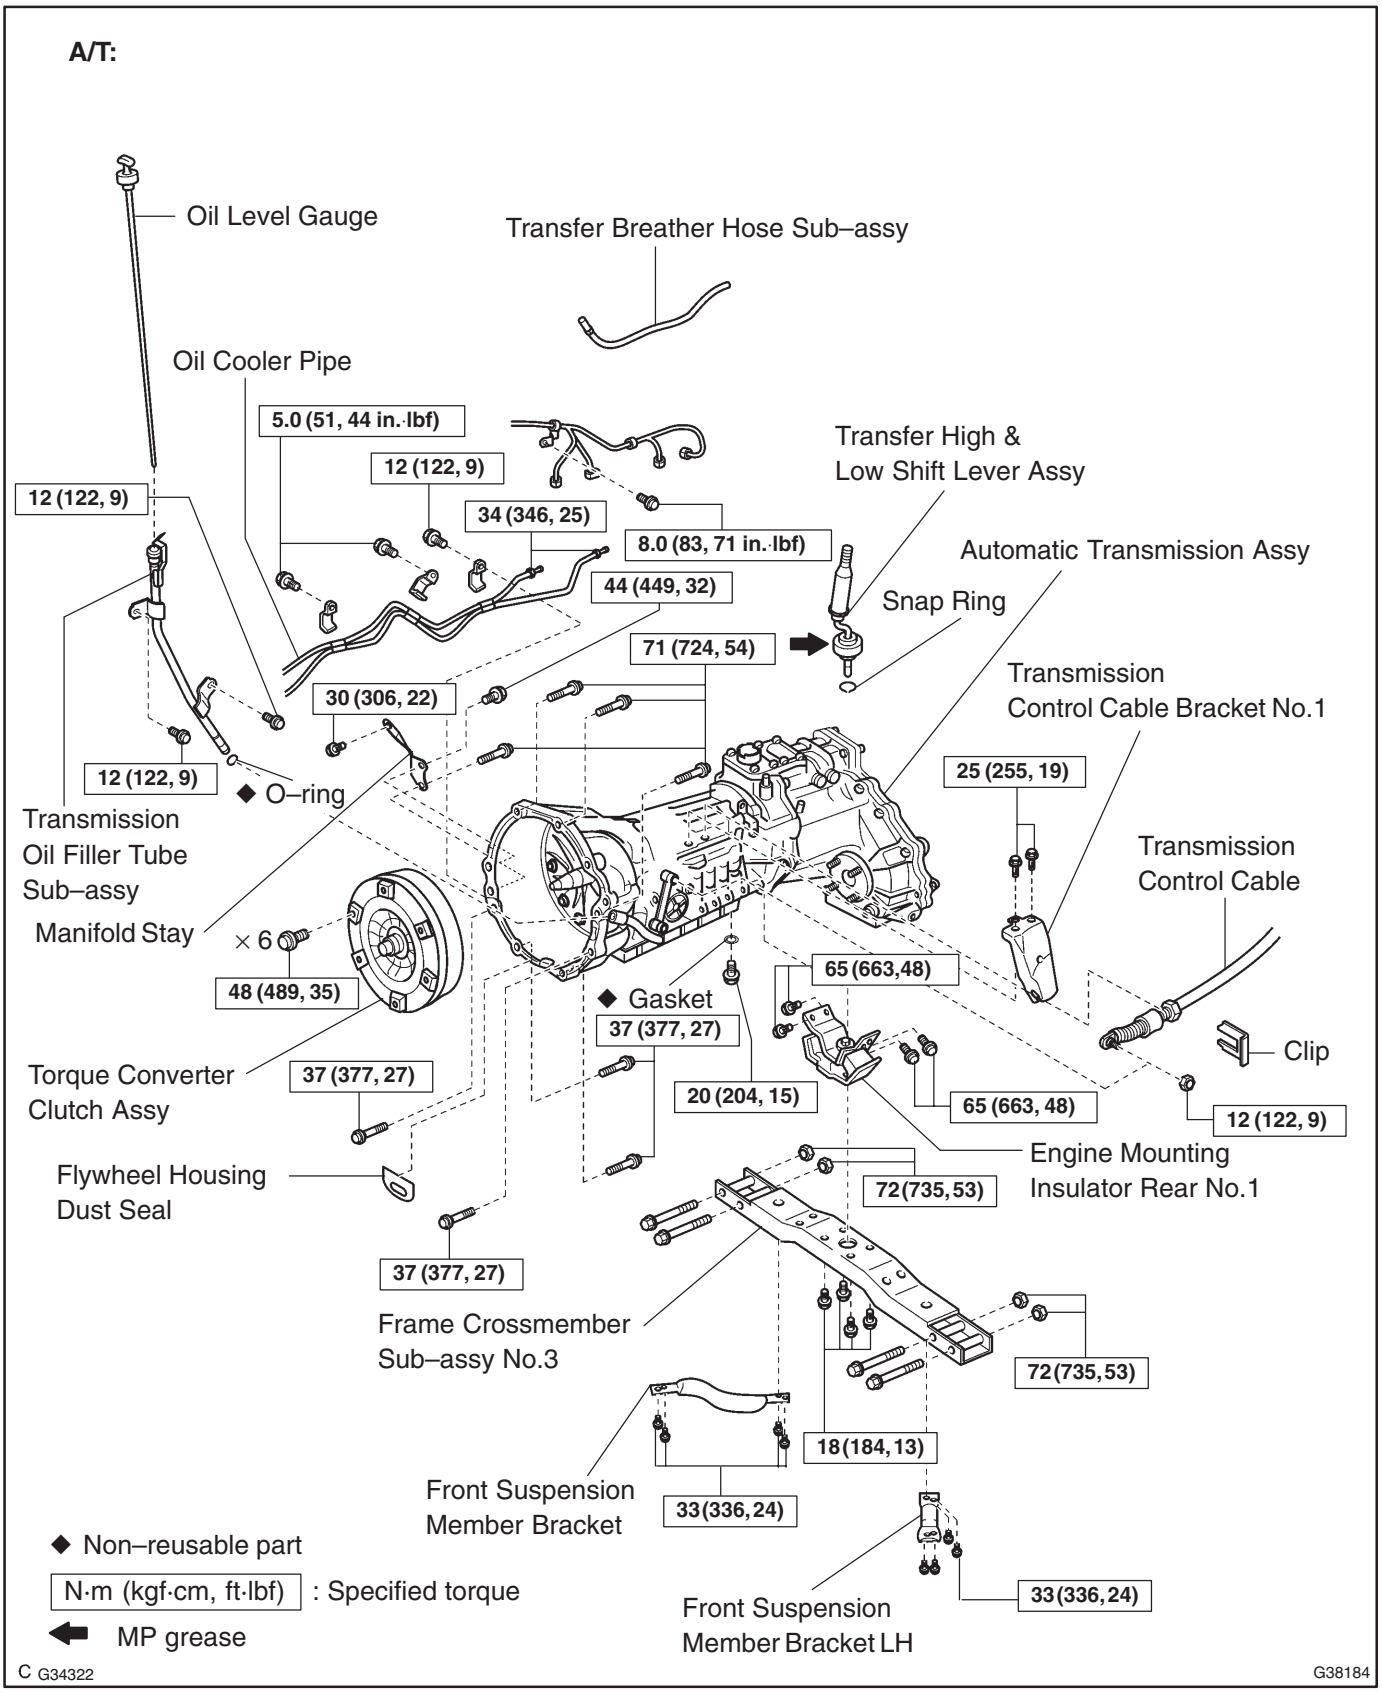
Oil Level Gauge
Transfer Breather Hose Sub–assy
Oil Cooler Pipe
5.0 (51, 44 in.·lbf)
12 (122, 9)
34 (346, 25)
8.0 (83, 71 in.·lbf)
Transfer High & Low Shift Lever Assy
Automatic Transmission Assy
12 (122, 9)
44 (449, 32)
Snap Ring
71 (724, 54)
30 (306, 22)
Transmission Control Cable Bracket No.1
12 (122, 9)
◆ O–ring
25 (255, 19)
Transmission Oil Filler Tube Sub–assy
Transmission Control Cable
Manifold Stay
× 6
48 (489, 35)
◆ Gasket
65 (663,48)
37 (377, 27)
Clip
Torque Converter Clutch Assy
37 (377, 27)
20 (204, 15)
65 (663, 48)
12 (122, 9)
Engine Mounting Insulator Rear No.1
Flywheel Housing Dust Seal
72(735,53)
37 (377, 27)
Frame Crossmember Sub–assy No.3
72(735,53)
18(184,13)
Front Suspension Member Bracket
33(336,24)
◆ Non–reusable part
N·m (kgf·cm, ft·lbf) : Specified torque
MP grease
Front Suspension Member Bracket LH
33(336,24)
C G34322
G38184

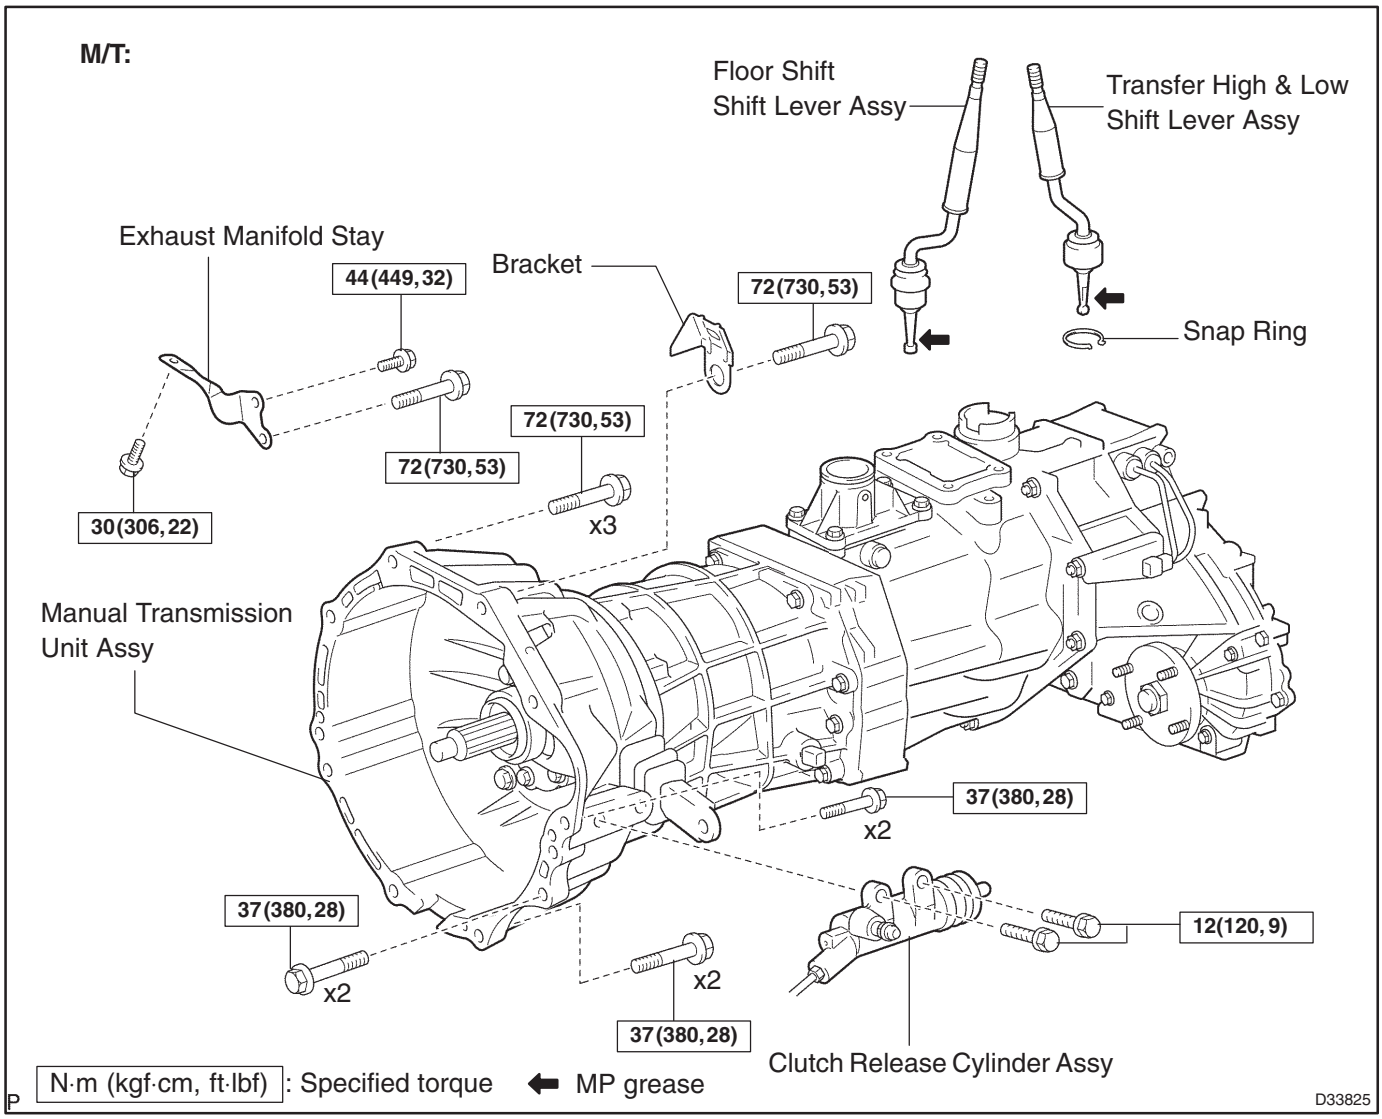
M/T:
Floor Shift
Shift Lever Assy
Transfer High & Low
Shift Lever Assy
Exhaust Manifold Stay
44(449,32)
Bracket
72(730,53)
Snap Ring
72(730,53)
72(730,53)
30(306,22)
x3
Manual Transmission
Unit Assy
37(380,28)
x2
37(380,28)
x2
12(120,9)
37(380,28)
Clutch Release Cylinder Assy
N·m (kgf·cm, ft·lbf): Specified torque
MP grease
D33825

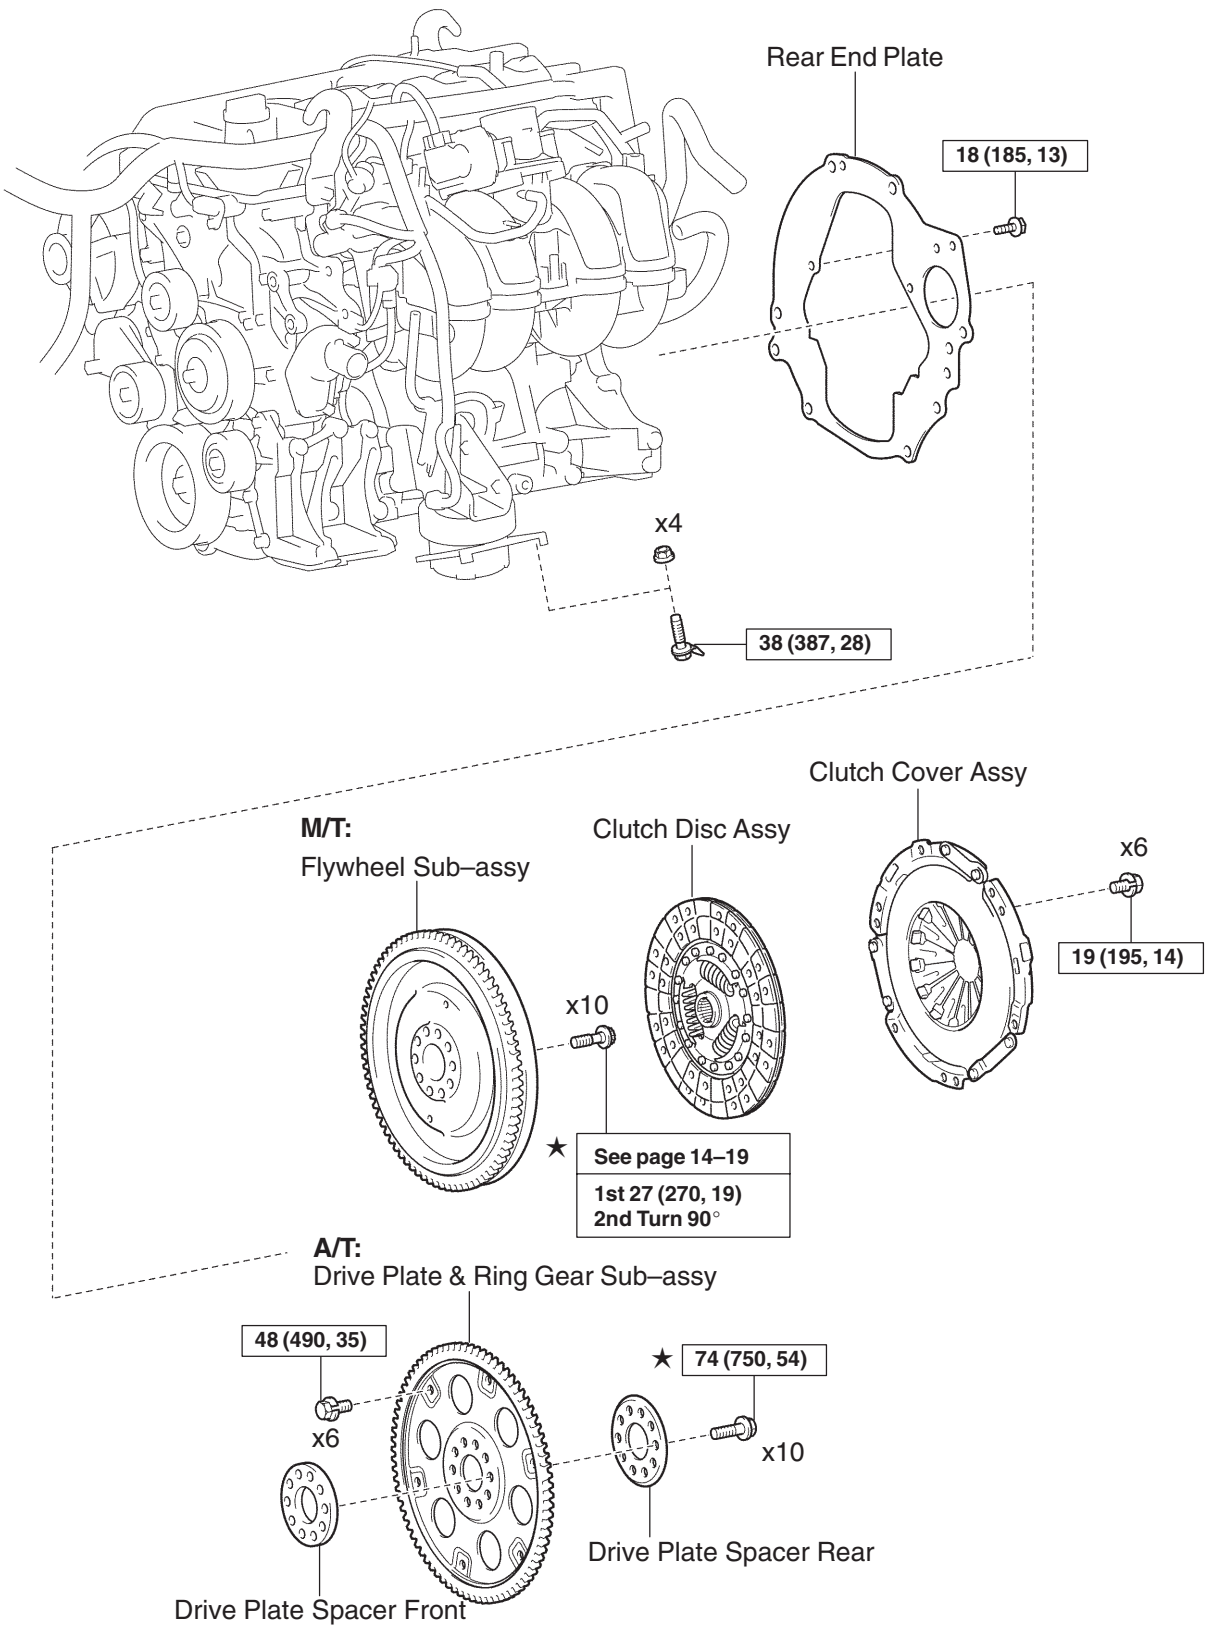


N·m (kgf·cm, ft·lbf) : Specified torque

★ Precoated part

P


G35167

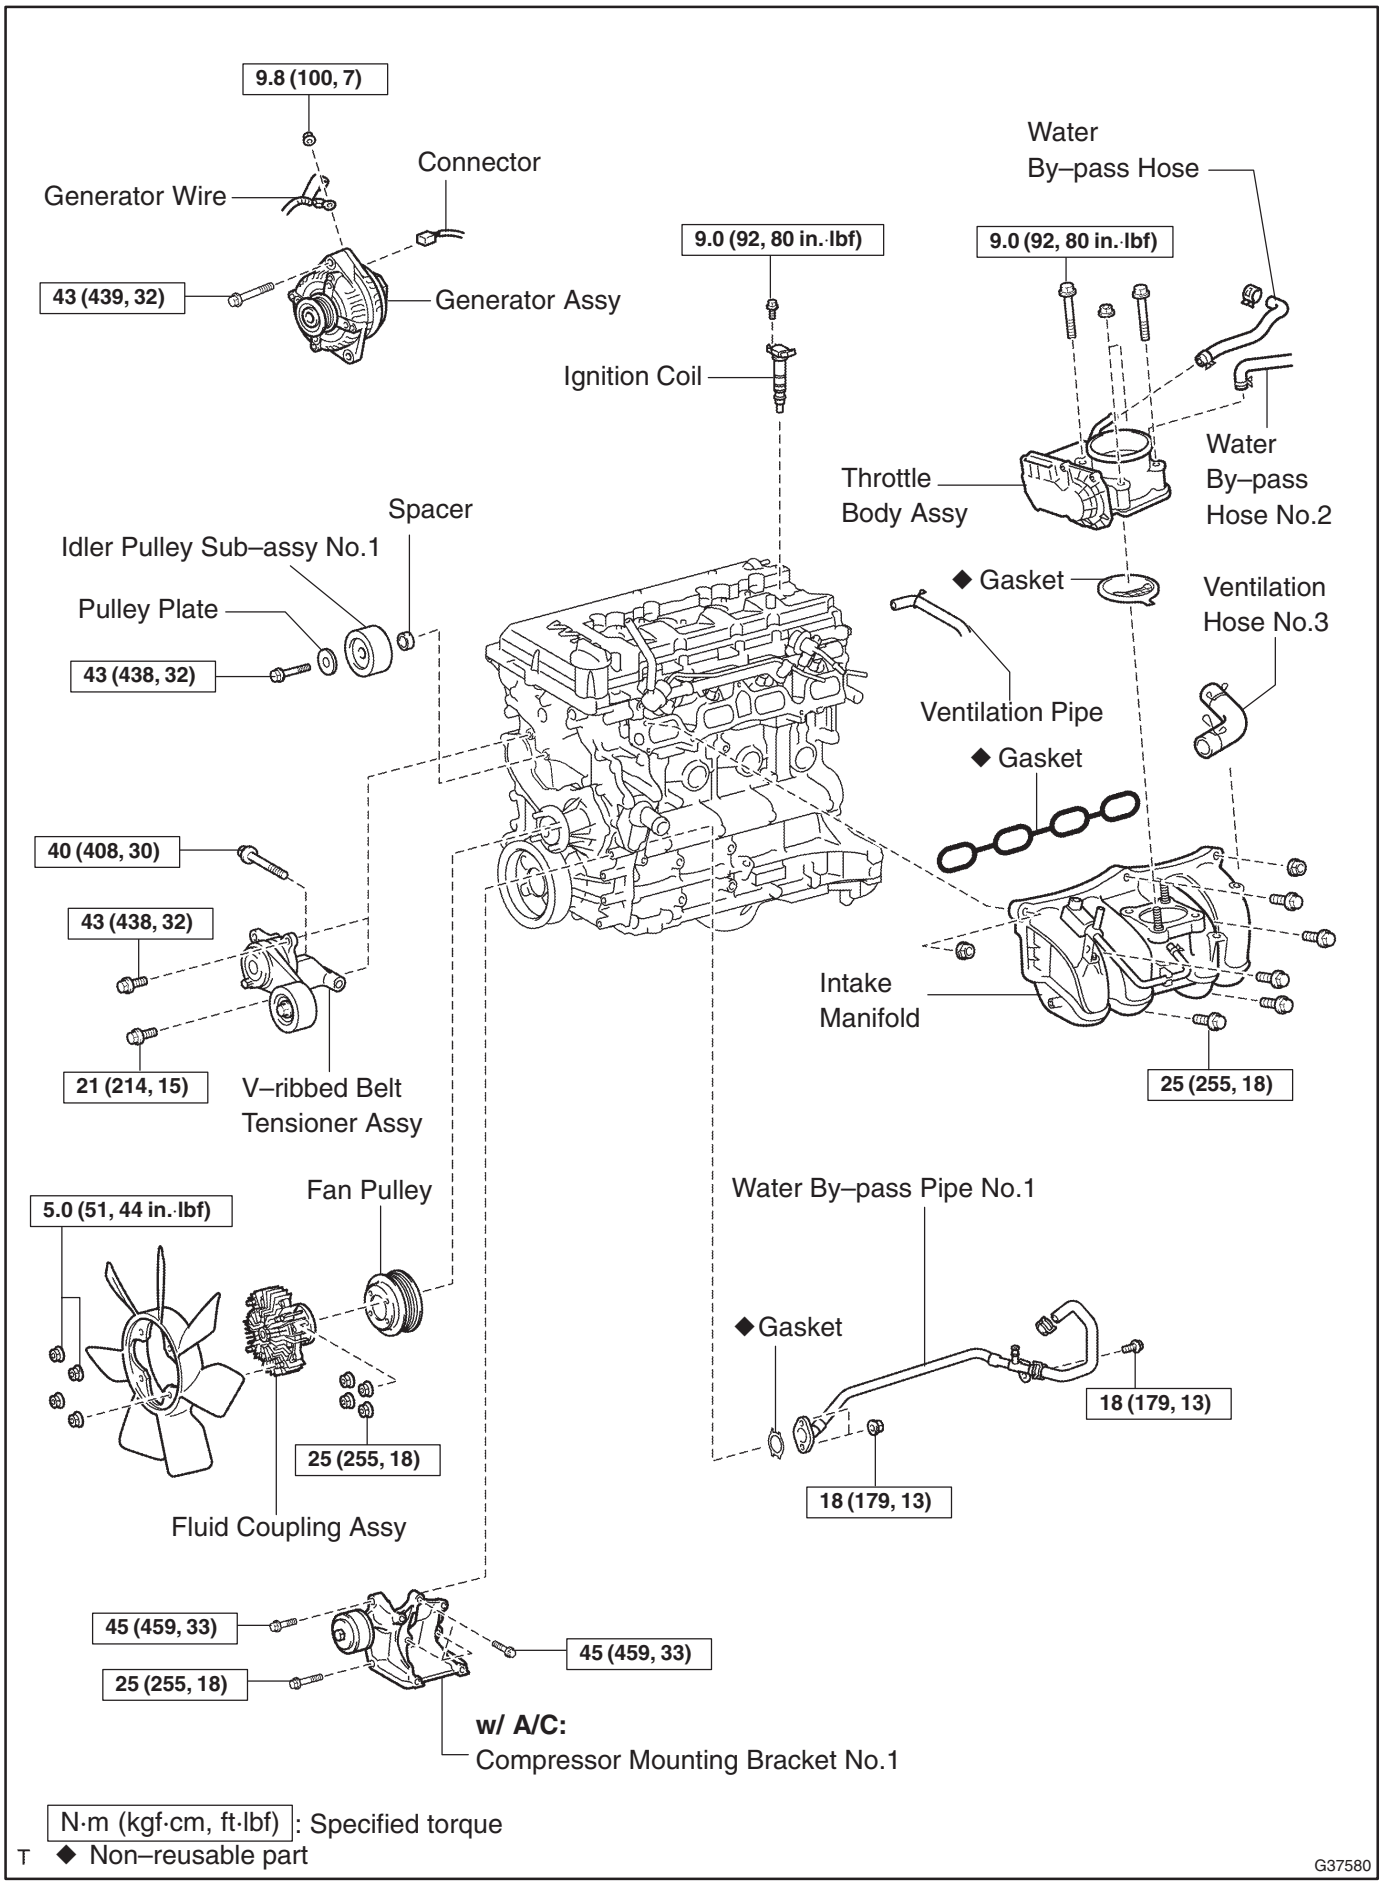

N·m (kgf·cm, ft·lbf): Specified torque

T ◆ Non–reusable part

G37580

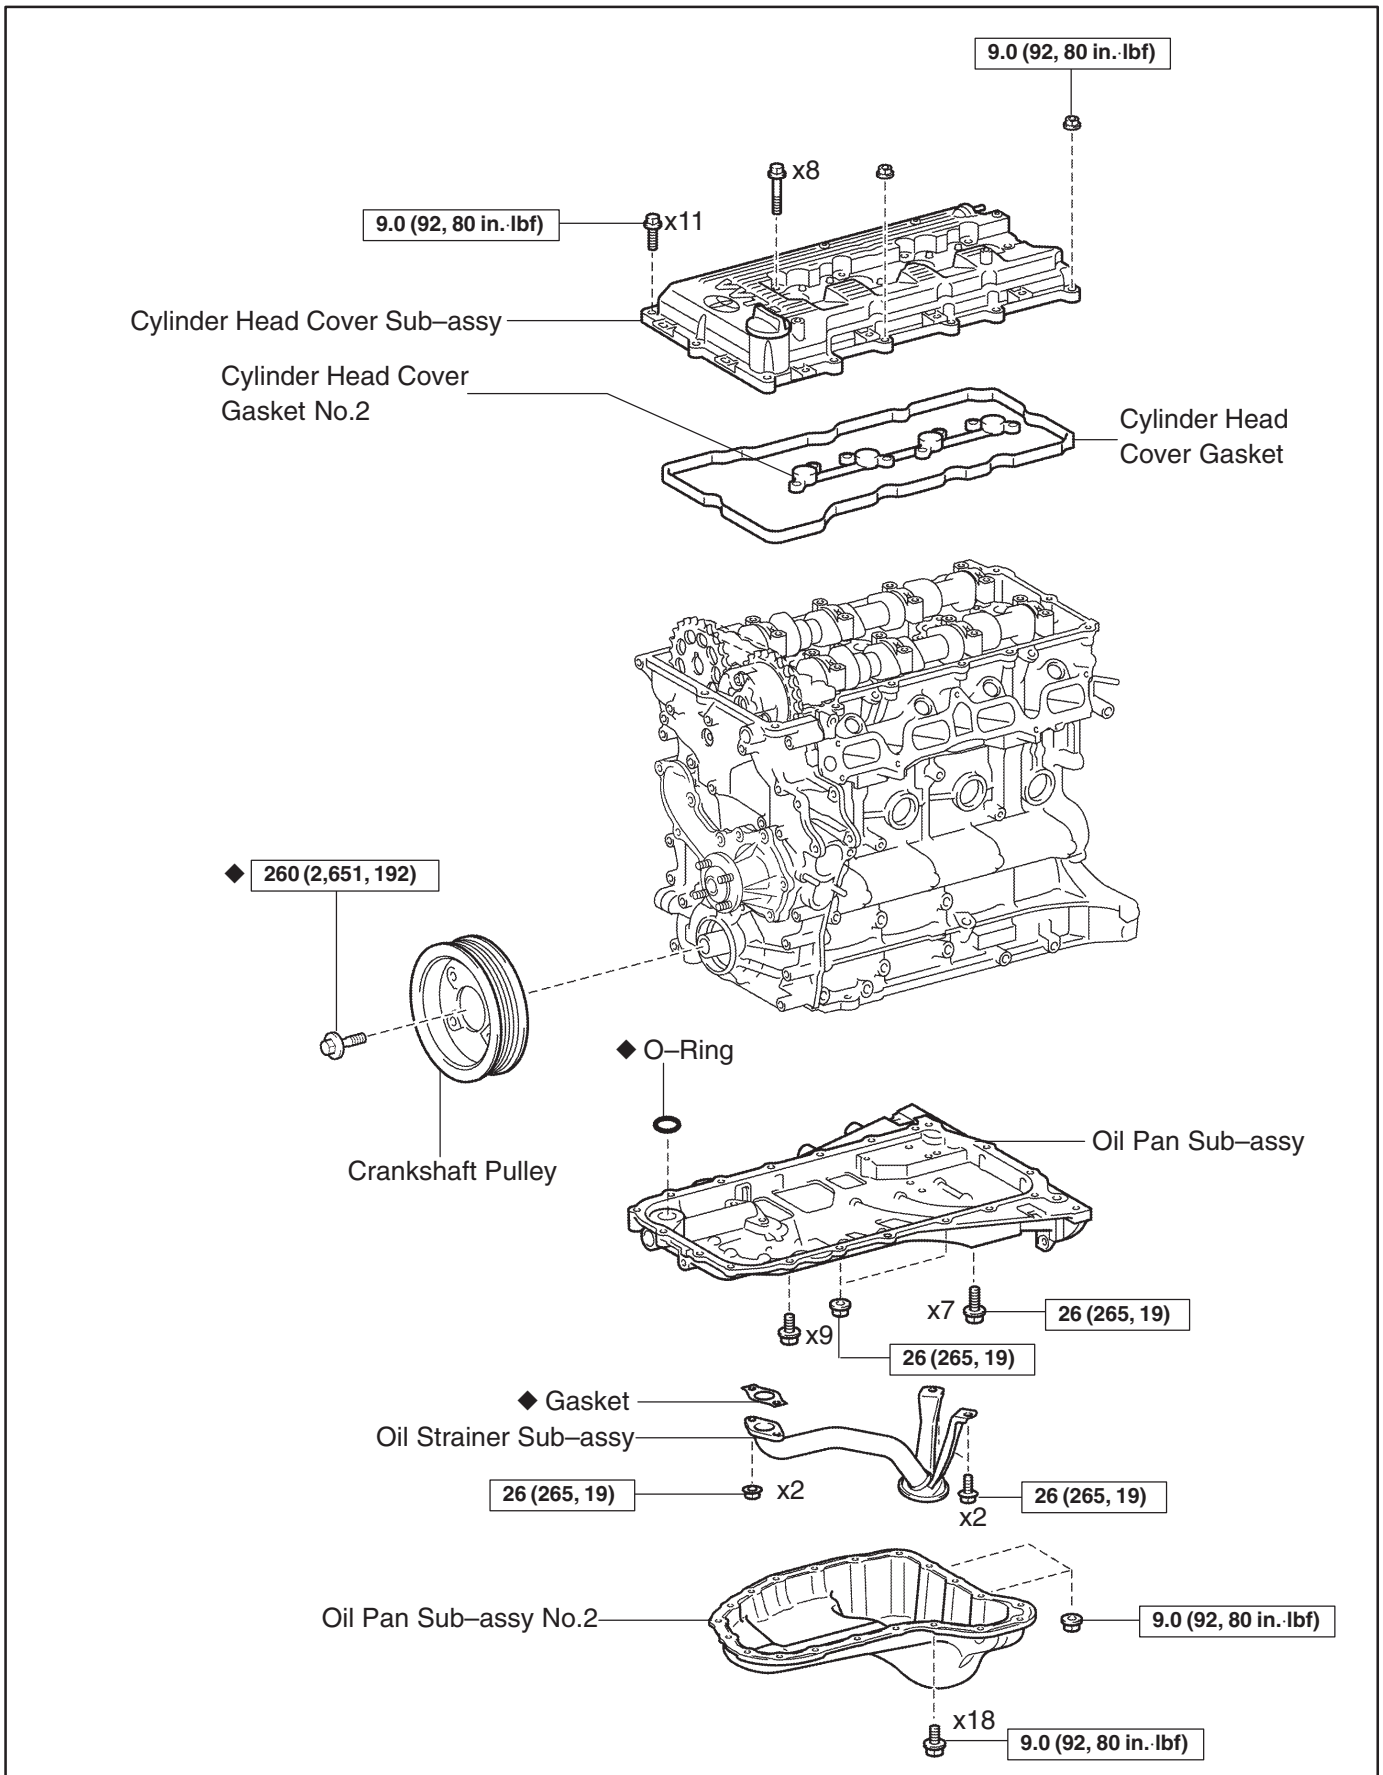


N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

T


G37581

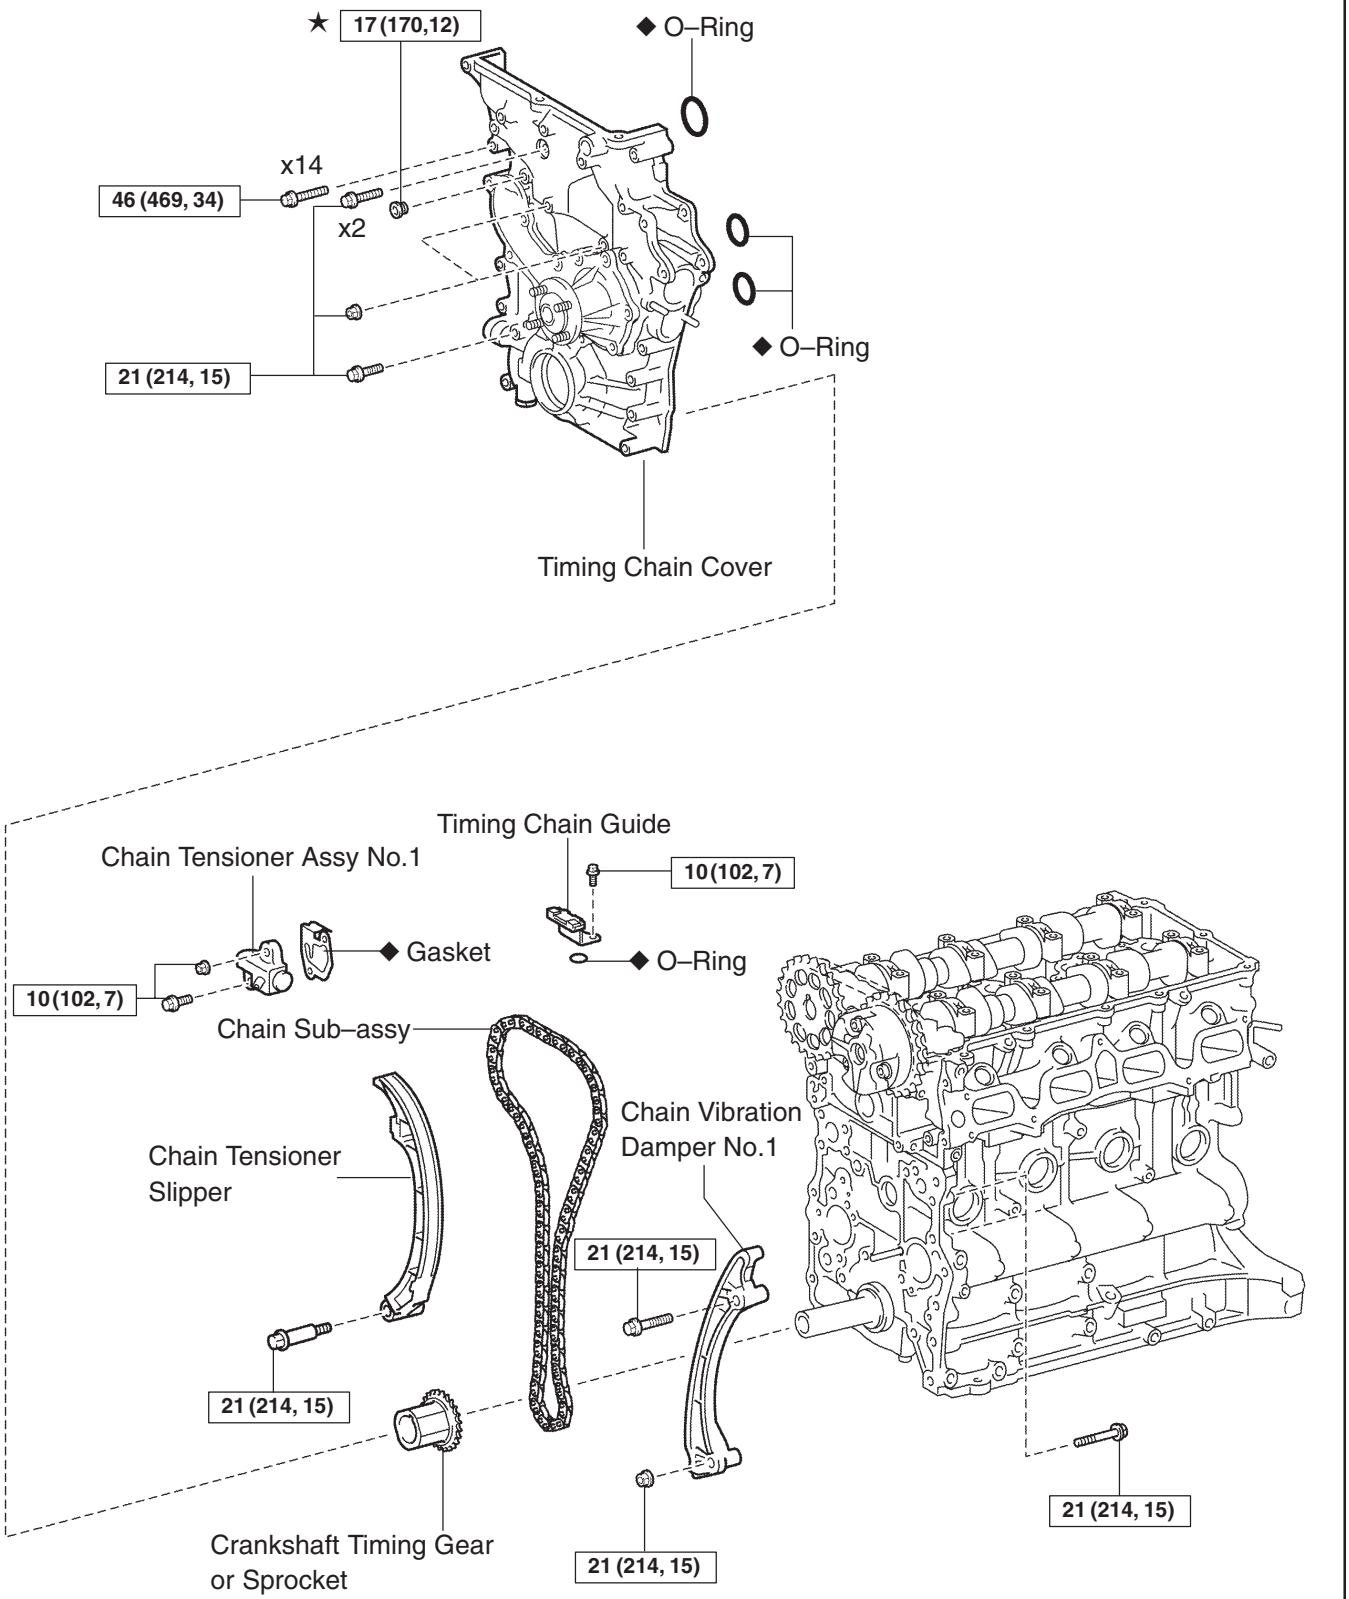

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part

T

G37591

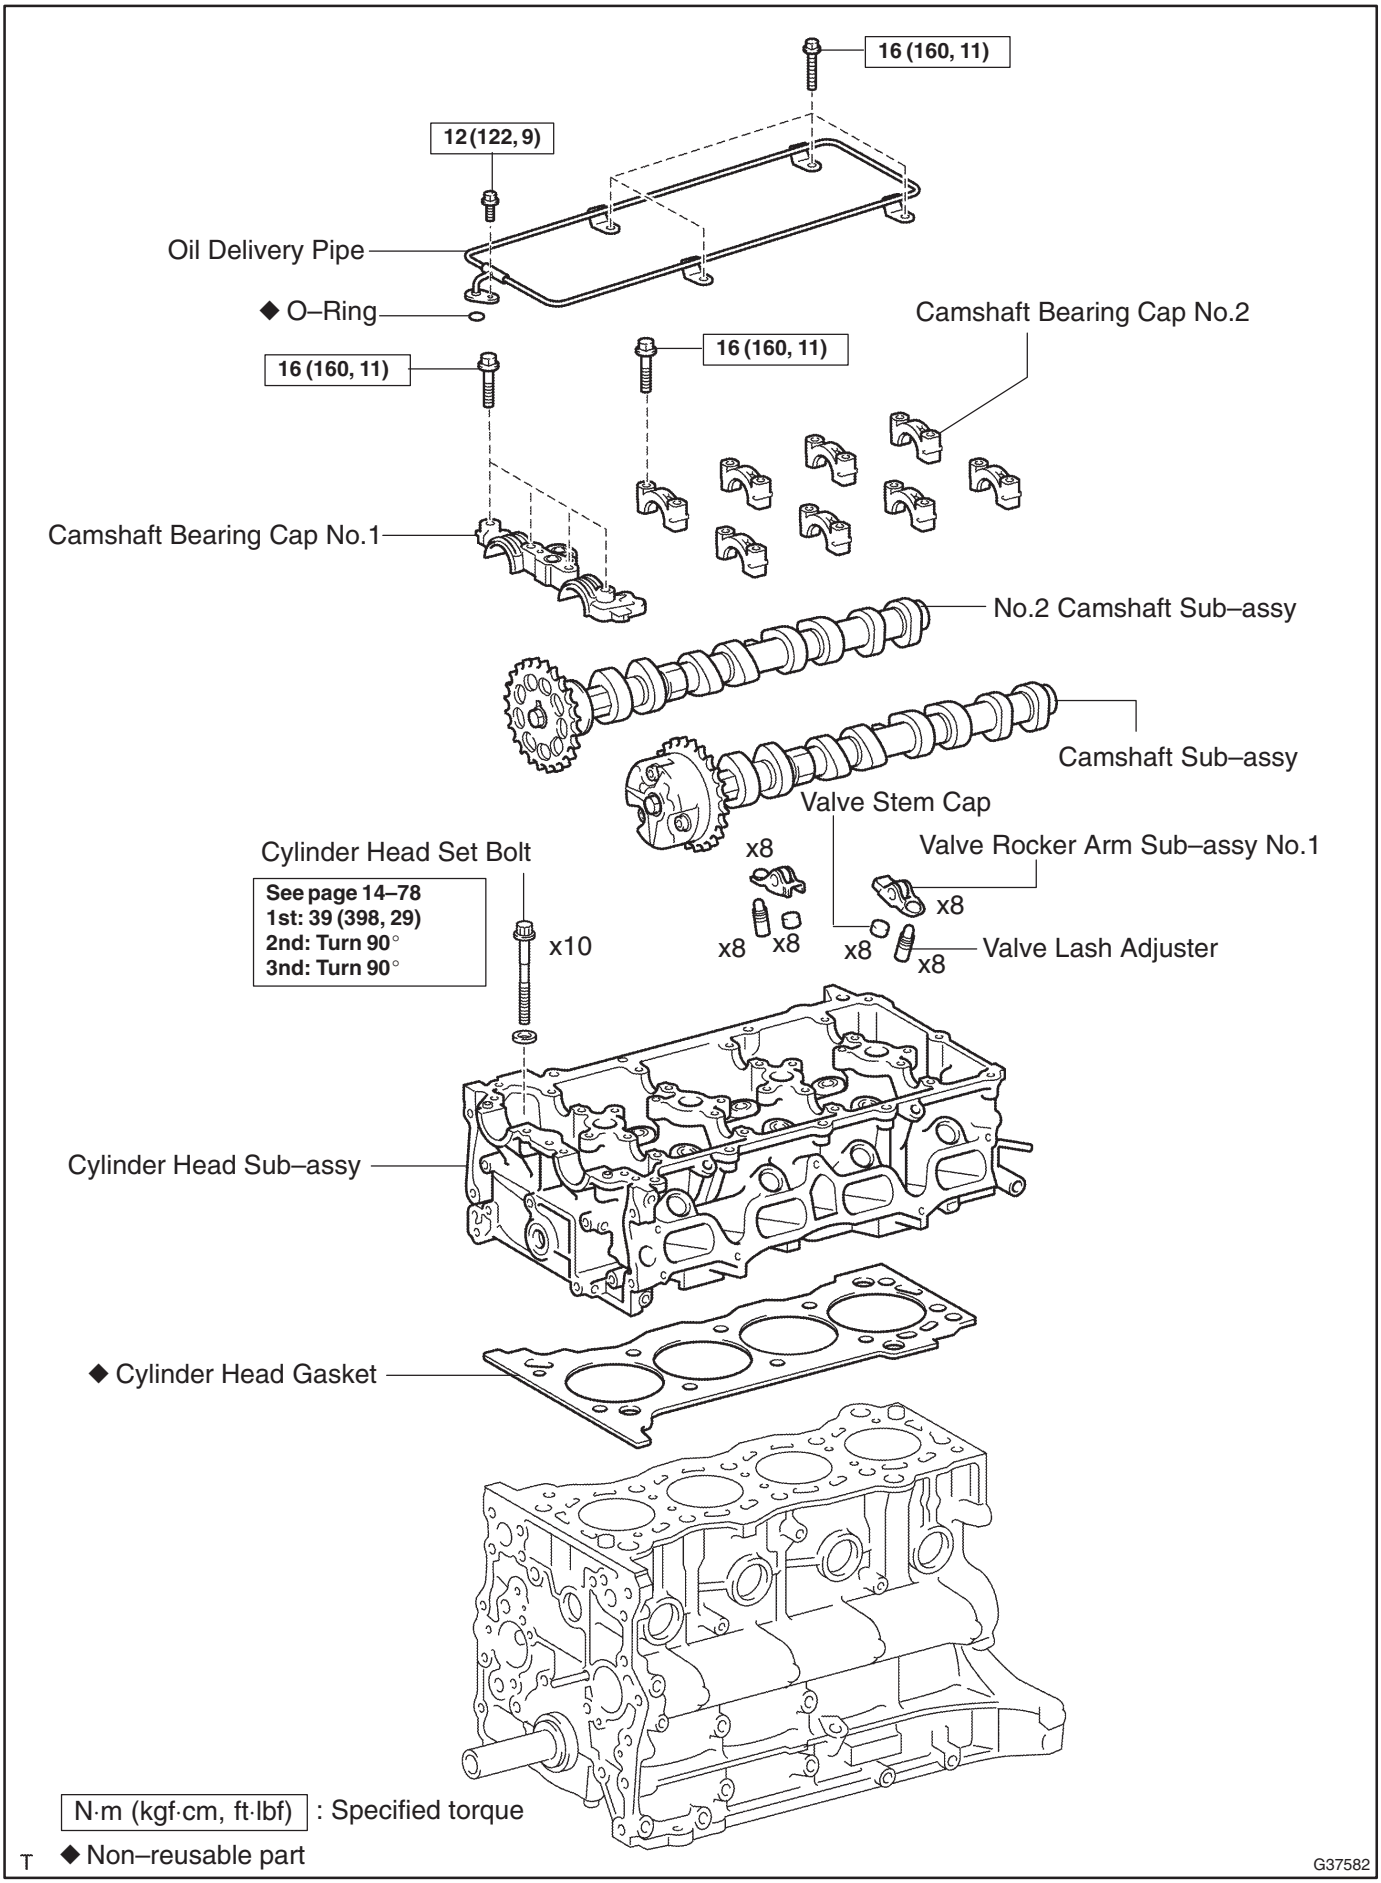
16 (160, 11)
12 (122, 9)
Oil Delivery Pipe
◆ O–Ring
Camshaft Bearing Cap No.2
16 (160, 11)
16 (160, 11)
Camshaft Bearing Cap No.1
No.2 Camshaft Sub–assy
Camshaft Sub–assy
Valve Stem Cap
Cylinder Head Set Bolt
See page 14–78
1st: 39 (398, 29)
2nd: Turn 90°
3nd: Turn 90°
x10
x8
Valve Rocker Arm Sub–assy No.1
x8
x8
x8
x8
x8
Valve Lash Adjuster
Cylinder Head Sub–assy
◆ Cylinder Head Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
T
G37582